GlobalTechStream+
Diagnostic System



Connect to Vehicle



GTS+ Settings



Advanced Functions



User Configuration



Error Report



Open Scan Data File



A big thank you to Mr. Andrej Škof from Toyota Adria for realising this document.

Print screens shown are created using GTS+ version 2022.04.001

Table of Content

Contents

Table of Content 2

Installation 4

Step 0: System Requirements 4

Step 1: Independent User creation: 4

Step 2: Download GTS+ 5

Step 3: Buy a GTS+ License. 6

Step 4: Installation 7

Step 5: **Restart the PC!** 7

Log in, Log Out and User Change 8

Login 8

Start 8

EULA 8

Login Screen 8

Main Menu 9

User Settings 9

PC Settings 10

Setup completion 11

Logout and Close 11

User switching 12

Preparation for work 13

Overview 13

VIMs and drivers 13

Vehicle Connection 14

Operations 15

Description of Operations 16

Health Check 16

Health Check Start 16

Health Check Result screen 18

Minimized view 19

Stored Data 19

System Select 20

System Select Start 20

Screen before Health Check is done (ECU status unknown) 20
Graphing 25
Snapshot 26
Selecting the Trigger Conditions 27
Graphing 28
Text Search in Data list 33
Active test 34
Utility 35
CAN Bus Check 35
Starting the CAN Bus Check 35
Stored Data 38
Accessing Stored Data 38
Customize 39
Starting the Customize operation 39
Vehicle Control History 40
Starting the operation 40
Functions on the right side 41
History 41
Link to other systems 41
SI Main page 42
GTS+ New Features list 42
Other functions on main display 43
GTS+ Settings 43
User Configuration 43
Advanced Function 44
Open Scan Data file 44
Operations database 45
Offline Mode 46
OFFLINE Mode after Expiration Date 47
File Locations 48
Convert TSE file to GTS files 49
CUW+ Reflash Operation 51
Uninstall GTS+ 53

Installation

Step 0: System Requirements

Verify that your PC is compatible with the requirements of the GTS+ software:

1. **Your PC respects or exceeds these hardware specifications:**
2. **Minimum I3 processor or better**
3. At least 5 Gb of disk space, recommended: 10 Gb or more
4. At least 4Gb of RAM memory, recommended: 8 Gb of RAM or more

5. **Windows 10 (64bits) or Windows 11 operating system** (older operating systems are not supported)
6. **Your PC has installed .NET 4.7.2**
7. **Your PC has installed one of the 3 supported browsers listed below:**
8. Chrome (minimum version 107.0)
9. Edge (minimum version 107.0)
10. Firefox (minimum version 80.0)


11. **You have Admin rights on your PC**- the installer needs such permissions.

12. **Your PC has a good connection to the internet** (we recommend at least 10 Mb/s, but 100 Mb/s will be optimal)
13. **Your network firewall allows access to *.toyota-europe.com** domain


14. You have a vehicle interface cable that is supported (old **Denso VIM is NOT supported** and you can find below details of supported interface cables)

Step 1: Independent User creation:

Go to the TechDoc 1 website https://www.toyota-tech.eu/ and click on Login:

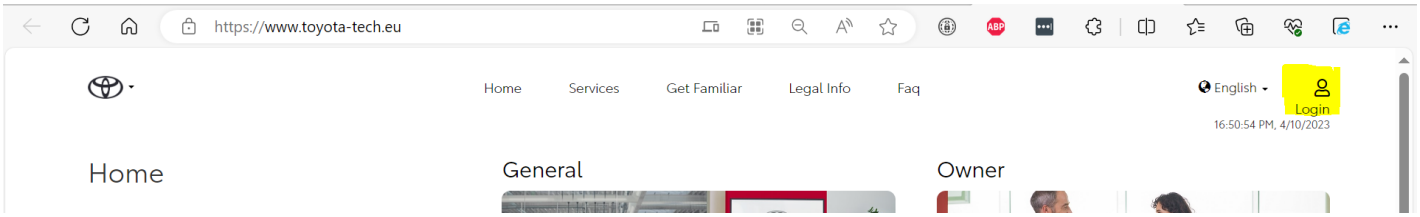


If you don't already have an account, create one by clicking on the "Register here" button and follow the registration process.

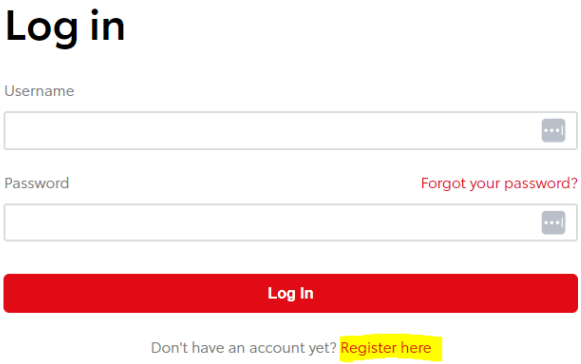


If you already have an account, then log in.

Step 2: Download GTS+


After you log in, on the Home screen, go to the General section.

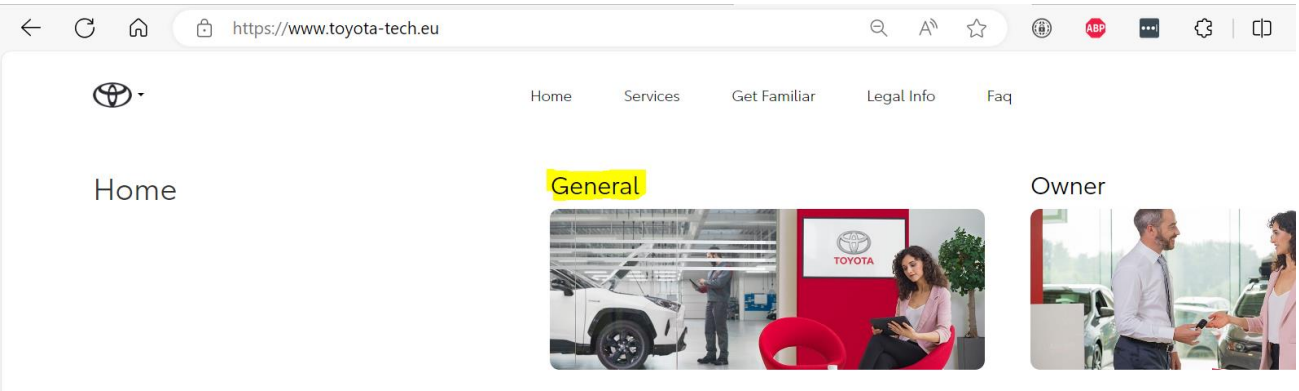


Select the Diagnostic Tools section:

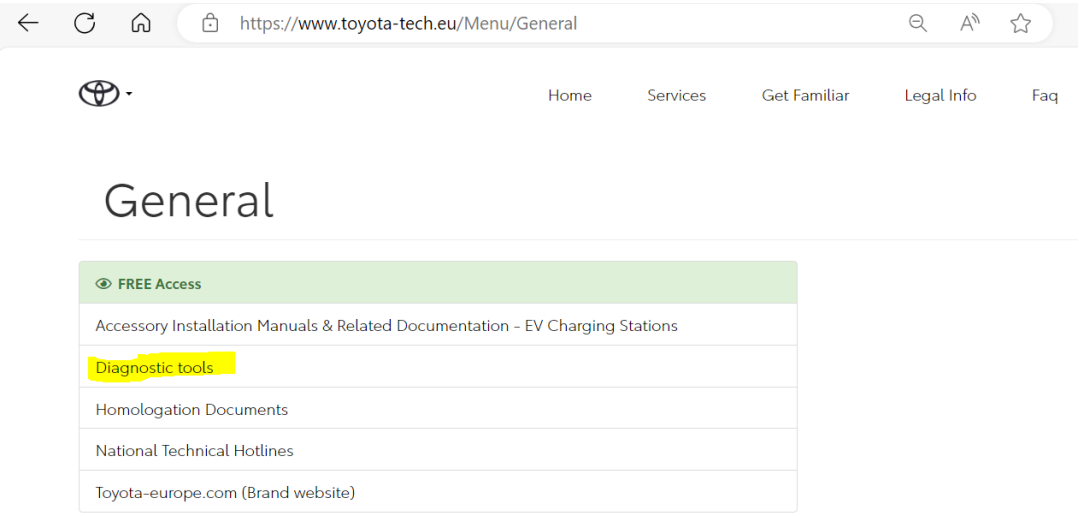


Select the GTS+ Diagnostic tool.

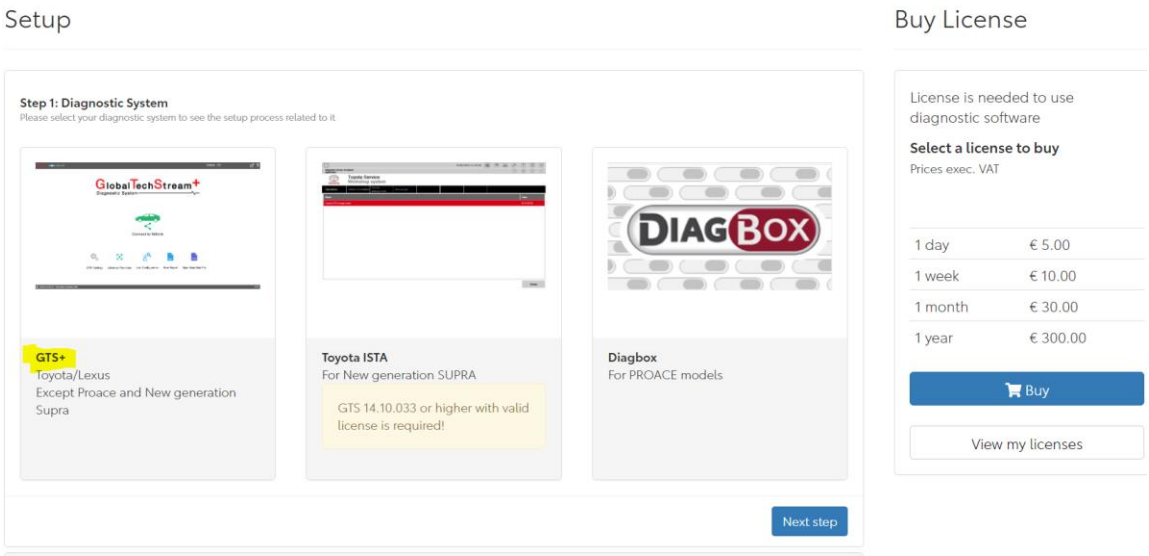

Check that you comply with the PC and hardware requirements then click on the Next step:

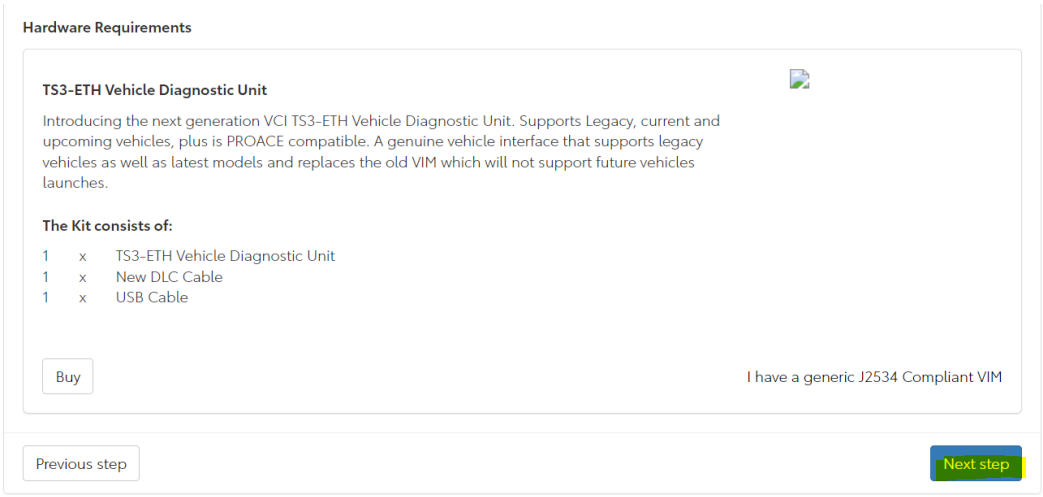


Download GTS+ then click on next step.

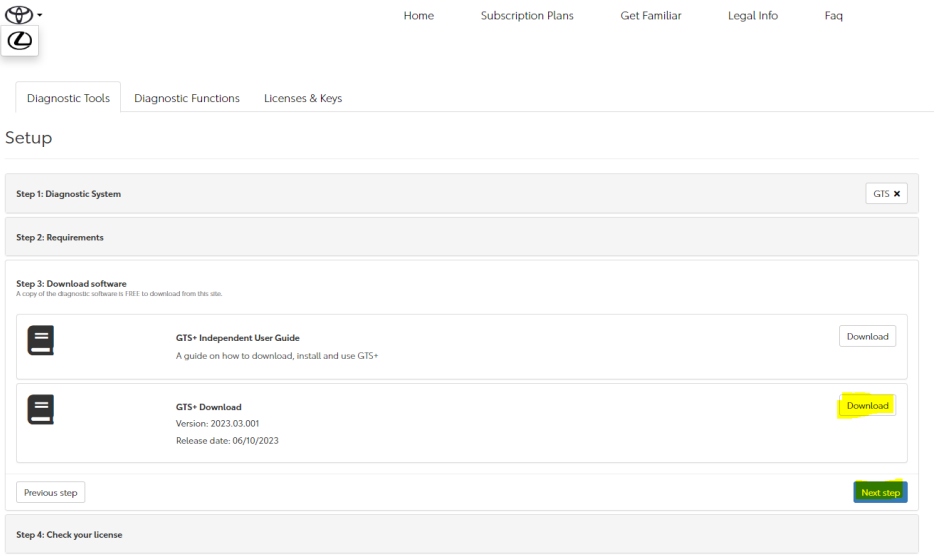


Step 3: Buy a GTS+ License.


If you don’t have an active License. Click on the “Buy extra license” button.

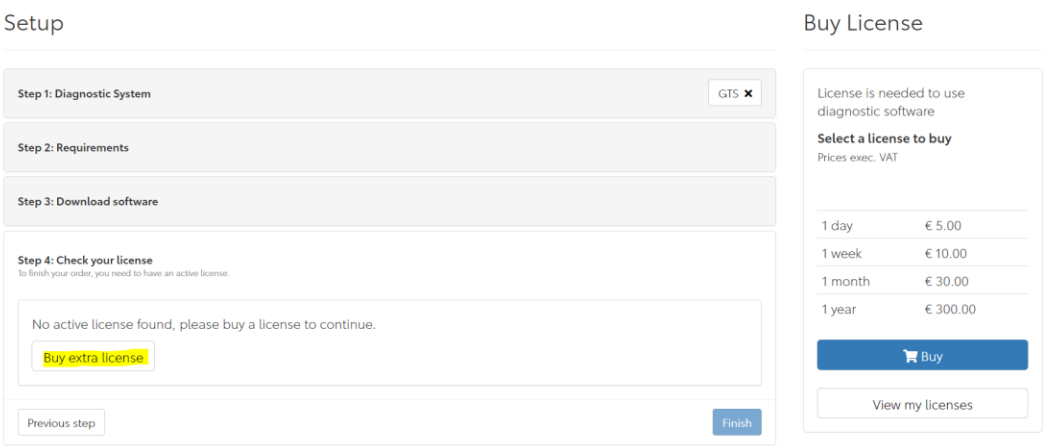

Select the Period of the needed License.

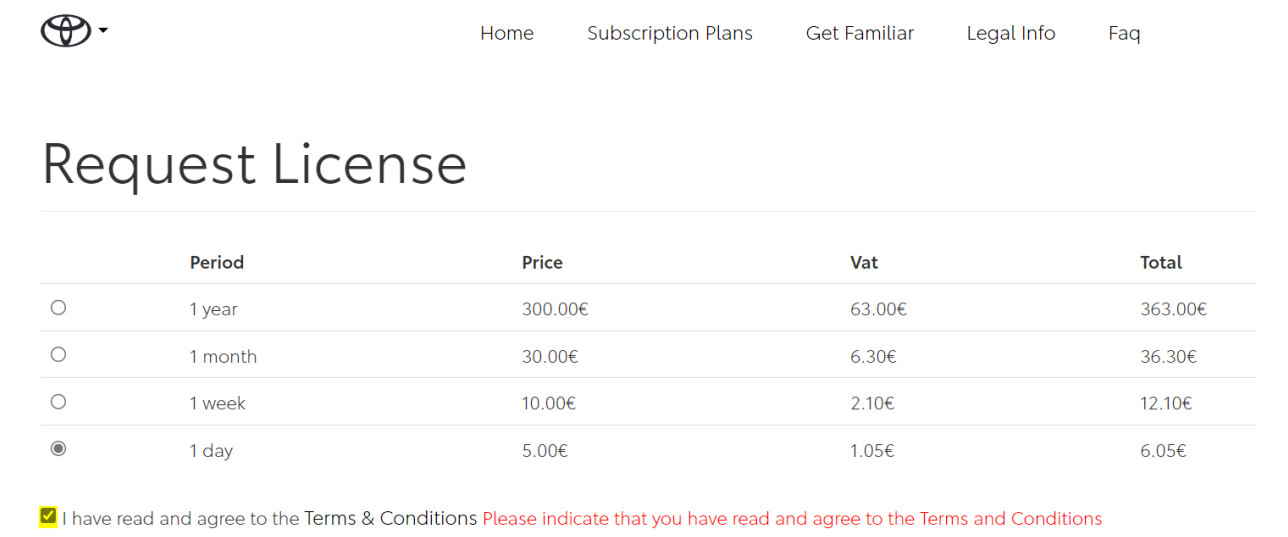


After following the Payment procedure, you should have a valid License.

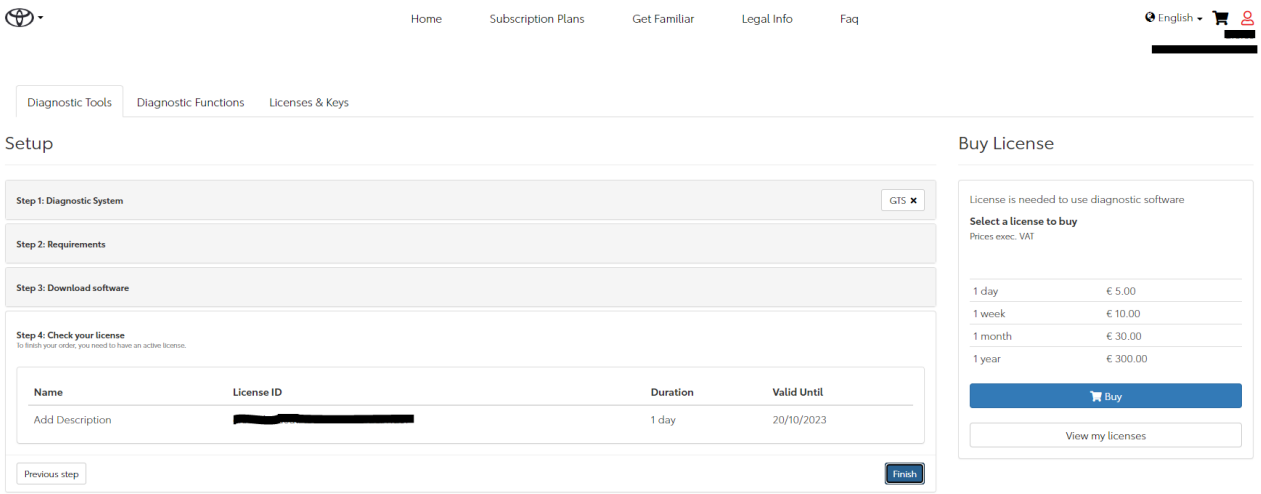

Step 4: Installation

1. Extract the installer package you downloaded at Step 2.
2. Double click on the GTSPlus**ParentInstaller.exe** to start the installation.
3. Follow-up the guidance of the screens presents during the installation process.

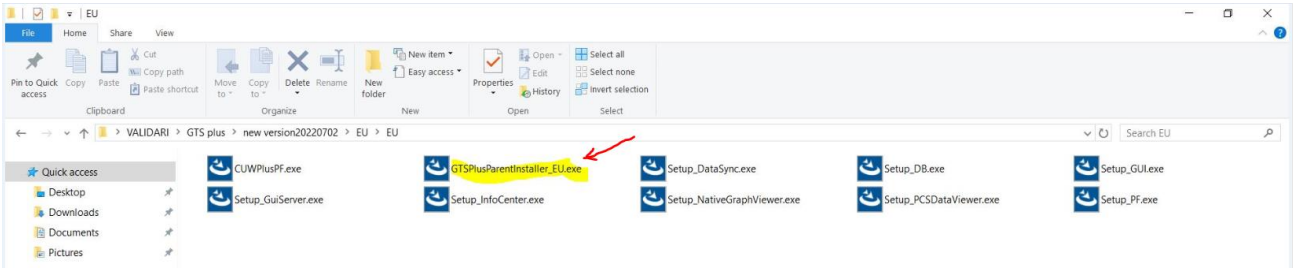

Step 5: Restart the PC!

The restart of the PC after the end of the installation process is mandatory otherwise components of the newly installed software are not fully operational and you will encounter errors.

Log in, Log Out and User Change

Login


Start

Double-click the icon on the desktop to start GTS+:



EULA

You will see this screen:

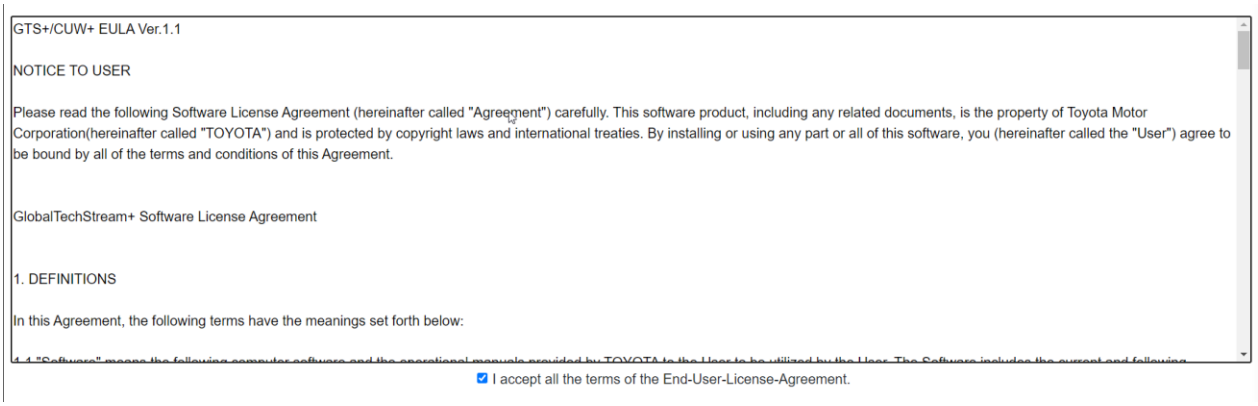

(This appears only the first time after installation or when the EULA is updated.)

If you agree with the description,
(1) Check "**I accept all the terms in the license agreement ",**
(2) Click “Next”.

Login Screen


Once you have agreed to the EULA, The GTS+ login screen appears:



Follow the steps below to start the login process:


1. Select a region/ user type from the pull-down menu
2. Select **INDEPENDENT REPAIRER**
3. Click on “Server Login”.

To log in, use the same credentials you use for Techdoc.

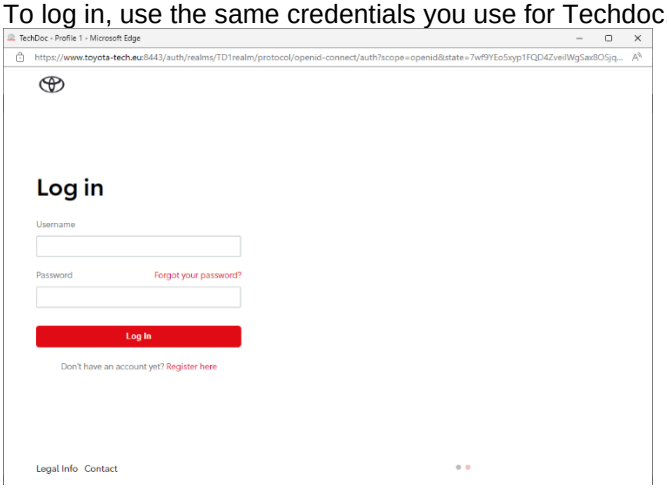


Main Menu


Once login is complete, you will see the Main Menu screen:

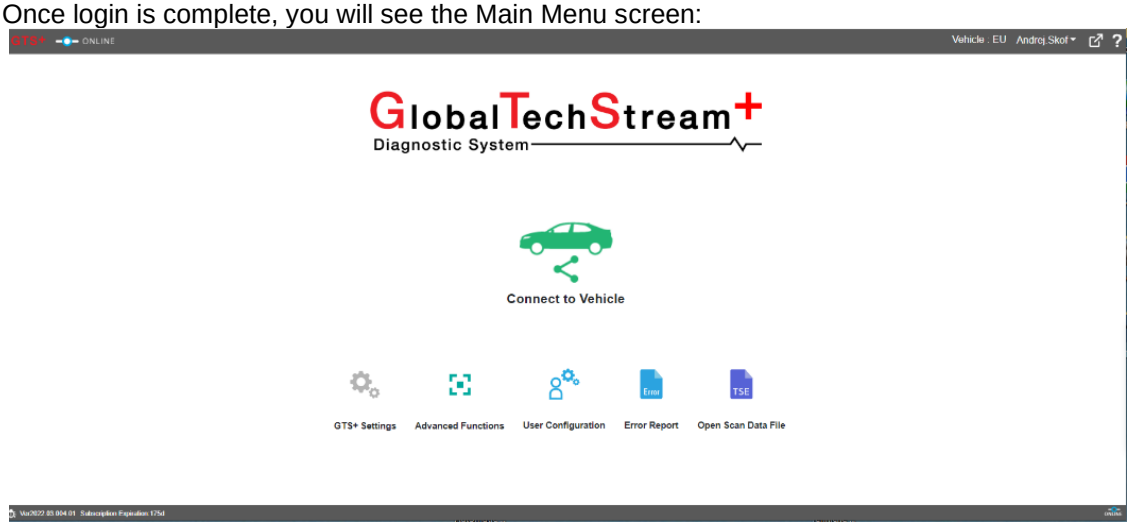

User Settings

If you log in for the first time ever to any GTS+ PC, you will see the “User Settings” screen:

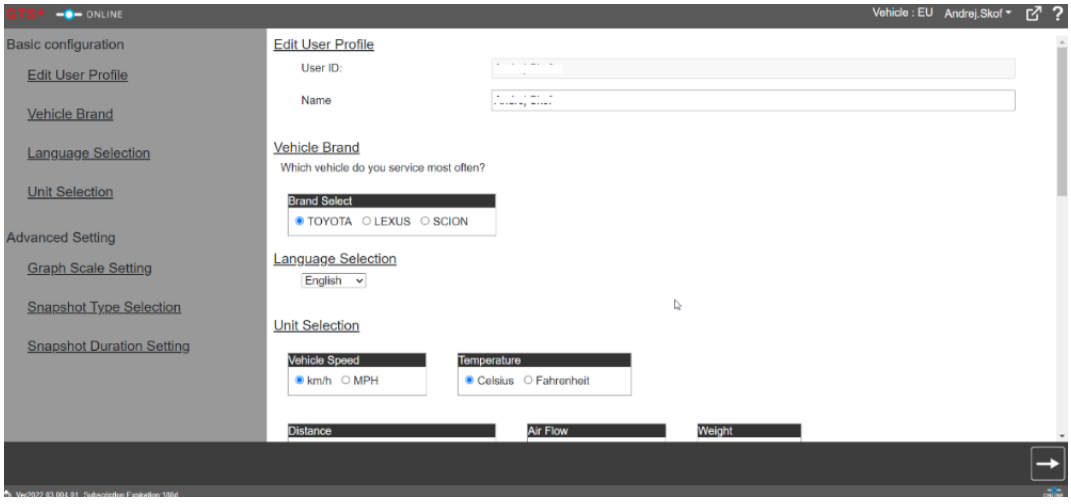

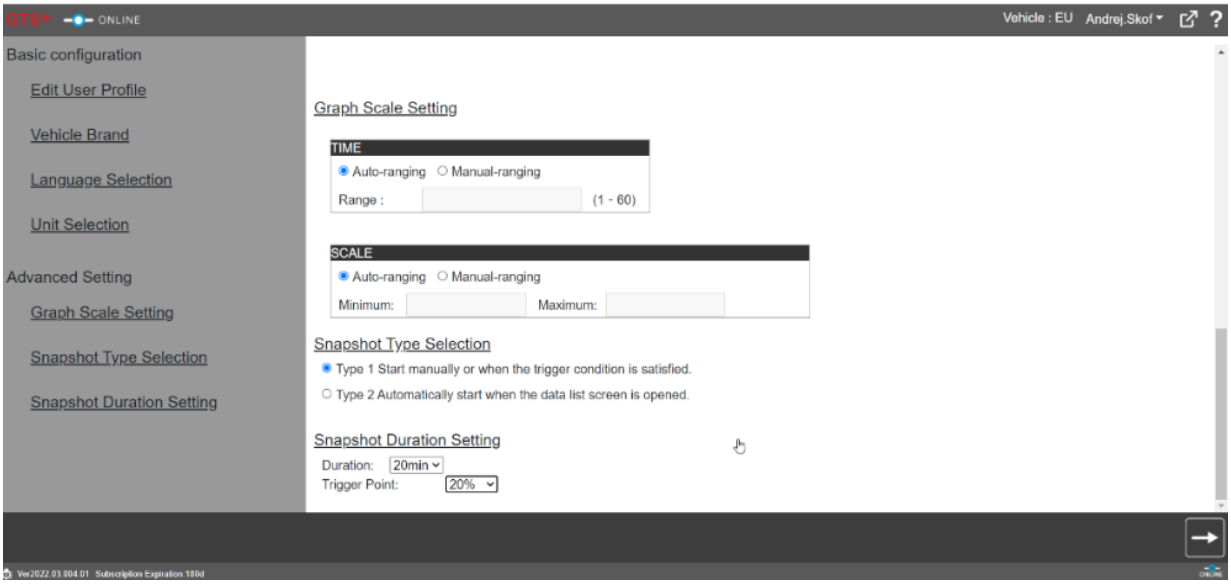



You can adjust your preferences and save them by clicking on the “Next” button (right-pointing arrow).
This user setup must be done **once** only, after which the settings will be saved in an online database. If you log in to another GTS+ PC, you will automatically load in your settings.

You can always change your profile settings in “User Configuration” in the Main Menu.

PC Settings

The first user to log in to GTS+ will also see the “PC Settings” page:

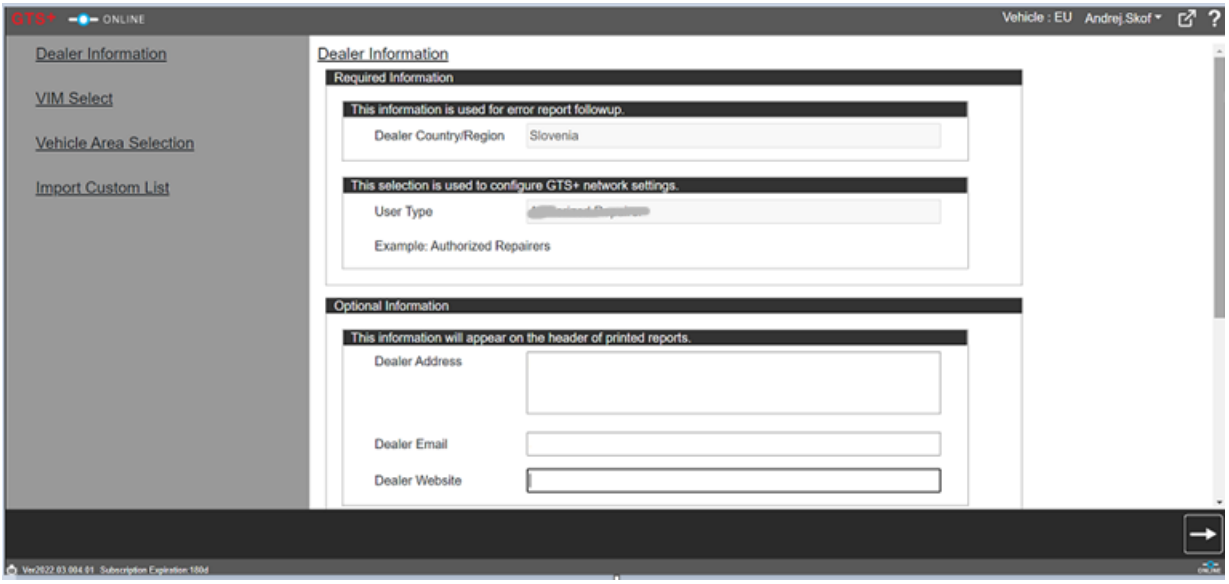

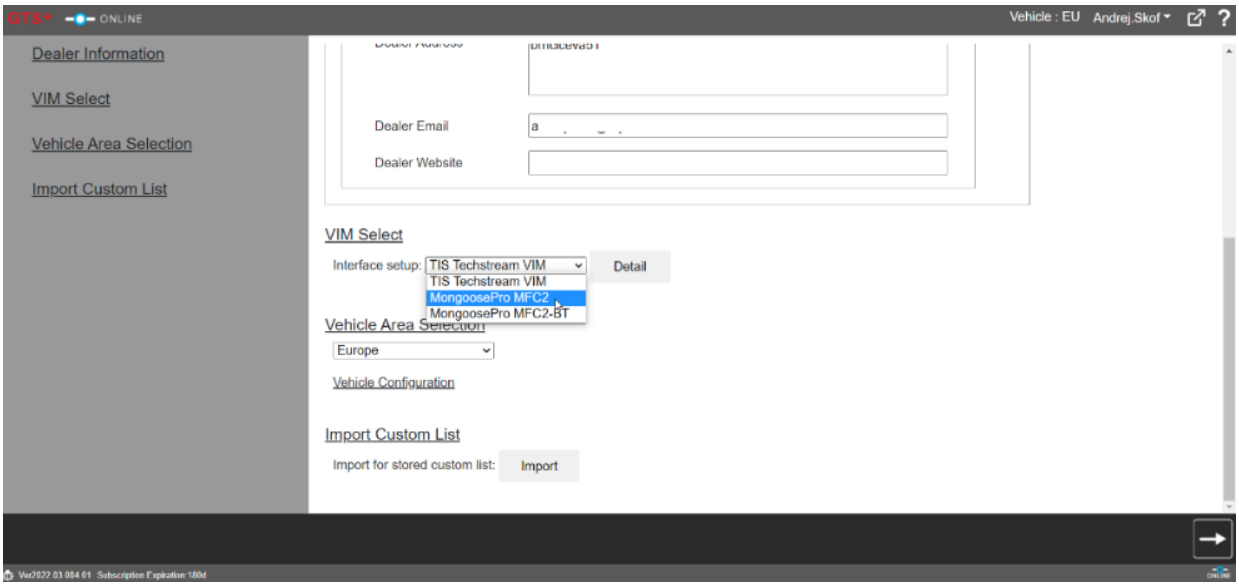

These settings will store the dealer/workshop details as well as the VIM configuration. This needs to happen once after installation. You can save the settings by clicking on the “Next” button.



You can change settings by clicking on “GTS+ Settings” in the Main Menu.

Setup completion

Once you have saved all settings, you will be returned to the Main Menu.



Logout and Close

When clicking the "x" button (close) in the browser to exit the software, the user is automatically logged out and GTS+ is closed






User switching

To switch users, exit the software, restart GTS+ and log-in as the new user.

Click on the triangle next to your user ID and **Logout** will be displayed. Clicking on **Logout** will lead you back to the **Login** screen.

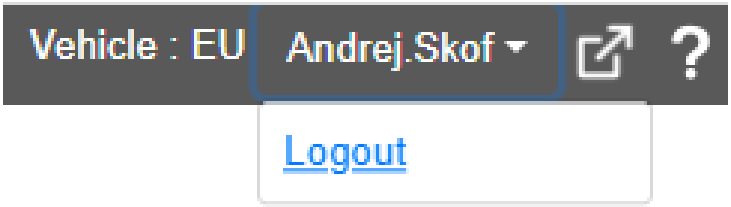




Preparation for work

Overview

Prepare the following to connect the GTS+ to the vehicle.

1. PC with GTS+ installed
2. Vehicle Interface Module
3. DLC3 cable
4. USB cable (dedicated for each VIM)

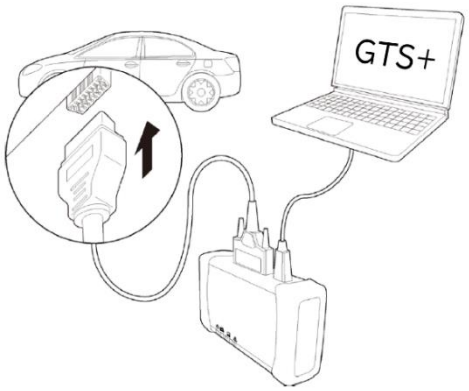

VIMs and drivers

TD TS3-ETH	Mongoose PlusMFC3 BT
	

The driver for both VIMs is the same and can be found on the OPUS website OPUS - Downloads (opusivs.com)

Or downloaded via the direct link: Mongoose-Plus Toyota driver





Mongoose-Plus Honda2
Mongoose-Plus Honda2-BT
Set-Up: DOWNLOAD
User Manual: DOWNLOAD

Mongoose-Plus Nissan2
Mongoose-Plus Nissan2-BT
Set-Up: DOWNLOAD
User Manual: DOWNLOAD

Mongoose-Plus Toyota
Mongoose- Plus Toyota-BT
Set-Up: DOWNLOAD
User Manual: DOWNLOAD

Vehicle Connection


Once you have logged in successfully, you will be ready to connect to the vehicle.




In order to start the connection process, click on “Connect to Vehicle”



You will see the connection in progress screen:

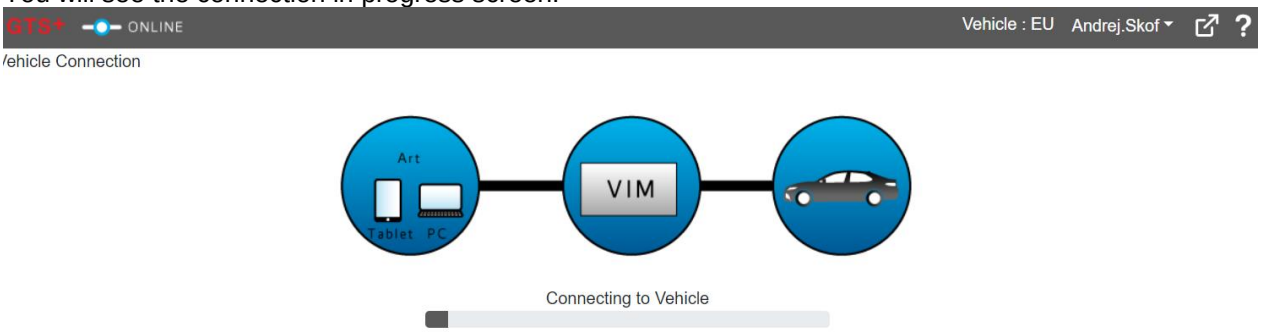


Once basic information is retrieved, you will see the option selection screen:

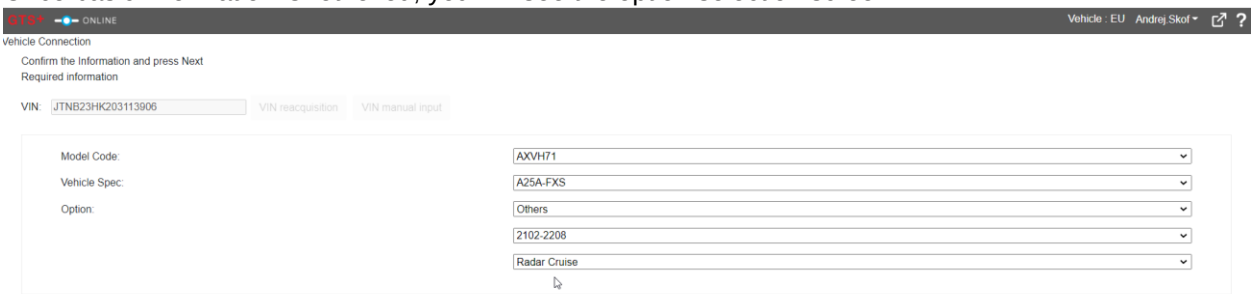


Please note that this is not always the case! You may be directly connected to the vehicle.

Once you have selected an option in the dropdown menu, press 


After selecting options, wait to for GTS+ to complete the connection:

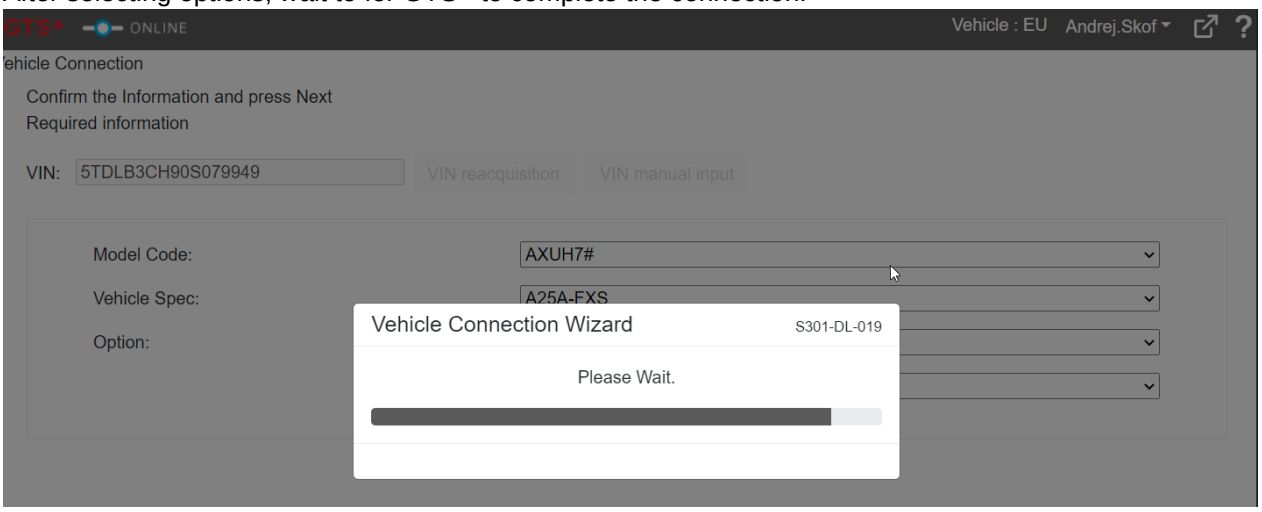

Once connection is established, you will see the “Main Menu” screen.

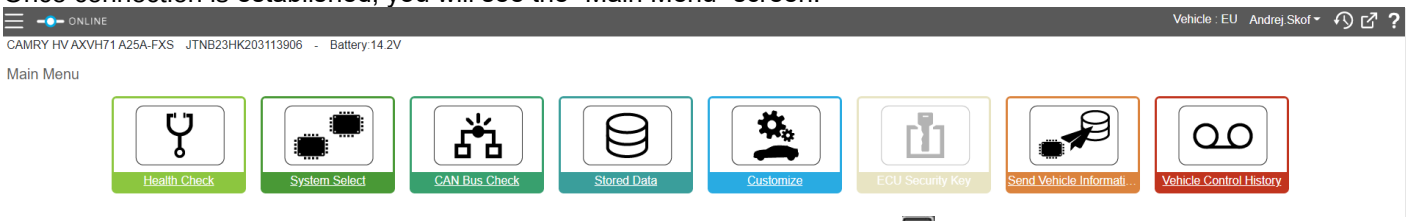

You can always reach this screen by clicking on the button with three lines (top left of the screen) and selecting “Main Menu”:

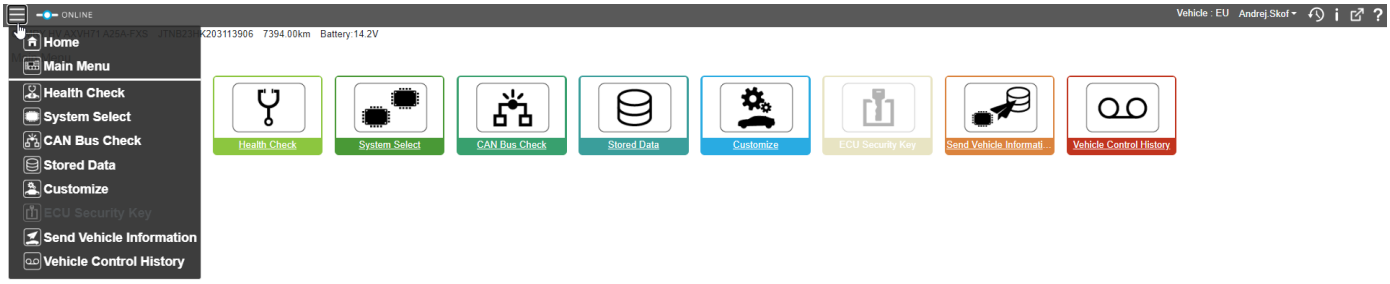

Operations

From this menu, you can choose to execute the following operations:

1. Health Check
2. System select
3. Can bus check
4. Stored data
5. Customize
6. ECU security key (not applicable to all vehicles)
7. Send vehicle information (not applicable to all vehicles)
8. Vehicle control history


Description of Operations

Health Check




Health Check Start

Health Check checks all ECU units on the vehicle for DTC Codes, RoB codes, Calibration information and more:

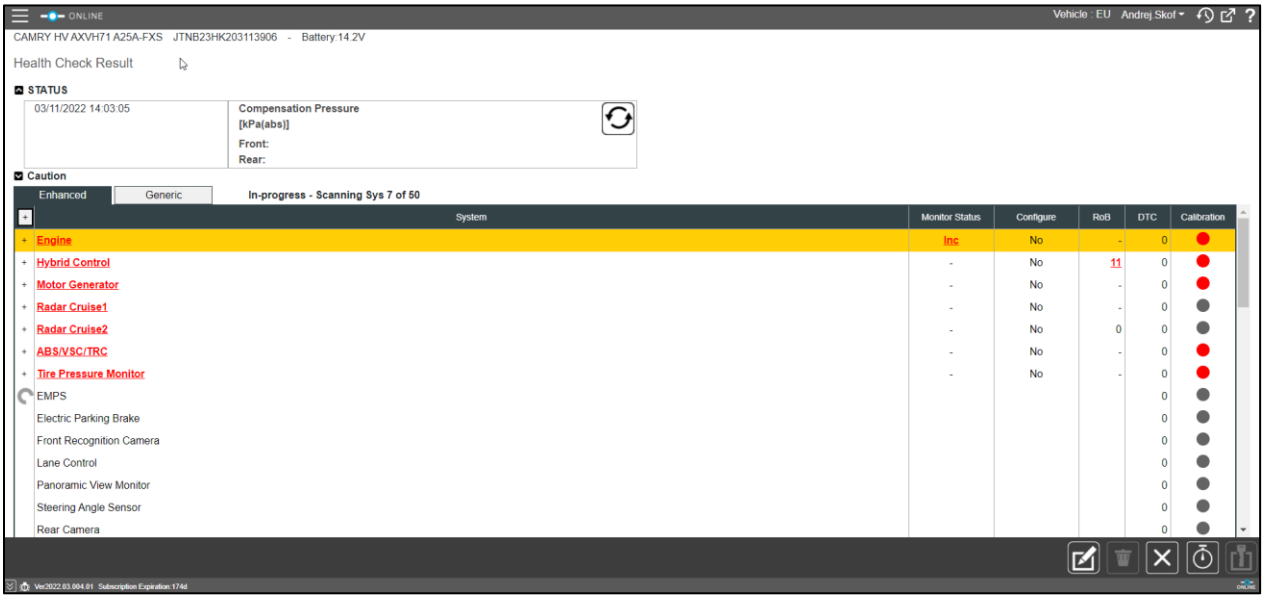

Please note that you can already check DTC details while Health Check is still in progress!

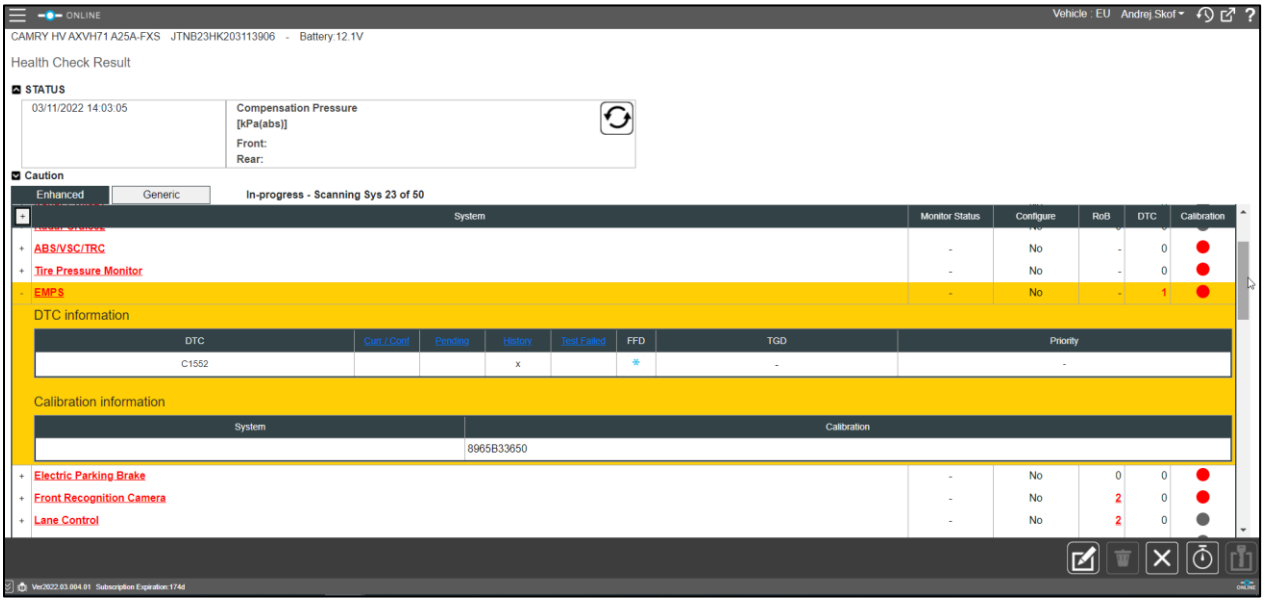


At the bottom right corner of the screen, you can find additional operations:




From left to right, these are:

1. Software as a part (“Blank ECU”)
2. Clear all DTCs
3. Refresh health check
4. Time stamp
5. ECU Security Key (not applicable in this case)


You will be asked to collect additional data. You can accept or reject.

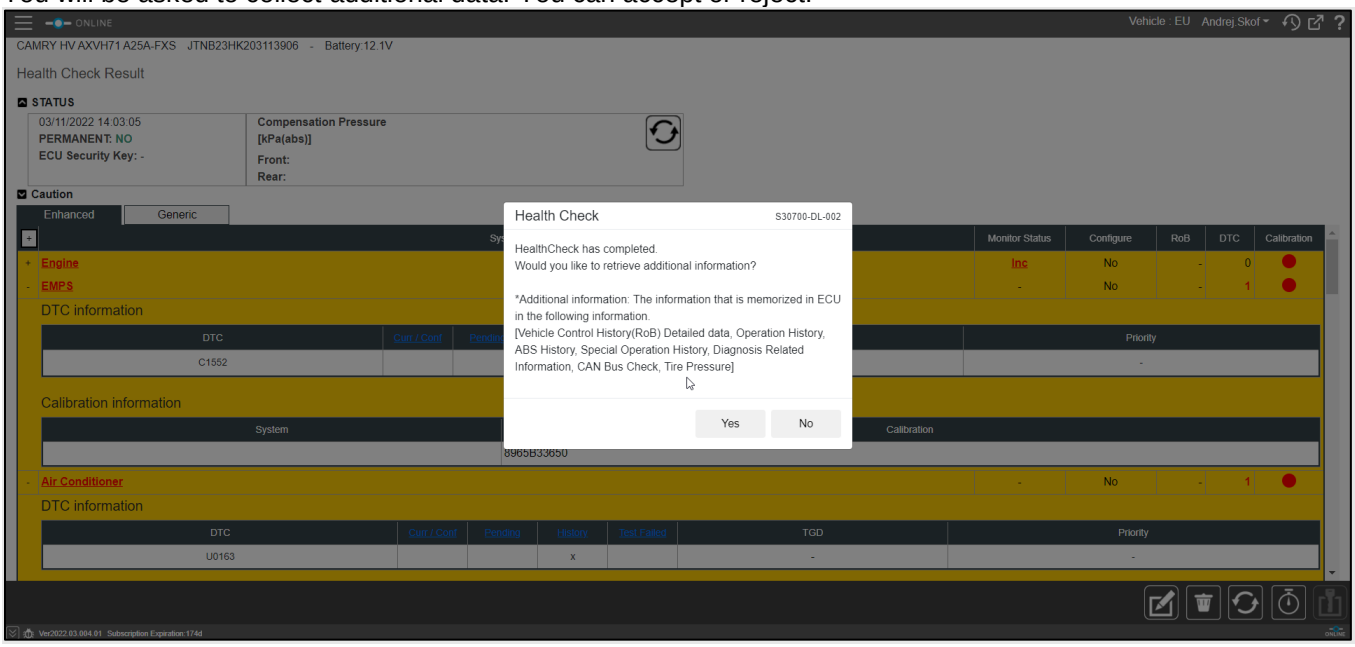

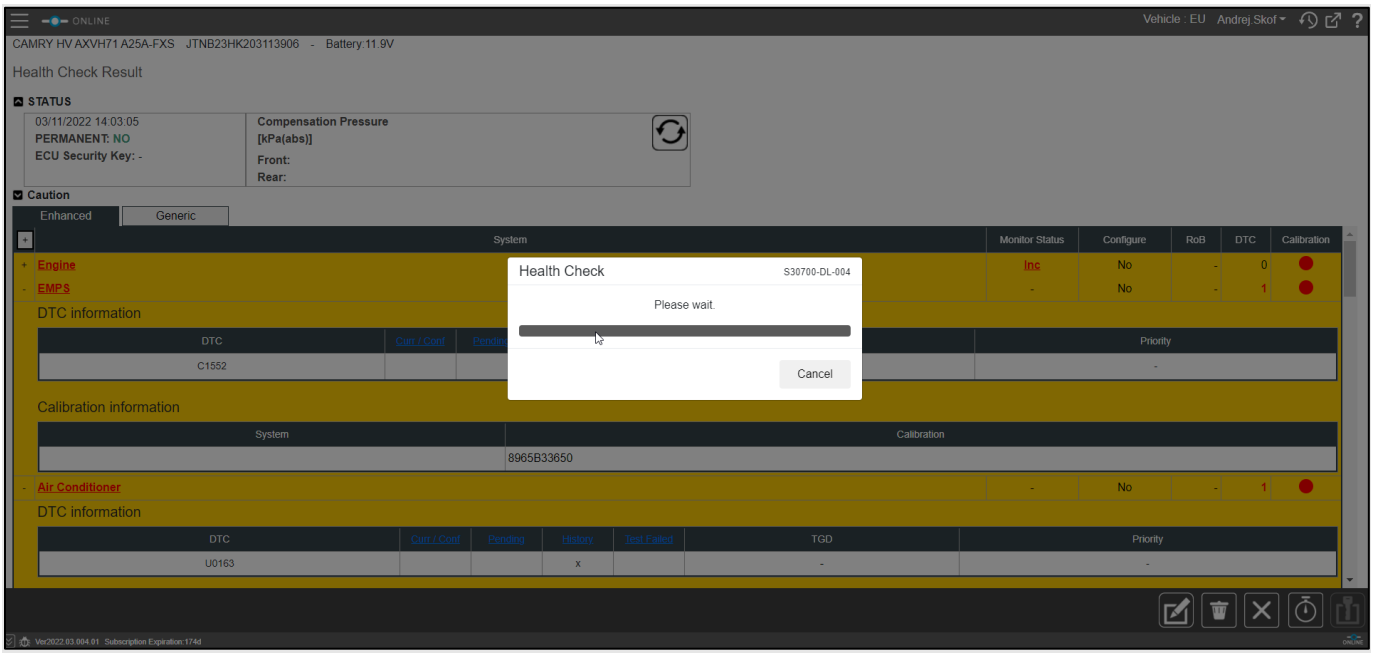


Health Check Result screen

Once the Health Check is complete, you will see the result screen in real-time. You can open Freeze Frame Details (FFD) by clicking on eh snowflake icon under the “FFD” column in any ECU with DTCs:

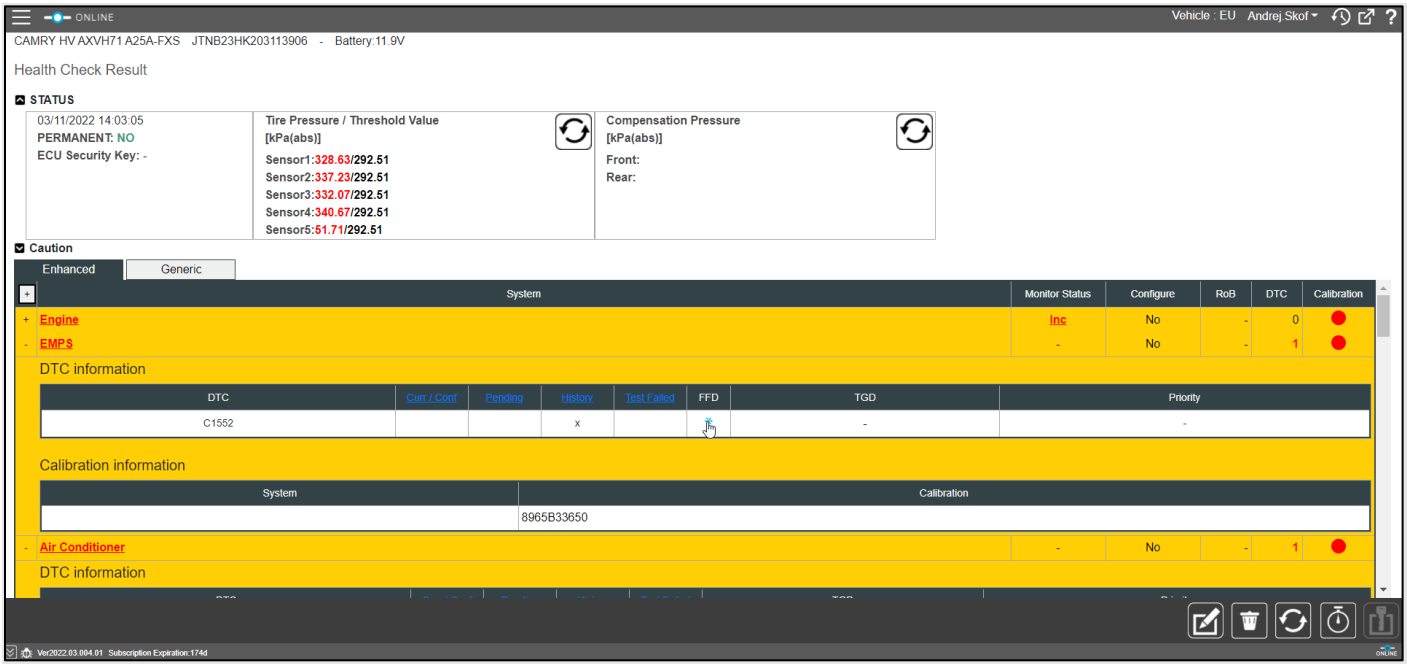



This is what the FFD screen looks like:

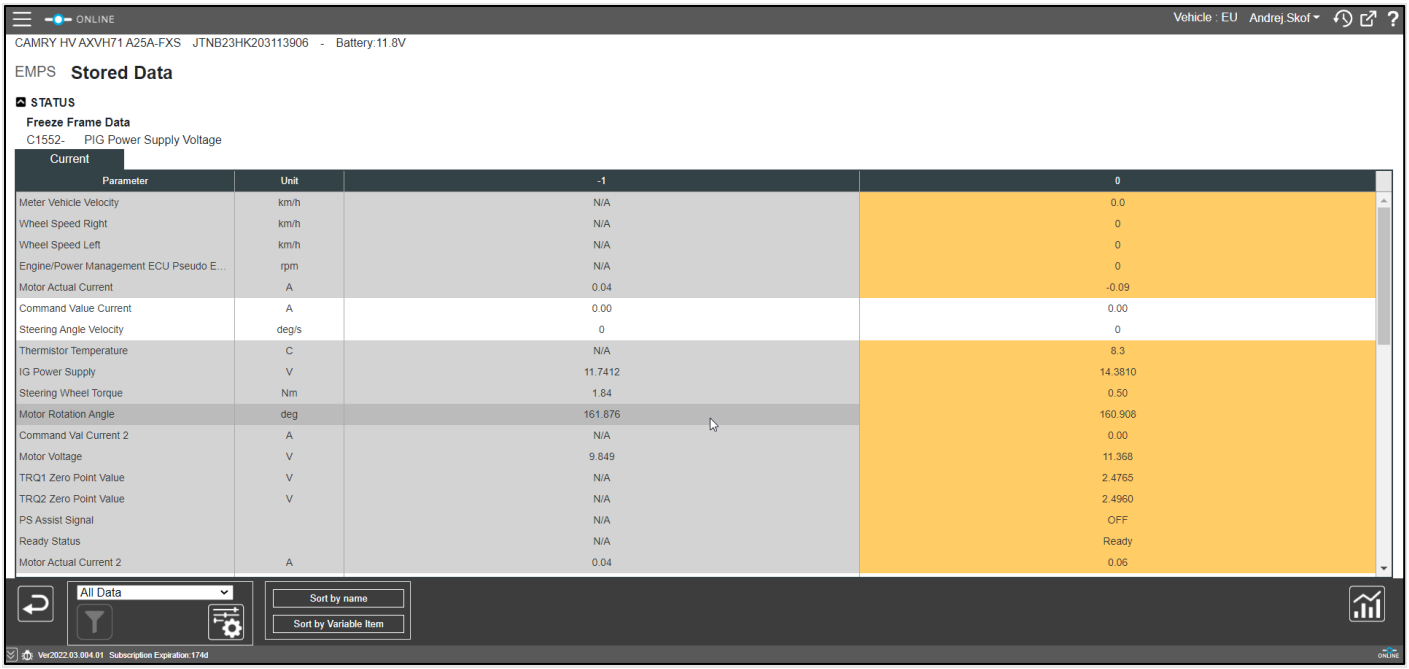


You can ”fold” or “unfold” all details by clicking on the “+” or “-” buttons on the left top corner of the Health Check Result page:

Minimized view

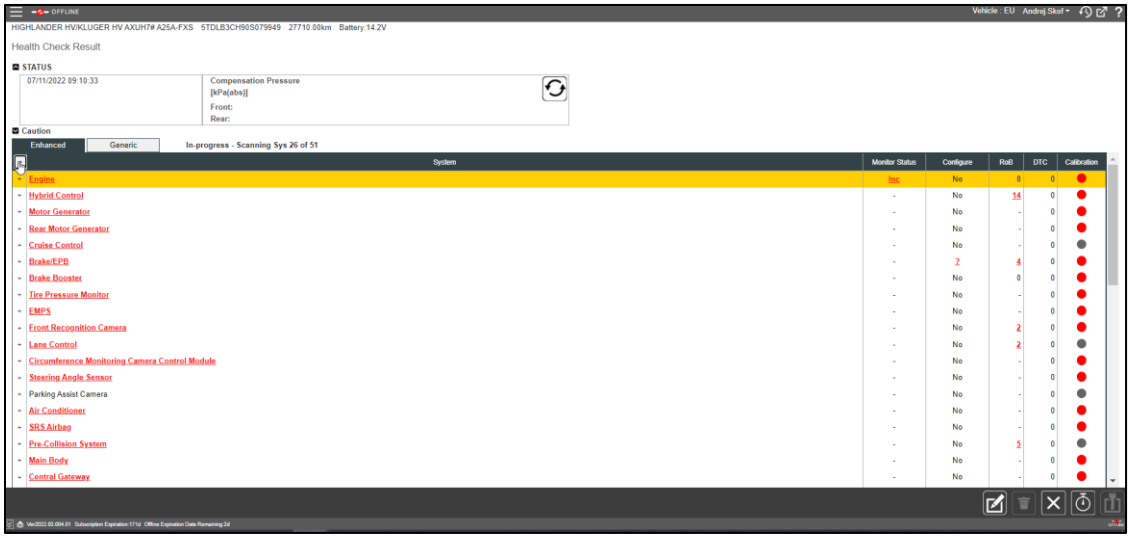


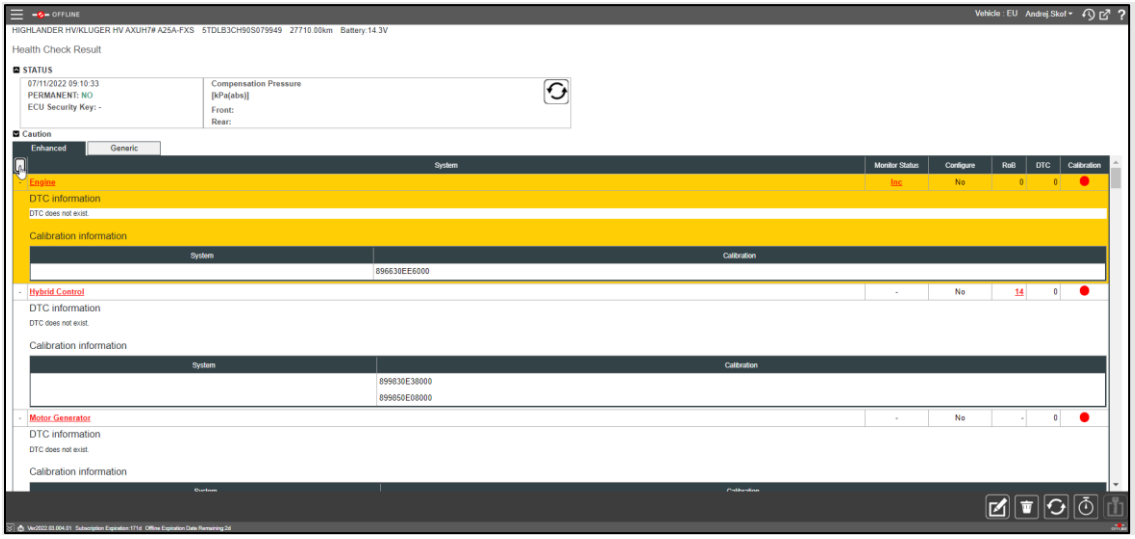

Stored Data

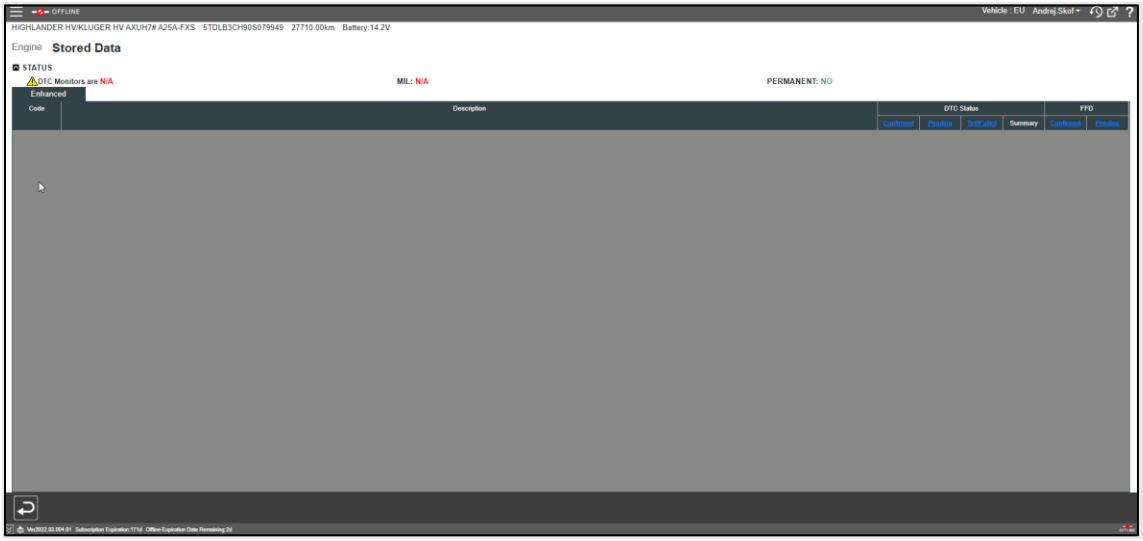


System Select

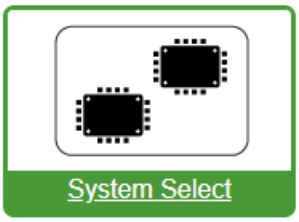


System Select Start

System Select opens the details of the specific ECU you want to retrieve information from. When you click on the icon, you will land on the screen with an overview of all ECU.


Screen after a Health Check is done (ECU status known)

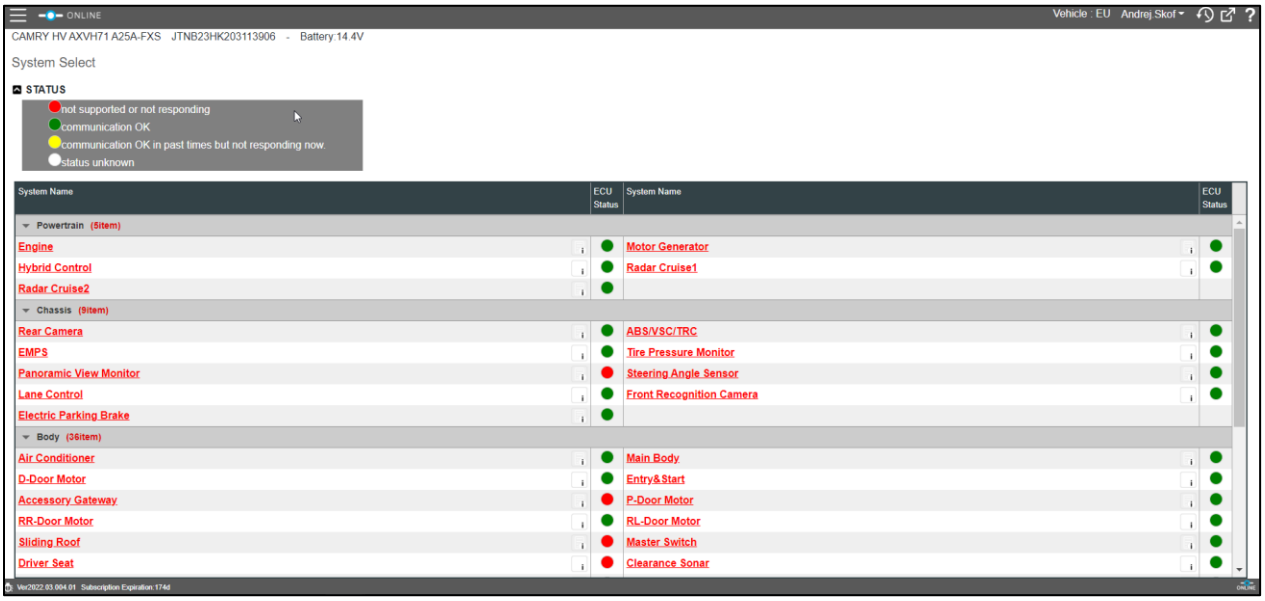


Screen before Health Check is done (ECU status unknown)

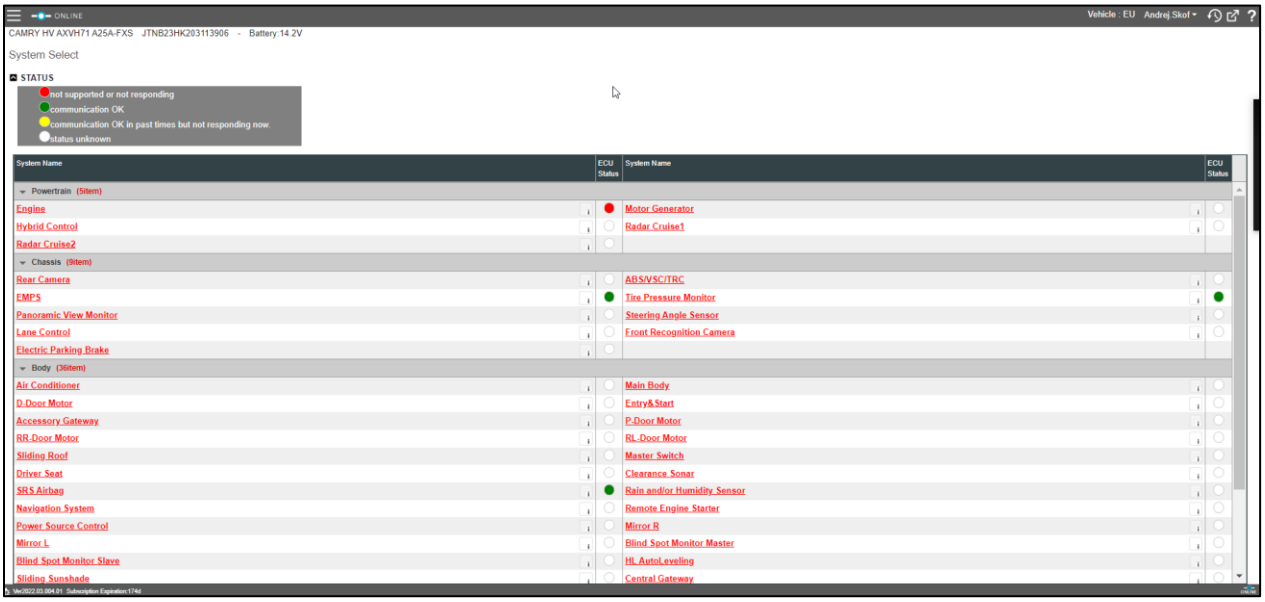

Clicking on  will provide more information about the ECU:

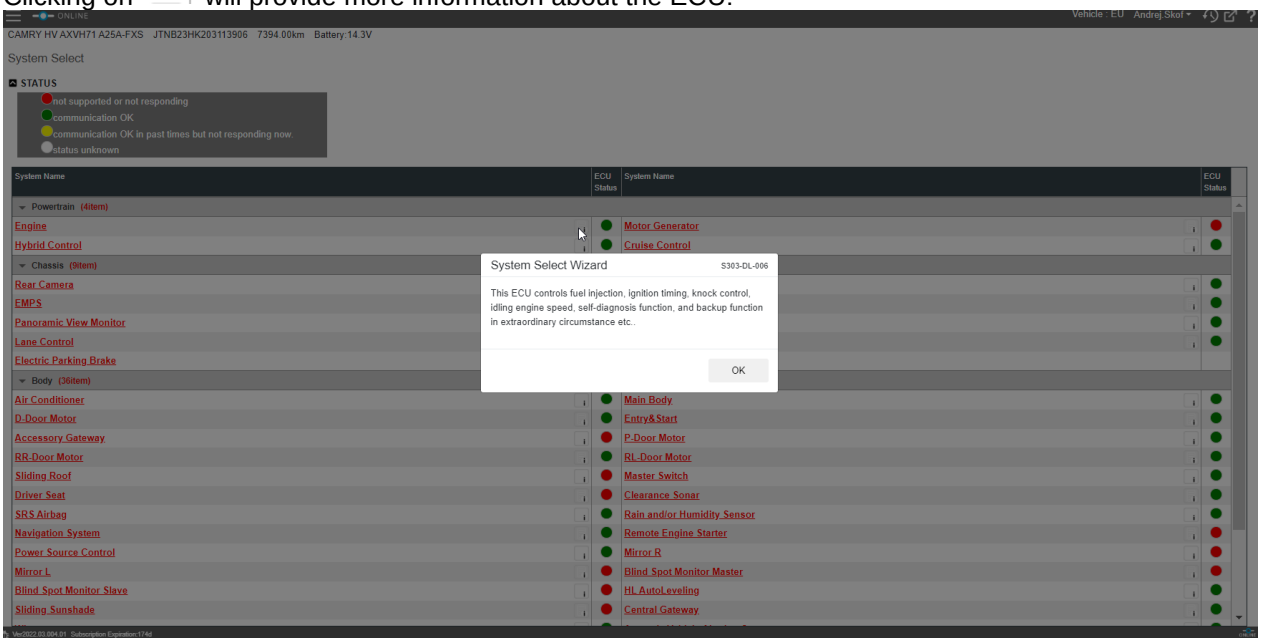

Opening a system always opens the DTC screen first. You can switch between different operations for a specific ECU (DTC Check, Data List, Active Test, Utility, Dual Data List)

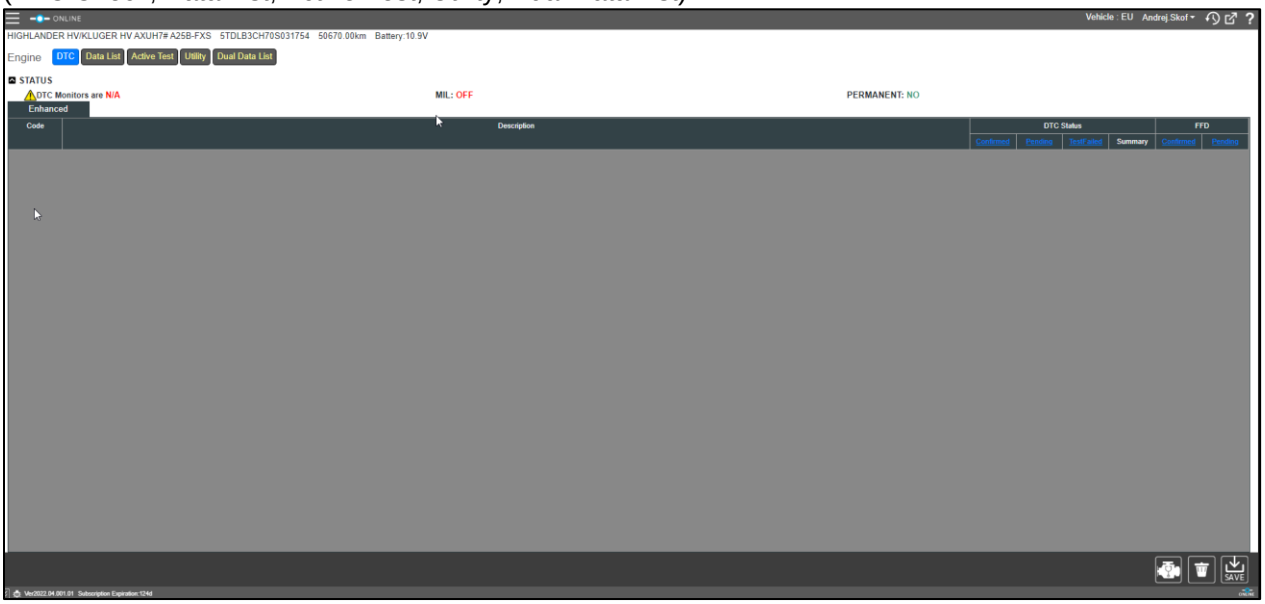


Bottom right of the screen, you can find additional options.



From left to right, these are:


1. View monitors
2. Clear DTC
3. SAVE (saves details to the TSE file)

Wire monitors screen:

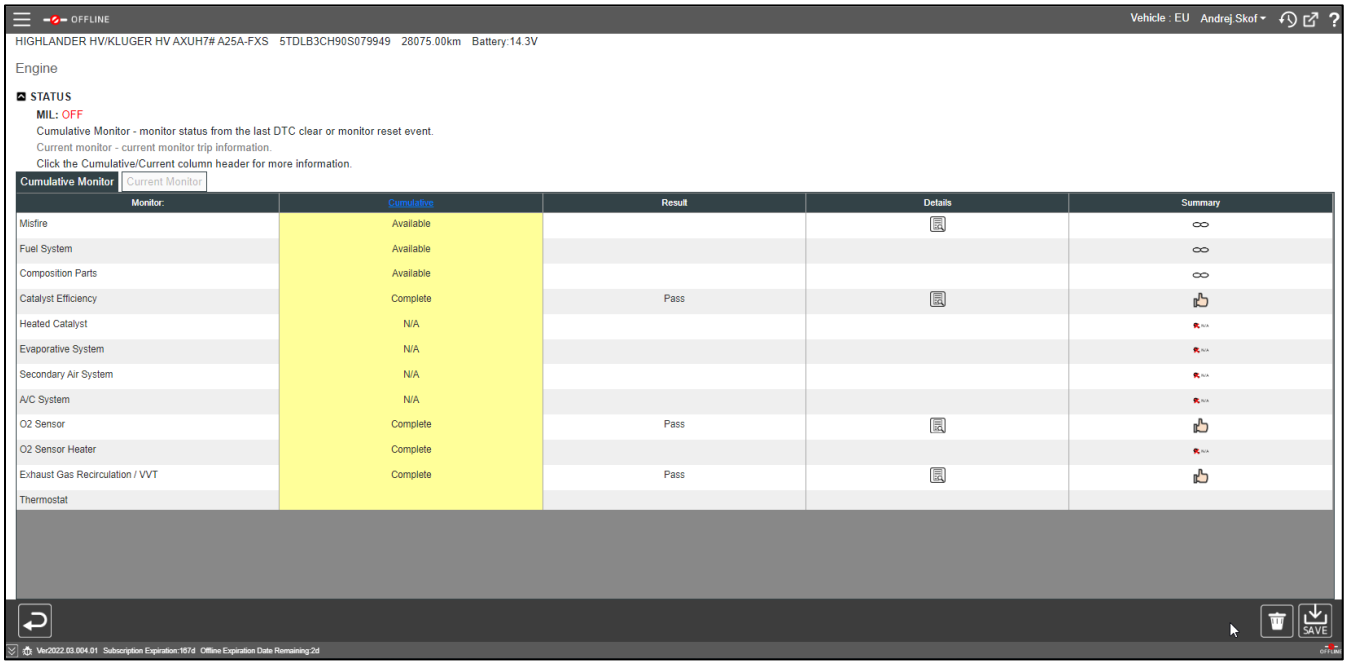


To go back to the previous system select screen, click on the back arrow: 

If you choose Clear DTC  , you will receive a warning. You can store data, clear data or cancel the operation.

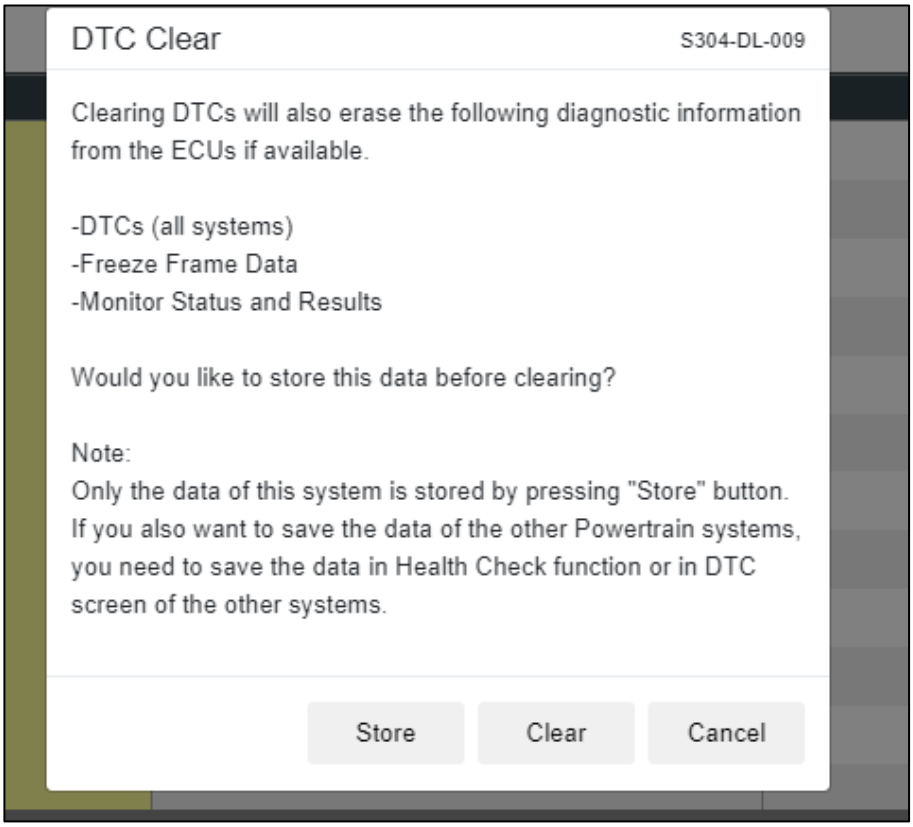


Data list

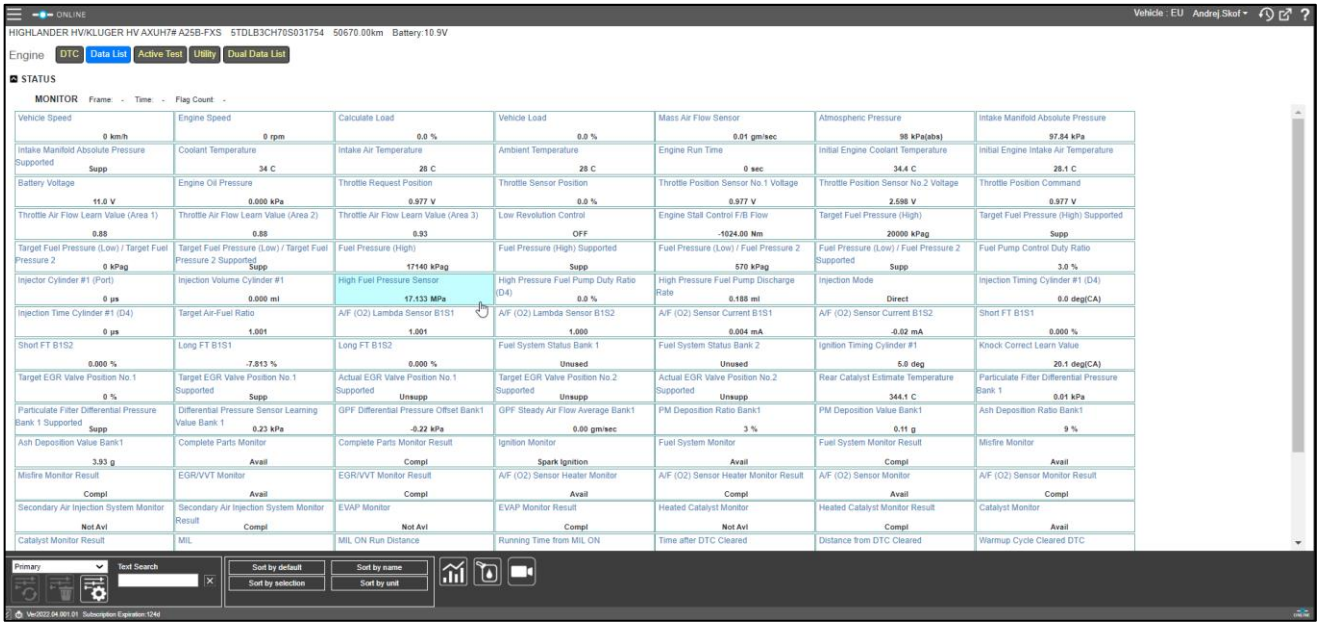


You can filter data by clicking on the dropdown menu (bottom-left corner):




You can also highlight specific parameters by selecting them first:

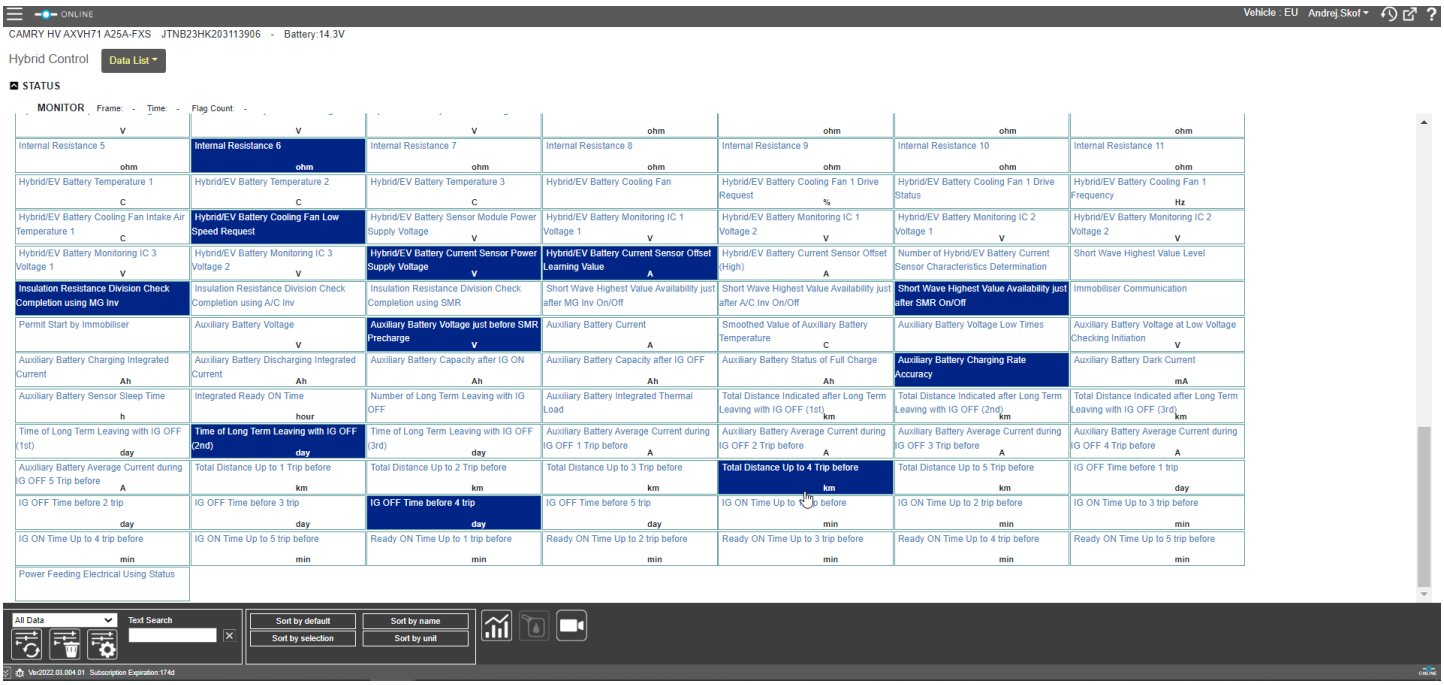


And then clicking on “Sort by selection” button:

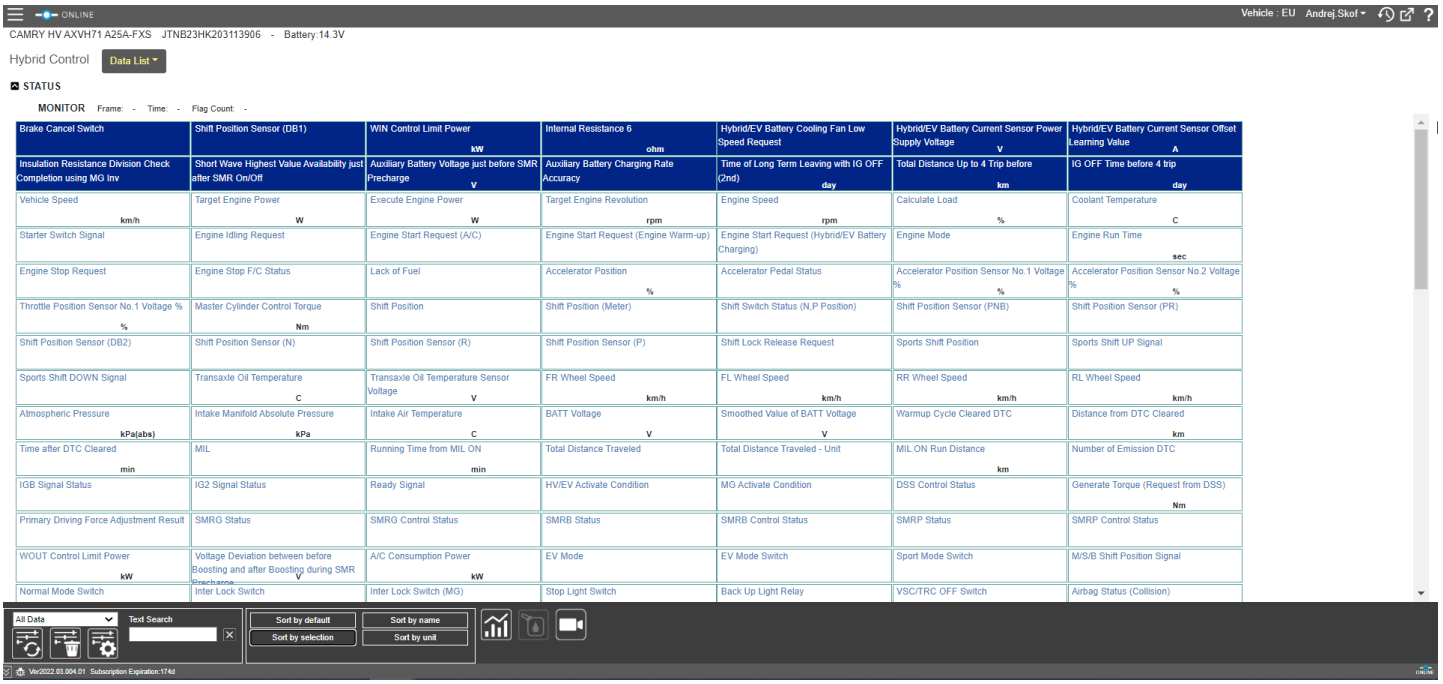

Data list graphing can display up to 8 items (two in one graph)

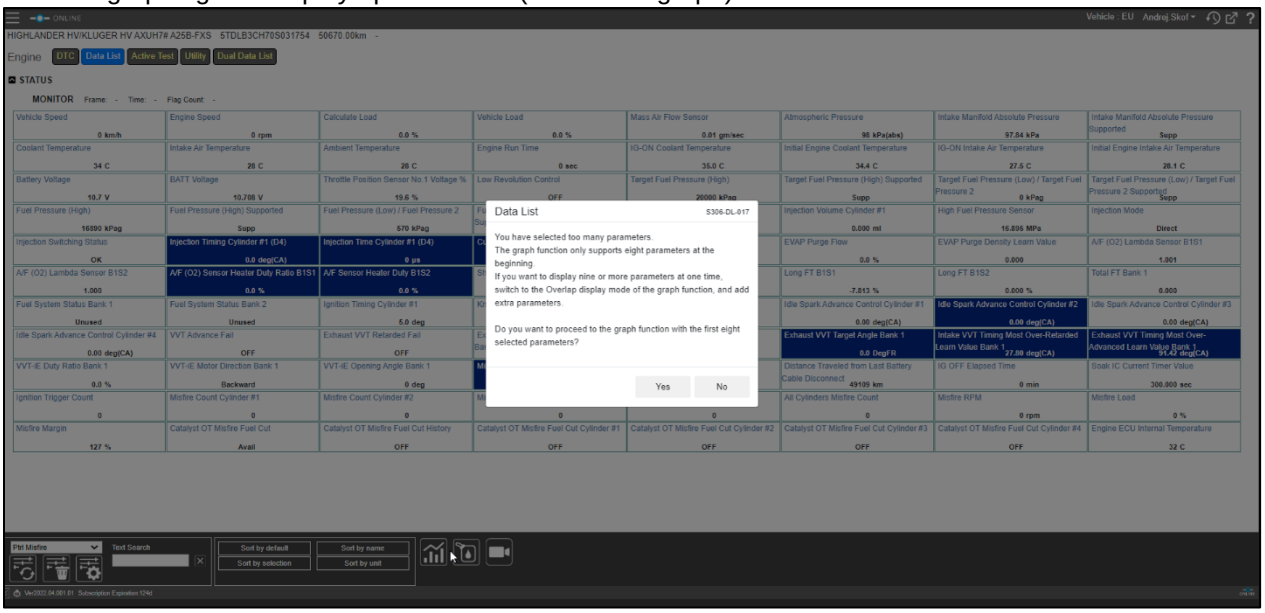

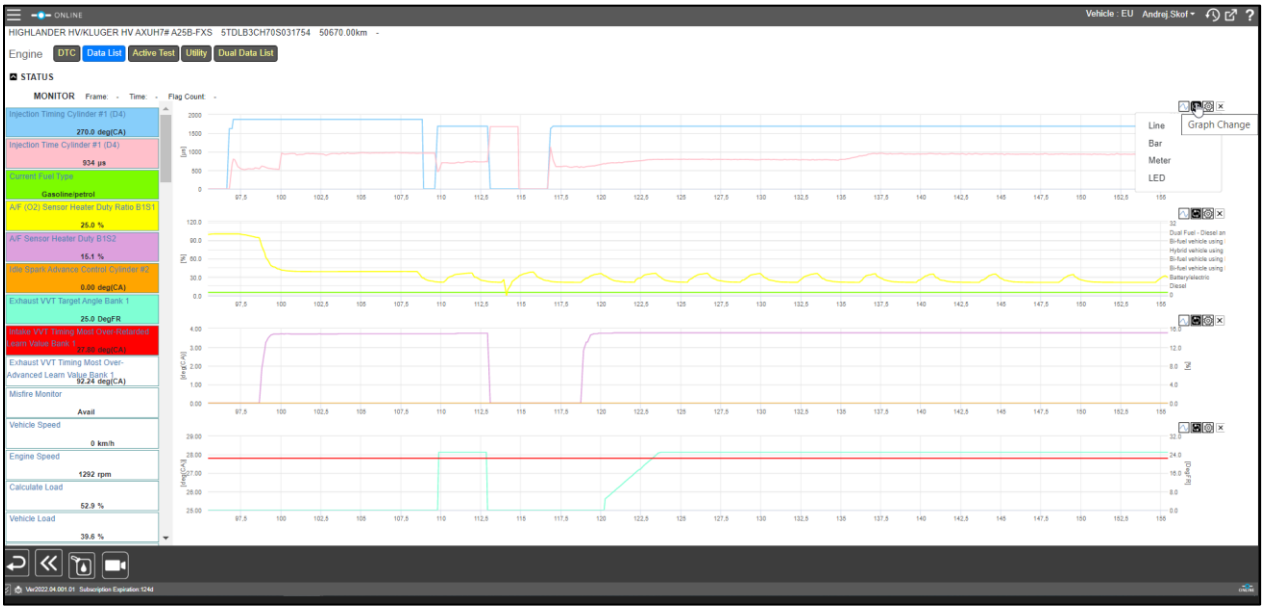

Options on the right side for every graph that you open:




From left to right, these are:


Full Screen mode
Graph change
Graph setting
Close

Snapshot


You can perform a snapshot by configuring, recording and saving it as shown below:

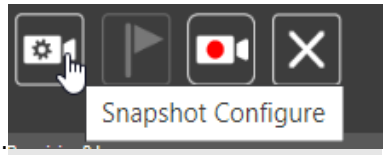


1. 

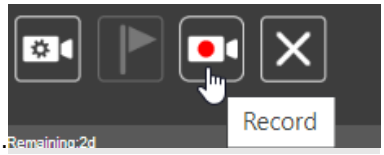2. 

3. 

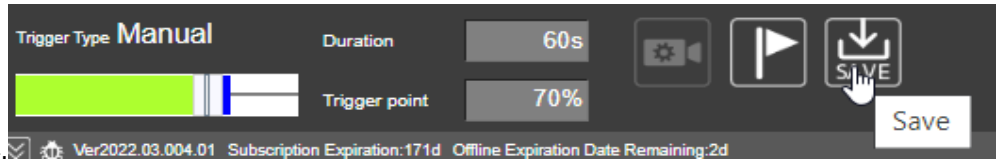
4. 

When the Snapshot is finished, you can add a Memo future information (example: “Engine start”), then press YES so the data will be saved

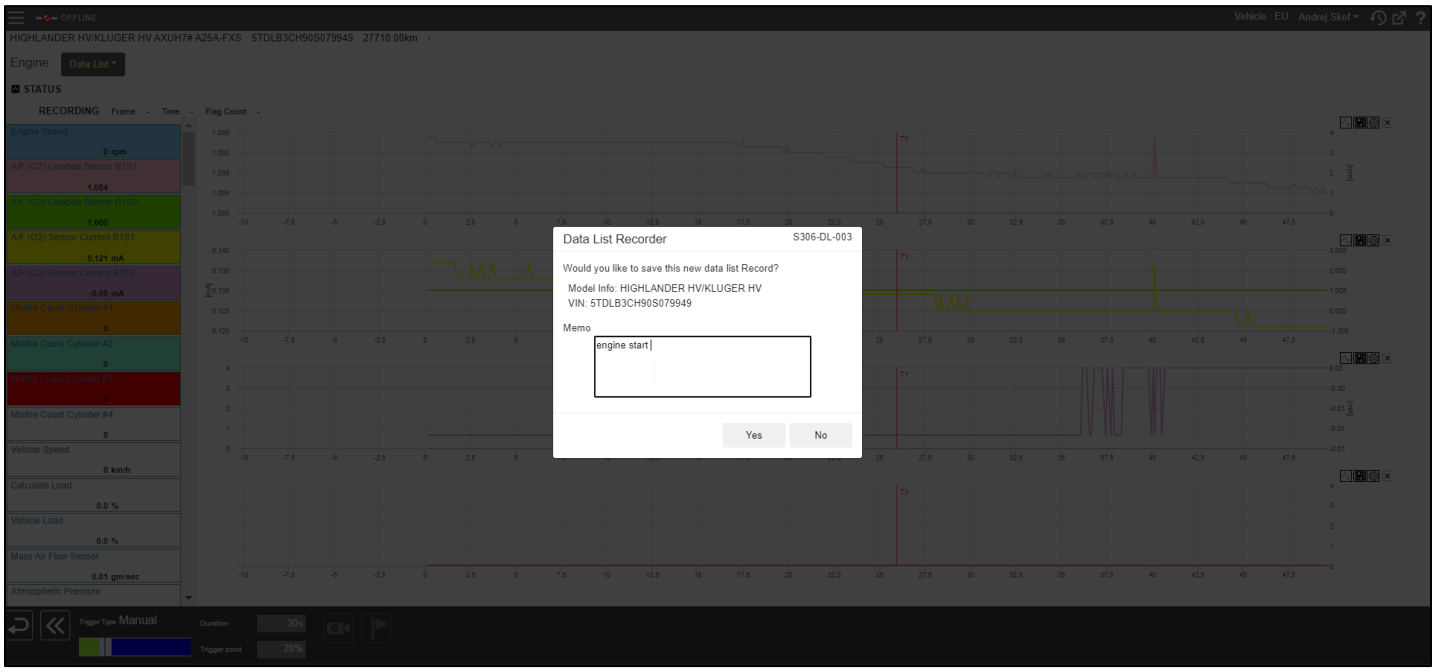


Selecting the Trigger Conditions

Default trigger conditions are stored when you launch the application for the first time. If you want to change the Trigger conditions while reading Data List, press the  and configure the settings. Press OK to save.

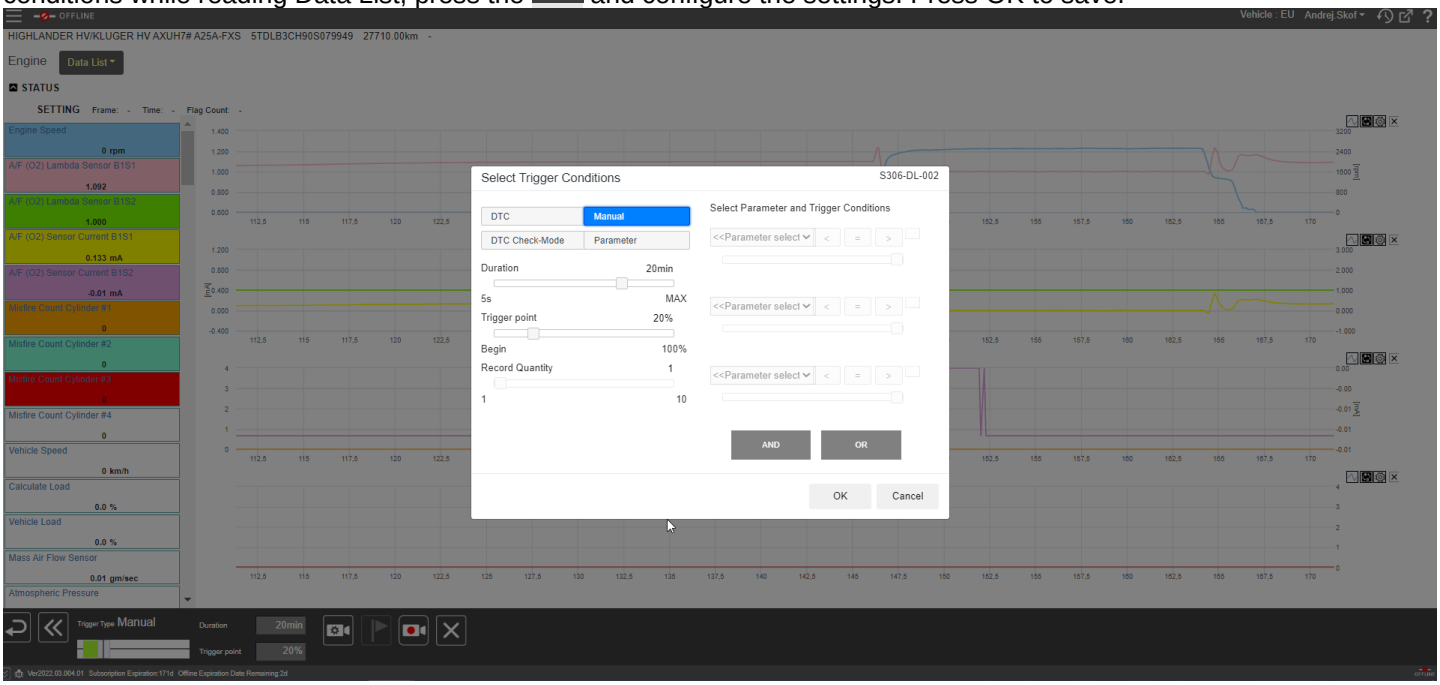


Graphing


You can directly start a Graph by clicking on the graph button at the bottom of the screen.

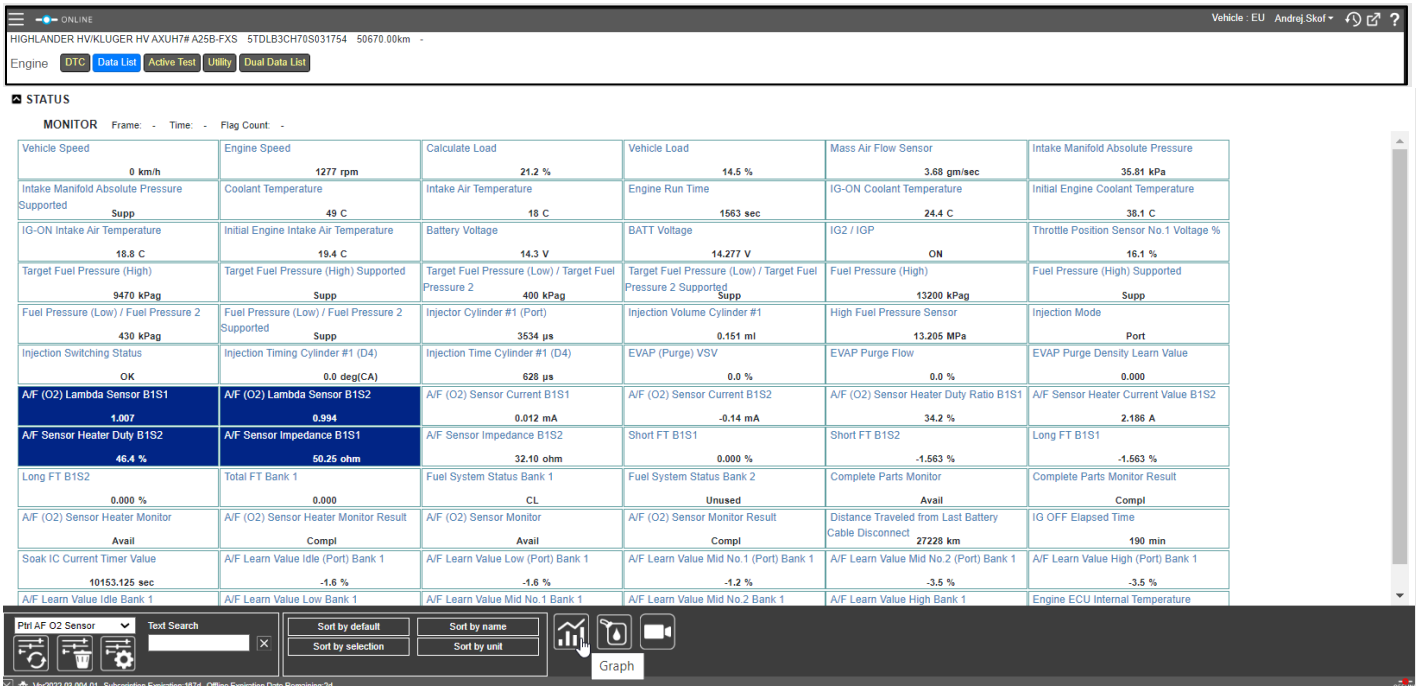


By default, you will see both data list and graph on the screen. You can change this to show the graph only by clicking on  .

If you want to have data list active again, click on 

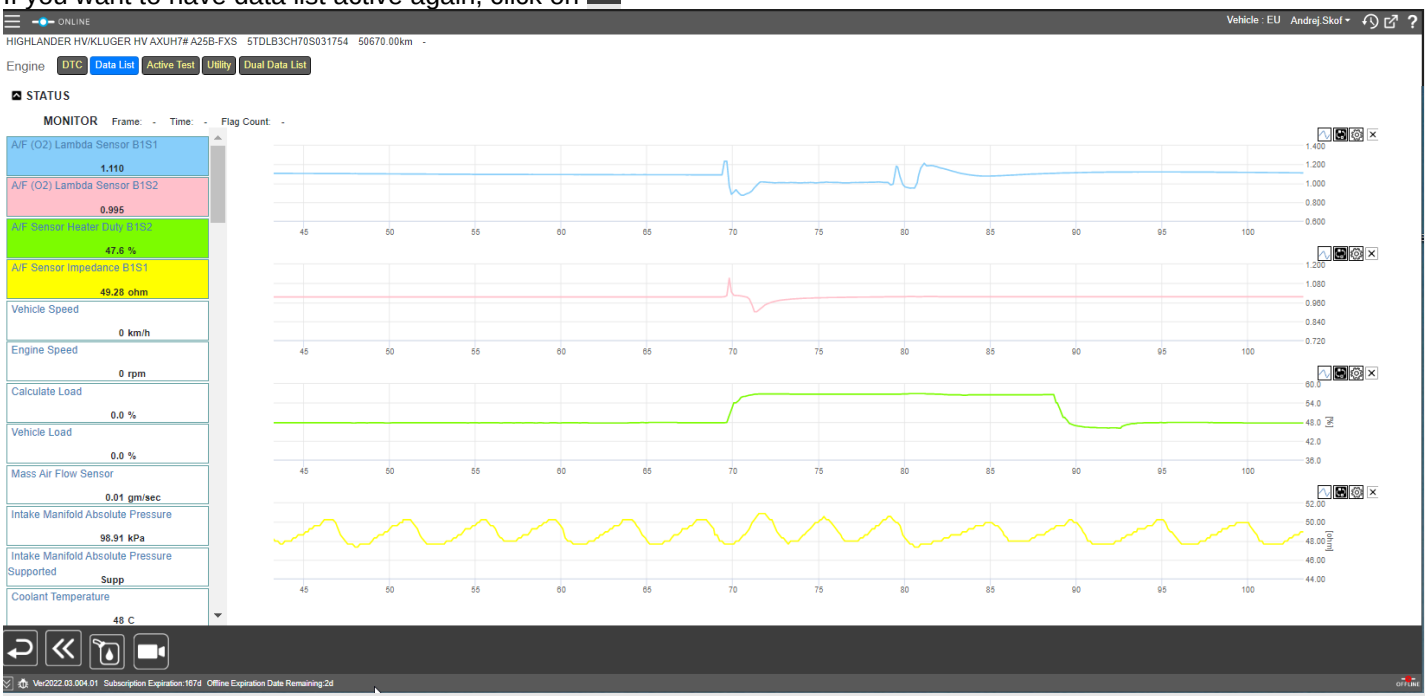

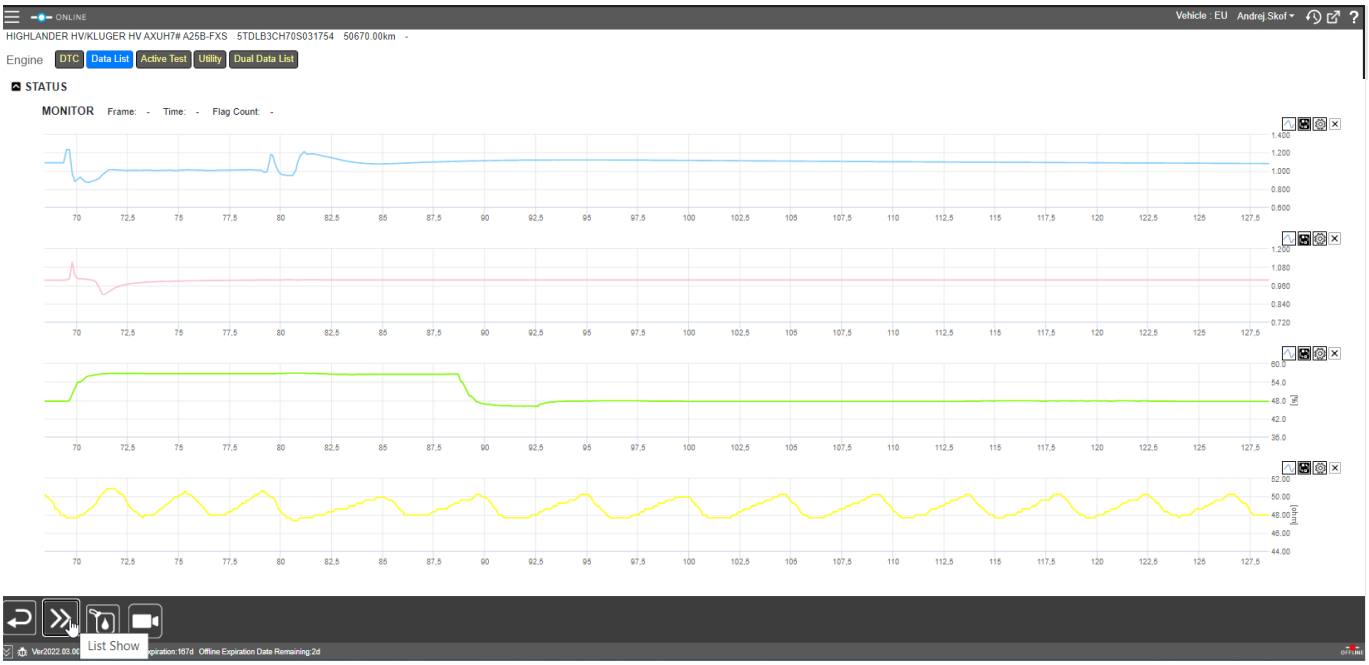


Hovering your mouse on the coloured line in the graph will show the name of the parameter/sensor.

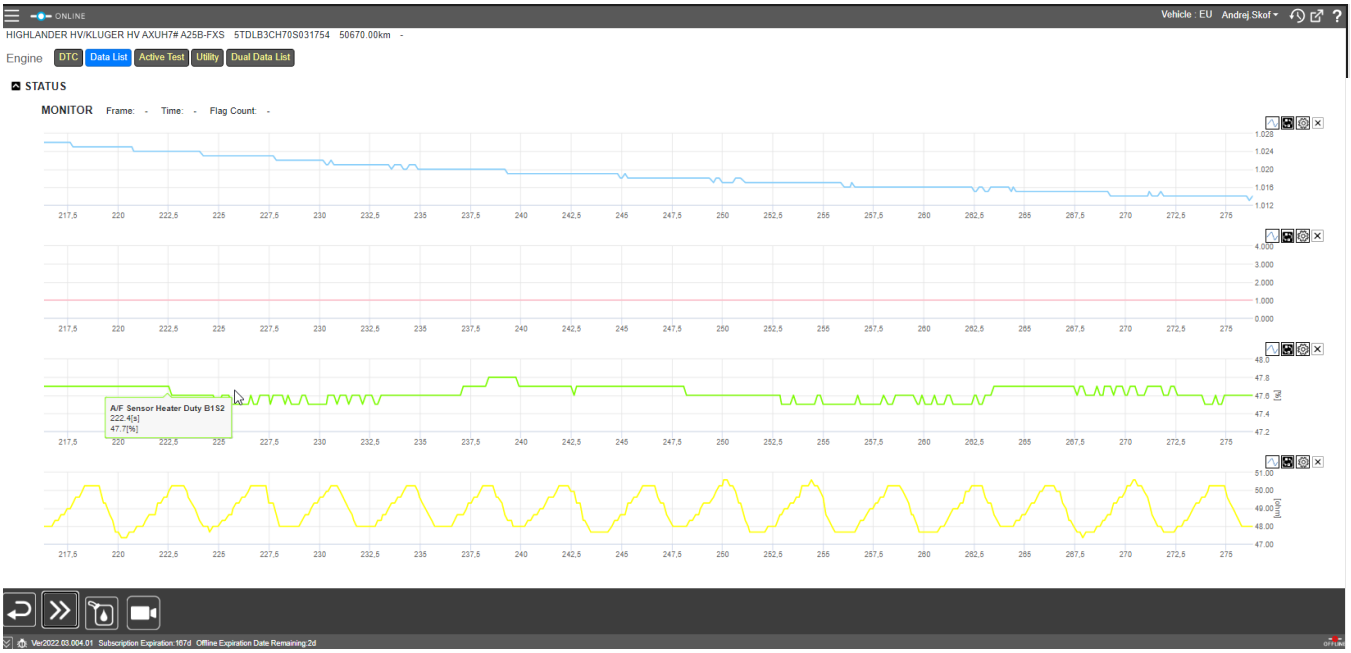



You can also open Graph directly without selecting any parameters by clicking on  .

Doing so will start a blank screen with all the available parameters of the ECU on the left:

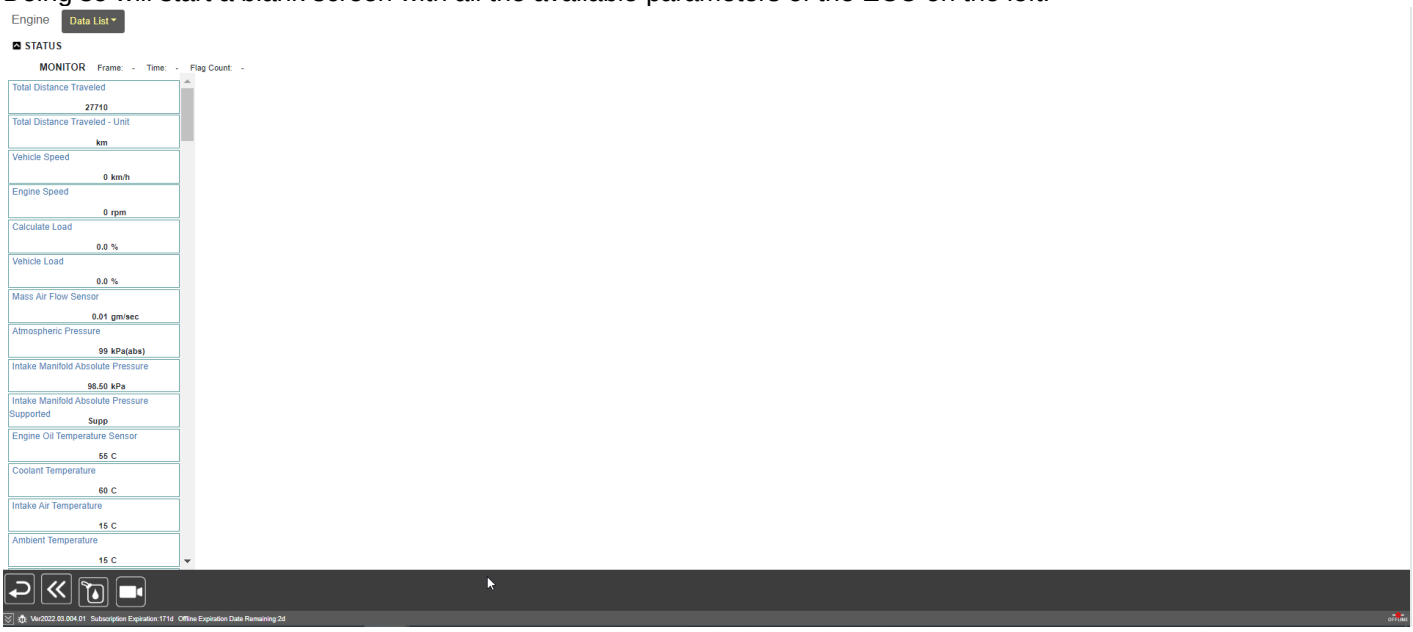


Click and hold the parameter on the left, then drag it into the blank area to add it to the graph options

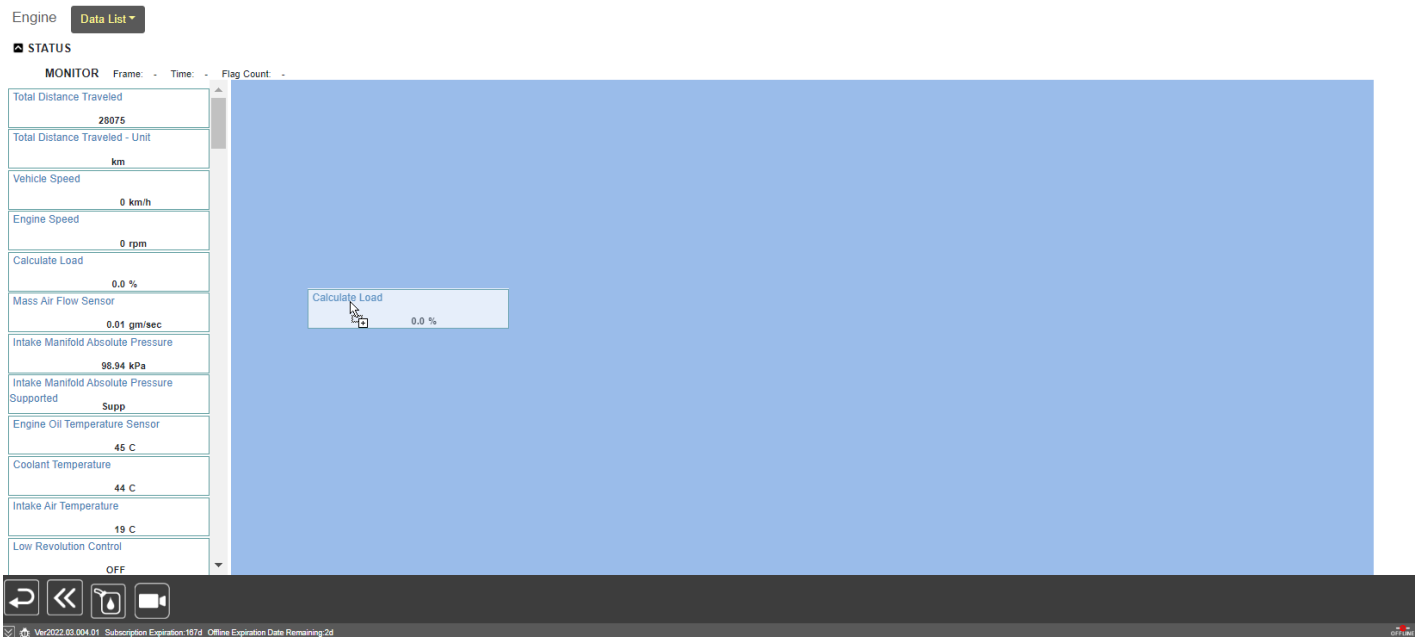


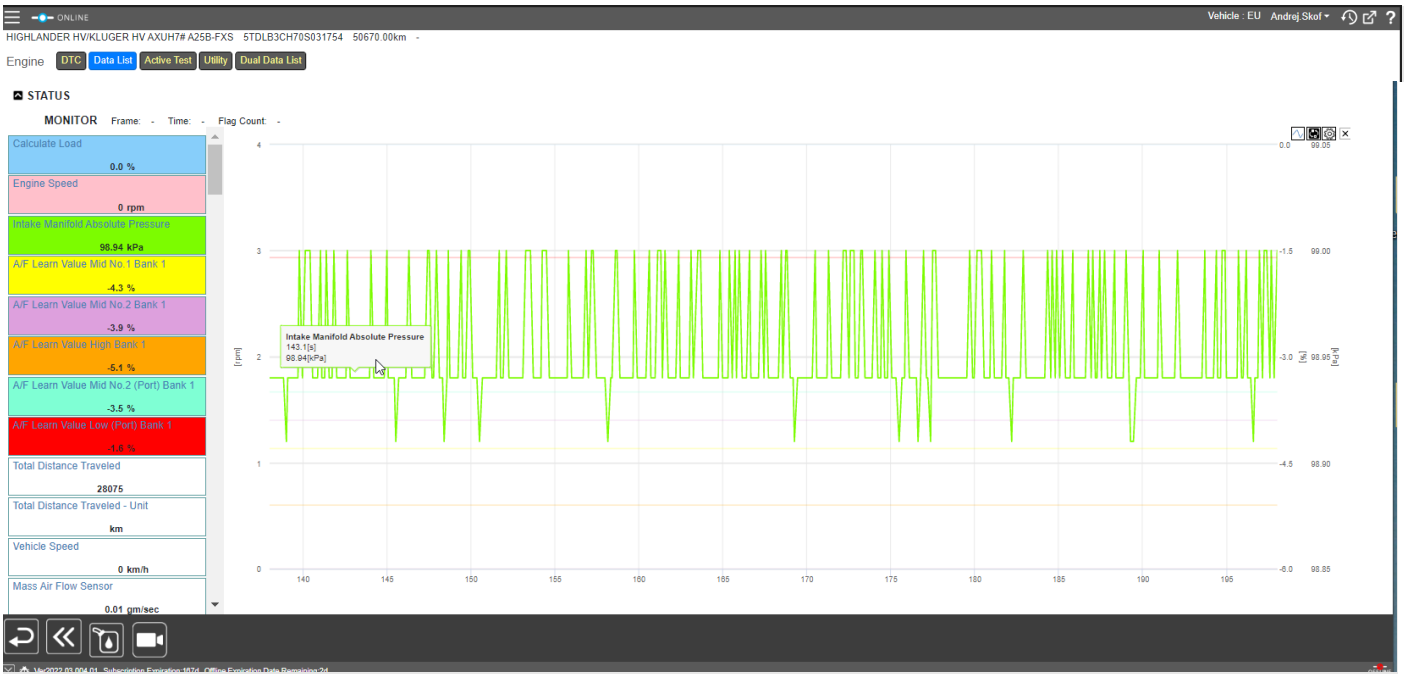


You can filter specific parameters by first clicking on the parameters, then using NEW LIST  .
Data will be shown at a higher refresh rate this way.

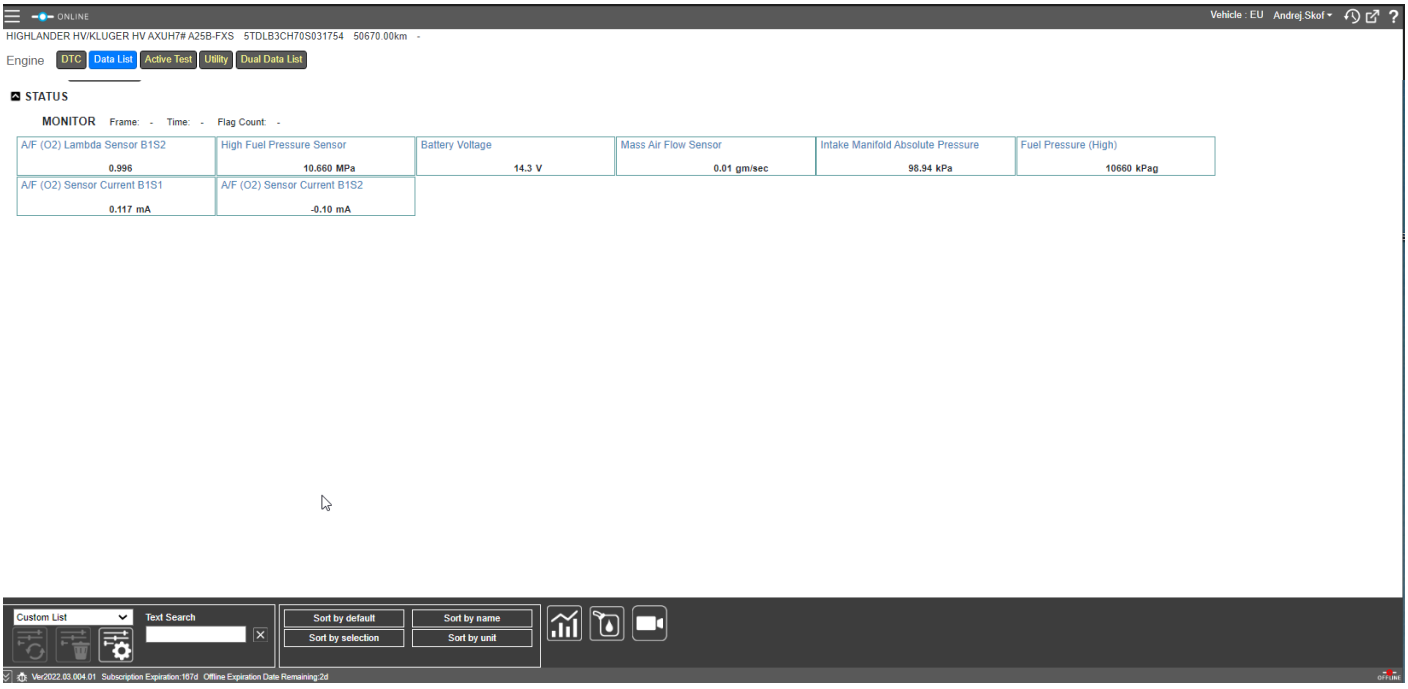


If you want to remove parameters from the list, then first select those parameters and click on  .

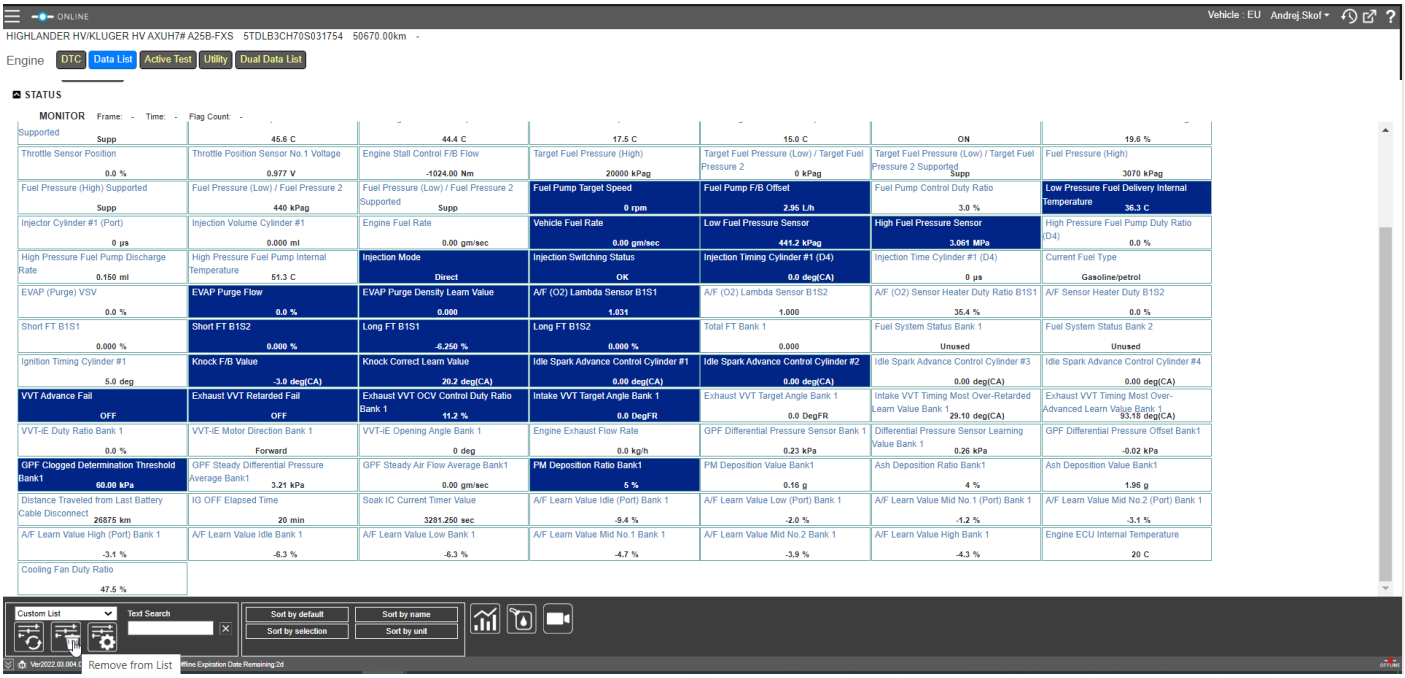

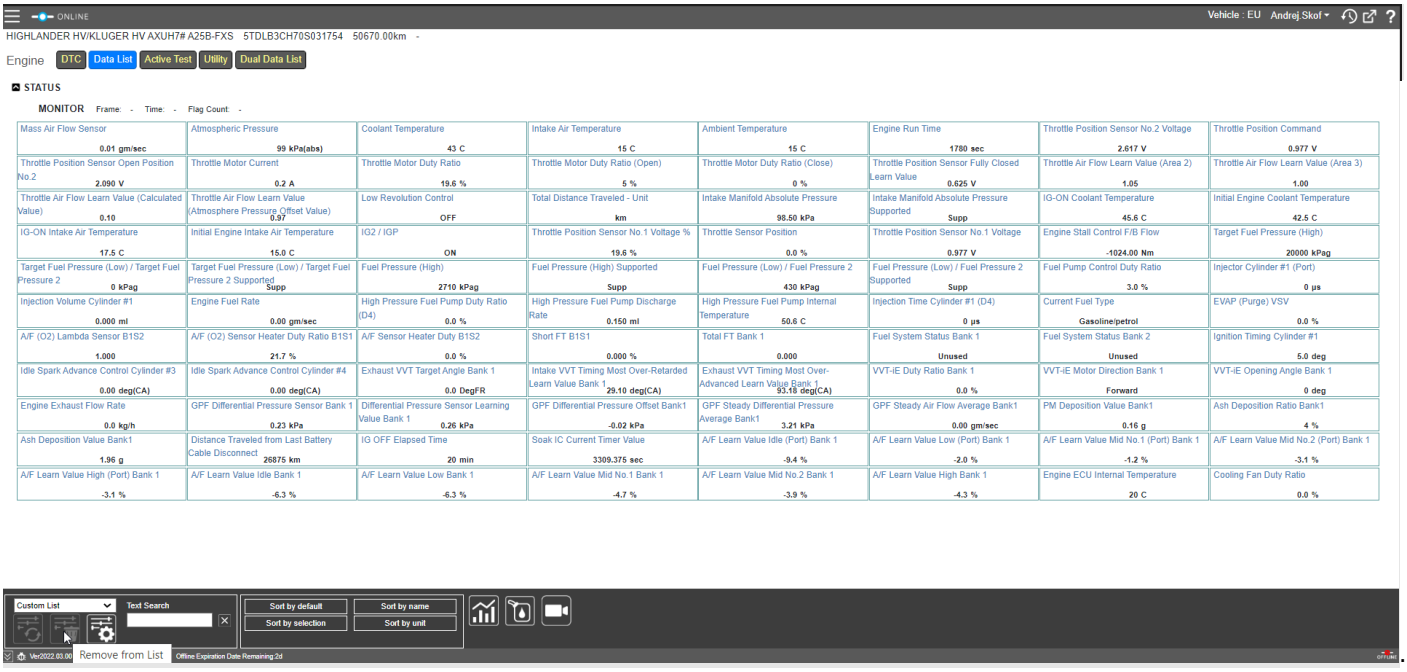

Data manager adds parameters to the list

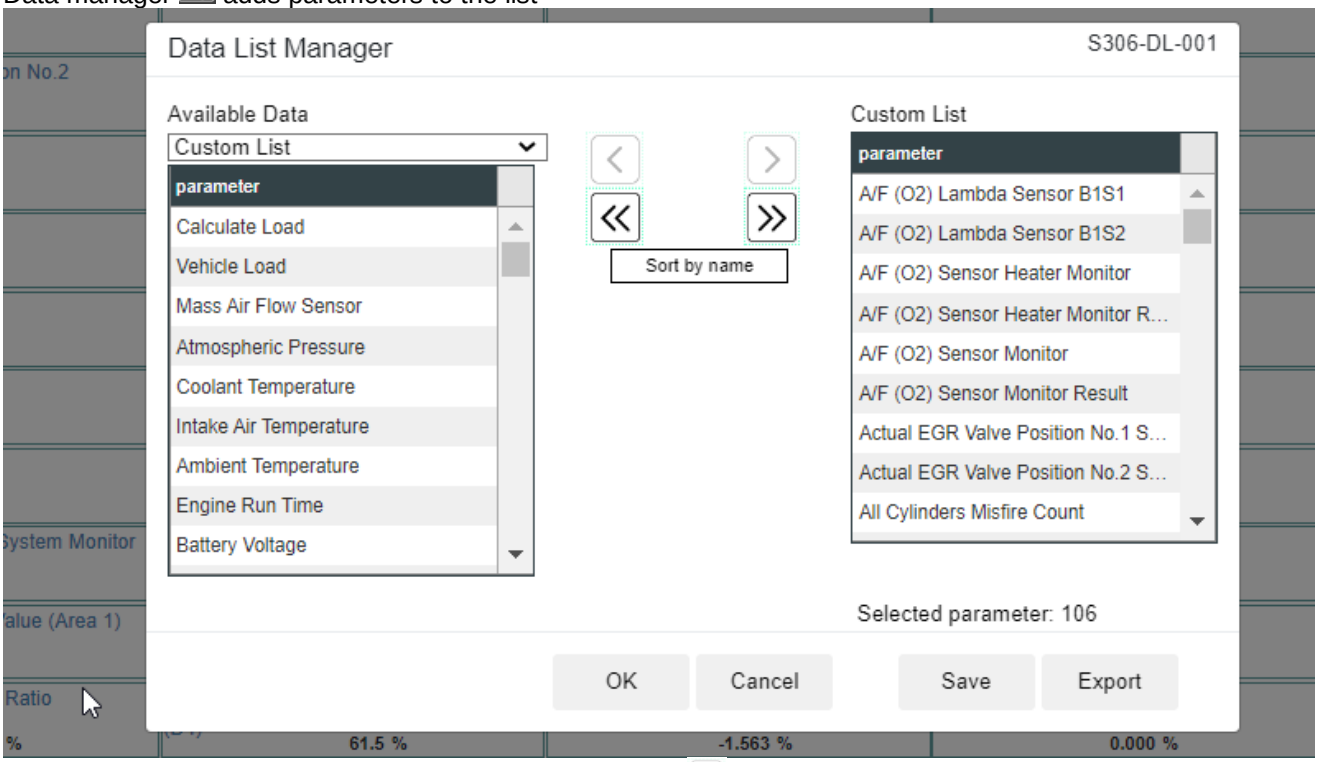


First click on the parameter you wish to add, then click on to add it to the custom list.


To remove parameters from the custom list, select it from the list and click on .

To add or remove all parameters directly, you can use the double arrows:

Text Search in Data list

You can search for specific parameters by typing a keyword in Text Search:

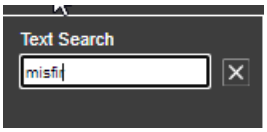


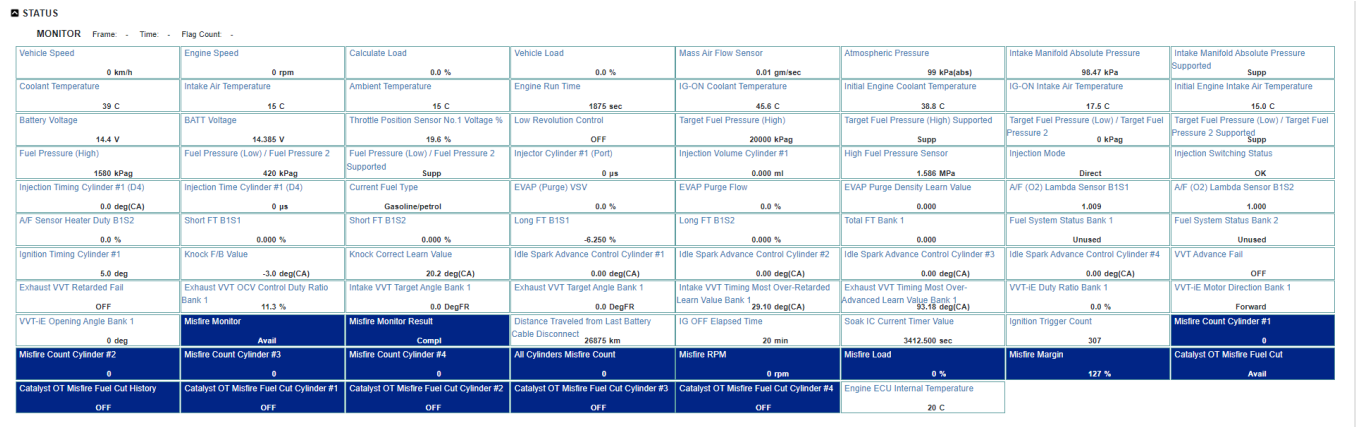




Active test

You can use Active Test for further inspections.
On the right side of the screen, you will see the respective description for the operation highlighted on the left side of the screen.

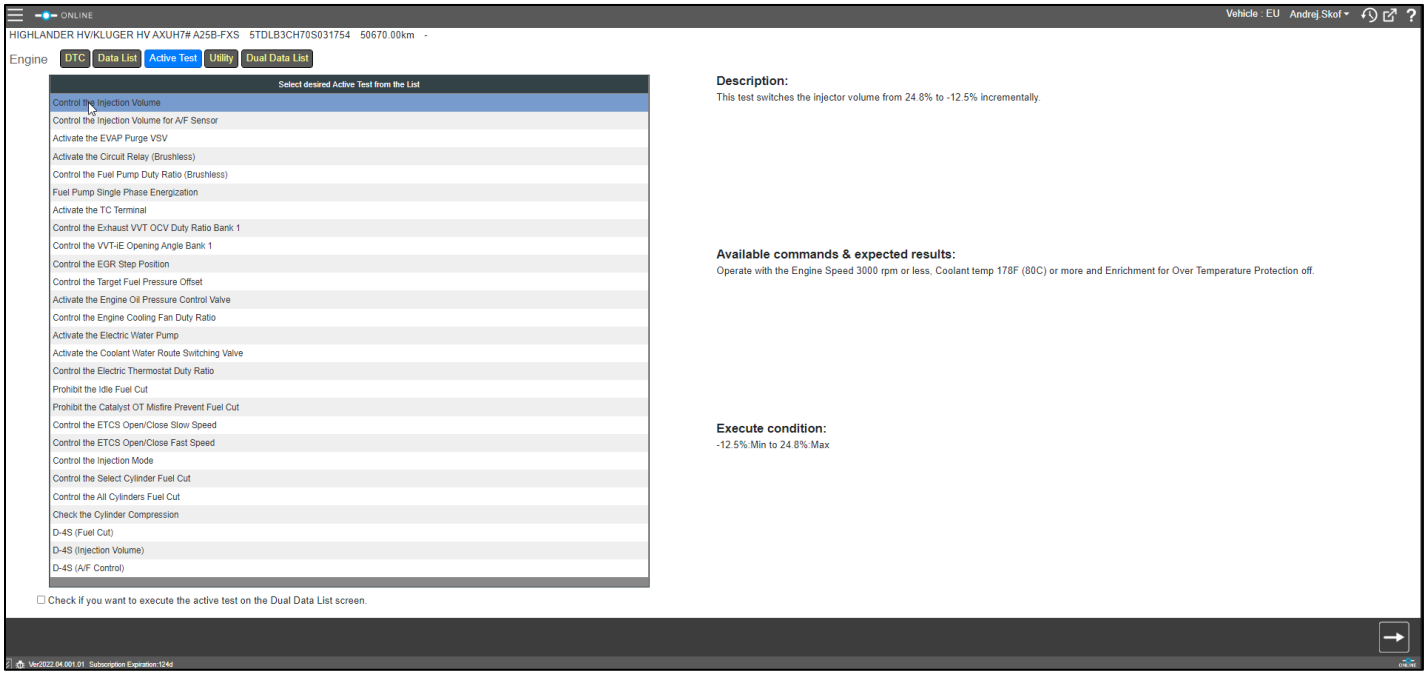


Below is an example for EGR valve activation:

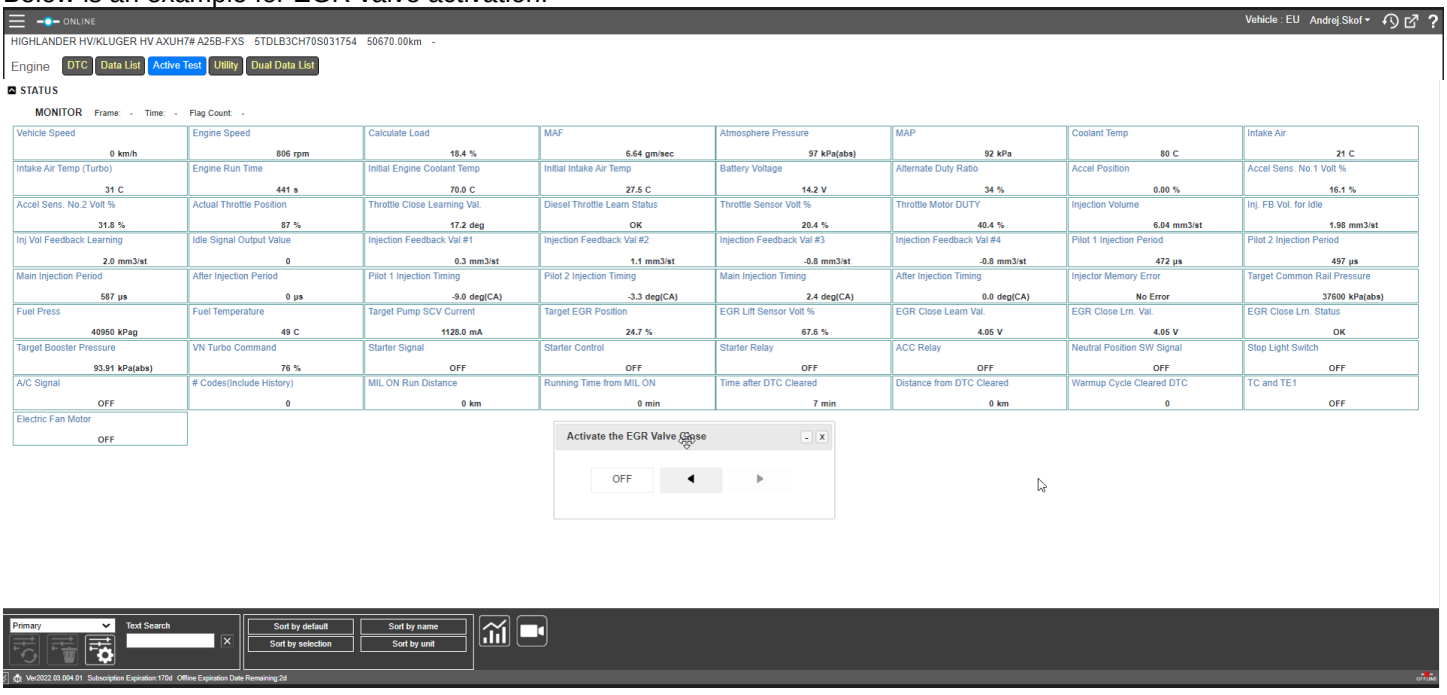


Utility

Just like Active Test, you can use utilities for further investigations:

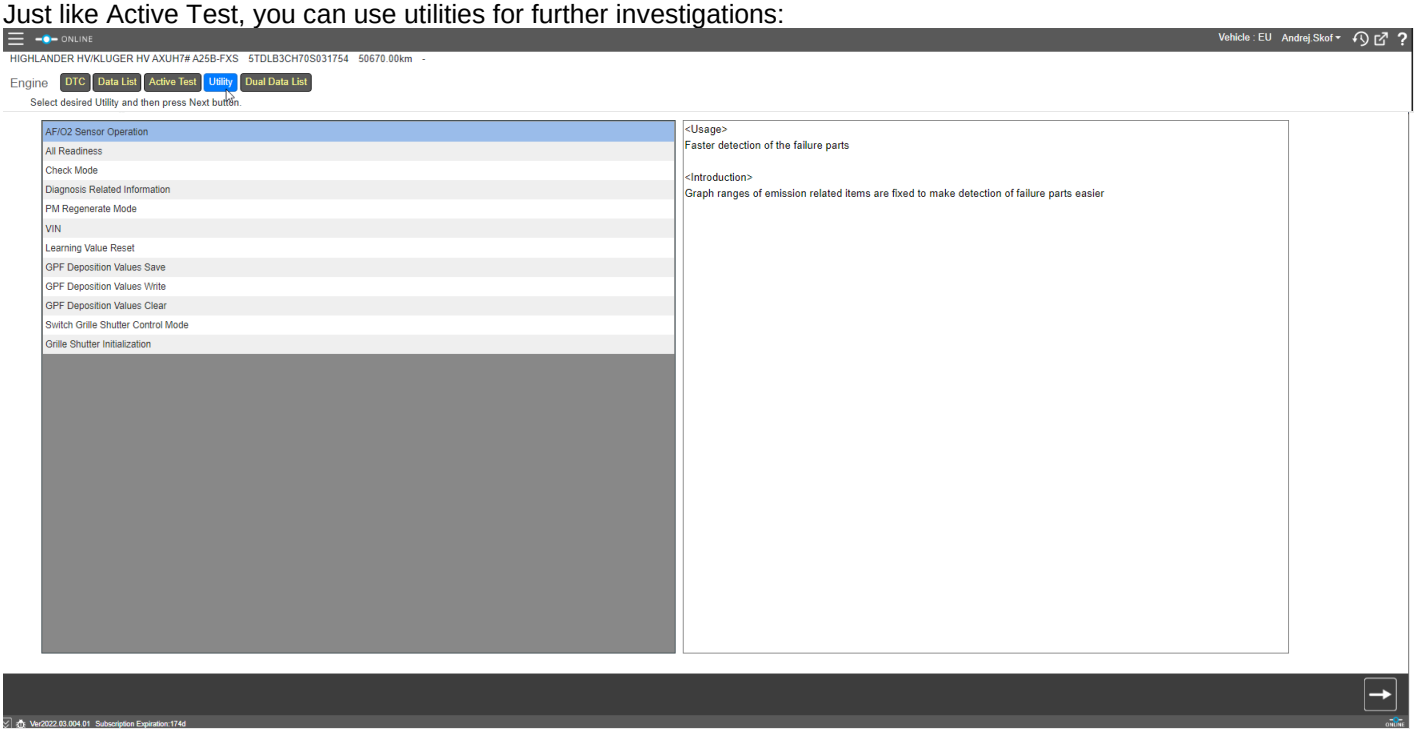



CAN Bus Check

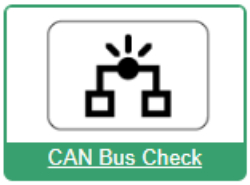



Starting the CAN Bus Check


Clicking on this button will start the CAN communication check on the car:

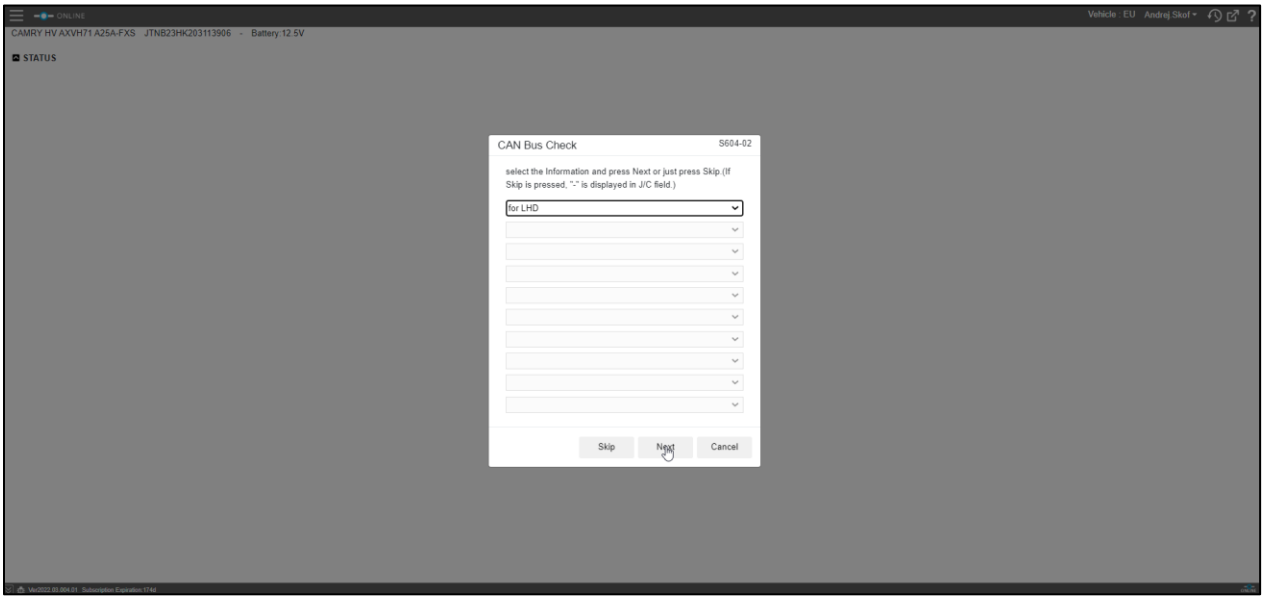

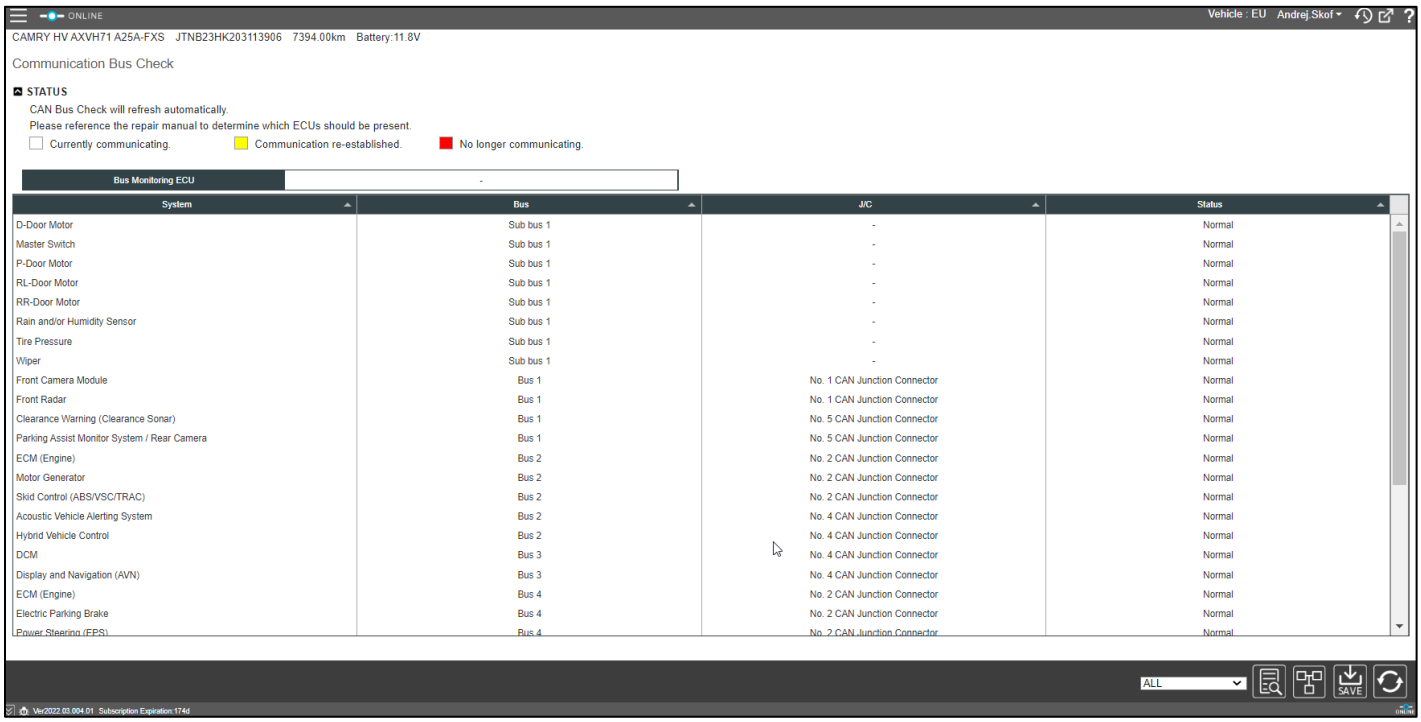

ONLINE
Vehicle : EU
Andrej.Skof
CAMRY HV AXVH71 A25A-FXS JTNB23HK203113906 7394.00km Battery:11.8V
Communication Bus Check
STATUS
CAN Bus Check will refresh automatically.
Please reference the repair manual to determine which ECUs should be present.
Currently communicating.
Communication re-established.
No longer communicating.
Bus Monitoring ECU
-
System
Bus
J/C
Status
D-Door Motor Sub bus 1 - Normal
Master Switch Sub bus 1 - Normal
P-Door Motor Sub bus 1 - Normal
RL-Door Motor Sub bus 1 - Normal
RR-Door Motor Sub bus 1 - Normal
Rain and/or Humidity Sensor Sub bus 1 - Normal
Tire Pressure Sub bus 1 - Normal
Wiper Sub bus 1 - Normal
Front Camera Module Bus 1 No. 1 CAN Junction Connector Normal
Front Radar Bus 1 No. 1 CAN Junction Connector Normal
Clearance Warning (Clearance Sonar) Bus 1 No. 5 CAN Junction Connector Normal
Parking Assist Monitor System / Rear Camera Bus 1 No. 5 CAN Junction Connector Normal
ECM (Engine) Bus 2 No. 2 CAN Junction Connector Normal
Motor Generator Bus 2 No. 2 CAN Junction Connector Normal
Skid Control (ABS/VSC/TRAC) Bus 2 No. 2 CAN Junction Connector Normal
Acoustic Vehicle Alerting System Bus 2 No. 4 CAN Junction Connector Normal
Hybrid Vehicle Control Bus 2 No. 4 CAN Junction Connector Normal
DCM Bus 3 No. 4 CAN Junction Connector Normal
Display and Navigation (AVN) Bus 3 No. 4 CAN Junction Connector Normal
ECM (Engine) Bus 4 No. 2 CAN Junction Connector Normal
Electric Parking Brake Bus 4 No. 2 CAN Junction Connector Normal
Power Steering (EPS) Bus 4 No. 2 CAN Junction Connector Normal
ALL
SAVE
Ver2022.03.004.01 Subscription Expiration:174d
ONLINE

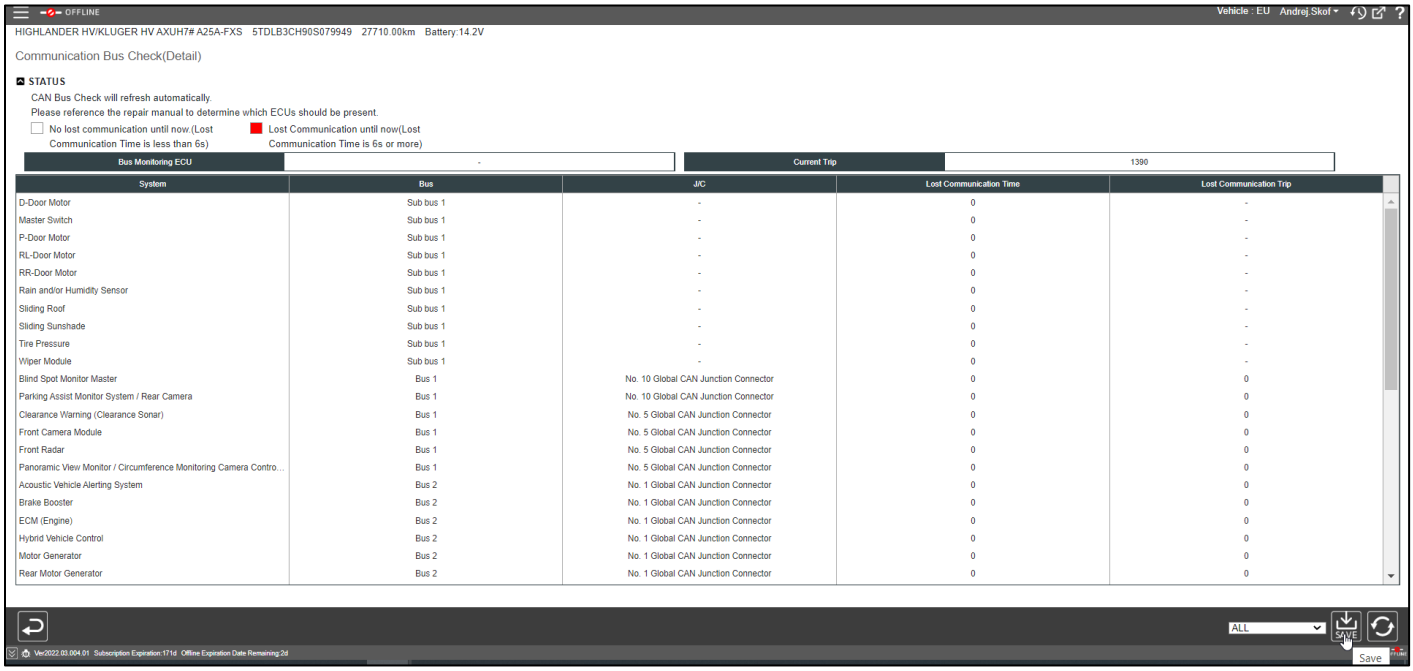
OFFLINE
Vehicle : EU
Andrej.Skof
HIGHLANDER HV/KLUGER HV AXUH7# A25A-FXS 5TDLB3CH90S079949 27710.00km Battery:14.2V
Communication Bus Check(Detail)
STATUS
CAN Bus Check will refresh automatically.
Please reference the repair manual to determine which ECUs should be present.
No lost communication until now (Lost Communication Time is less than 6s)
Lost Communication until now(Lost Communication Time is 6s or more)
Bus Monitoring ECU
-
Current Trip
1390
System
Bus
J/C
Lost Communication Time
Lost Communication Trip
D-Door Motor Sub bus 1 - 0 -
Master Switch Sub bus 1 - 0 -
P-Door Motor Sub bus 1 - 0 -
RL-Door Motor Sub bus 1 - 0 -
RR-Door Motor Sub bus 1 - 0 -
Rain and/or Humidity Sensor Sub bus 1 - 0 -
Sliding Roof Sub bus 1 - 0 -
Sliding Sunshade Sub bus 1 - 0 -
Tire Pressure Sub bus 1 - 0 -
Wiper Module Sub bus 1 - 0 -
Blind Spot Monitor Master Bus 1 No. 10 Global CAN Junction Connector 0 0
Parking Assist Monitor System / Rear Camera Bus 1 No. 10 Global CAN Junction Connector 0 0
Clearance Warning (Clearance Sonar) Bus 1 No. 5 Global CAN Junction Connector 0 0
Front Camera Module Bus 1 No. 5 Global CAN Junction Connector 0 0
Front Radar Bus 1 No. 5 Global CAN Junction Connector 0 0
Panoramic View Monitor / Circumference Monitoring Camera Contro... Bus 1 No. 5 Global CAN Junction Connector 0 0
Acoustic Vehicle Alerting System Bus 2 No. 1 Global CAN Junction Connector 0 0
Brake Booster Bus 2 No. 1 Global CAN Junction Connector 0 0
ECM (Engine) Bus 2 No. 1 Global CAN Junction Connector 0 0
Hybrid Vehicle Control Bus 2 No. 1 Global CAN Junction Connector 0 0
Motor Generator Bus 2 No. 1 Global CAN Junction Connector 0 0
Rear Motor Generator Bus 2 No. 1 Global CAN Junction Connector 0 0
ALL
SAVE
Save
Ver2022.03.004.01 Subscription Expiration:171d Offline Expiration Date Remaining:2d
OFFLINE

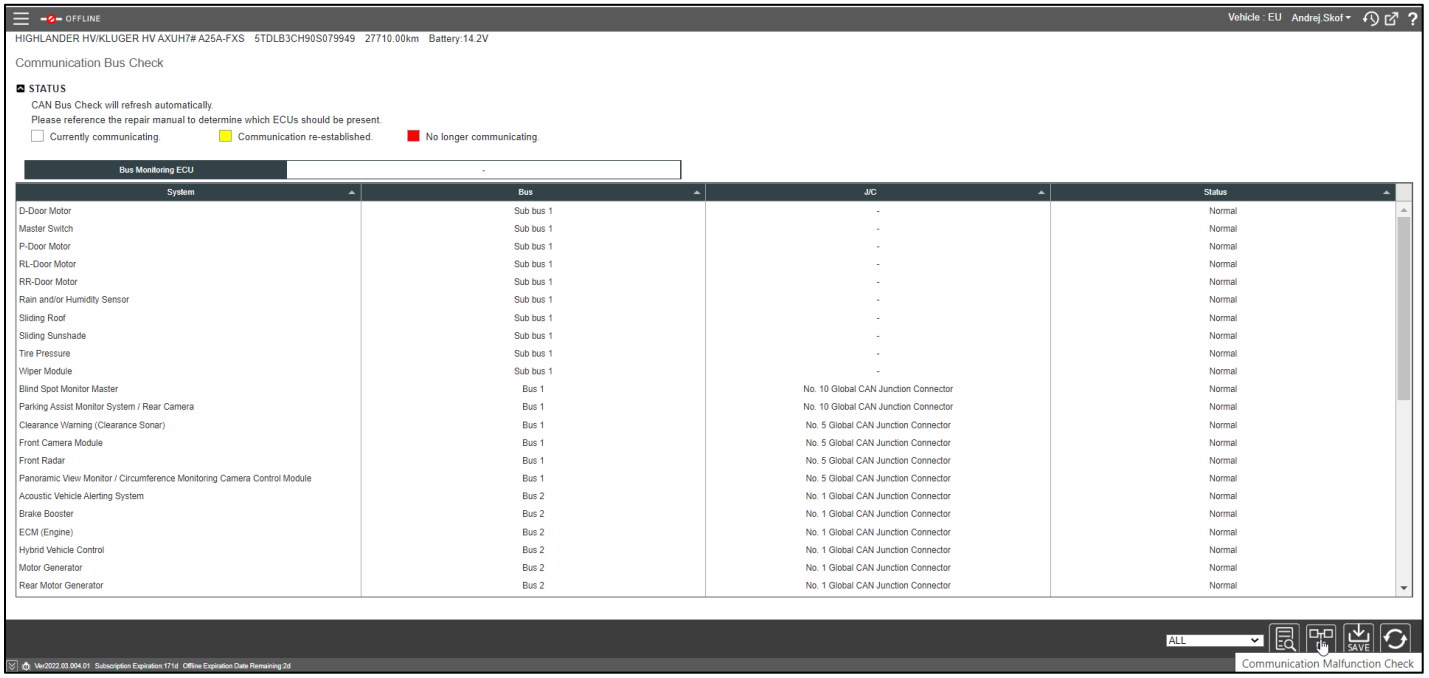
OFFLINE
Vehicle : EU
Andrej.Skof
HIGHLANDER HV/KLUGER HV AXUH7# A25A-FXS 5TDLB3CH90S079949 27710.00km Battery:14.2V
Communication Bus Check
STATUS
CAN Bus Check will refresh automatically.
Please reference the repair manual to determine which ECUs should be present.
Currently communicating.
Communication re-established.
No longer communicating.
Bus Monitoring ECU
-
System
Bus
J/C
Status
D-Door Motor Sub bus 1 - Normal
Master Switch Sub bus 1 - Normal
P-Door Motor Sub bus 1 - Normal
RL-Door Motor Sub bus 1 - Normal
RR-Door Motor Sub bus 1 - Normal
Rain and/or Humidity Sensor Sub bus 1 - Normal
Sliding Roof Sub bus 1 - Normal
Sliding Sunshade Sub bus 1 - Normal
Tire Pressure Sub bus 1 - Normal
Wiper Module Sub bus 1 - Normal
Blind Spot Monitor Master Bus 1 No. 10 Global CAN Junction Connector Normal
Parking Assist Monitor System / Rear Camera Bus 1 No. 10 Global CAN Junction Connector Normal
Clearance Warning (Clearance Sonar) Bus 1 No. 5 Global CAN Junction Connector Normal
Front Camera Module Bus 1 No. 5 Global CAN Junction Connector Normal
Front Radar Bus 1 No. 5 Global CAN Junction Connector Normal
Panoramic View Monitor / Circumference Monitoring Camera Control Module Bus 1 No. 5 Global CAN Junction Connector Normal
Acoustic Vehicle Alerting System Bus 2 No. 1 Global CAN Junction Connector Normal
Brake Booster Bus 2 No. 1 Global CAN Junction Connector Normal
ECM (Engine) Bus 2 No. 1 Global CAN Junction Connector Normal
Hybrid Vehicle Control Bus 2 No. 1 Global CAN Junction Connector Normal
Motor Generator Bus 2 No. 1 Global CAN Junction Connector Normal
Rear Motor Generator Bus 2 No. 1 Global CAN Junction Connector Normal
ALL
SAVE
Communication Malfunction Check
Ver2022.03.004.01 Subscription Expiration:171d Offline Expiration Date Remaining:2d

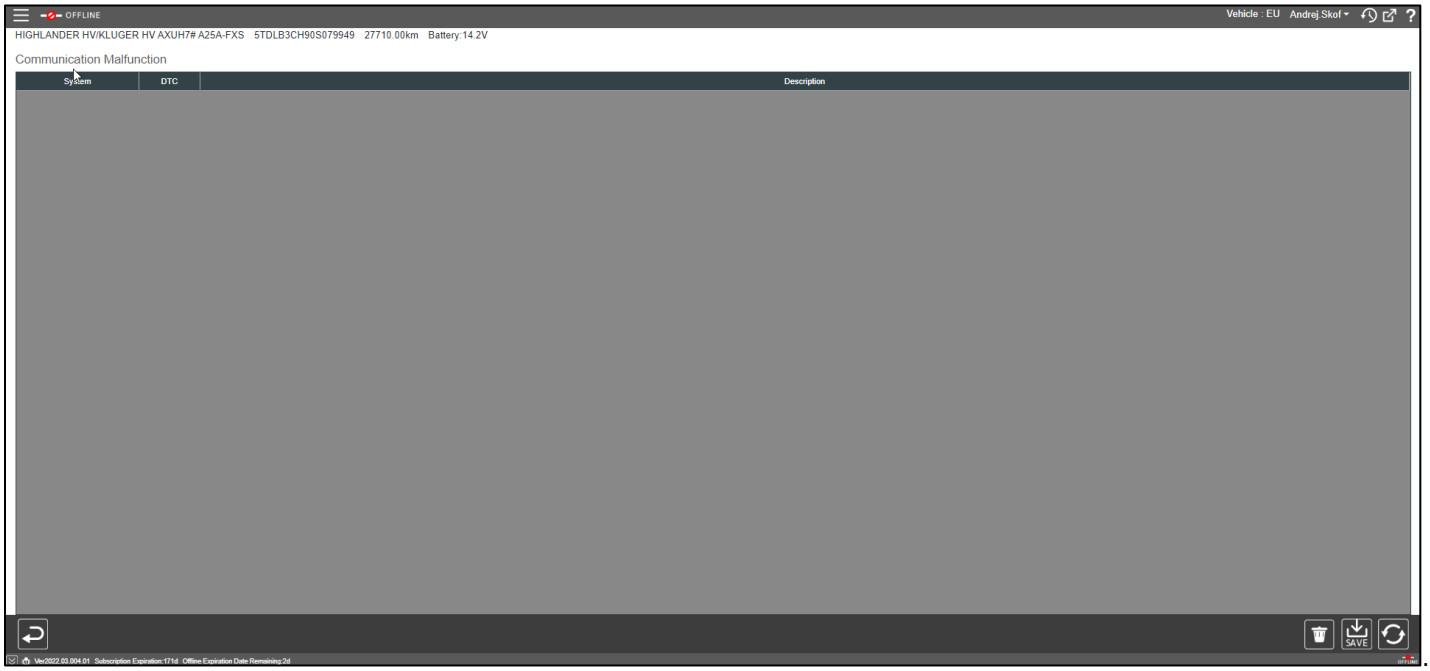

OFFLINE
Vehicle : EU
Andrej.Skof
HIGHLANDER HV/KLUGER HV AXUH7# A25A-FXS 5TDLB3CH90S079949 27710.00km Battery:14.2V
Communication Malfunction
System
DTC
Description
SAVE
Ver2022.03.004.01 Subscription Expiration:171d Offline Expiration Date Remaining:2d

Stored Data

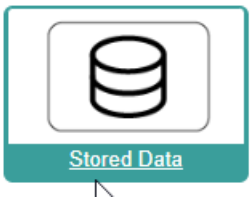


Accessing Stored Data

Clicking on this button gives you access to the information stored for this vehicle.

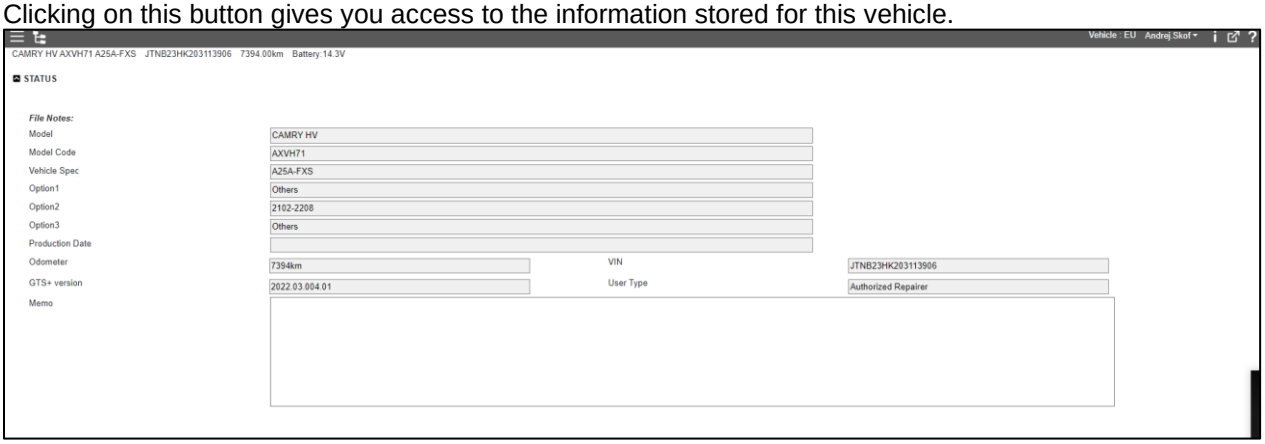



Customize

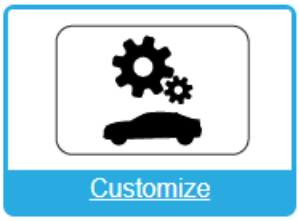



Starting the Customize operation

Clicking on this button will enable the user to change some customization options on the vehicle:

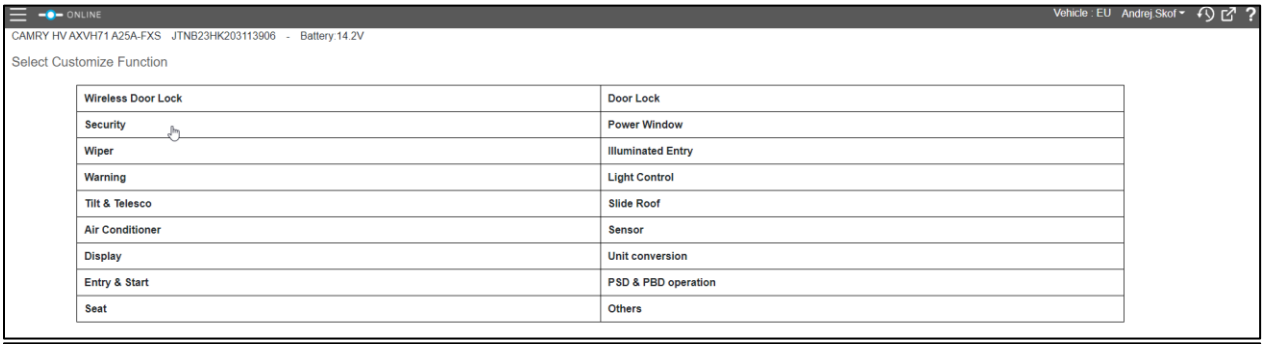

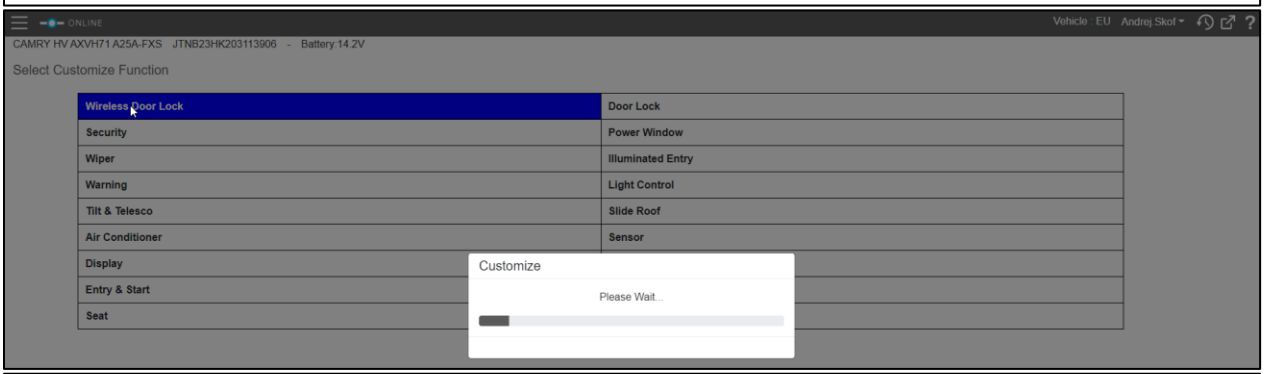

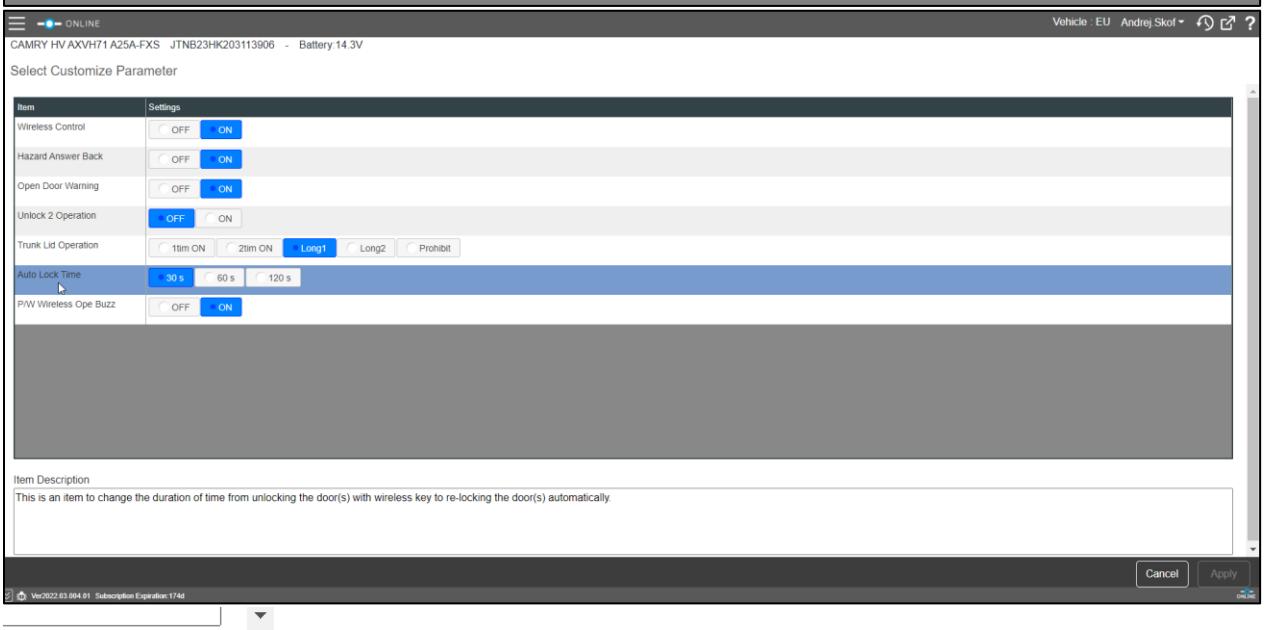

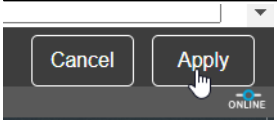


Vehicle Control History



Starting the operation


Clicking on this button gives the user an overview on what happened with the car or what the customer did:

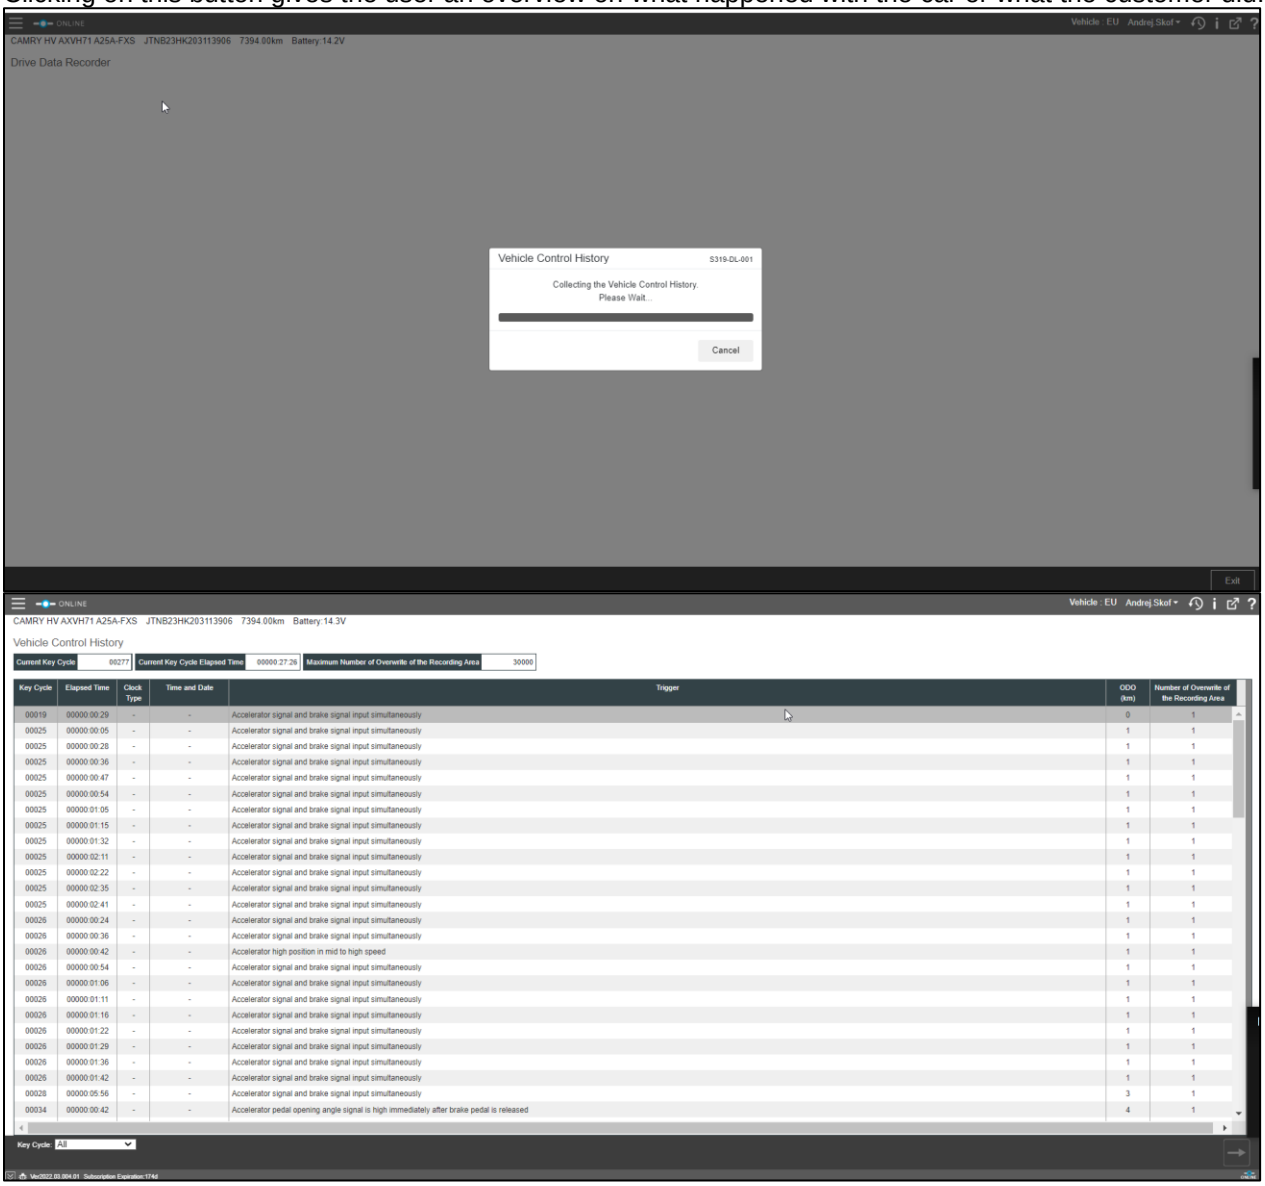


Key Cycle	Elapsed Time	Clock Type	Time and Date	Trigger	ODO (km)	Number of Overwrite of the Recording Area
00019	00000:00:29	-	-	Accelerator signal and brake signal input simultaneously	0	1
00025	00000:00:05	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:00:28	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:00:36	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:00:47	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:00:54	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:01:05	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:01:15	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:01:32	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:02:11	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:02:22	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:02:35	-	-	Accelerator signal and brake signal input simultaneously	1	1
00025	00000:02:41	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:00:24	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:00:36	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:00:42	-	-	Accelerator high position in mid to high speed	1	1
00026	00000:00:54	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:06	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:11	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:16	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:22	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:29	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:36	-	-	Accelerator signal and brake signal input simultaneously	1	1
00026	00000:01:42	-	-	Accelerator signal and brake signal input simultaneously	1	1
00028	00000:05:56	-	-	Accelerator signal and brake signal input simultaneously	3	1
00034	00000:00:42	-	-	Accelerator pedal opening angle signal is high immediately after brake pedal is released	4	1

Functions on the right side

In the Main Menu, you can find additional functions on the top right of the screen:

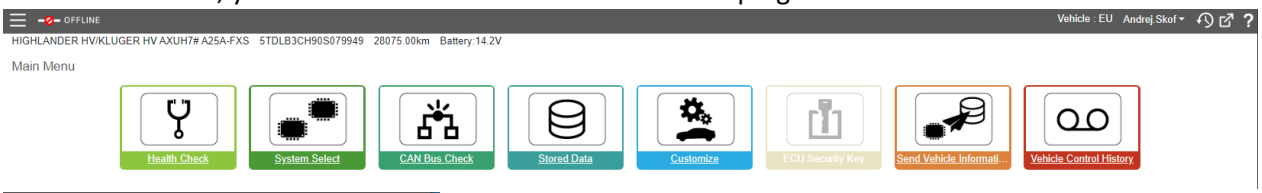






From left to right, those are:

1. History
2. Link to the others system
3. Help


History

In History, the system will show which systems which you have previously selected (e.g.: Engine, Land Control, Air conditioner, SRS Airbag). If you click on any of them, the list will be opened again

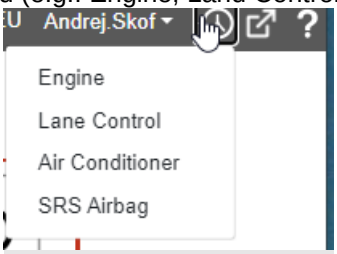




Link to other systems

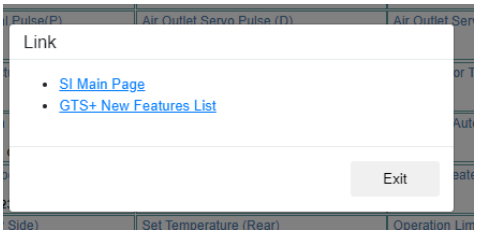

SI Main page

This link will bring you to Techdoc (you will need to login again)

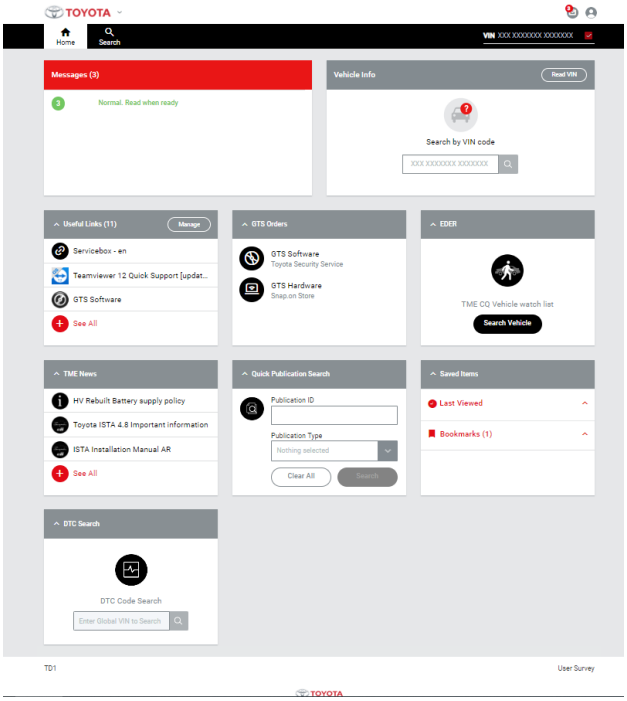

GTS+ New Features list


For now, not in operation.

Other functions on main display



GTS+ Settings


Allows you to modify the settings of the PC (Dealer address, e-mail address, VIM selection, etc.). These changes will be used by all users on this PC.

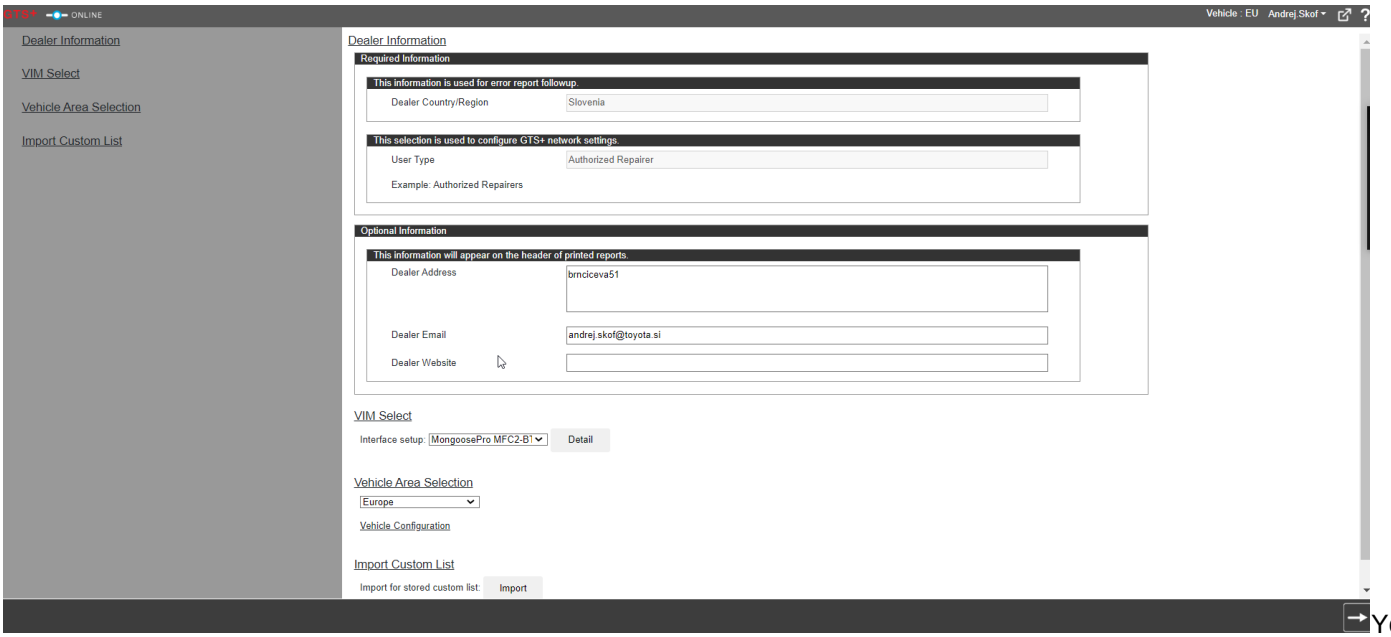

You can save the new settings by clicking on:  in the bottom right.

User Configuration


This allows you to change your preferences. These changes are for the user profile **only.** Any new modification will also be saved to the online database so users can download their settings on other PCs.

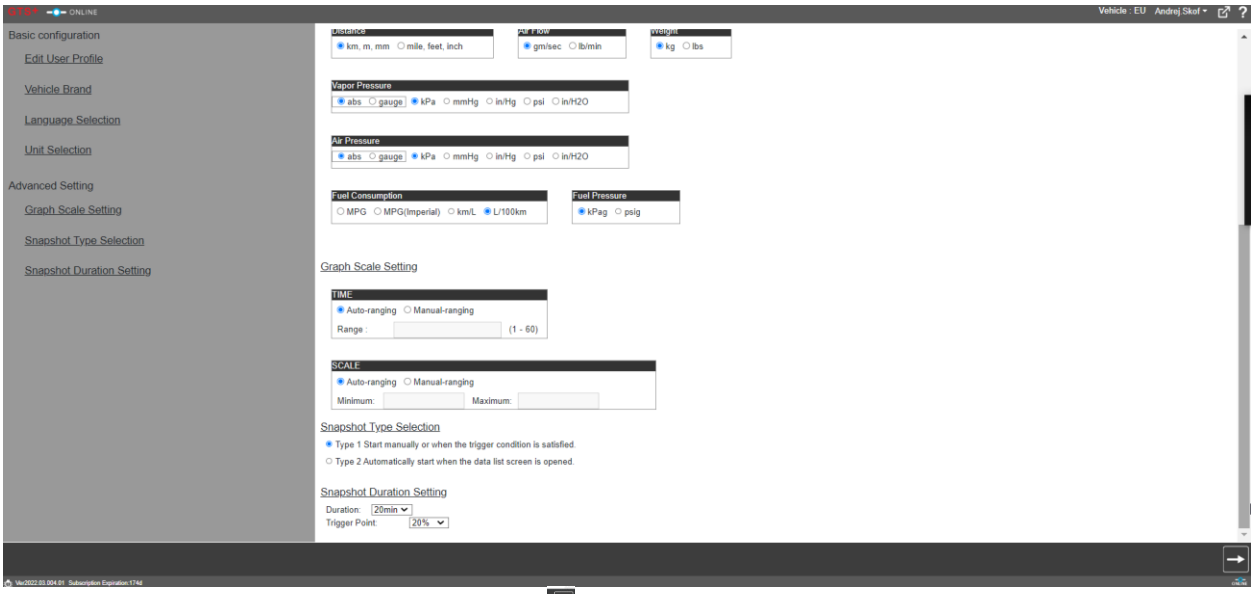

You can save the new settings by clicking on:  in the bottom right.

Advanced Function


Allows you to execute advanced functionalities on the vehicle (e.g: Navigation Unlock, etc.)

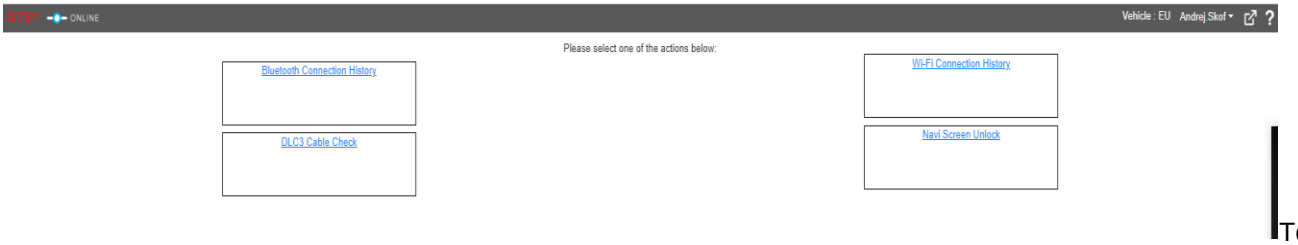

To go back press 

Open Scan Data file


Allows you to open .gTSE files (new versions of TSE files) in GTS+.

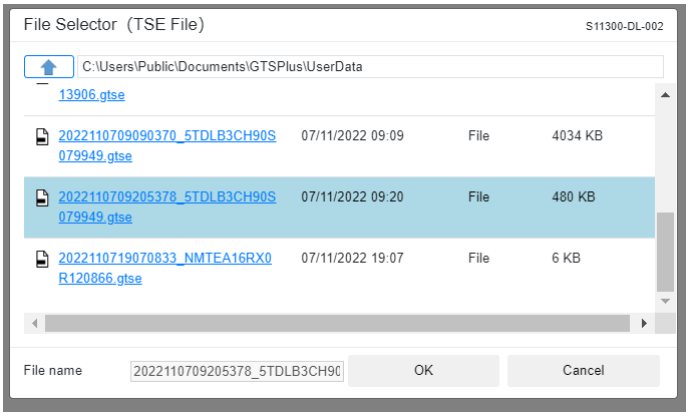


Click on the file that you want to open and press OK
An additional window will open.

Operations database

Within the .gTSE file, you can see what operations have been performed on this vehicle (saved into the .gTSE file). To access this data, you can click on  (top left of the screen).

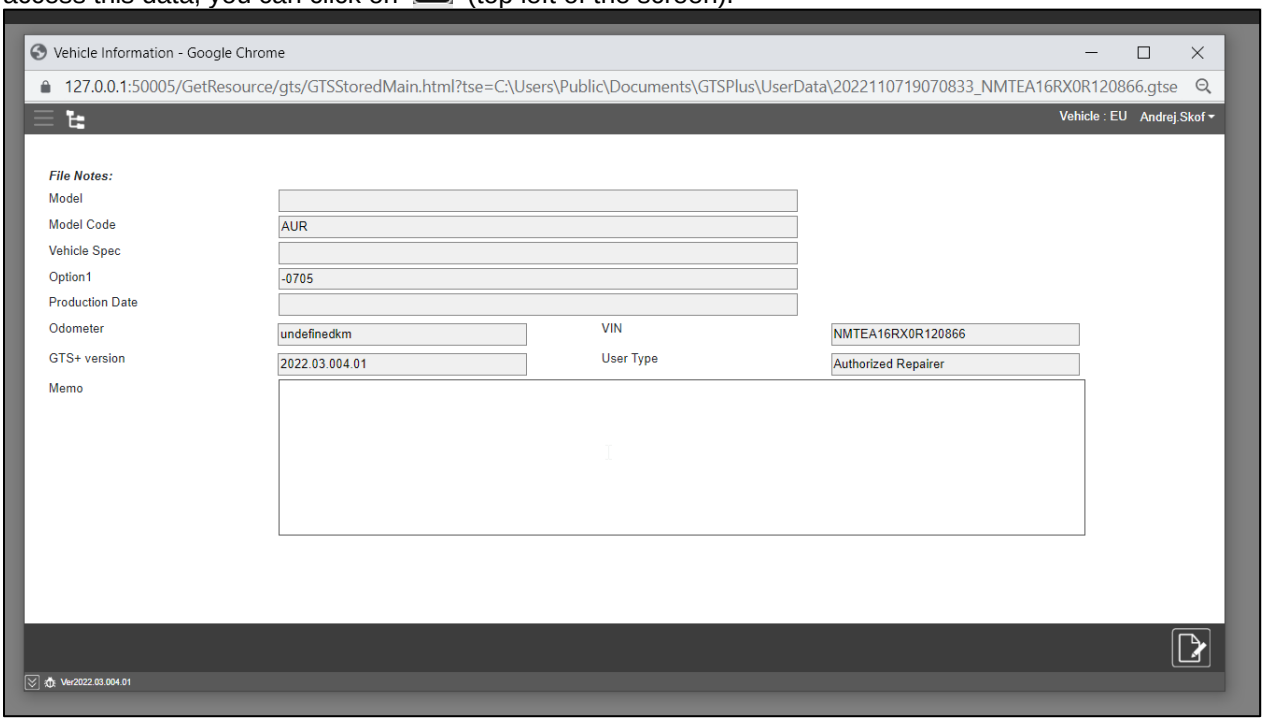


Doing so will open the activity report:

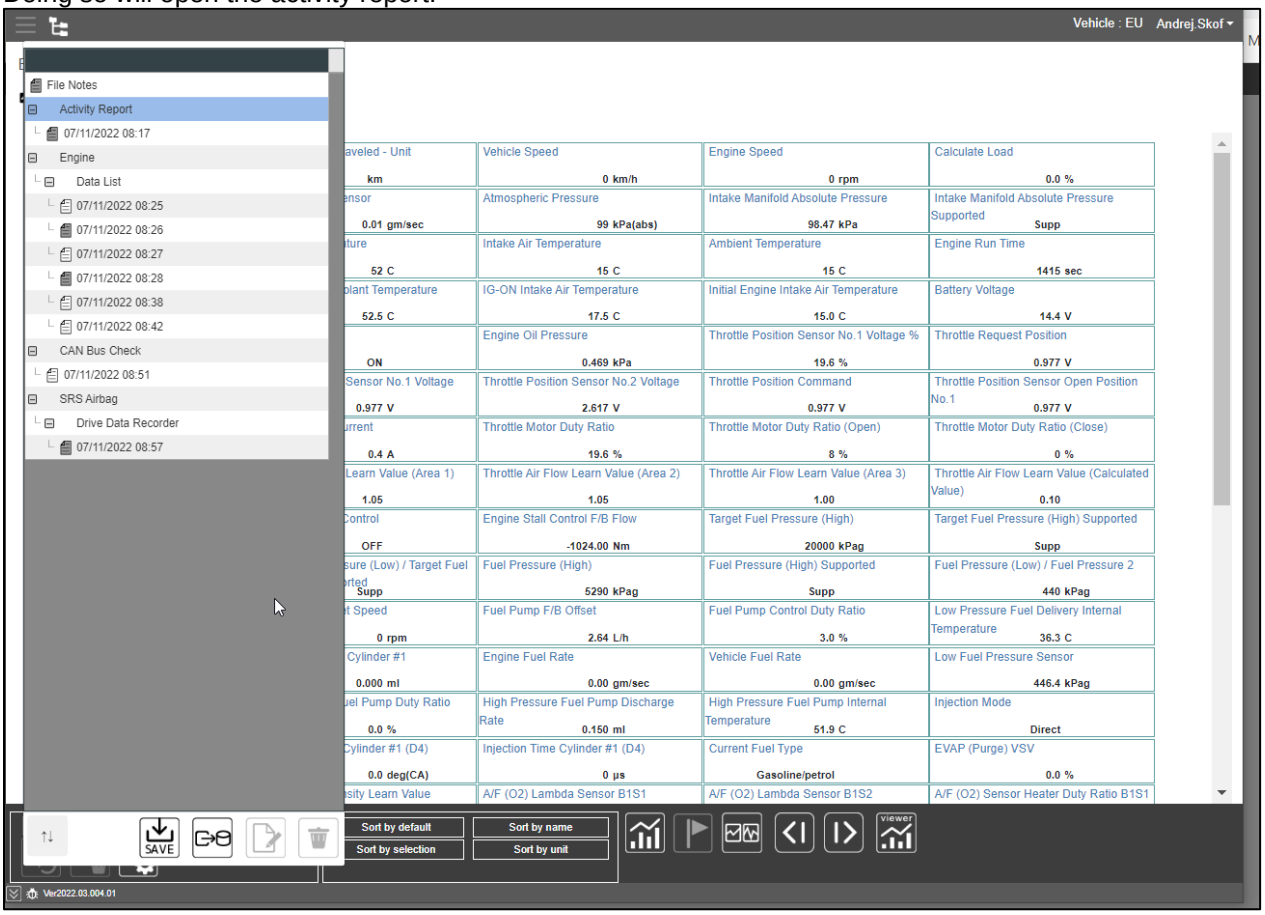


Offline Mode

GTS+ allows users to use the software in “Offline” mode for a limited time after their last login (max: 2 days).


Starting GTS+ with the Wi-Fi turned off will lead you to the screen below, where all profiles are stored. To create a profile on this PC, log in to this PC with your account:

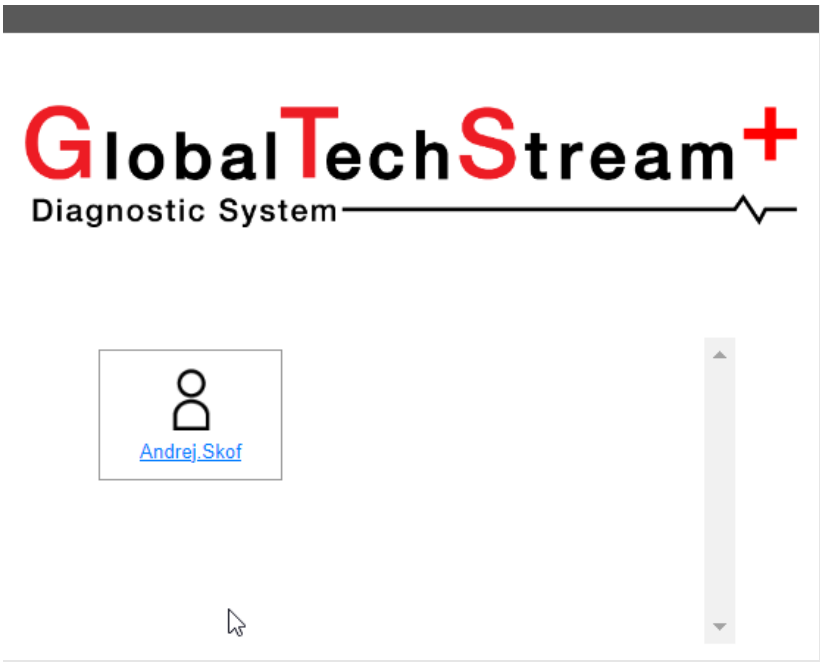

Selecting the profile will prompt a warning – **please be aware that maximum offline usage is of 2 days!**

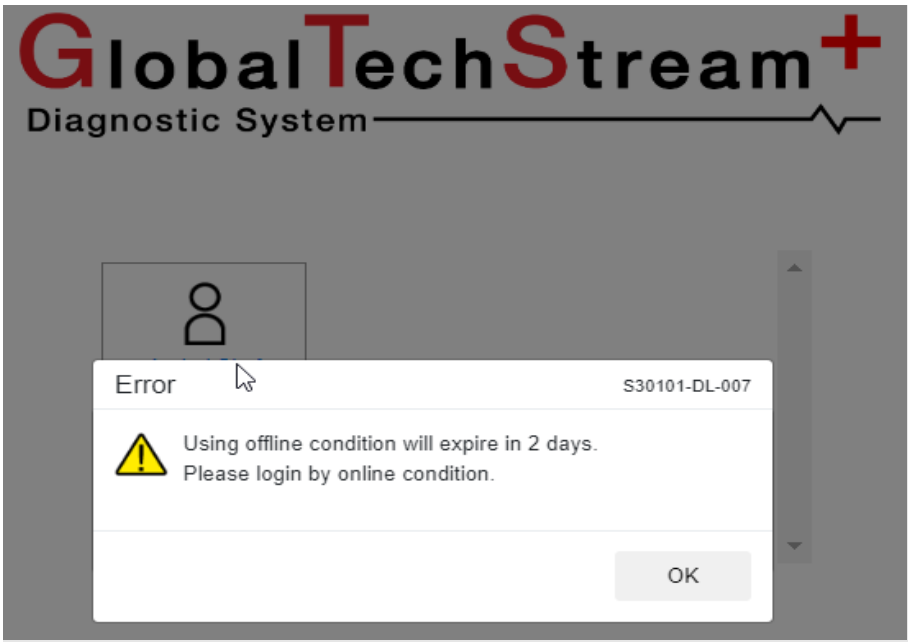



Clicking on OK will lead you to the Main Menu, where you can start working on the vehicle. Please note that ONLINE operations will not be available! (ECU MAC Key Pairing operation, Reprogramming Unlock Seed generation, etc.)

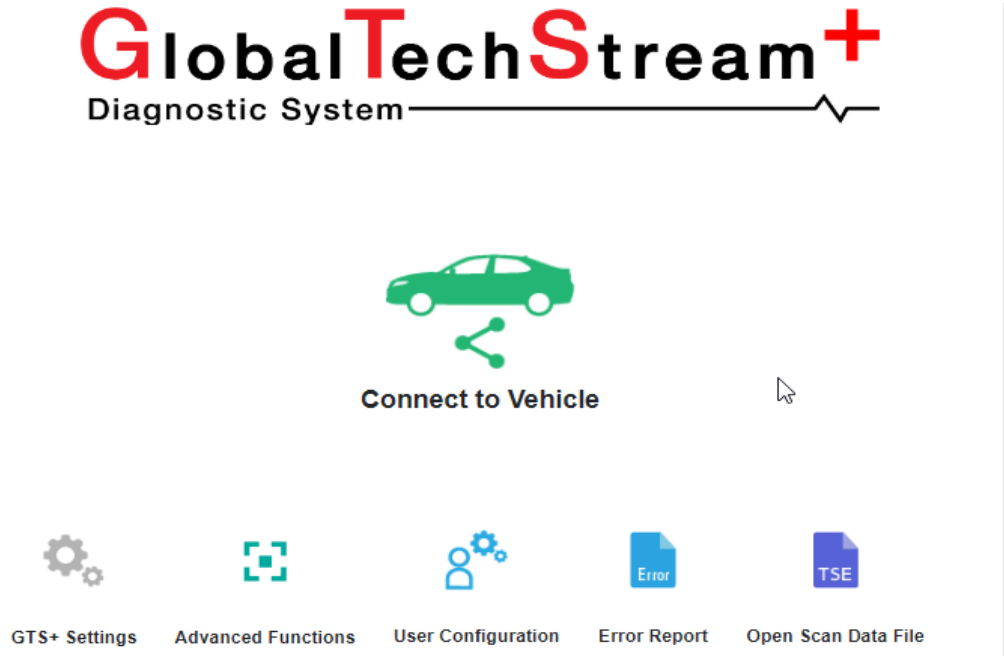

OFFLINE Mode after Expiration Date

If you try to use offline mode after 2 days, you will receive an error message:

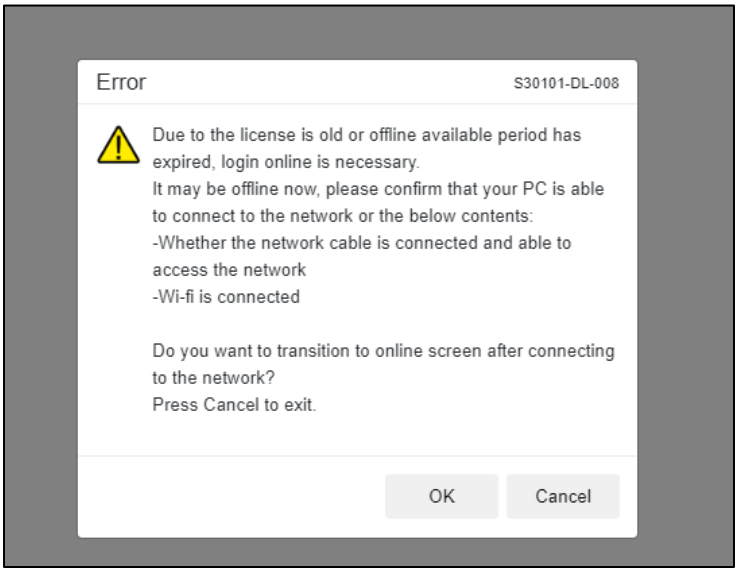


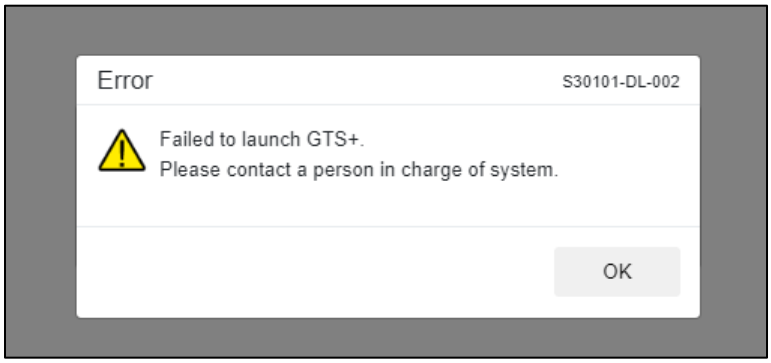


To fix this problem, the user must log in using online mode again.

File Locations

C:\Users\Public\Documents\GTSPlus\UserData

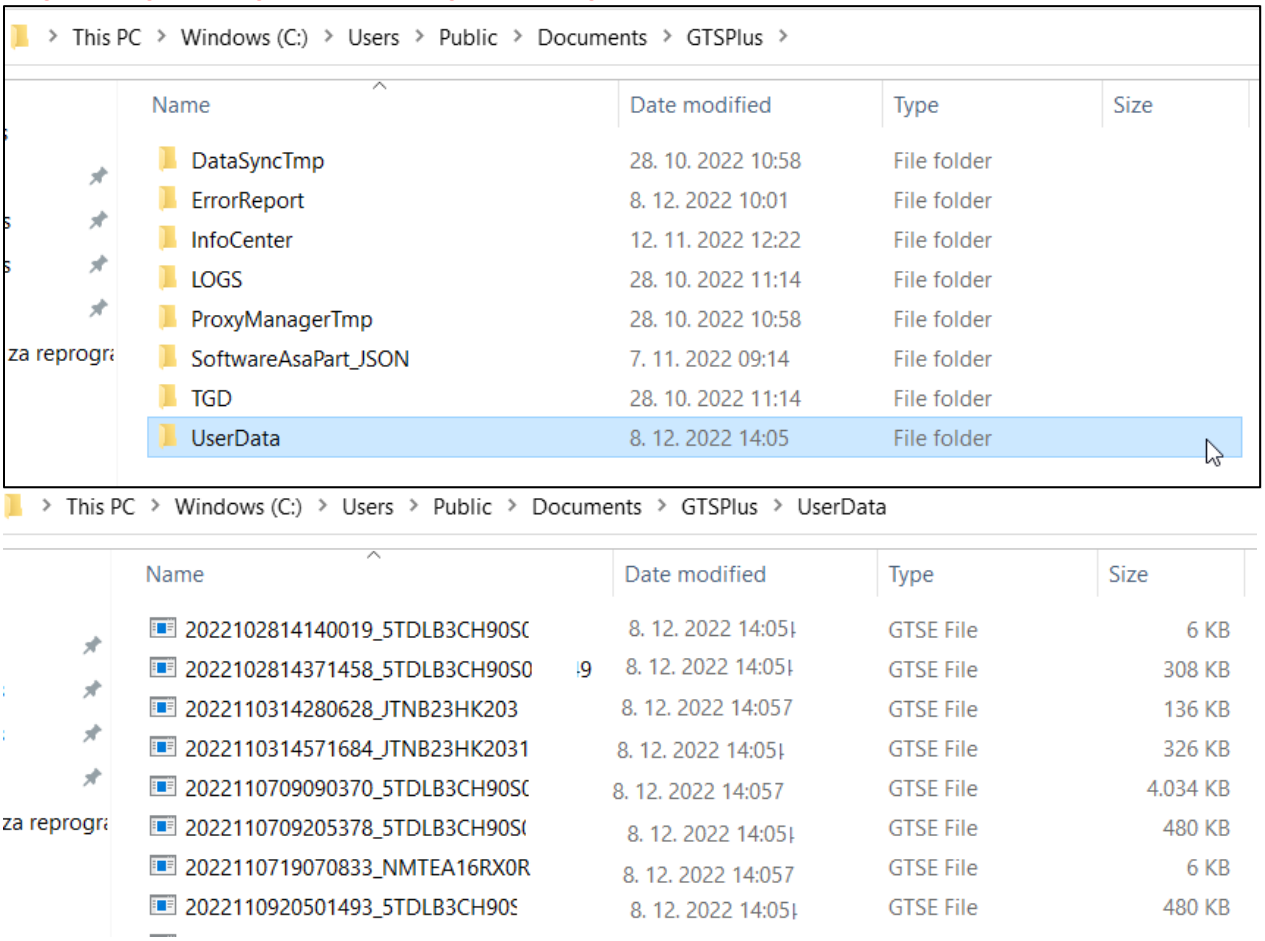


A desktop shortcut is created once GTS+ is installed:

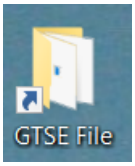

Convert TSE file to GTS files


Click on the **START** menu then input the following text TSE **Converter,** after that click **Open**

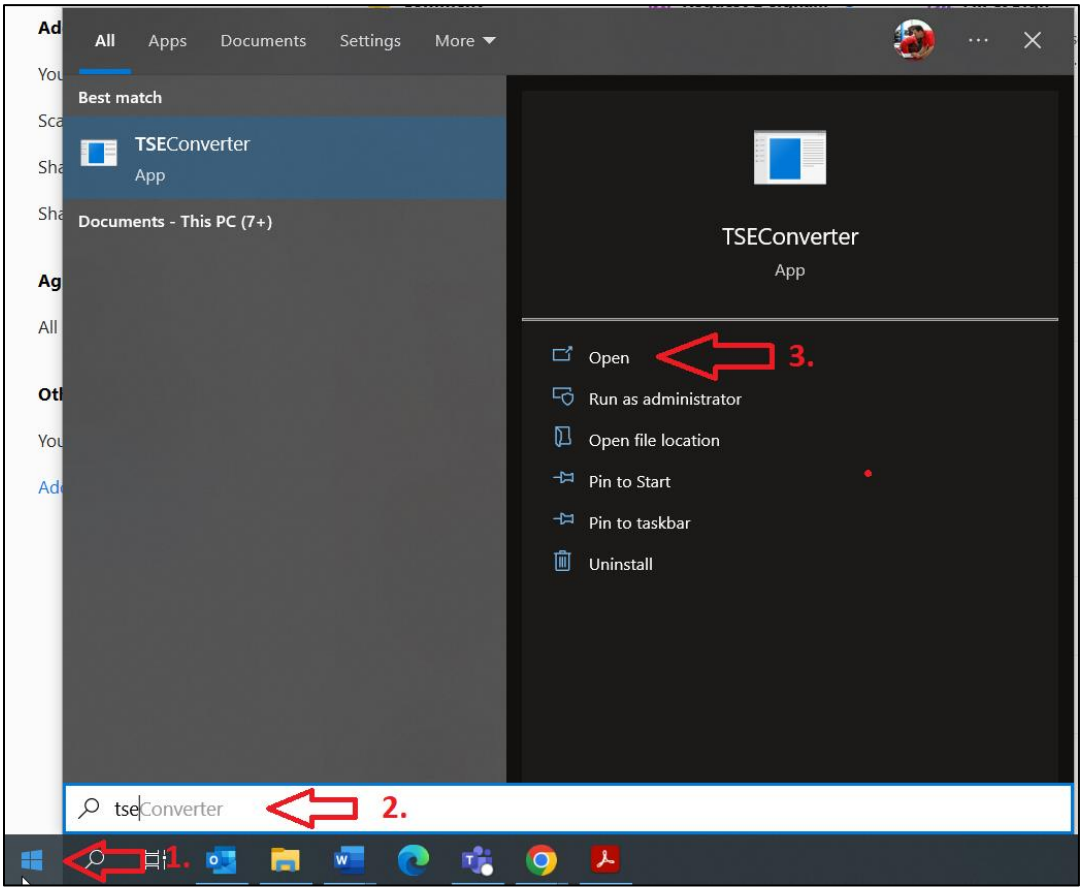


A new window will be opened



Drag and drop the TSE file that you want to convert to the GTSE file

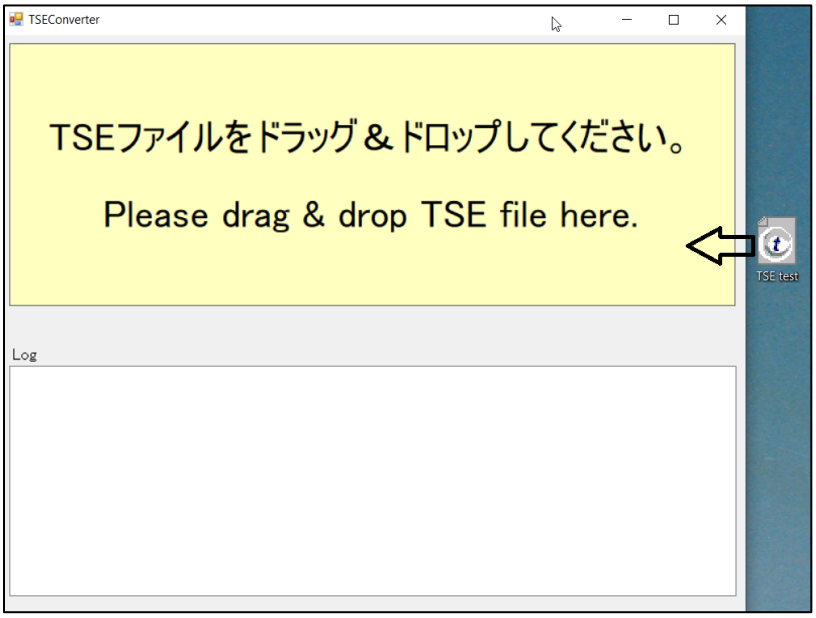


When the file is converted you will get a success message

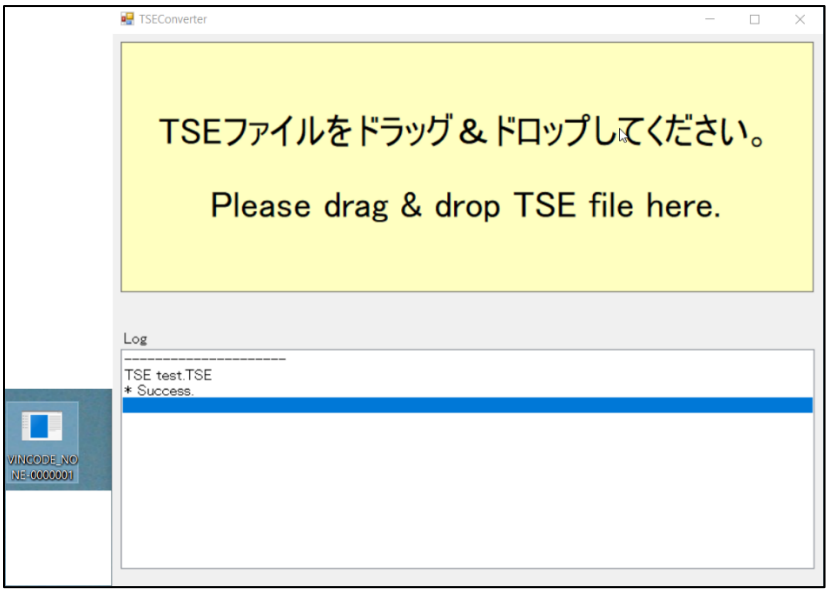

You can send the file using e-mails /help desk

You can open the file by double-clicking on it.




CUW+ Reflash Operation


Double-click the .cuw file to start the process.





You will have the option to use GTS or GTS+.

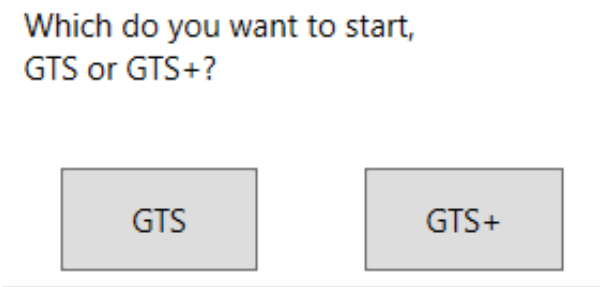

If you choose GTS+, you can follow the process step-by-step.

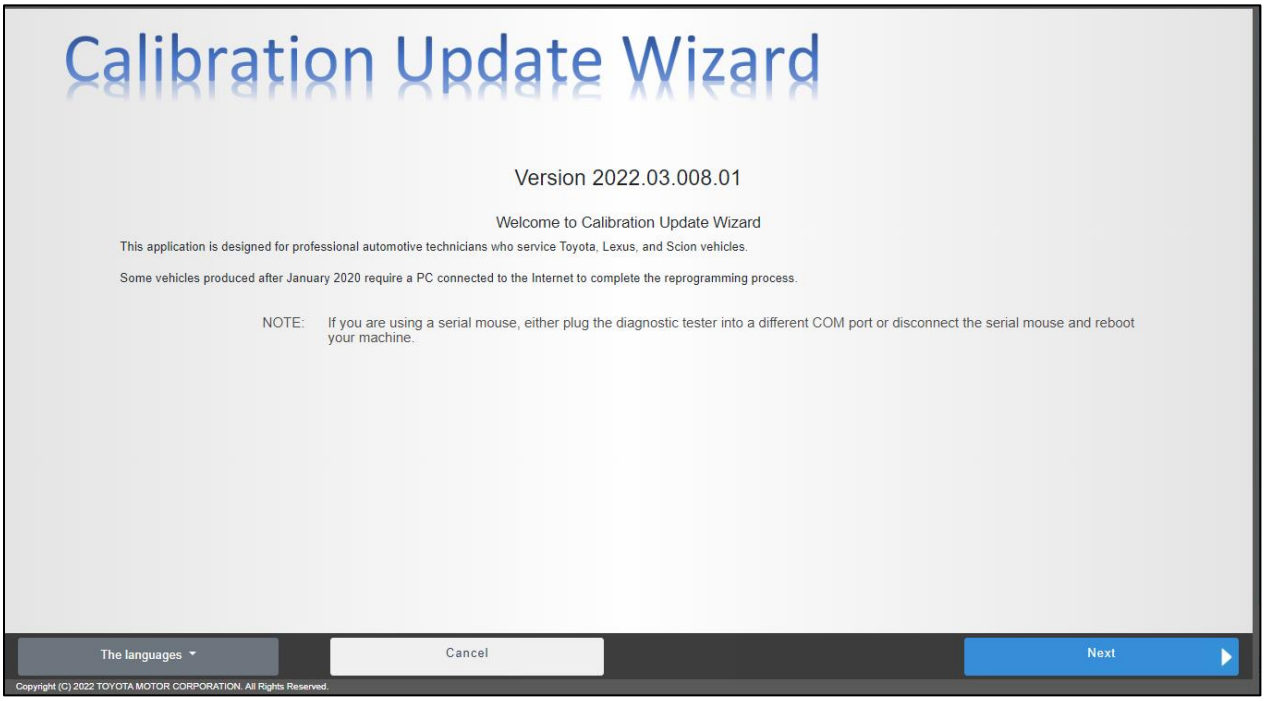

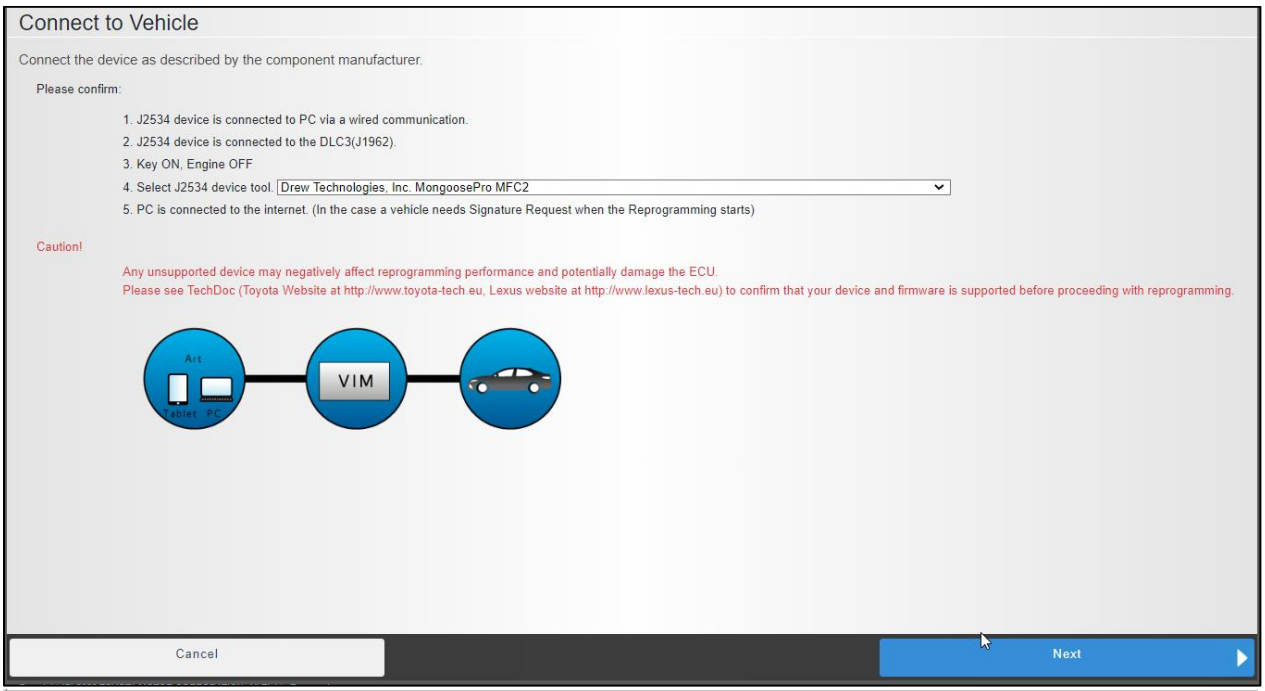

Connect to Vehicle
Connect the device as described by the component manufacturer.
Please confirm:
1. J2534 device is connected to PC via a wired communication.
2. J2534 device is connected to the DLC3(J1962).
3. Key ON, Engine OFF
4. Select J2534 device tool. Drew Technologies, Inc. MongoosePro MFC2
5. PC is connected to the internet. (In the case a vehicle needs Signature Request when the Reprogramming starts)
Caution!
Any unsupported device may negatively affect reprogramming performance and potentially damage the ECU.
Please see TechDoc (Toyota Website at http://www.toyota-tech.eu, Lexus website at http://www.lexus-tech.eu) to confirm that your device and firmware is supported before proceeding with reprogramming.
Art
Tablet PC
VIM
Cancel
Next

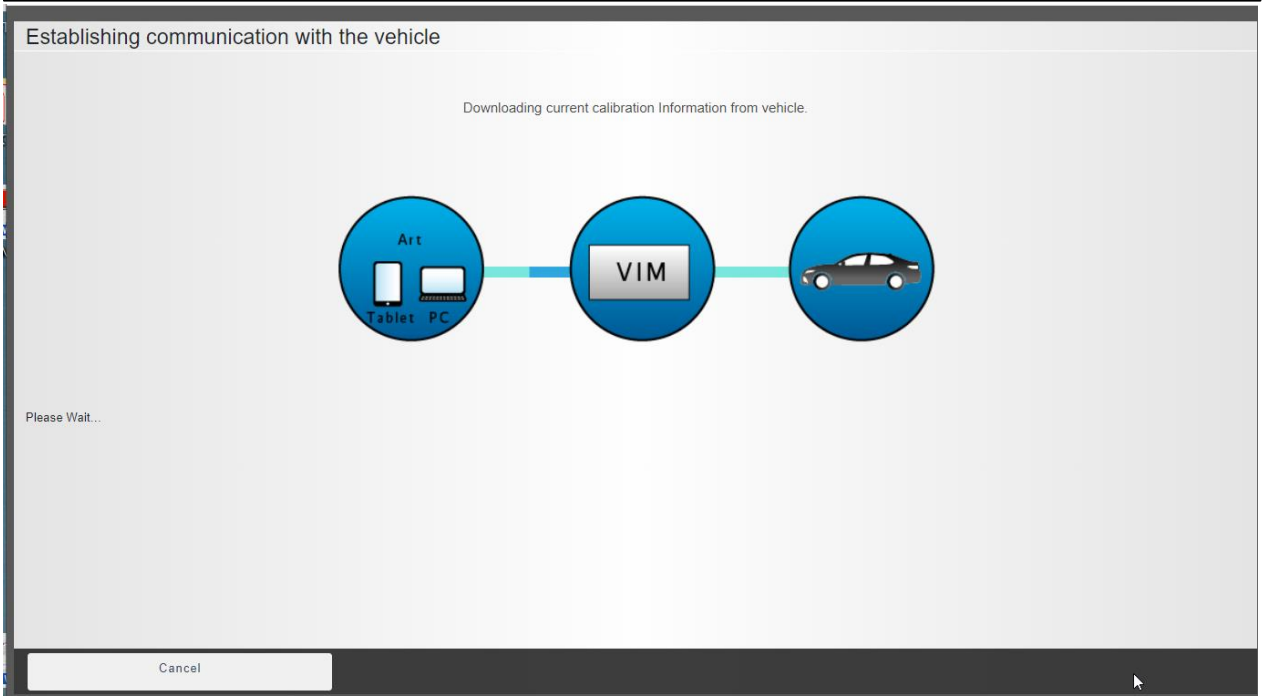
Establishing communication with the vehicle
Downloading current calibration Information from vehicle.
Art
Tablet PC
VIM
Please Wait...
Cancel

Uninstall GTS+


You can uninstall GTS+ by following this process:

Click on the **START** menu , then input the following text ”**Add or remove programs”** and click **Open**

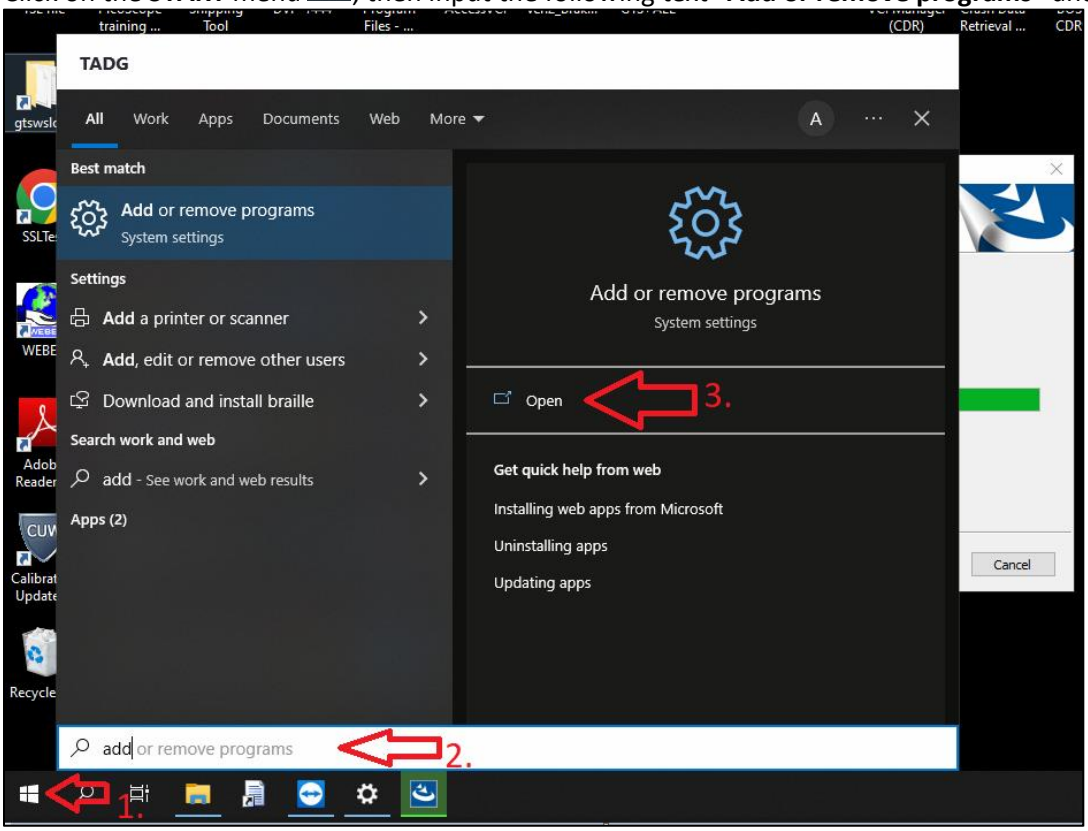


The user can also access “Apps and Features” directly by right clicking the windows button:

1. Right-Click on Windows button

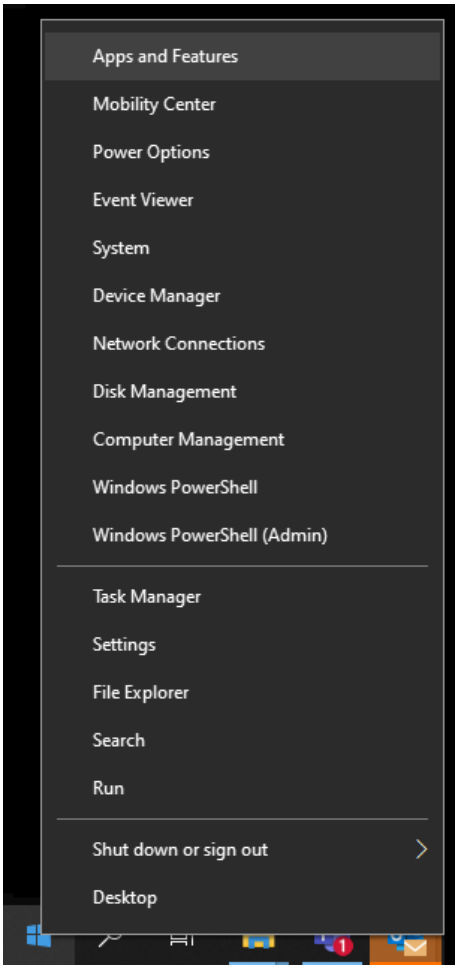


2. Click on “Apps and Features”

3. Search for “GTSPlus”

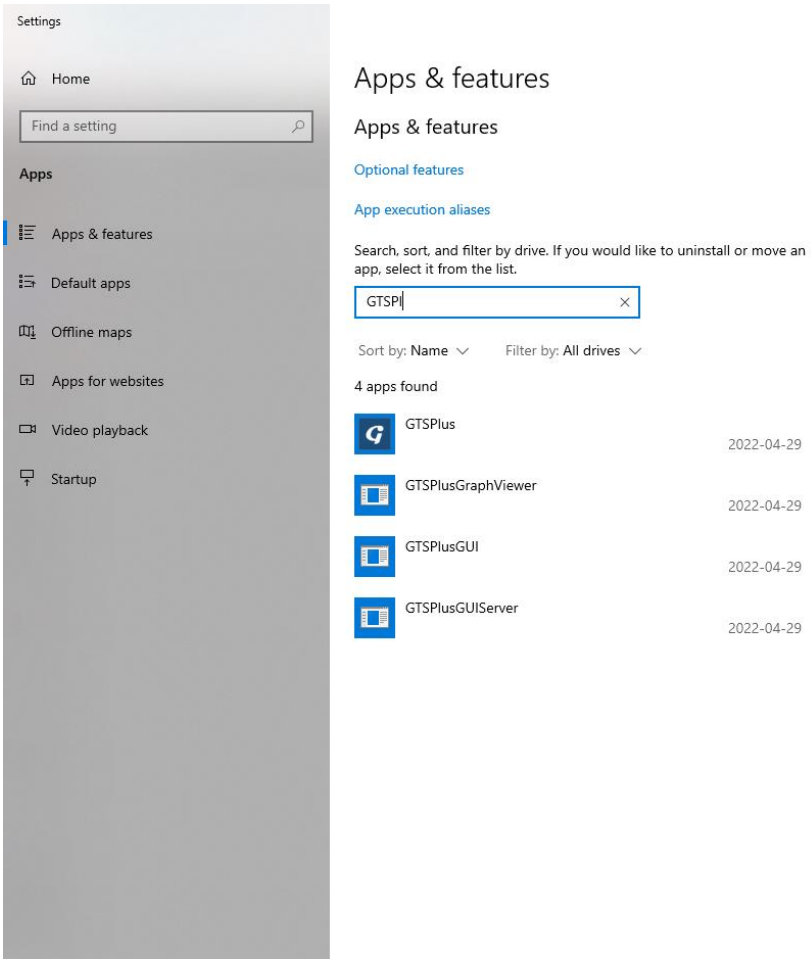


4. Click on “GTSPlus”

5. Click on Uninstall

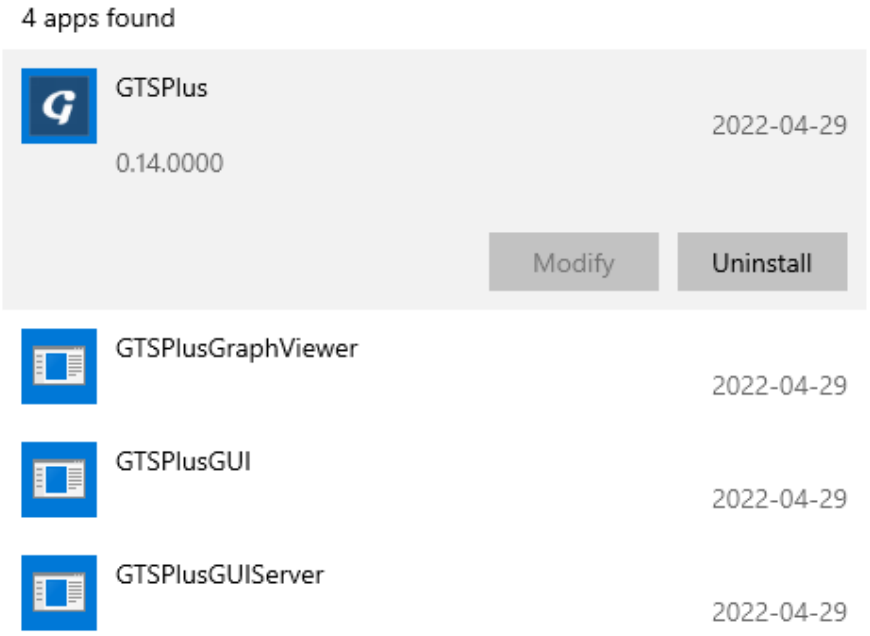

6. Follow the uninstallation process.
7. Delete the Toyota Diagnostics folder in the C: directory:

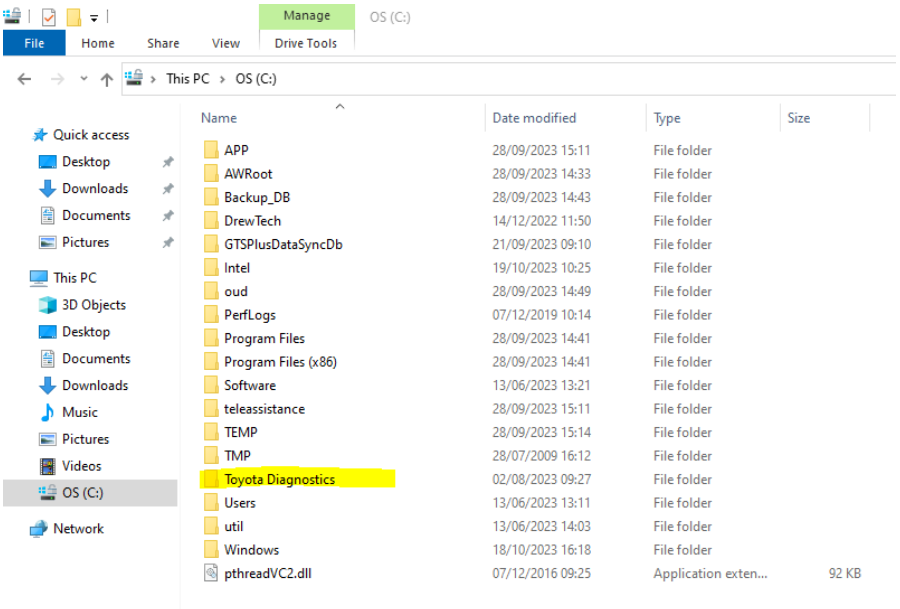

8. **Restart the computer.**