

COUPLER PANEL

IK (INSTRUKSI KERJA)

No. Dok : IK-G-MRO-PANEL-01
Tgl Terbit : 10-March-2026
Revisi : 0
Hal : 2-2



Langkah Pengoperasian Panel COUPLER / COUPLER Panel Operating Steps :

Pengertian dan fungsi / Definition and function :

Panel Coupler berfungsi untuk menghubungkan dua sumber / 2 busbar pada panel distribusi listrik, sehingga suplai listrik dapat dialihkan/ dibagi sesuai kebutuhan.

A Panel Coupler is a panel that functions to connect two power sources or two busbars in an electrical distribution panel, allowing the power supply to be transferred or shared according to operational needs.

Jika salah satu sumber listrik mati atau sedang perbaikan, panel coupler dapat digunakan untuk menyuplai kedua busbar (backup supply listrik).
If one of the power sources is down or undergoing repairs, the coupler panel can be used to supply both busbars (backup power supply).

Kondisi normal/Normal condition :


Incoming A = ON
Incoming B = ON
Coupler = OFF

Perbaikan A/Repair A :

Incoming A = OFF
Incoming B = ON
Coupler = ON

Perbaikan B/Repair B :

Incoming A = ON
Incoming B = OFF
Coupler = ON

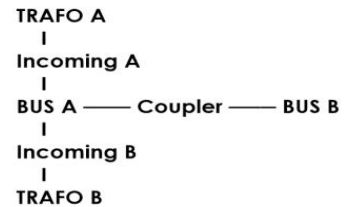

PENGOPERASIAN COUPLER/COUPLER OPERATION

- Knob Panel LV-MDB (salah satu panel) dalam posisi **MAN (Manual)**
The LV-MDB panel knob (one of the panels) is in the **MAN (Manual)** position

Tekan tombol **OFF** pada panel
Press the **OFF** button on the panel
- Buka penutup panel
Open the panel cover

Posisikan ke bawah (**OFF**) MCB control ACB panel LV-MDB
Turn the **MCB (OFF)** Control ACB panel LV-MDB
- Putar dengan kunci tuas khusus **Breaker Interlock** pada **Circuit breaker** ke posisi (**OFF**)
Turn the **Breaker Interlock** lever on the **Circuit breaker** to the (**OFF**) position

Lampu indikator **L1,L2,L3** mati
L1,L2,L3 indicator lights are off
- Posisikan kunci panel coupler pada posisi **ON**
Position the coupler panel key to the **ON** position
- Kemudian Tekan tombol **ON** pada panel Coupler
Then press the **ON** button on the Coupler panel

MEMATIKAN COUPLER/TURN OFF COUPLER

- Tekan tombol **OFF** pada panel coupler
Press the **OFF** button on the coupler panel
- Posisikan kunci panel coupler ke posisi **OFF**
Position the coupler panel lock to the **OFF** position
- Putar dengan kunci tuas khusus **Breaker Interlock** pada **Circuit breaker** ke posisi (**ON**)
Turn the **Breaker Interlock** lever on the **Circuit breaker** to the (**ON**) position

Lampu indikator **L1,L2,L3** menyala
The **L1,L2,L3** indicator lights are on
- Posisikan ke atas (**ON**) MCB control ACB pada panel LV-MDB
Turn the **MCB control ACB** on the LV-MDB panel to (**ON**)
- Kemudian tekan tombol **ON** pada panel LV-MDB
Then press the **ON** button on the LV-MDB panel

Note :
Breaker HV digunakan apabila keadaan darurat pada sistem cubicle, yg mengharuskan memutus aliran listrik total
HV breakers are used in emergency situations in the cubicle system, which require a complete power outage.

Perawatan Kelistrikan Electrical Maintenance

Bersihkan panel secara rutin dan berkala (seminggu sekali)
Clean the panels regularly and periodically (once a week)

Jika ada masalah pada kelistrikan, hubungi team elektrik
If there is a problem with electricity, contact the electrician team



Nama : RIYAN HERI S.
NIK : 20161683
No. HP : 0852-2611-1712



Nama : ANANG DWIYANTO
NIK : 20182503
No. HP : 0852-9008-1200

Peringatan/ Warning!

Pengoperasian panel hanya pada saat diinstruksikan
Operate the panel only when instructed
Gunakan perlengkapan keselamatan (APD) saat pengoperasian
(Sarung tangan listrik, Sepatu safety dan Helm safety)
Use safety equipment (PPE) during operation
(electrical gloves, safety shoes, and safety helmet)