GRKit

For RICOH GR IIIx and GR IIIx HDF firmware 1.60 only.

Install

1. Turn the camera off.
2. Copy the contents of `SD_ROOT` to the root of the SD card.
3. Insert the card. Hold MENU while you turn the camera on. Wait until the camera turns itself off.
4. Turn the camera on normally.

Step 3 turns on the camera's SD scripts. The camera shows Mode Set Command, then Complete, and then turns itself off.



If the SD scripts are already on, skip step 3. After the installation, you can remove `00078490.609` and `DEVELOP.MOD` from the card root. This step is optional.

Use

Open ADJ and select the sixth entry, GRK. GRKit loads a few seconds after power-on, so the entry can appear late.

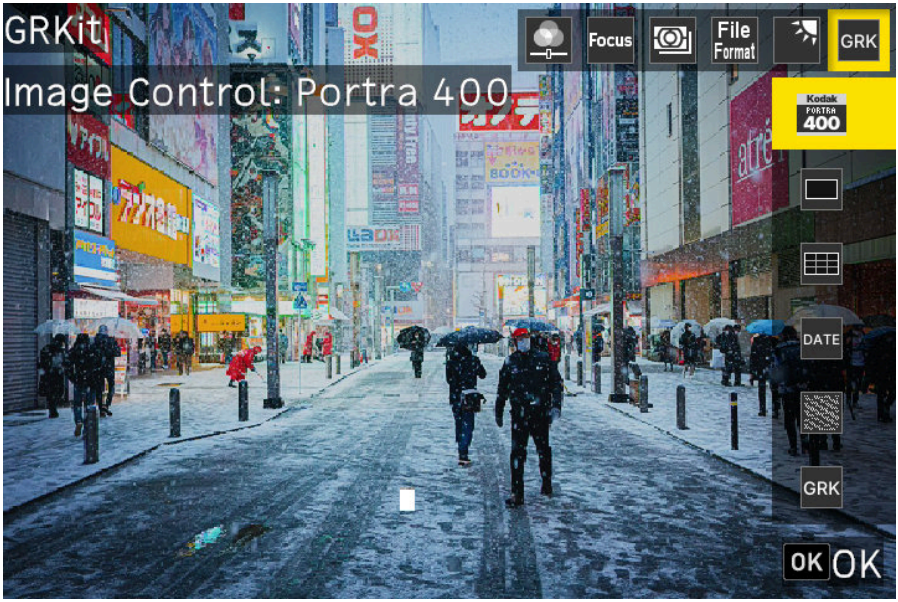


Photo: Snow in Akihabara by nagi usano, CC BY 2.0.

- **Image Control:** highlight an effect to preview it. Press OK to keep it. Press Fn to adjust the Standard parameters of the effect. Each effect keeps its own adjustments, and they do not change the camera's Image Control settings.
- **Framing:** select XPan, 16:9, or 4:3. The viewfinder dims the area outside the photo. Framing works only with the native 3:2 aspect ratio.
- **Guides:** select a guide style. The lines show only in the viewfinder.
- **Date Stamp:** select a date style. Photos get the date at the bottom right.
- **Grain:** select Weak, Medium, or Strong. Only photos get the grain.

Highlight the last row, GRK, to see the GRKit version.

Press MENU to go back one level. GRKit keeps your settings after power-off.

Remove or recover

To remove GRKit, turn the camera off. Then delete the `SCRIPT` folder from the card.

The SD script setting stays on. To turn it off:

1. On https://grkit.app, download the files that turn SD scripts off for your camera. The button is below the installation steps.
2. Copy the contents of `SD_ROOT` to the root of the SD card.
3. Insert the card. Hold MENU while you turn the camera on. Wait until the camera turns itself off.
4. Remove `00078490.609` and `DEVELOP.MOD` from the card root.

If the camera stops during startup, remove the battery and the card. Then start the camera without the card. If it still does not start, see the recovery guide.

GRKit is not affiliated with Ricoh. Source code and licenses: https://github.com/ahonn/grkit

Recovery

GRKit changes the camera only until the camera turns off. It does not write the firmware.

The camera stops during startup

1. Try to turn the camera off.
2. If the camera does not respond, remove the battery.
3. Remove the SD card.
4. Insert a charged battery. Turn the camera on without the card.

Do not push or pull the lens barrel. Do not remove the power during an official firmware update.

The camera still does not start

1. Without the card, hold the playback button to start the camera in playback mode.
2. If the menu opens, reset the camera settings. The reset deletes your personal settings.
3. Turn the camera on again without the card.

If the camera still does not start, stop using GRKit and contact camera service.