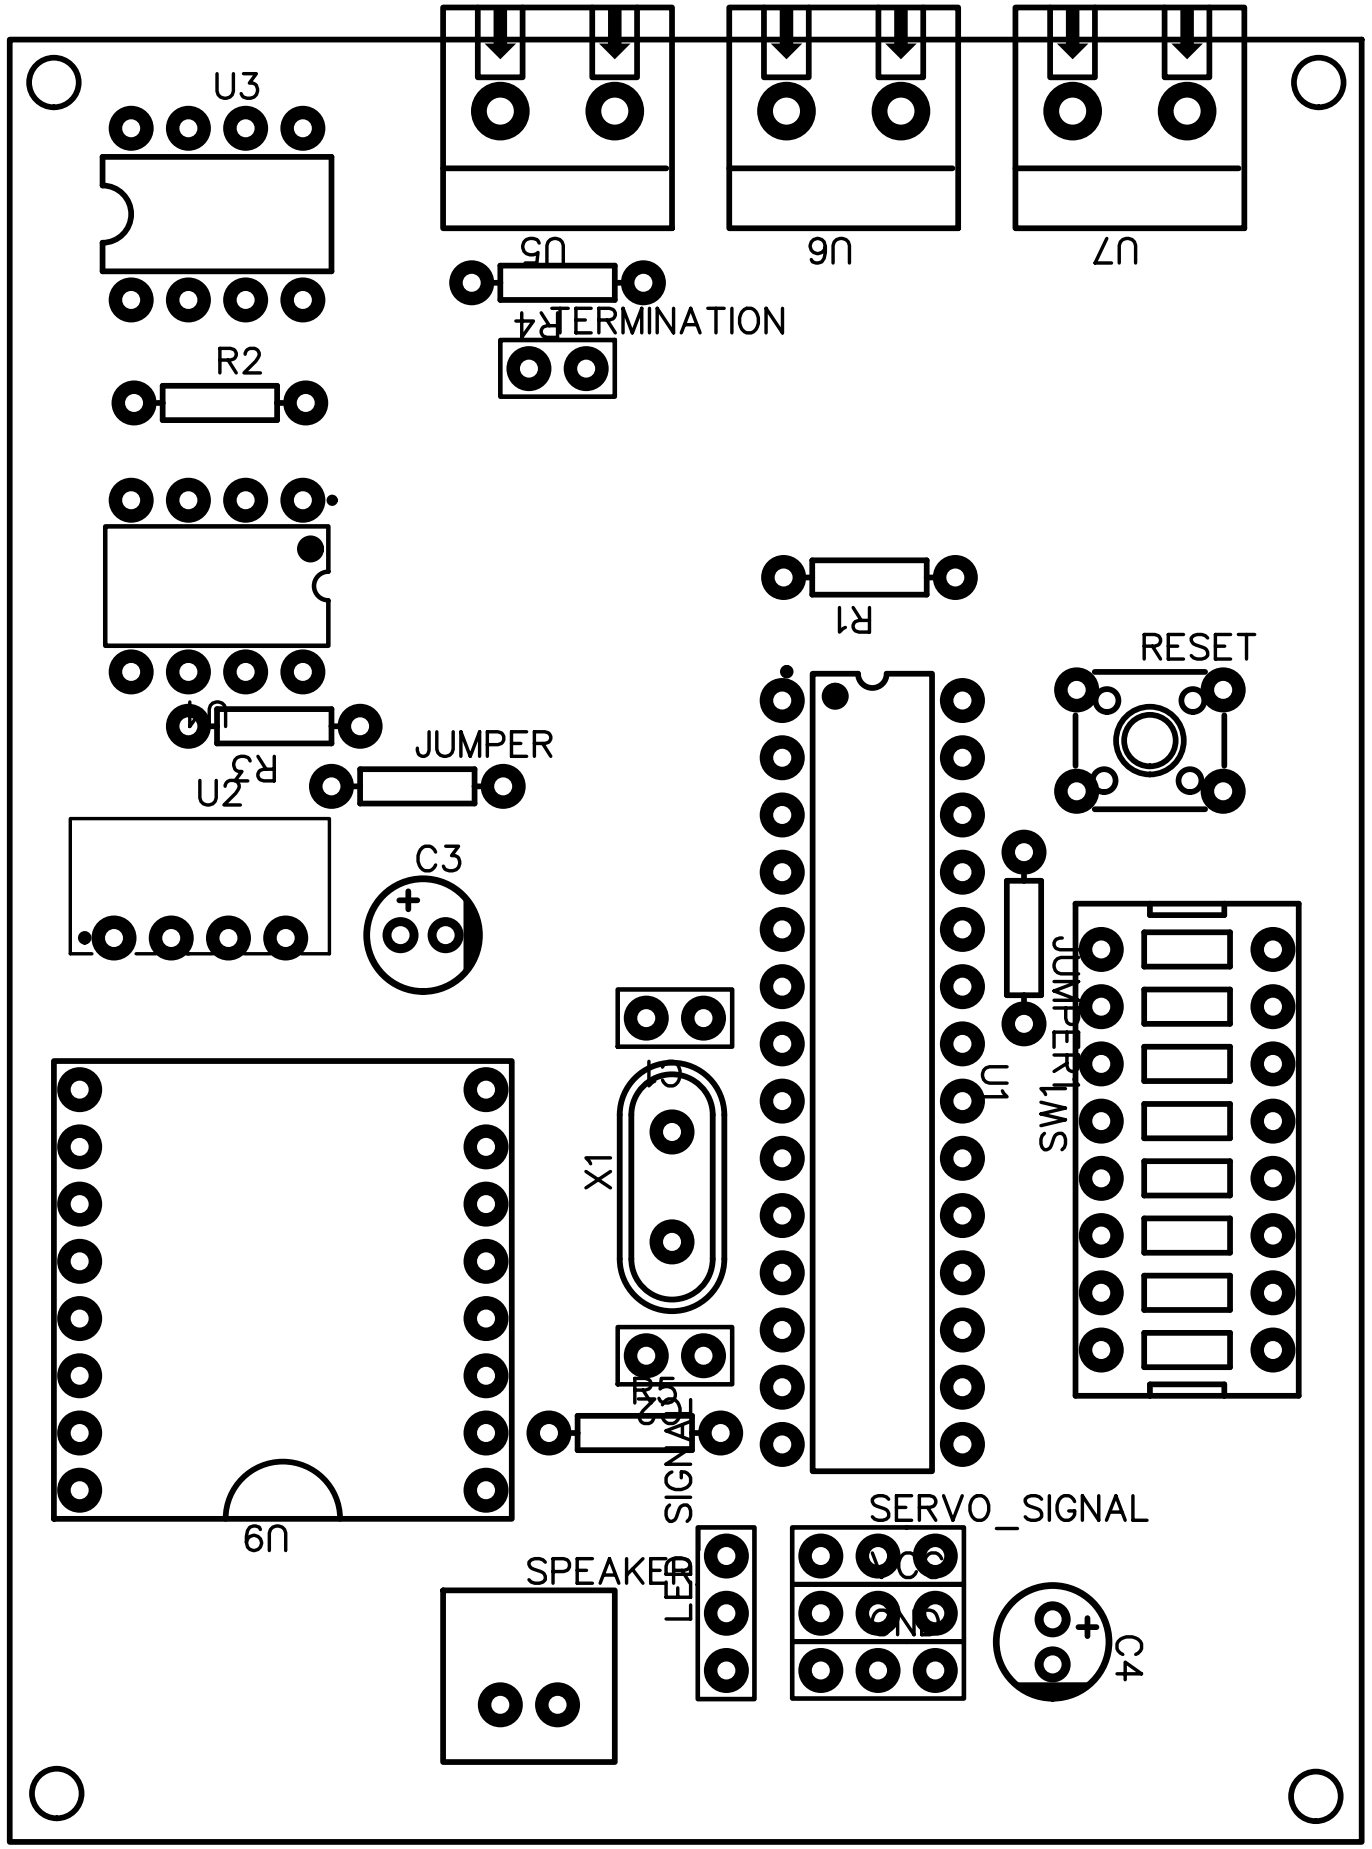

U3
U5
U6
U7
TERMINATION
R4
R2
R1
RESET
JUMPER
R3
U2
C3
U1
JUMPER_SWITCH
X1
R5
LED SIGNAL
SERVO_SIGNAL
U9
SPEAKER
VCC
GND
C4