

电源&485

传感器 电源&485_{+24 GND 485B 485A} 电机

4个脚 为安装 孔

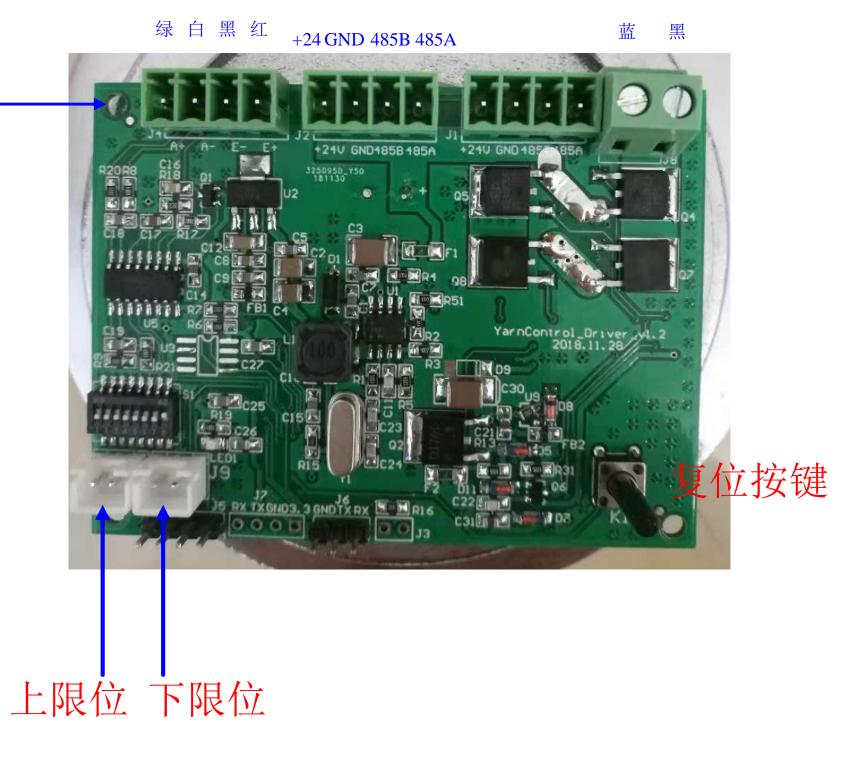

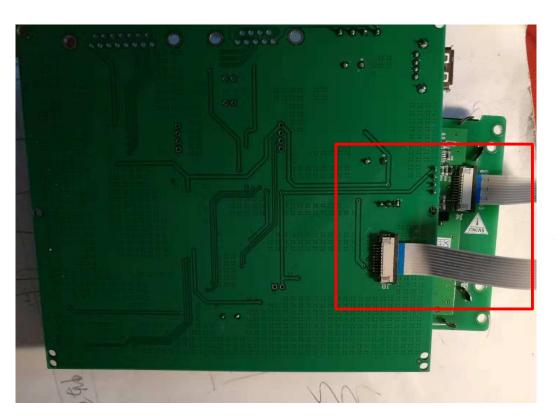

显示屏和 主控板连 接方式

