


II. Configuring Airowl


Step 1: Power On

Begin by securely connecting the Airowl device to a power source using the provided USB-C cable.

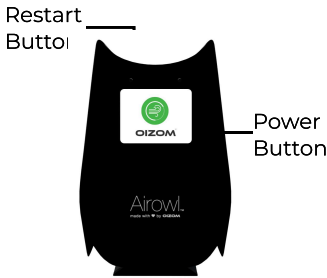


Step 2: Connect to Airowl Wi-Fi Hotspot

Open the Wi-Fi settings on your device. Locate and select the network named "AIROWL_XXXXXX" from the list of available networks. And add the password : 12345678

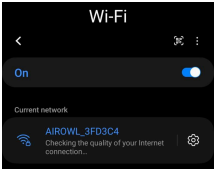


Step 3: Access the Configuration Page

Your browser should automatically redirect to the Airowl configuration page. If not, open your browser and enter "192.168.4.1" to access the settings.

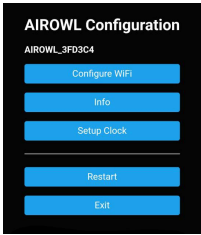


Step 4: Set the Time

On the configuration page, select "Set Time". Set the time zone. Double-check the settings before submitting.

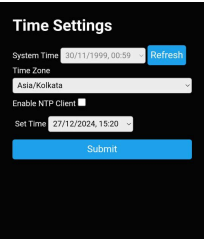

Step 5: Configure Wi-Fi

Go to the "Configure Wi-Fi" section. Select your Wi-Fi network and enter the password. Save the connection to ensure proper setup.

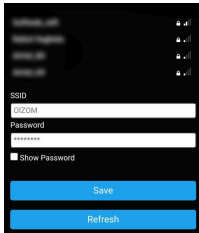

Step 6: Check Your Data

Restart the Airowl device to complete setup. A QR code will appear on the screen. Scan the QR code with a compatible device to view your air quality data.

Or, enter the following URL <https://opendata.oizom.com> and enter airowl unique ID



Components

Included in the Kit-

- 1. Sensirion SEN54 Environmental Sensor
- 2. M5Stack CoreS3 SE microcontroller


Specifications

- **Measures:** PM1.0, PM2.5, PM4, PM10, VOC Index, temperature, and humidity
- **Display:** 2.0-inch touch screen (320x240 resolution)
- **Power Supply:** USB-C compatible
- **Data Access:** Real-time data through display or connected devices
- **Connectivity:** WiFi 2.4GHz
- **Design:** Compact, 3D-printed, open-source

II. Configuring Airowl


Step 1: Power On

Begin by securely connecting the Airowl device to a power source using the provided USB-C cable.

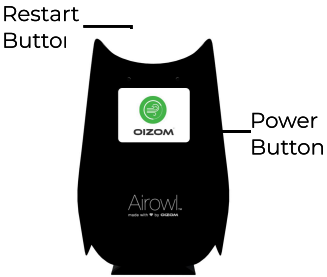


Step 2: Connect to Airowl Wi-Fi Hotspot

Open the Wi-Fi settings on your device. Locate and select the network named "AIROWL_XXXXXX" from the list of available networks. And add the password : 12345678

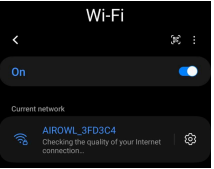


Step 3: Access the Configuration Page

Your browser should automatically redirect to the Airowl configuration page. If not, open your browser and enter "192.168.4.1" to access the settings.

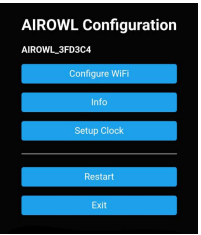


Step 4: Set the Time

On the configuration page, select "Set Time". Set the time zone. Double-check the settings before submitting.

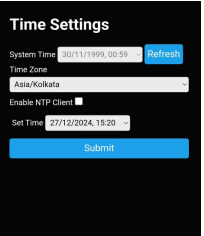

Step 5: Configure Wi-Fi

Go to the "Configure Wi-Fi" section. Select your Wi-Fi network and enter the password. Save the connection to ensure proper setup.

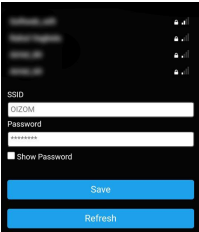

Step 6: Check Your Data

Restart the Airowl device to complete setup. A QR code will appear on the screen. Scan the QR code with a compatible device to view your air quality data.

Or, enter the following URL <https://opendata.oizom.com> and enter airowl unique ID



Components

Included in the Kit-

- 1. Sensirion SEN54 Environmental Sensor
- 2. M5Stack CoreS3 SE microcontroller

Specifications

- **Measures:** PM1.0, PM2.5, PM4, PM10, VOC Index, temperature, and humidity
- **Display:** 2.0-inch touch screen (320x240 resolution)
- **Power Supply:** USB-C compatible
- **Data Access:** Real-time data through display or connected devices
- **Connectivity:** WiFi 2.4GHz
- **Design:** Compact, 3D-printed, open-source