

How To Firmware Upgrade

For TXI, Tx Redundancy System Controller (ODU)

Introduction

You may add new features, bug fixes, and performance improvements through this Firmware Upgrade Method.

This package is designed for use in TXI units; the system and switch controller are designed for outdoor Transmit Redundant Systems. It is meant for products with serial numbers beginning with TE12, or products with Part Numbers/Model Numbers starting with TXI.

ATTENTION: This Firmware is designed for TXI units only and will NOT work with any other products.

WARNING: Do NOT upload it to the IBUCs directly or to any other products.

Upgrading via embedded web pages

Terrasat Communications Inc. provides a compressed (zipped) folder containing the adequate Firmware upgrade.

The upgrade package filename is "TXI_vXX_YY.zip", where XX and YY can be numbers ranging from 00 to 99.

Unzip the file into a directory of your choice and follow the instructions below.

Follow the numbered steps below to upgrade through the TXI's web interface.

1. Connect the TXI unit to your Local Network or local computer.
 - a. Connect an RJ45 Ethernet cable to the TXI unit and to a computer or laptop. Follow the user manual instructions for further instructions on connecting to your TXI.
2. Access the TXI's web pages.
 - a. Find the IP address currently used by your TXI unit in your network and use it in your preferred browser to access the system.
 - b. Open your preferred browser, and type your TXI unit's IP address followed by ":8080" as the URL. Example:
 - i. If the TXI's IP address is set at **10.0.0.21**, then open URL <http://10.0.0.21:8080> and you will see a webpage as shown in Figure 1, named SWUpdate.
 - ii. Drag and drop the adequate Firmware Upgrade file (.SWU extension) to the Software Update webpage, following the instructions described in Step 3 onwards.

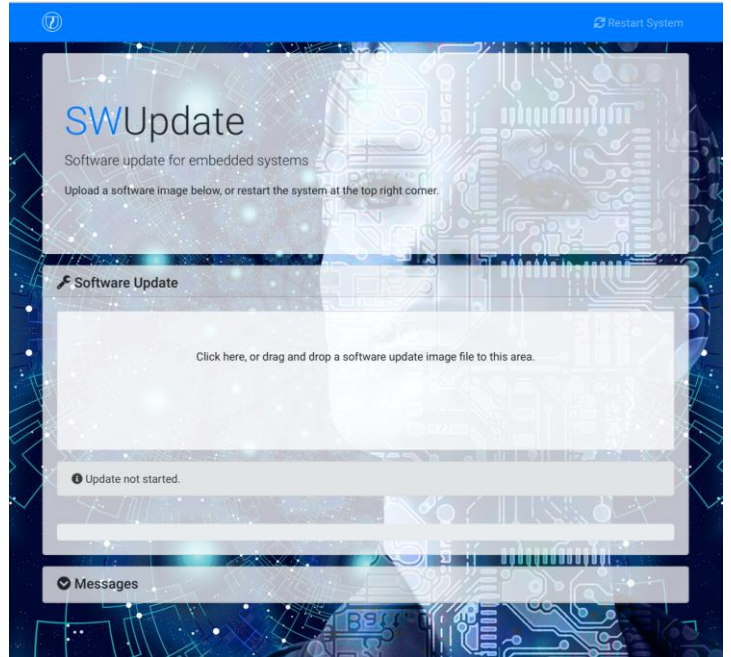


Figure 1: Software Update Web Page

3. Locate, extract from the Zip folder, and select the file name with the ".swu" extension, similar to TXI_vXX_YY.swu (example: TXI_v01_05.swu), as shown in Figure 2.

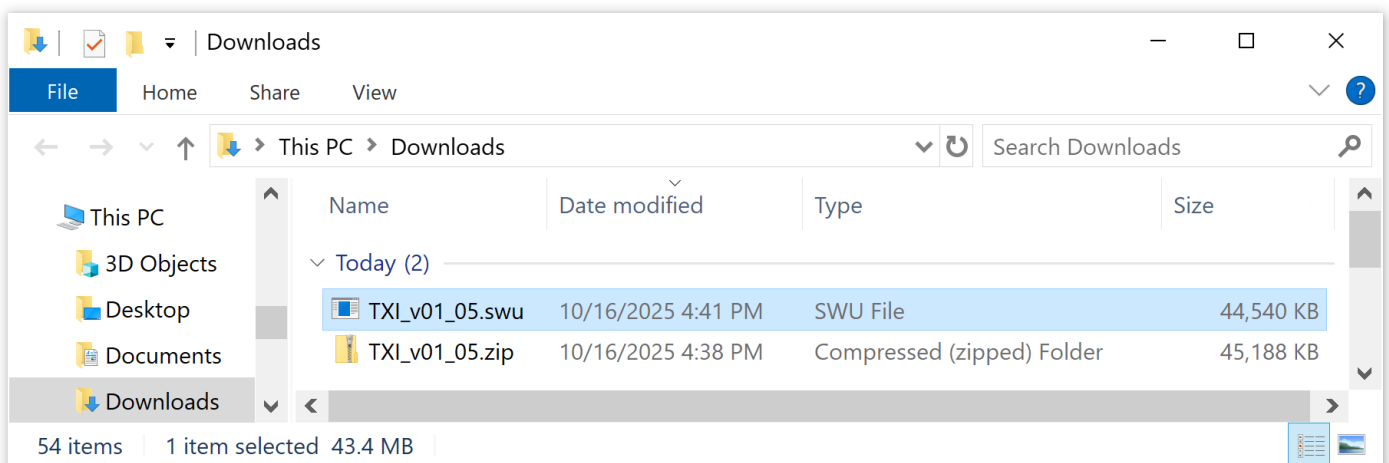


Figure 2: SWU Firmware File

Note: You cannot upload compressed files or folders, such as .zip or .rar extensions. You must extract the .SWU files from those folders before taking these steps.

4. Click and drag that .swu file to the SWUpdate page.
5. Wait for progress completion. The progress indicator bar will inform you of completion.

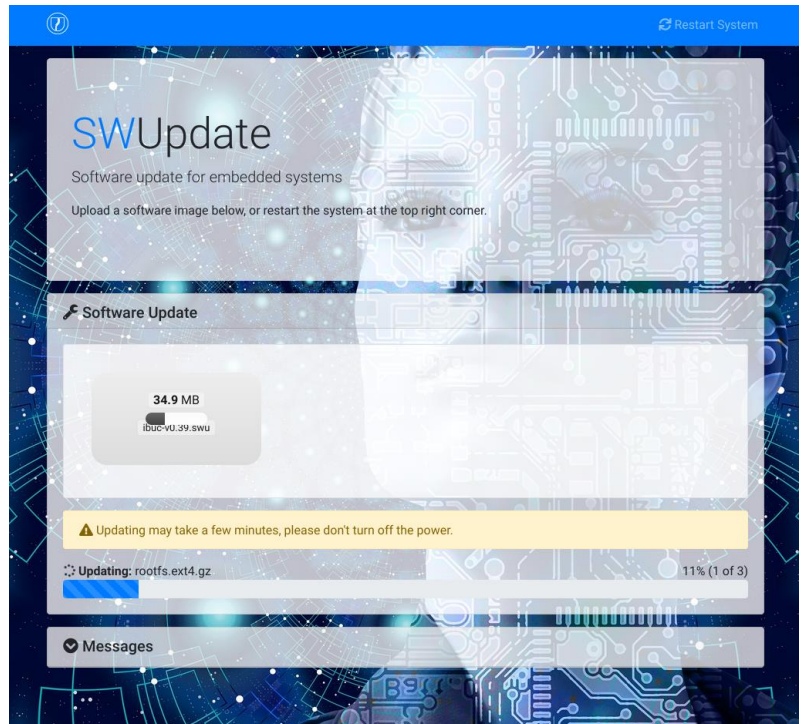


Figure 3: Software Update Progress

6. Wait for the device to reboot.
 - a. Once the unit reboots, the upgrade is complete.
 - b. Upon completion, the System will come back to the original "SWUpdate" webpage, available for any further firmware upgrades.
 - c. The unit is updated and can be used now.

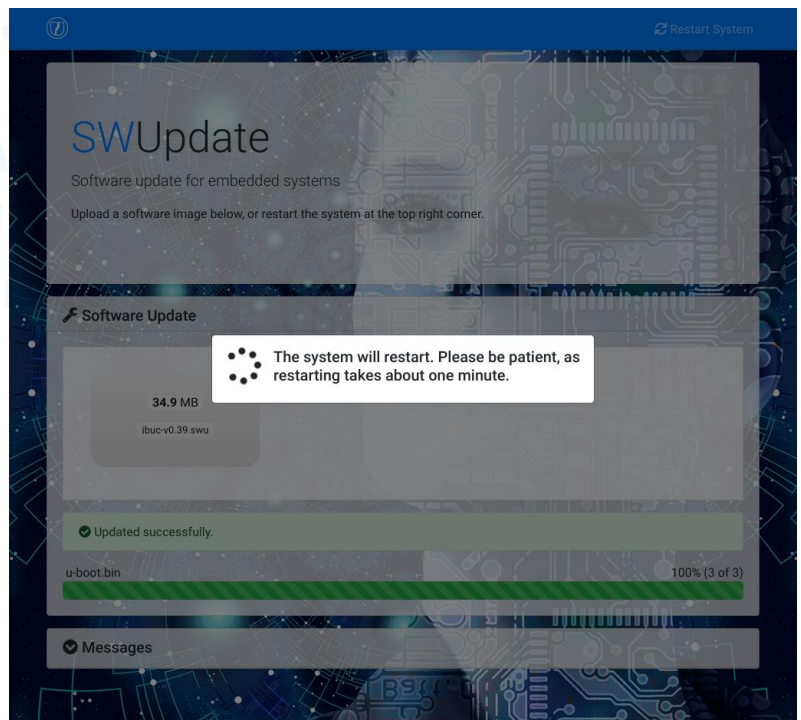


Figure 4: System Restart Progress Page

7. Please contact techsupport@terrasatinc.com if you need any further instructions or help.