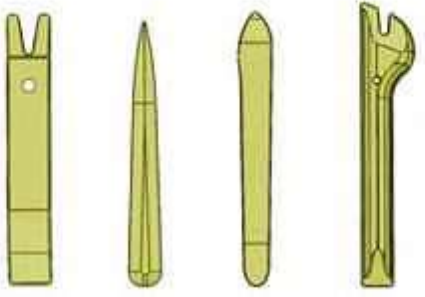
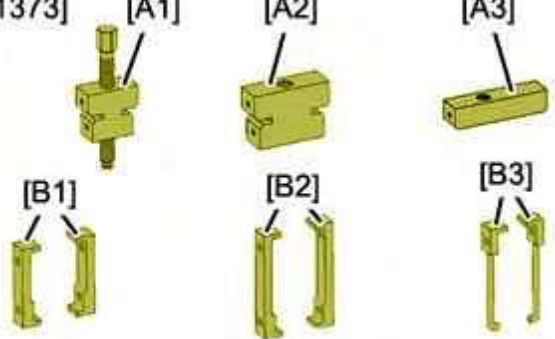


REMOVING - REFITTING : FRONT WINDSCREEN WIPER MECHANISM

ESSENTIAL : Observe the safety and cleanliness recommendations ⓘ .

1. Tooling

tool	Reference	Designation
[1350-ZZ]  Figure : E5AG02MT	[1350-ZZ]	Stripping tools
[1373]  Figure : E5AG037T	[1373]	windscreen wiper arm removal tool

2. Removing

Disconnect the battery ⓘ .

2.1. Windscreen wiper arm

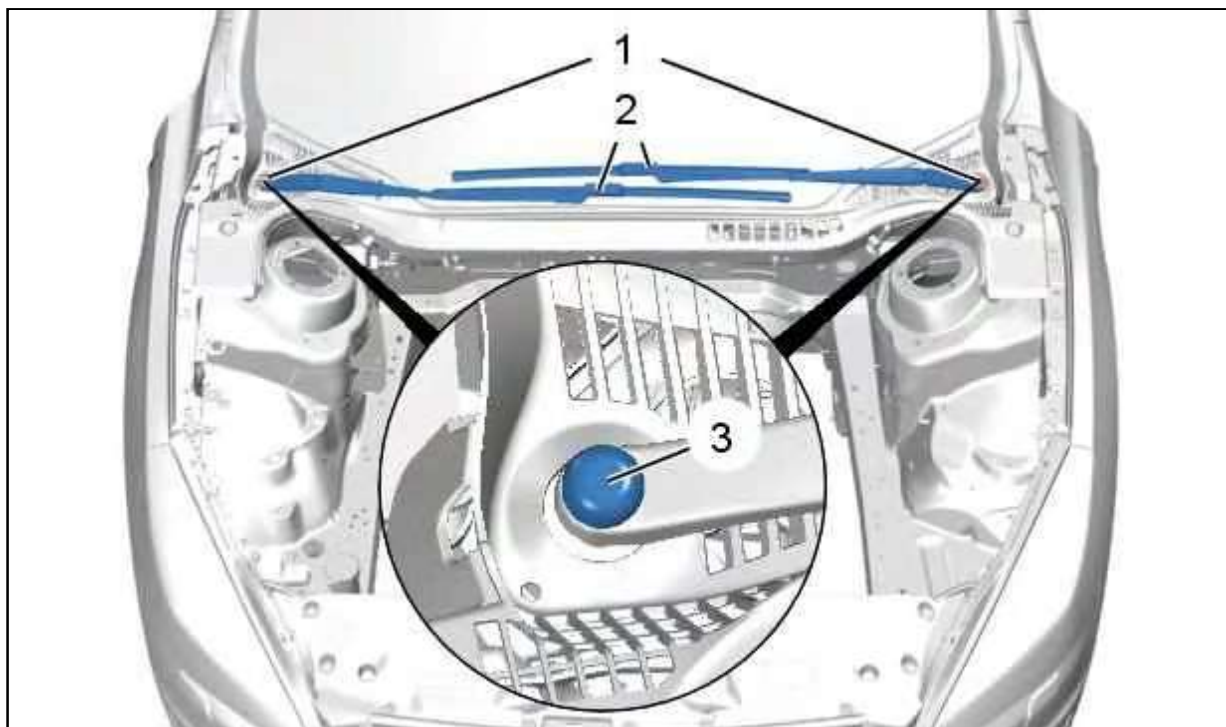


Figure : C5DGY8SD

Remove :

- The plastic covers (3) ; Using tool [1350-ZZ]
- The nuts (1)
- The windscreen wiper arms (2) ; Using tool [1373]

2.2. Screen wiper mechanism (On the driver's side)

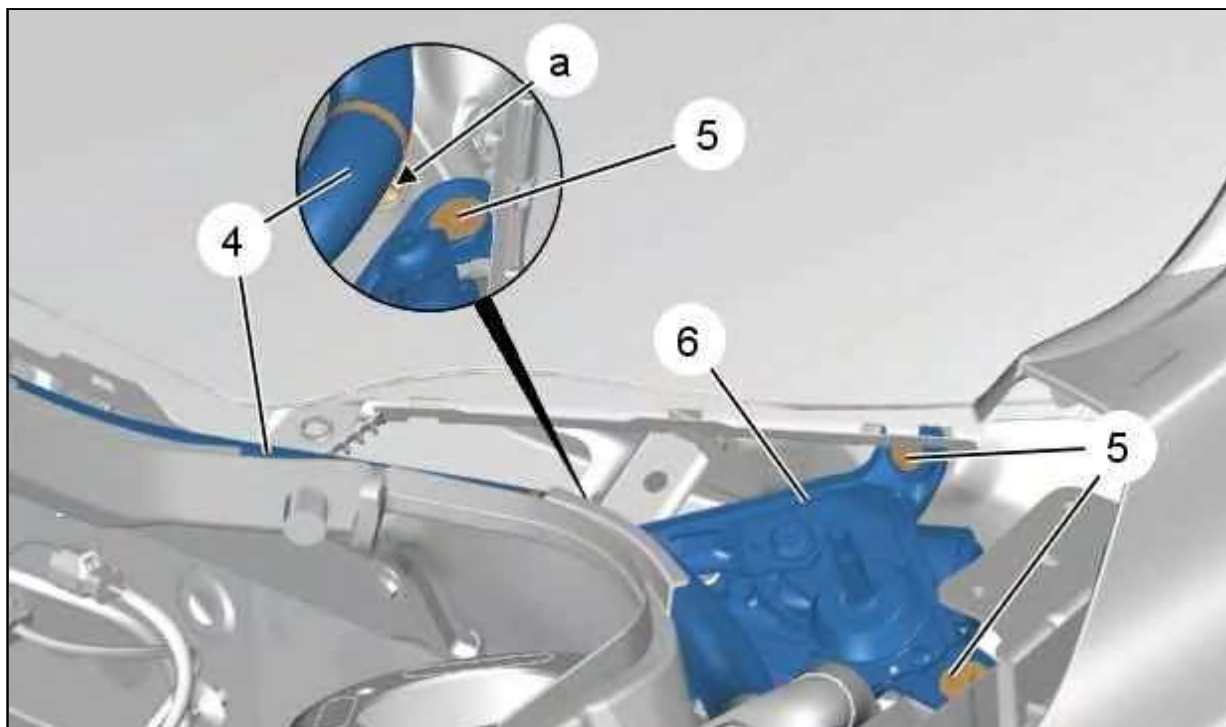


Figure : C5DGY8TD

**Remove the scuttle grill **

Unclip the electrical harness (4) (at "a") ; Using tool [1350-ZZ].

Remove the bolts (5).

Disengage the wiper mechanism (6).

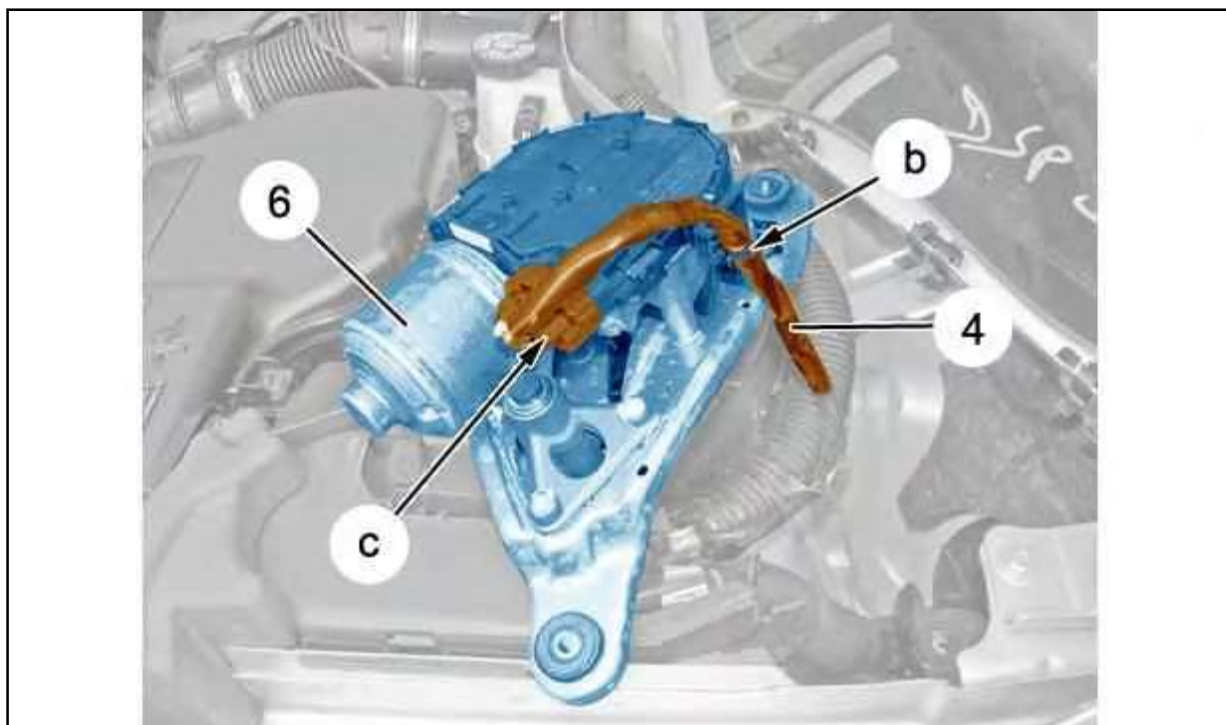


Figure : C5DGY8UD

Disconnect the connector (at "c").
Unclip the electrical harness (4) (at "b") ; Using tool [1350-ZZ].
Remove the wiper mechanism (6).

2.3. Screen wiper mechanism (Passenger 's side)

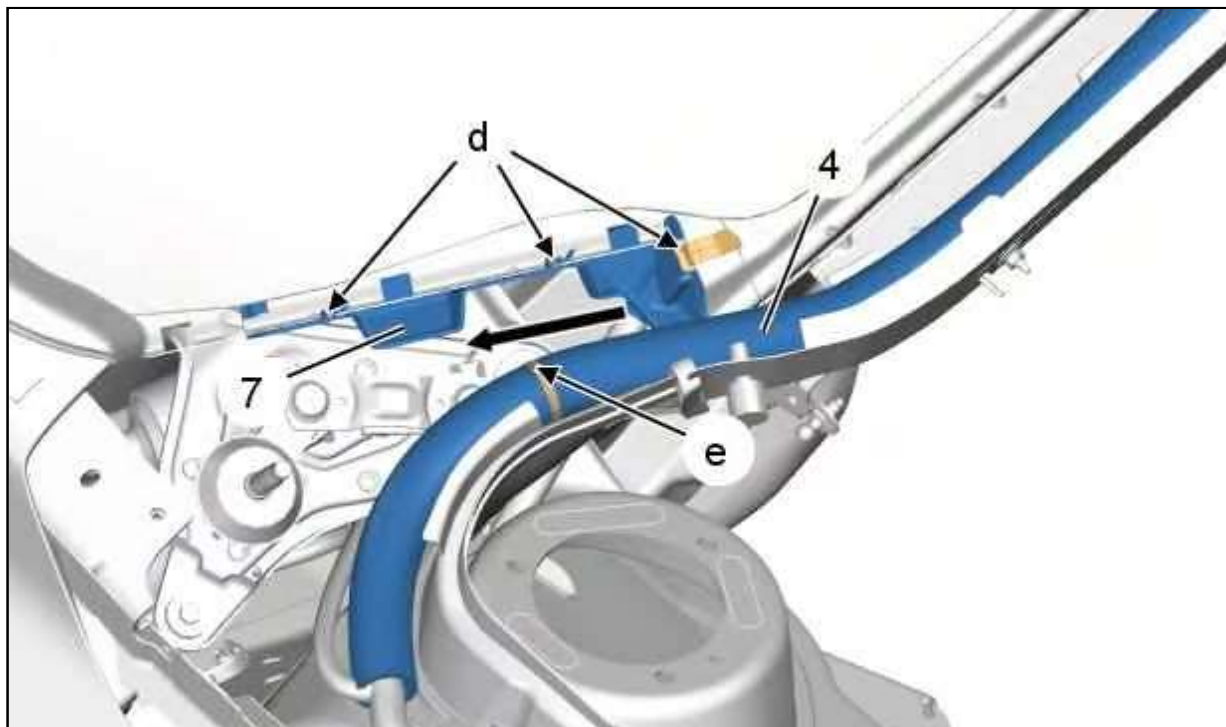


Figure : C5DGY8XD

Remove the scuttle grill ⓘ

Unclip the electrical harness (4) (at "e") ; Using tool [1350-ZZ].
Release the trim (7) (at "d") (Following the arrow).
Remove the trim (7).

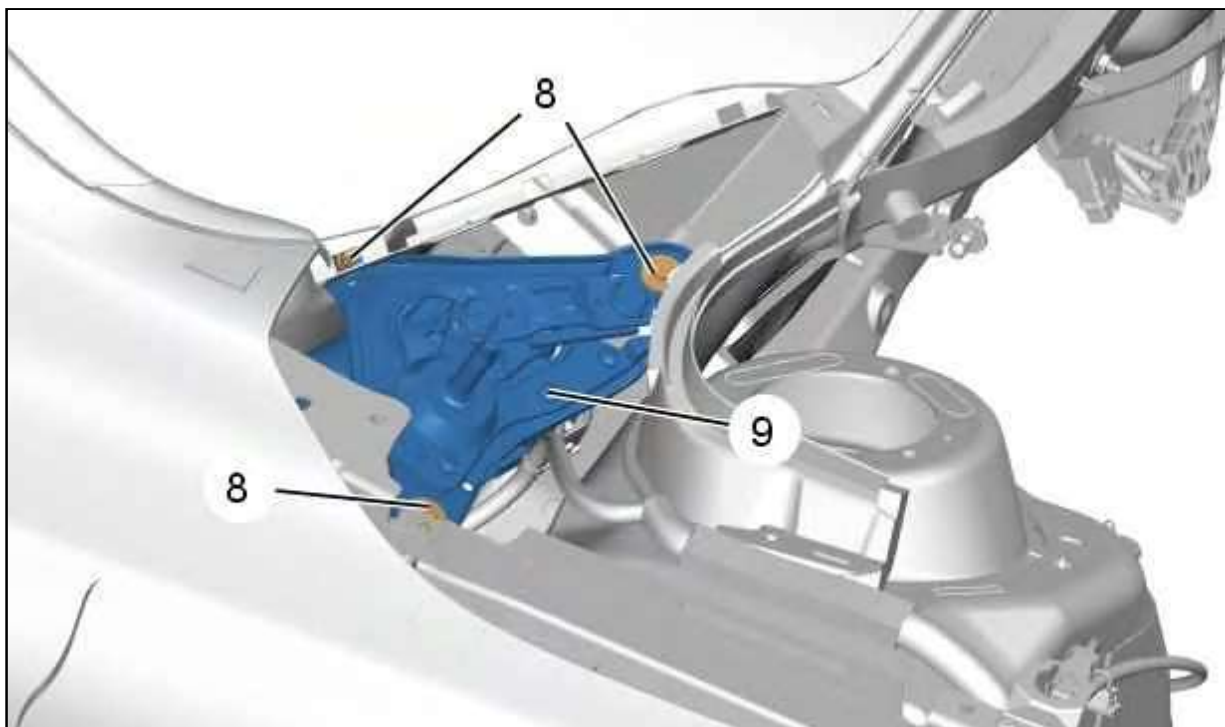


Figure : C5DGY8YD

Remove the bolts (8).
Disengage the wiper mechanism (9).

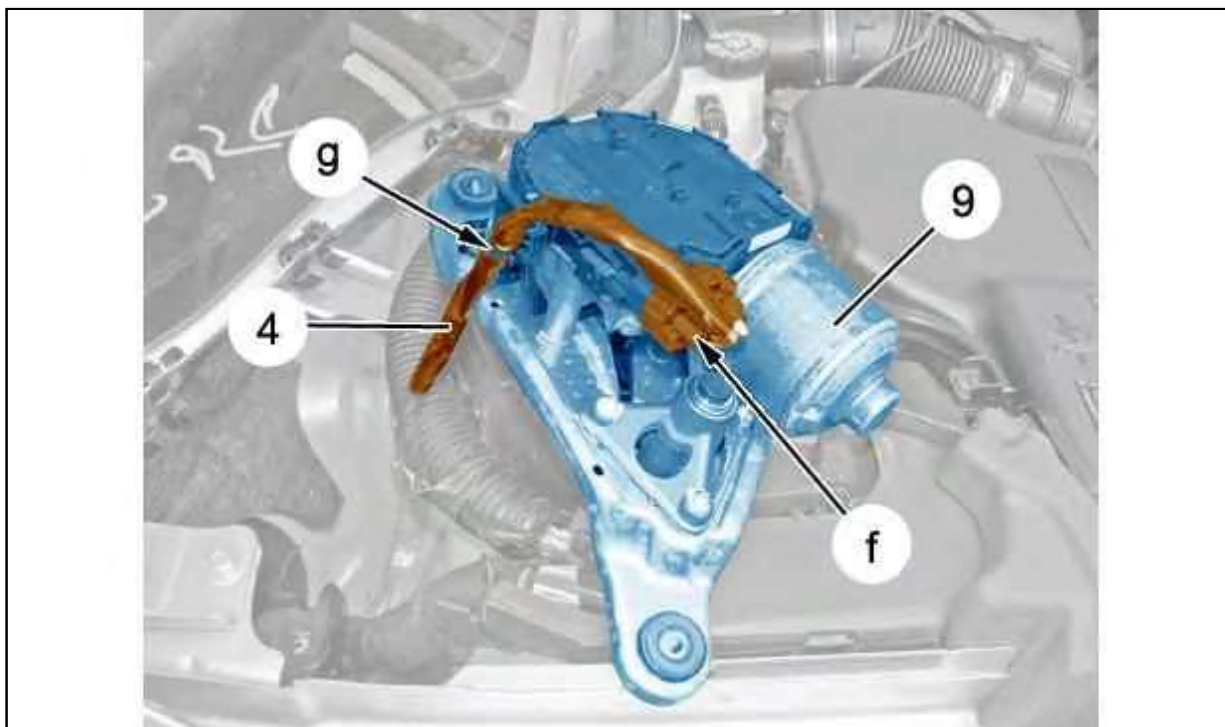


Figure : C5DGY91D

Disconnect the connector (at "f").
Unclip the electrical harness (4) (at "g") ; Using tool [1350-ZZ].

Remove the wiper mechanism (9).

3. Refitting

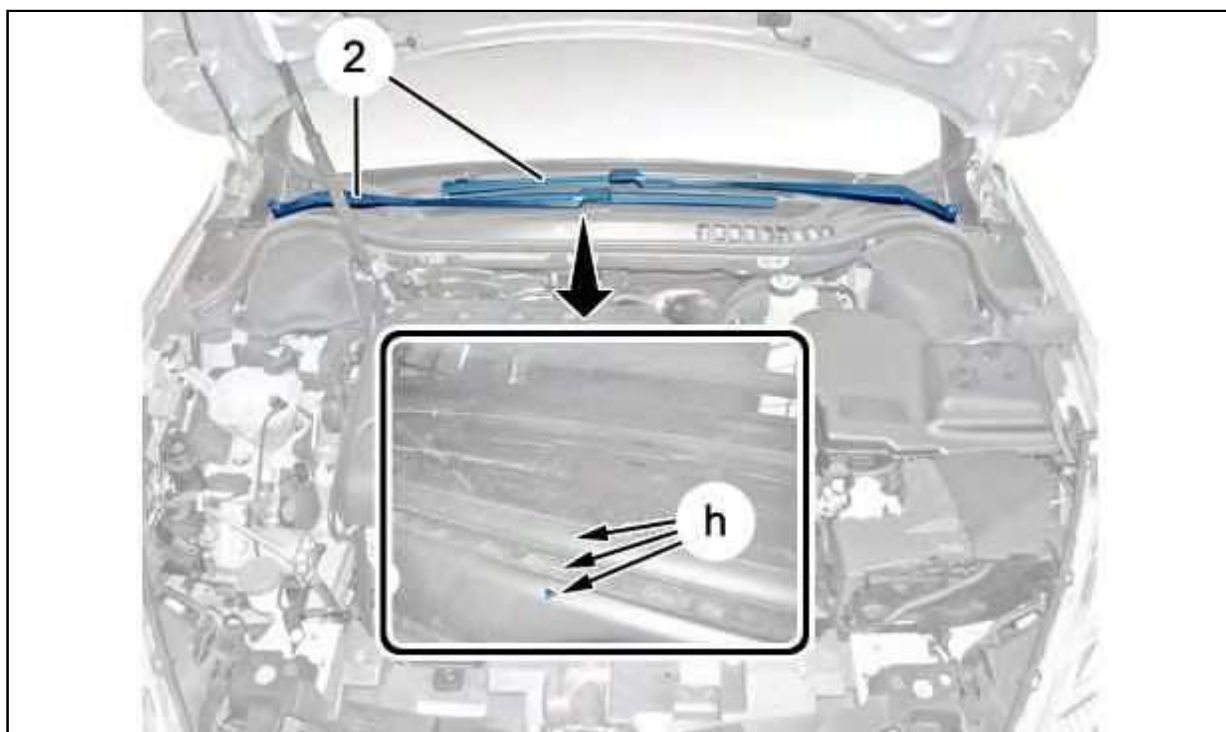


Figure : B1BG225D

CAUTION : Before tightening the windscreen wiper arms (2), operate the wipers ; Place the wipers control in the off position.

CAUTION : Fit : The windscreen wiper arms (2) (In accordance with the marks on the windscreen "h").

Proceed in the reverse order to removal.
Reconnect the battery.
Check all the equipment works.