# TYTAN®I

## D01 - Fuse-switch-disconnector

High Safety

### Flashing Indicator
### MCB - Switch - compatible
### Universal - Fuse Plug with Adapter Disc

**for: D01 - Fuse links 2...16A DIN 49522**
**with: Universal - fuse plug and adapter disc**
**400V~, AC22B, 16A, 50kA, Terminal: 1,5...25mm²**
**feed in from both sides**

**Technical Data**

| | |
|---|---|
| **General** | |
| Classification | Fuse-switch-disconnector |
| Regulation | DIN VDE 0660 part 107, EN 60947, IEC 60947-3<br>DIN VDE 0636 part 41, IEC 60269-3<br>DIN VDE 0638, DIN VDE 43880 |
| Poles | single, double or triple pole and with switchable neutral |
| Handling | plug in technique without screw cap |
| Suitable for fuses gL, gG, aM | D01: 2, 4, 6, 10 and 16 |
| Ambient air temperature | |
| -Storage min/max | -25°C/+100°C |
| -Operation min/max | -25°C/+60°C |
| Temperature of the fuse link housing | max +190°C |
| Insulating parts | synthetic material free of halogen, phosphorus and silicone |
| Fire classification / creep resistance | UL94/V0, filament test 960°C/CTI 600 |
| Protection / contact-voltage protection | IP 20/finger and backhand protection |
| **Power bars** | |
| Rated operation voltage $U_e$ | |
| -AC | 400V |
| -DC | single pole up to 110V, double pole up to 220V |
| Rated operation current $I_e$ | 16A |
| Rated constant current $I_u$ | 16A |
| Overvoltage category / Pollution degree | IV/3 (DIN VDE 0110) |
| Rated surge capacity $U_{imp}$ | 6000V |
| Rated special voltage AC | 440V, only for use with 440V fuse links |
| max. Heating at $I_u$ and room temperature | ca.25°C/ handling with fuse plugs ca.30°C |
| **Connection technique** | Terminal cage |
| Connectable solid wire | 1,5...25mm² |
| Torque $M_D$ M6 Pozidriv | 2,5 Nm |
| **Switching capacity** | |
| Rated short circuit making capacity $I_{cm}$ | $50kA_{eff}$ |
| Switching categorie | AC 22B |
| **Special performances** | |
| Fault signal | reliable by optoelectronic flashing indicator |
| Feed in | both sides |
| Adapter disc | adjustable amperage coding in the switch |
| Coding spring | automatic amperage coding in the plug |

Graphic Symbols

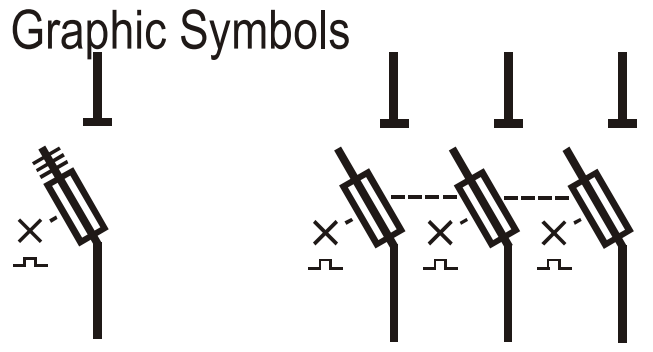

Single pole      All-pole

R0

SERVODAN | niko

# TYTAN® I

## D01 - Fuse-switch-disconnector

High Safety

**Flashing Indicator**
**MCB - Switch - compatible**
**Universal - Fuse Plug with Adapter Disc**

**For: D01 - Fuse links 2...16A DIN 49522**
**with: Universal - fuse plug and adapter disc**
**400V~, AC22B, 16A, 50kA**
**feed in from both sides, Terminal: 1,5...25mm²**

Item

**TYTAN I**
**D01 - switch-disconnector with fuse plug,**
**to be equipped with**
**D01 - fuse links**
**1 … 16A**

single pole
double pole
triple pole

**with switchable neutral**

single pole+N
triple pole+N

**Wiring Bars 16mm²**
1- to 4-phases, IEC 664, UL94-V0
1-phase 70A, 2- to 4-phases 125A 30kA
Flexible: only 3 standard lenghts for
each wiring lenght required
no cutting, no aligning or filing,
no end coverings, at least 30% less working time



12 X 1-phase
6 X 2-phases
4 X 3-phases
3 X 4-phases

Further combinations on request

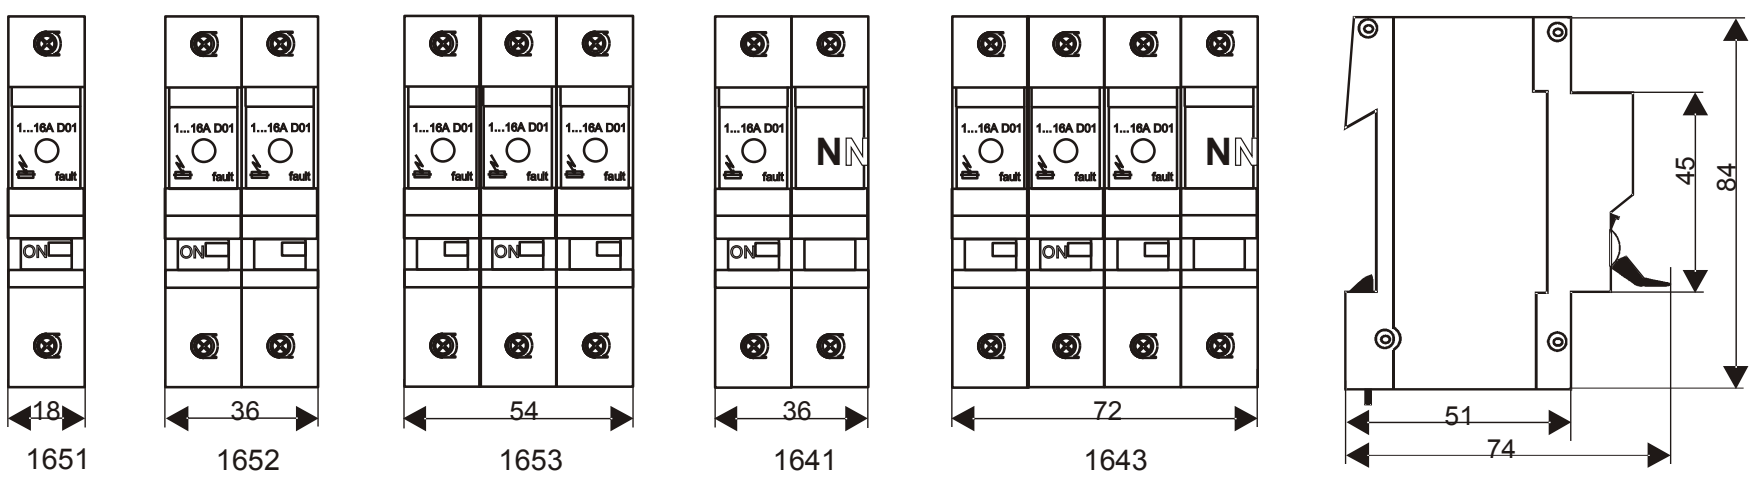


1651 1652 1653 1641 1643

1633

Above mentioned recommended prices are without the current VAT.
Values, Weights and measurements are subject to change.

R0

# TYTAN® I

## D01 - Fuse-switch-disconnector

High Safety

### Fuse Plug

The fuse plug protects the operator.

A fuse link to replace: it can reach a temperature of 100°C and with this device a finger contact is avoided.

### Flashing Indicator

This optoelectronic device flashes in case of fuse link failure.
The immediate error message replaces the unreliable mechanical indicator.

Thanks to this new technology the important protecting insulation ▢ remains intact, as the inspection hole is no longer necessary.

### Automatc Coding

**TYTAN I** arranges the coding of the fuse link nominal current mechanically.
The system can cope with different amperages using one fuse only.

The coding of the maximal nominal current to be applied on the fuse link in the switch is executed by a skilled worker adjusting the adapter disc.

+

By inserting the fuse link into the plug the code spring is led out according to the nominal current value.

0401 006

R0

# TYTAN I - Stromwärmeverluste

**bei Einsatz handelsüblicher D01 - Sicherungseinsätze ( 2 - 16 Ampere ) - Markenfabrikate**
**Stand 2005**

## 2A

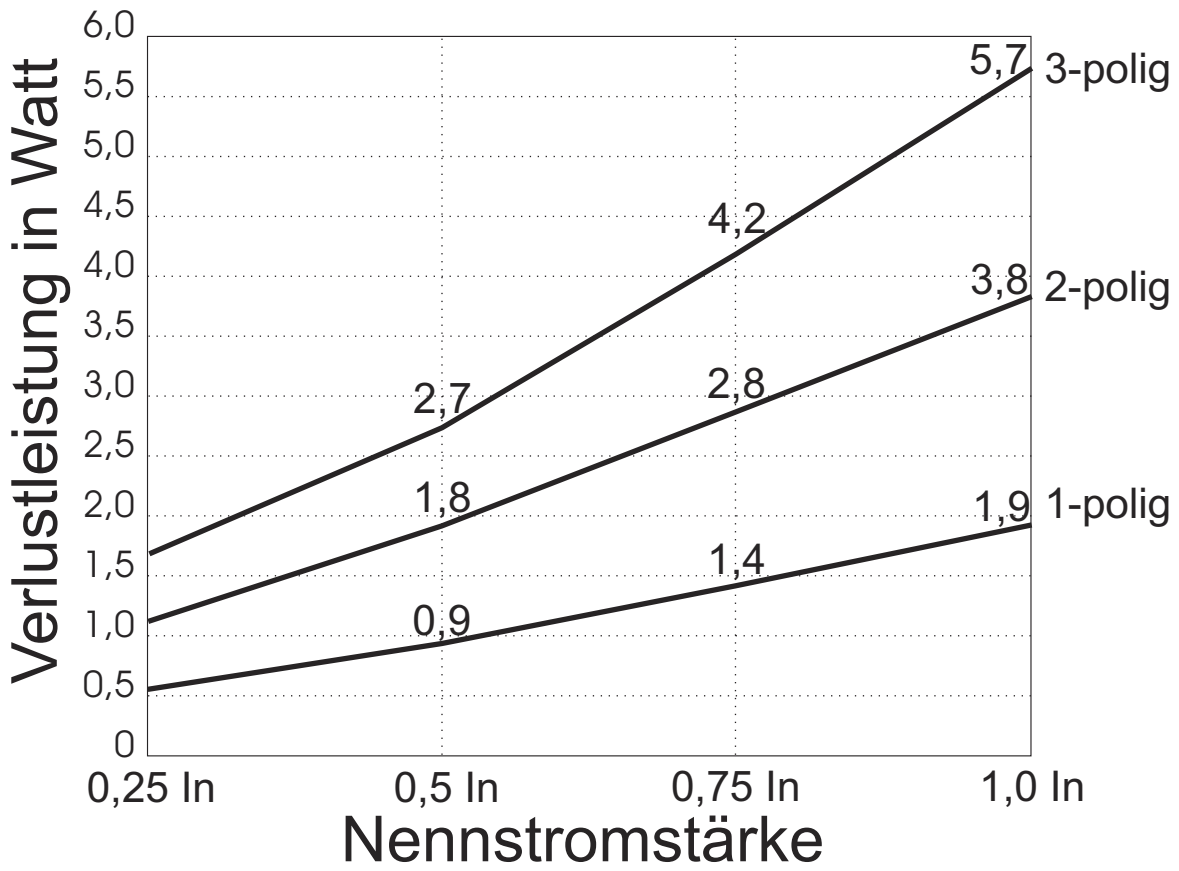


## 4A

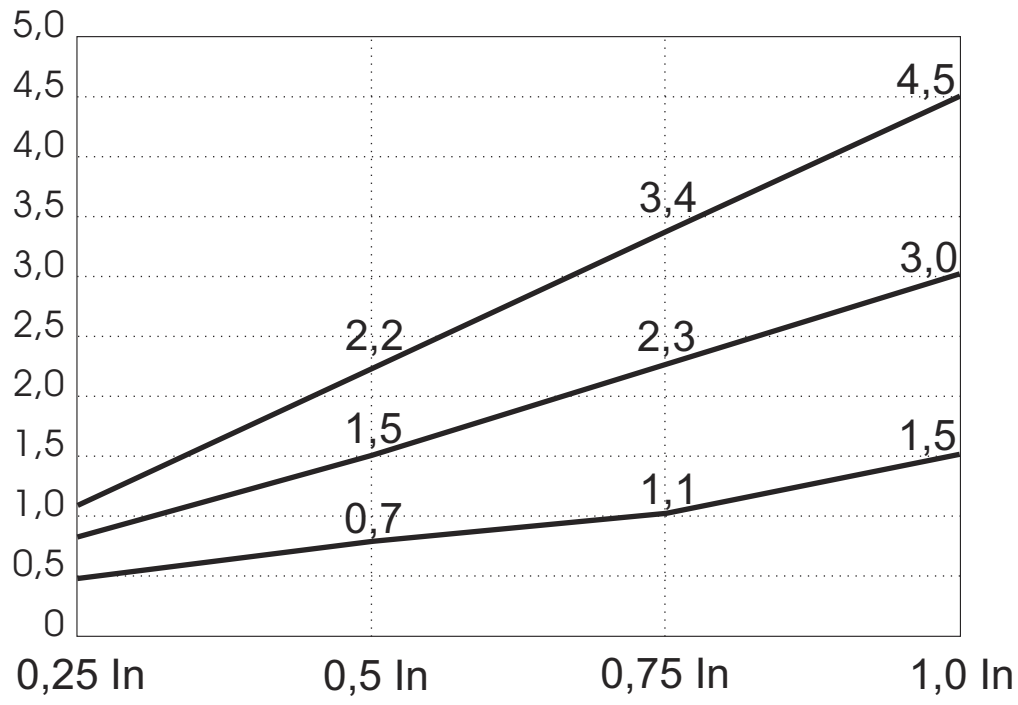


## 6A

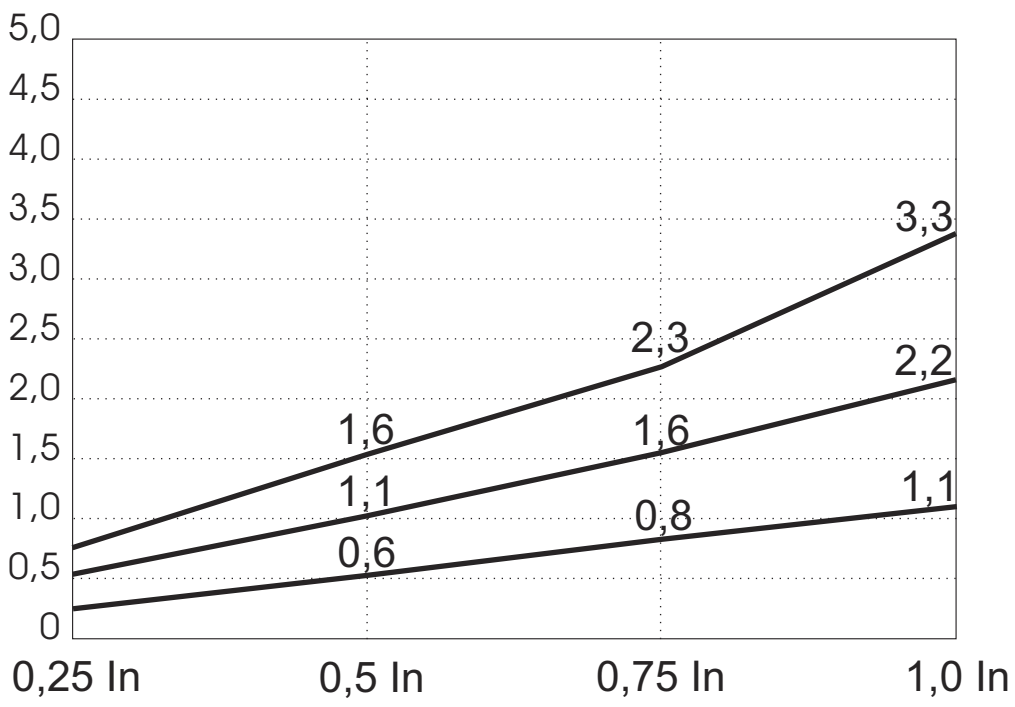


## 10A

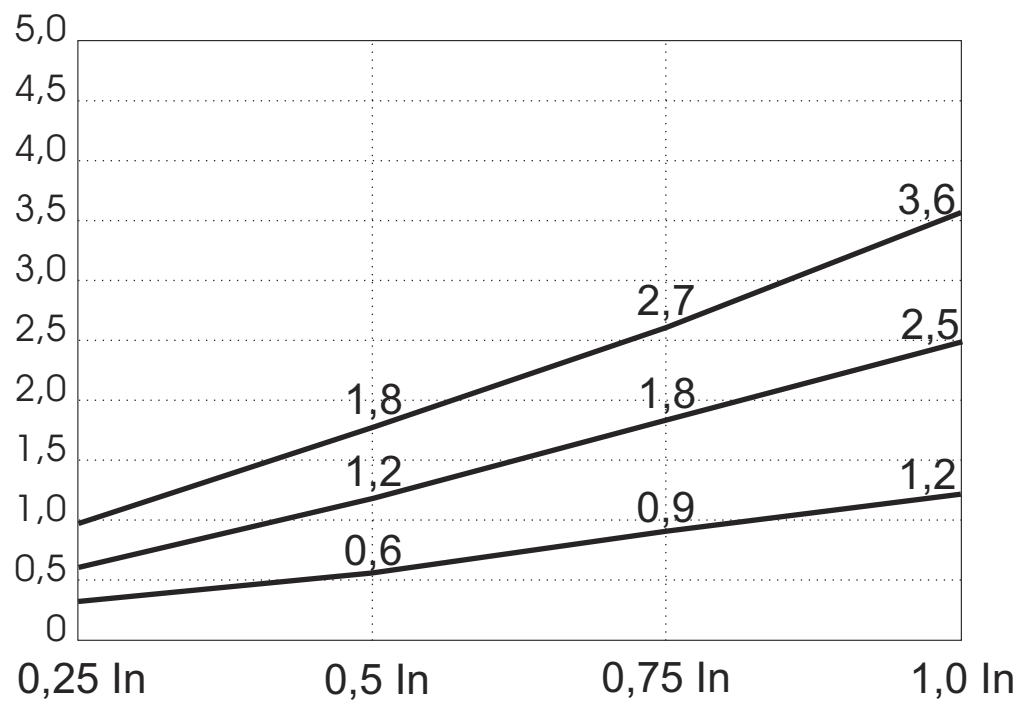


## 13A

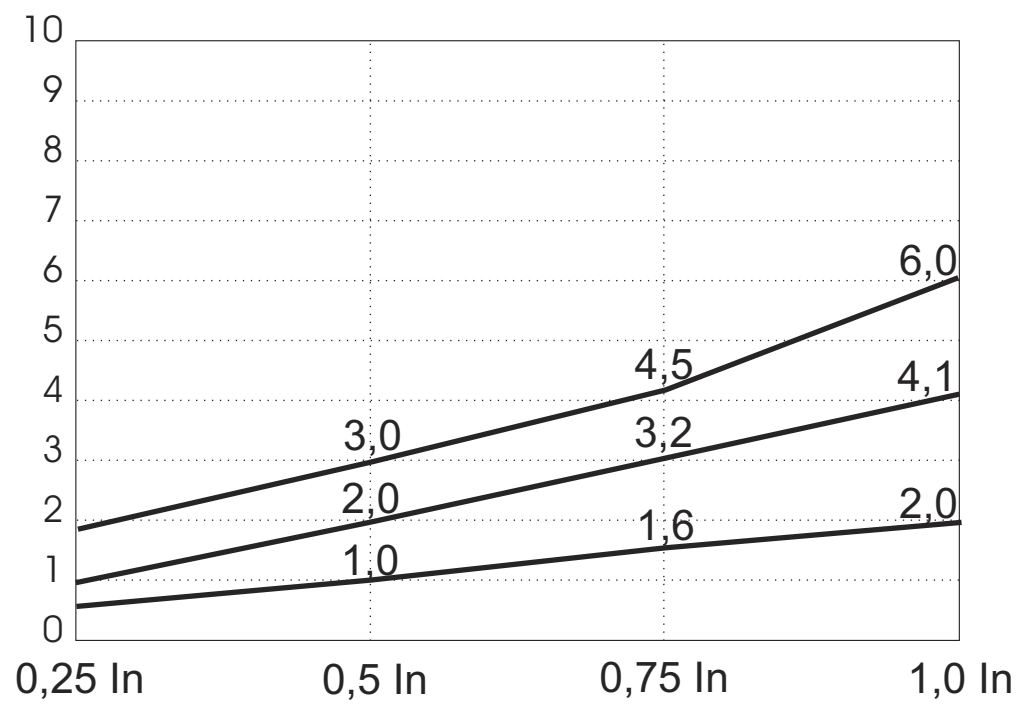


## 16A

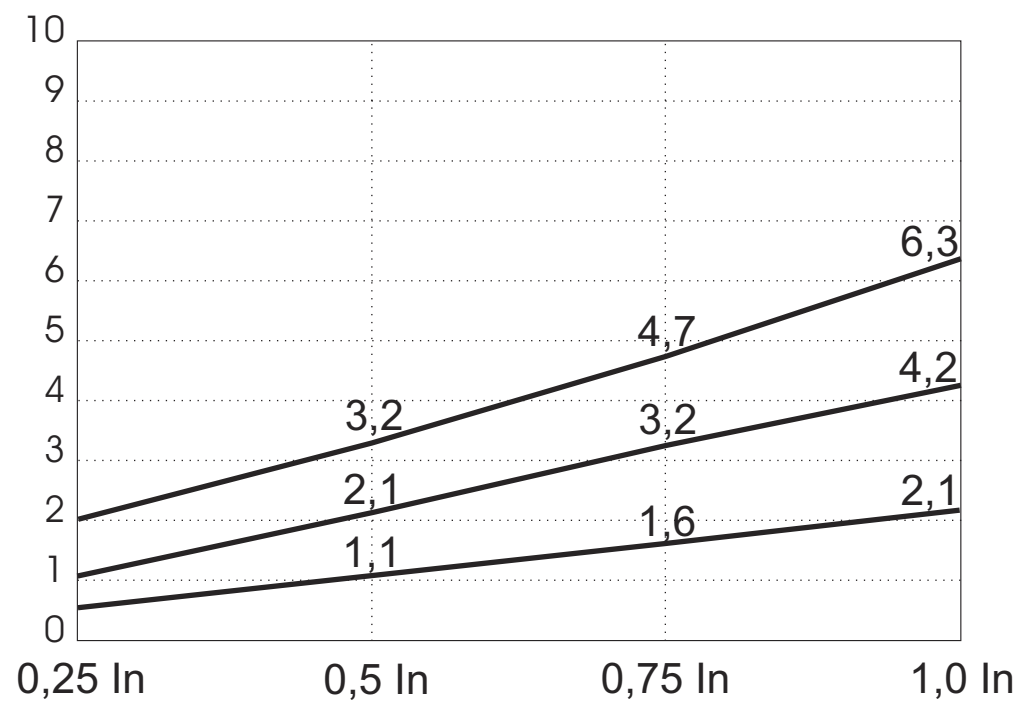


R0