

XTENDER HRC 500/510 Position Couplers



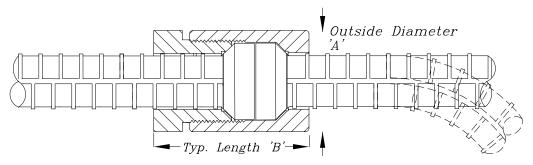

Position/Transition Nuts *

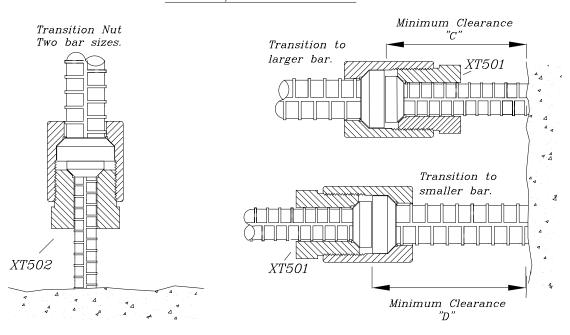

* Note: Transition Male Couplers up to five (5) sizes down are also available

510	#4	#13	#5	,	#16	#6	#19	#	¥7		#22	#8	3	#25	#	9	#29	#1	10	#32	#1	1	#36	#14	#43
Dimensions	in.	mm	in.		mm	in.	mm	ı li	n.	:	mm	in		mm	ir	n.	mm	in	١.	mm	in.	. :	mm	in.	mm
A. Coupler OD	1 3	3/8 35	1	1/2	38	1	5/8 41	. 1	. 7	7/8	48	2	1/8	54	2	3/8	60	2	5/8	67	2	7/8	73	3 1/3	2 89
B. Coupler length	2	51	2	1/8	54	2	3/8 60) 2	2 '	7/8	73	3	1/8	79	3	1/2	89	3	3/4	95	4	1/4	108	5 1/8	3 130
C. Male Clearance	5 1	1/4 133	5	1/4	133	5	1/4 133	3 5	5 ;	3/4	146	6	1/4	159	8		203	8	1/4	210	8	1/2	216	10	254
D. F/M Clearance	6	153	6	1/4	157	6	3/8161	. 7	7 :	1/8	180	7	7/8	199	9	3/4	248	10	3/8	262	10	3/4	273	12 7/	8 326
E. Min. Torque (lb-ft.)		100		100		150			150			150			250			250			250		250		



11200 Condor Avenue • Fountain Valley, CA 92708 Tel: (714) 557-1455 • Fax: (714) 557-4460