


UART debug messages available via a USB port and a 3 pin jumper for TX, RX, and GND UART connections




Size: A4

Date:

KiCad E.D.A. 10.0.4


Rev:

Id: 2/5

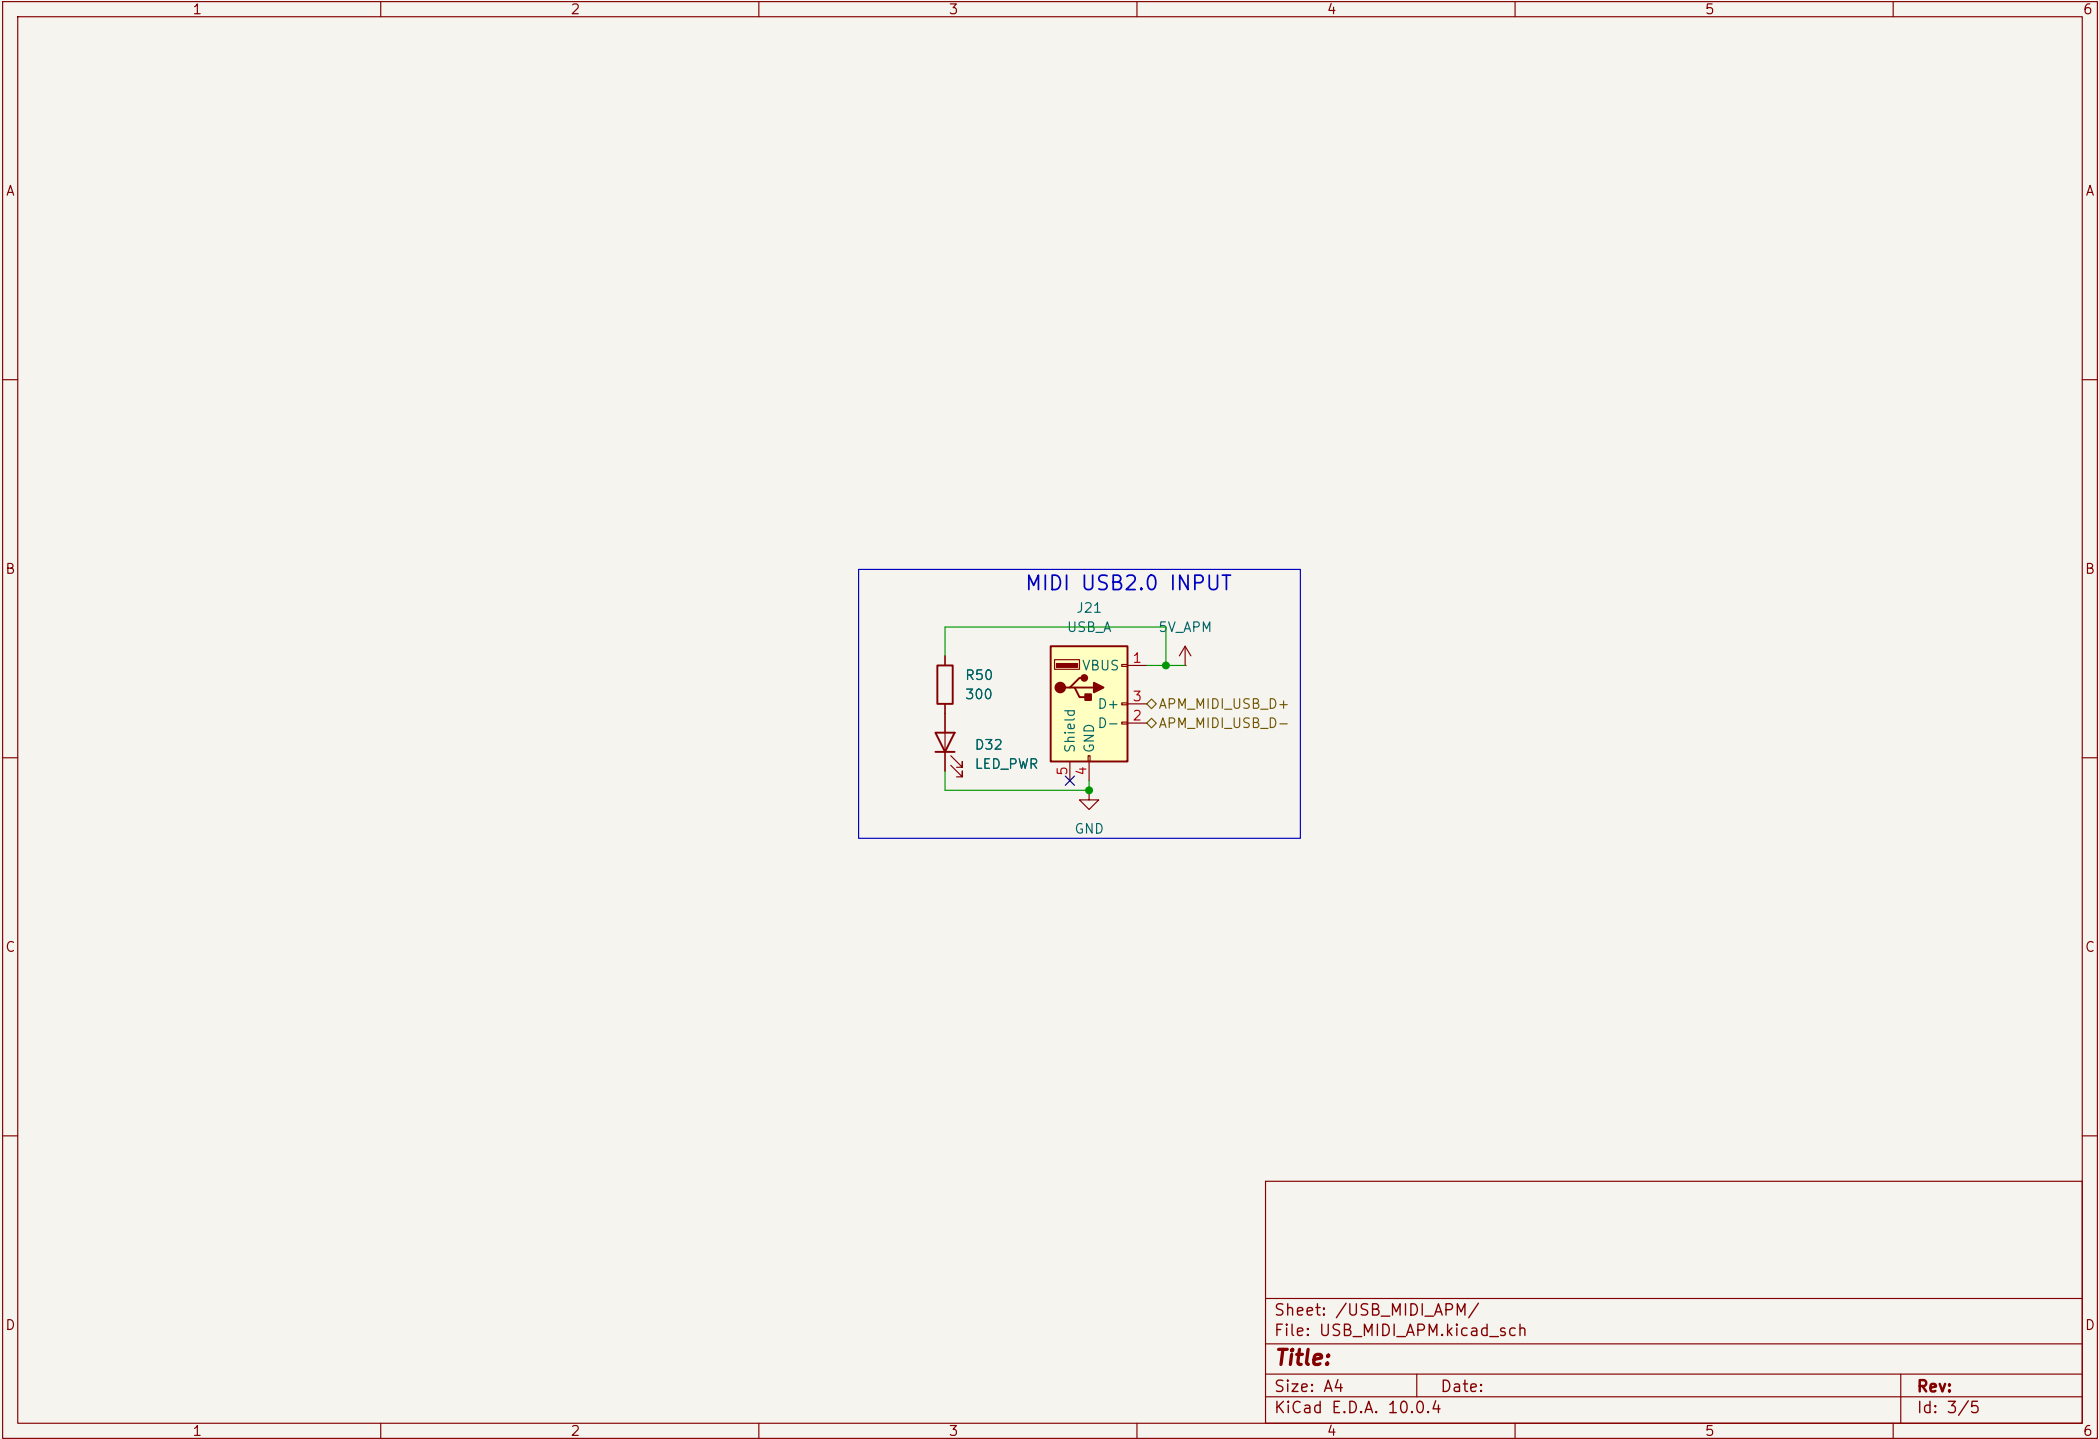


Power Monitor and Supply

PMS has an INA219 current sensor
for each board/node in the
PCB. Each takes in the 5V from it's
parent board and supplies 5V to said
board's circuit (its peripherals)
thus enabling monitoring

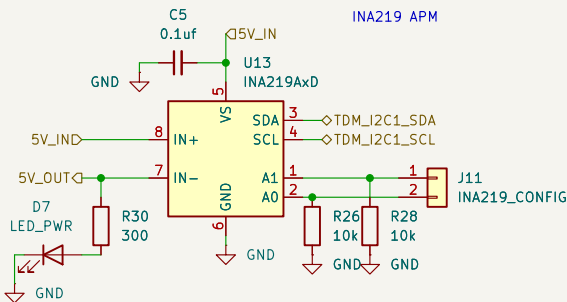

Sheet: /PMS_APM/ File: PMS_APM.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.4		Id: 4/5

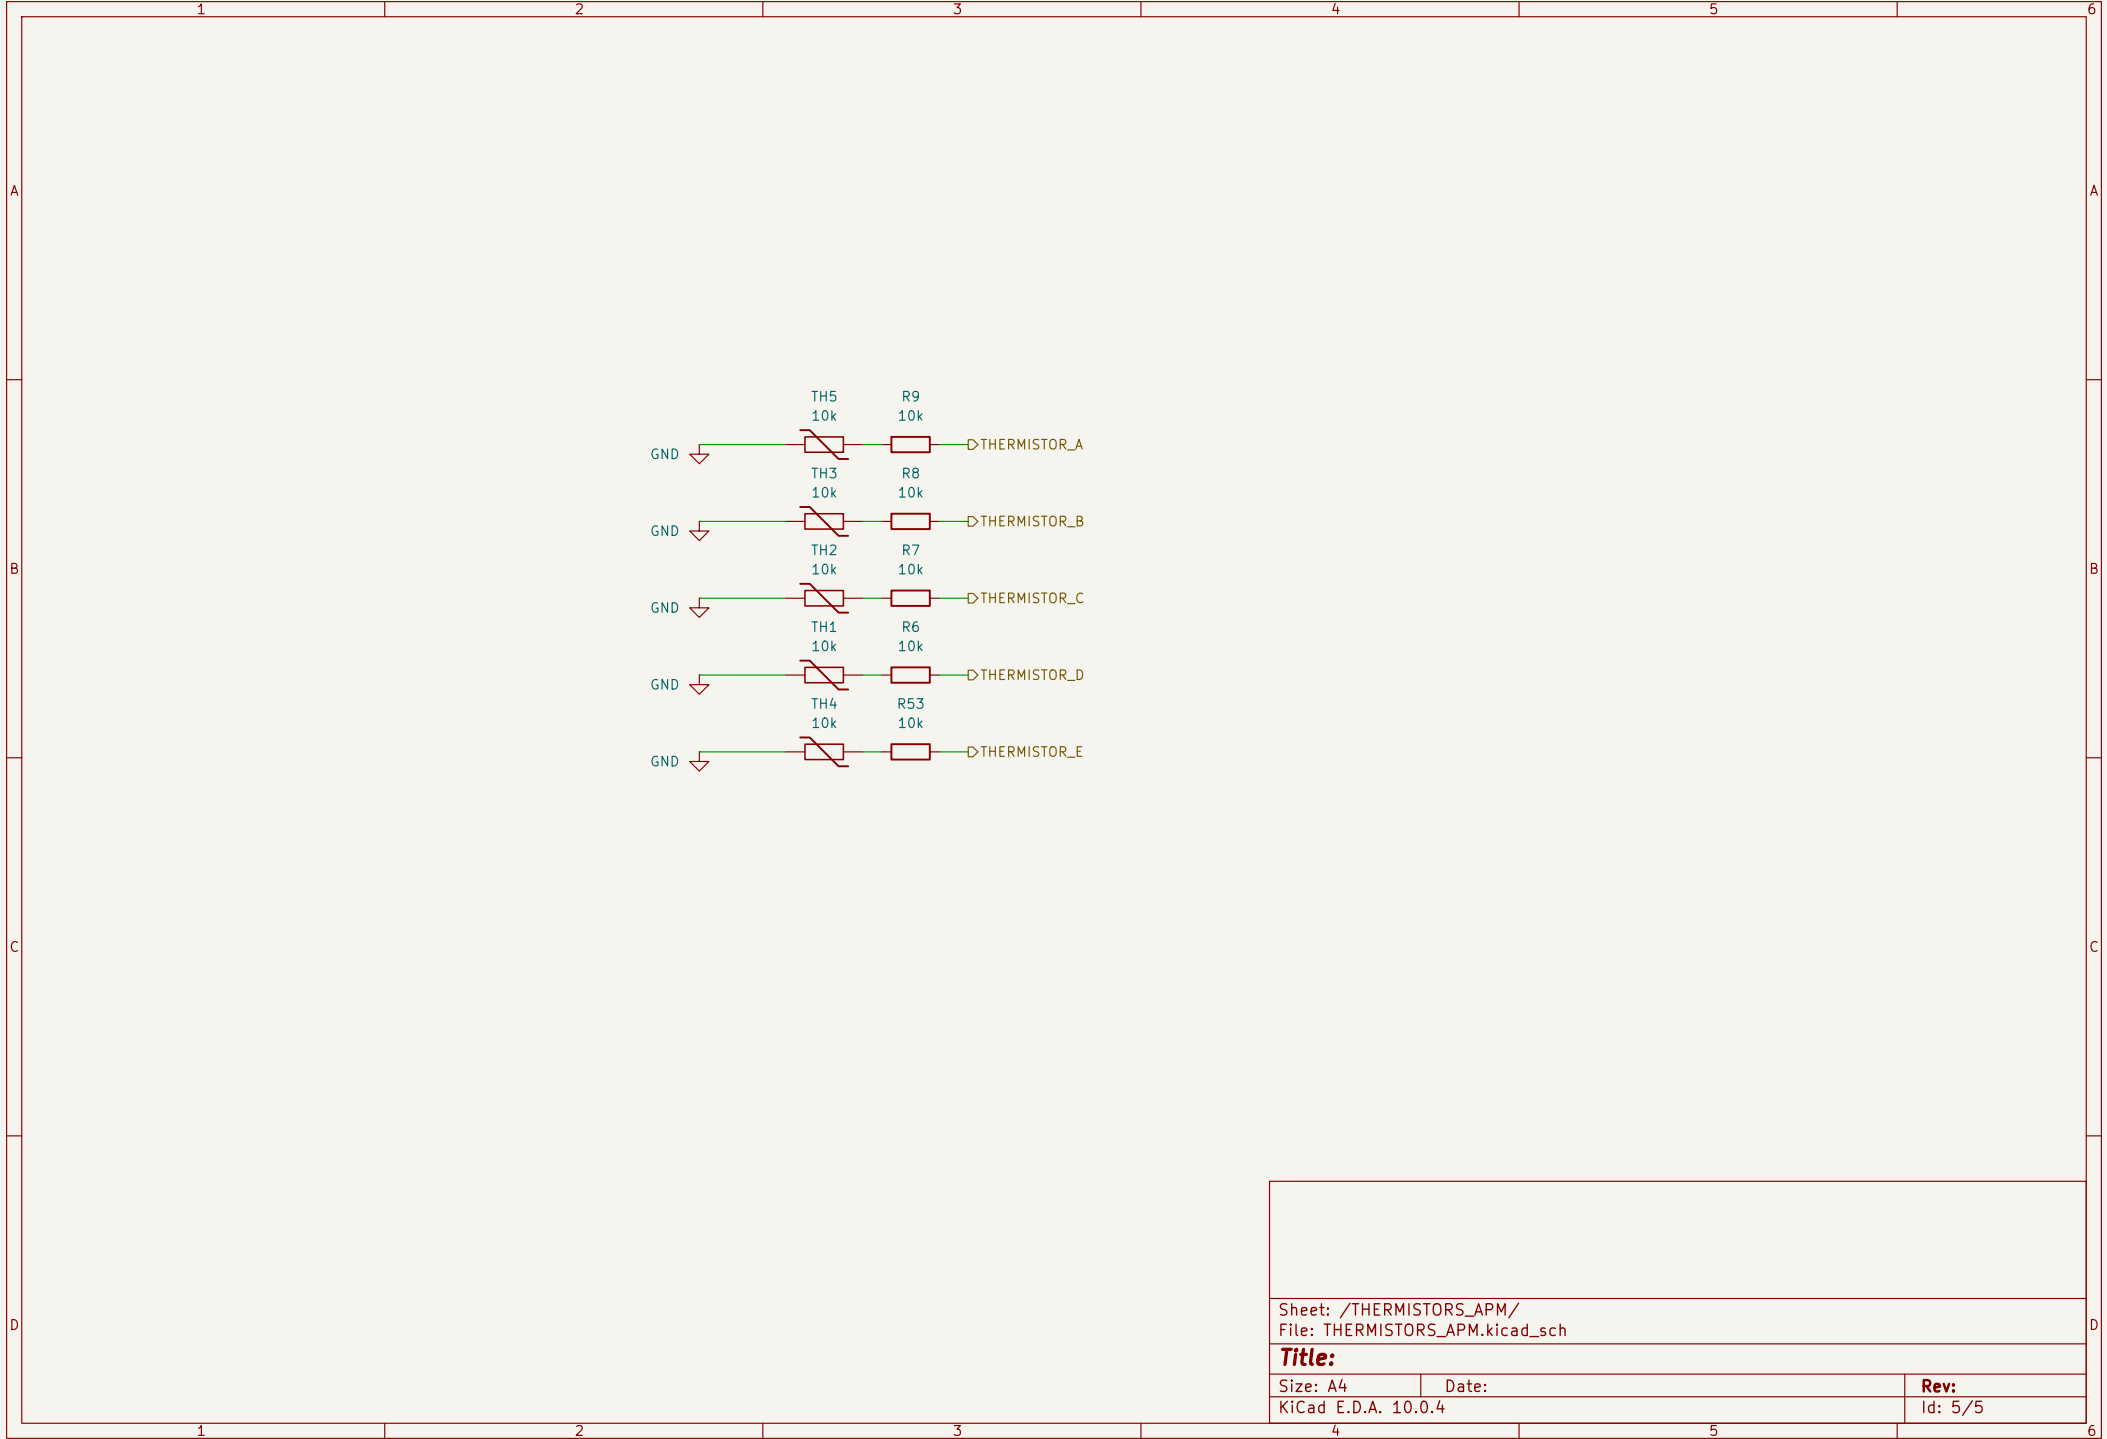

Sheet: /THERMISTORS_APM/ File: THERMISTORS_APM.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.4		Id: 5/5