



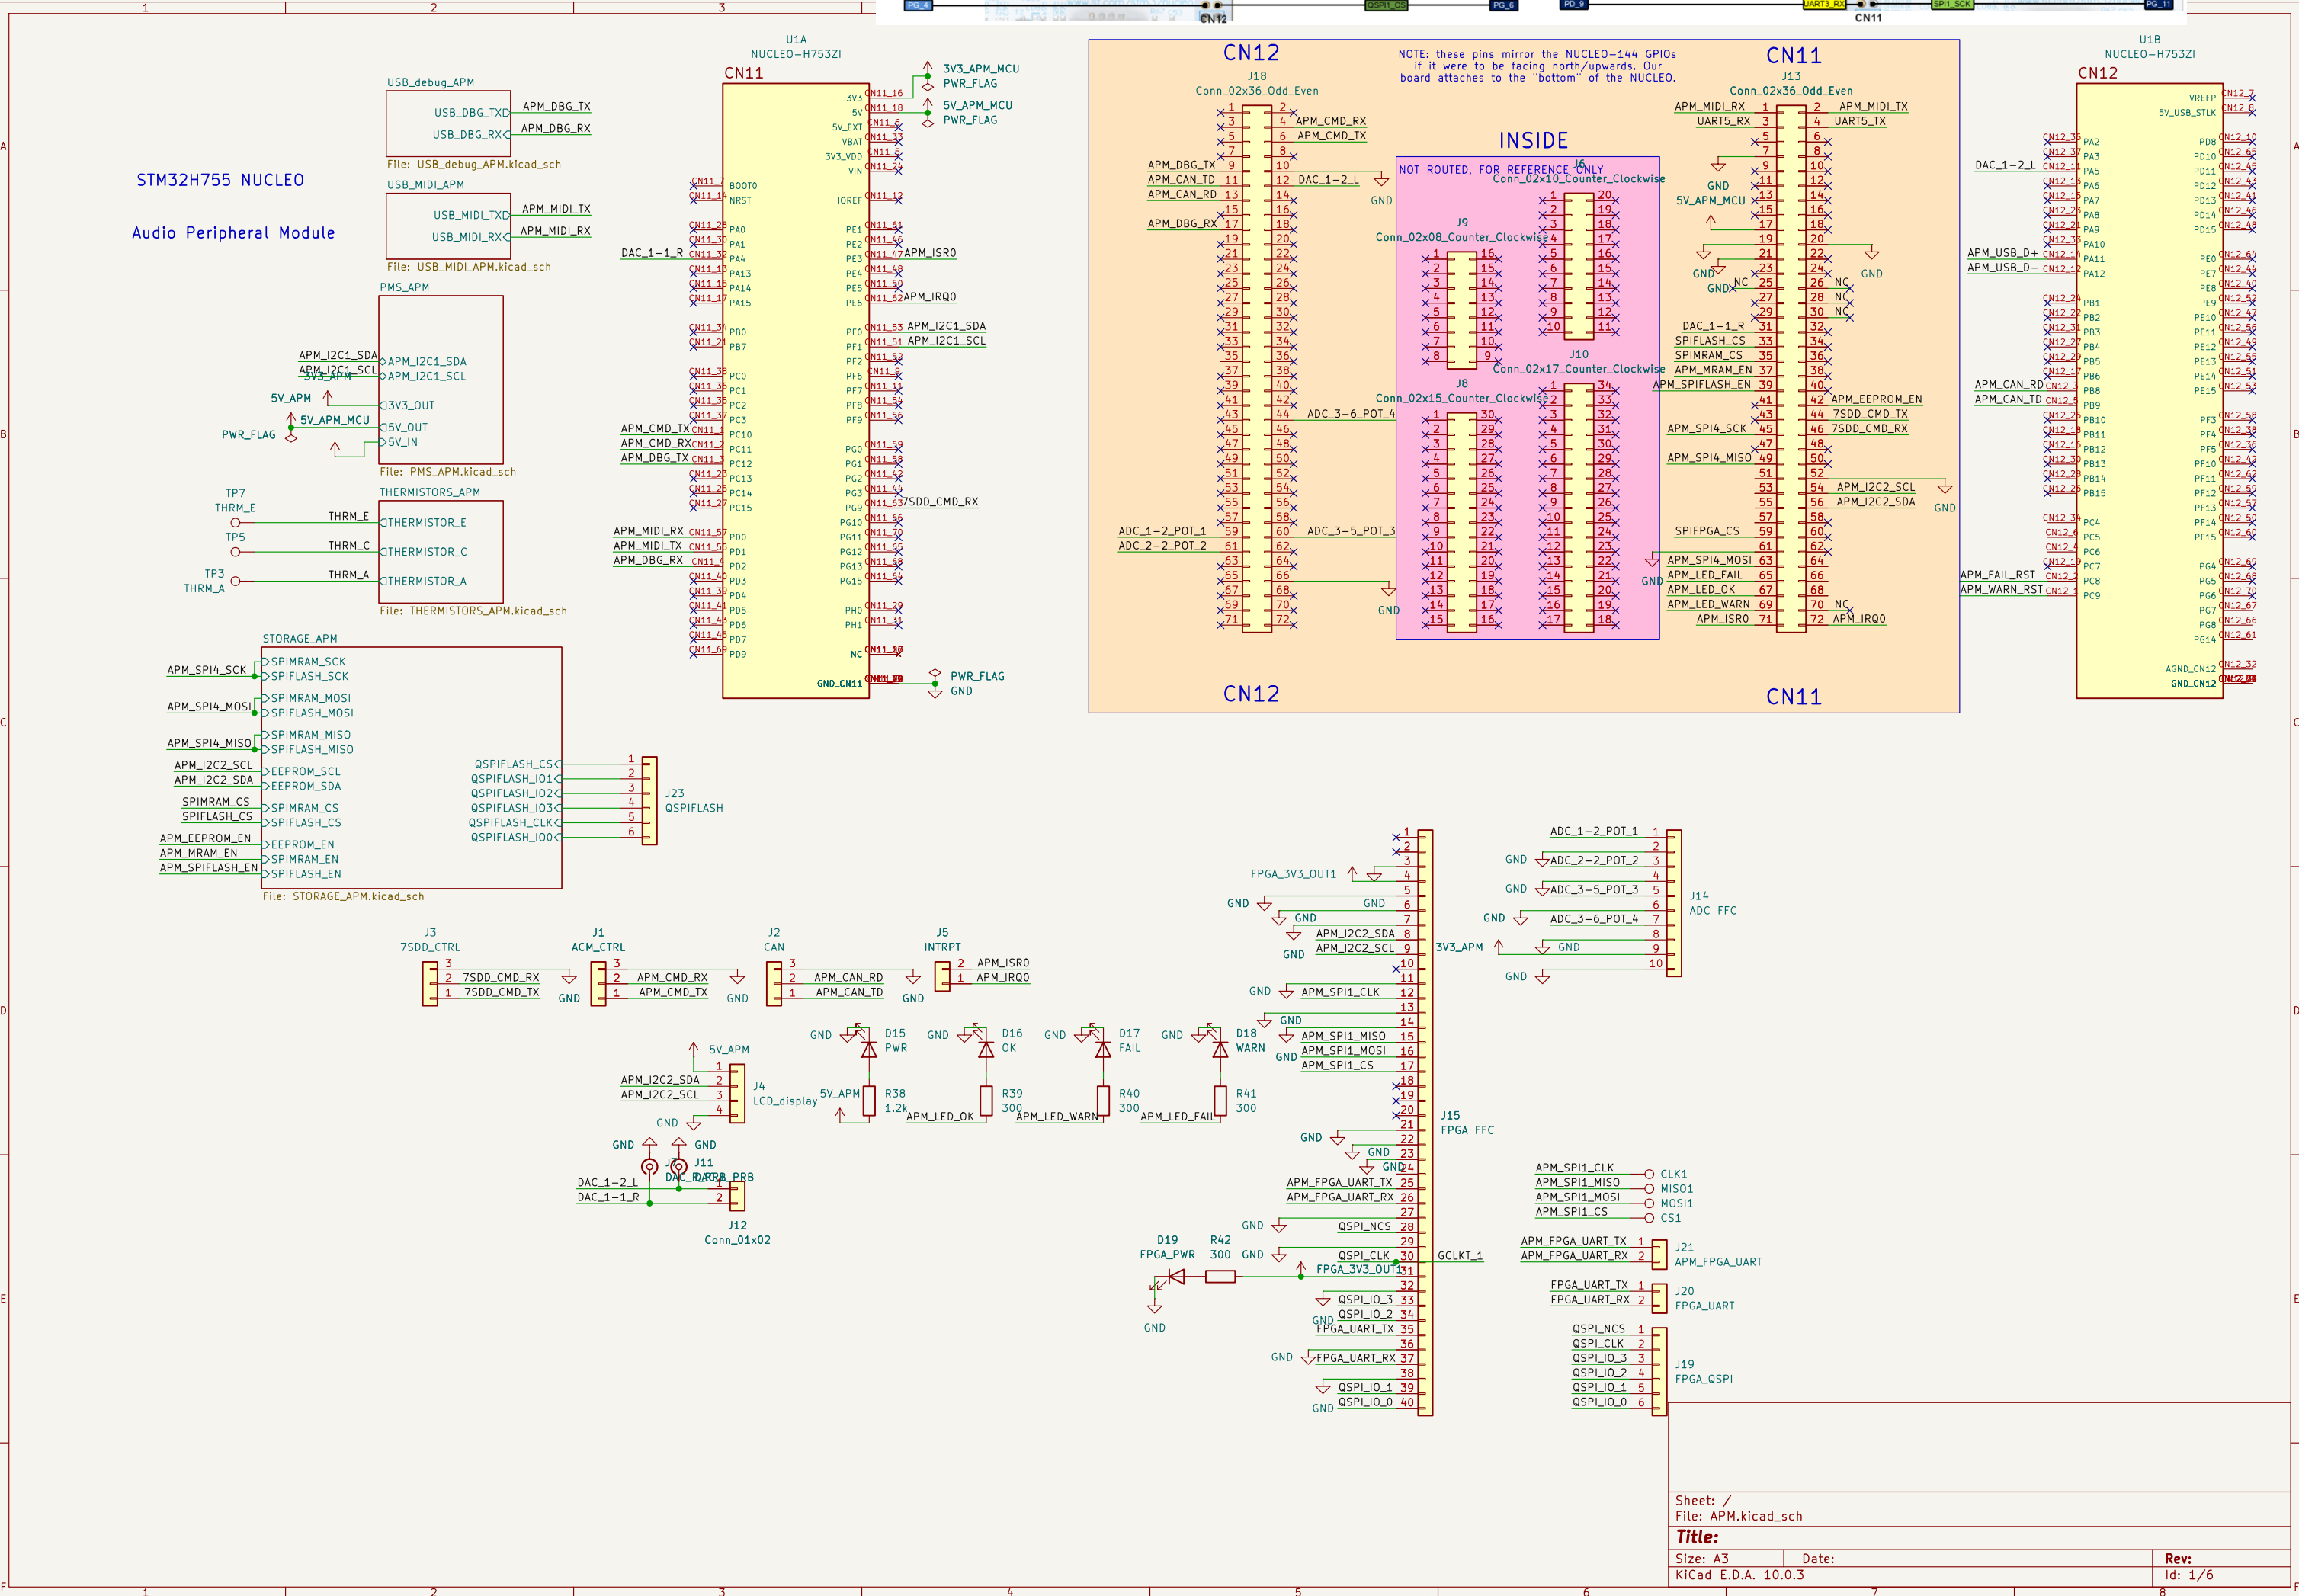

UART debug messages available via a USB port and a 3 pin jumper for TX, RX, and GND UART connections




Size: A4

Date:

SIZE: A1	Scale
KiCad E.D.A. 10.0.3	

Rev:

Id: 2/6

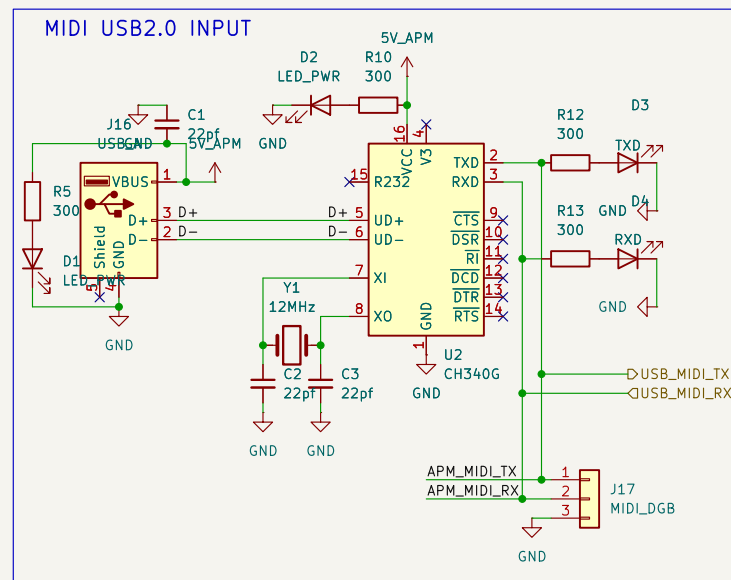

Sheet: /USB_MIDI_APM/
File: USB_MIDI_APM.kicad_sch

Title:


Size: A4
KiCad E.D.A. 10.0.3

Date:

Rev:
Id: 3/6

Power Monitor and Supply

PMS has an INA219 current sensor
for each board/node in the
PCB. Each takes in the 5V from it's
parent board and supplies 5V to said
board's circuit (its peripherals)
thus enabling monitoring

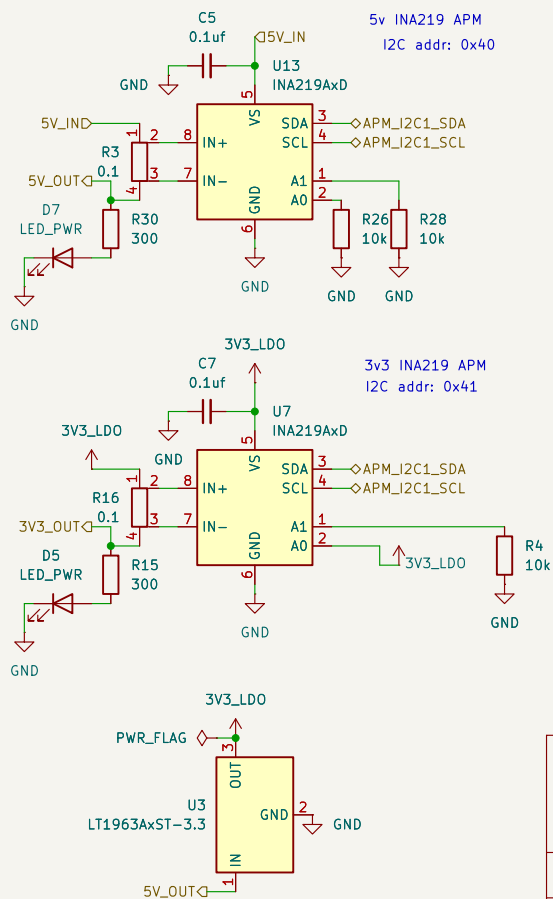

Sheet: /PMS_APM/
File: PMS_APM.kicad_sch

Title:


Size: A4


Date:

KiCad E.D.A. 10.0.3

Rev:

Id: 4/6

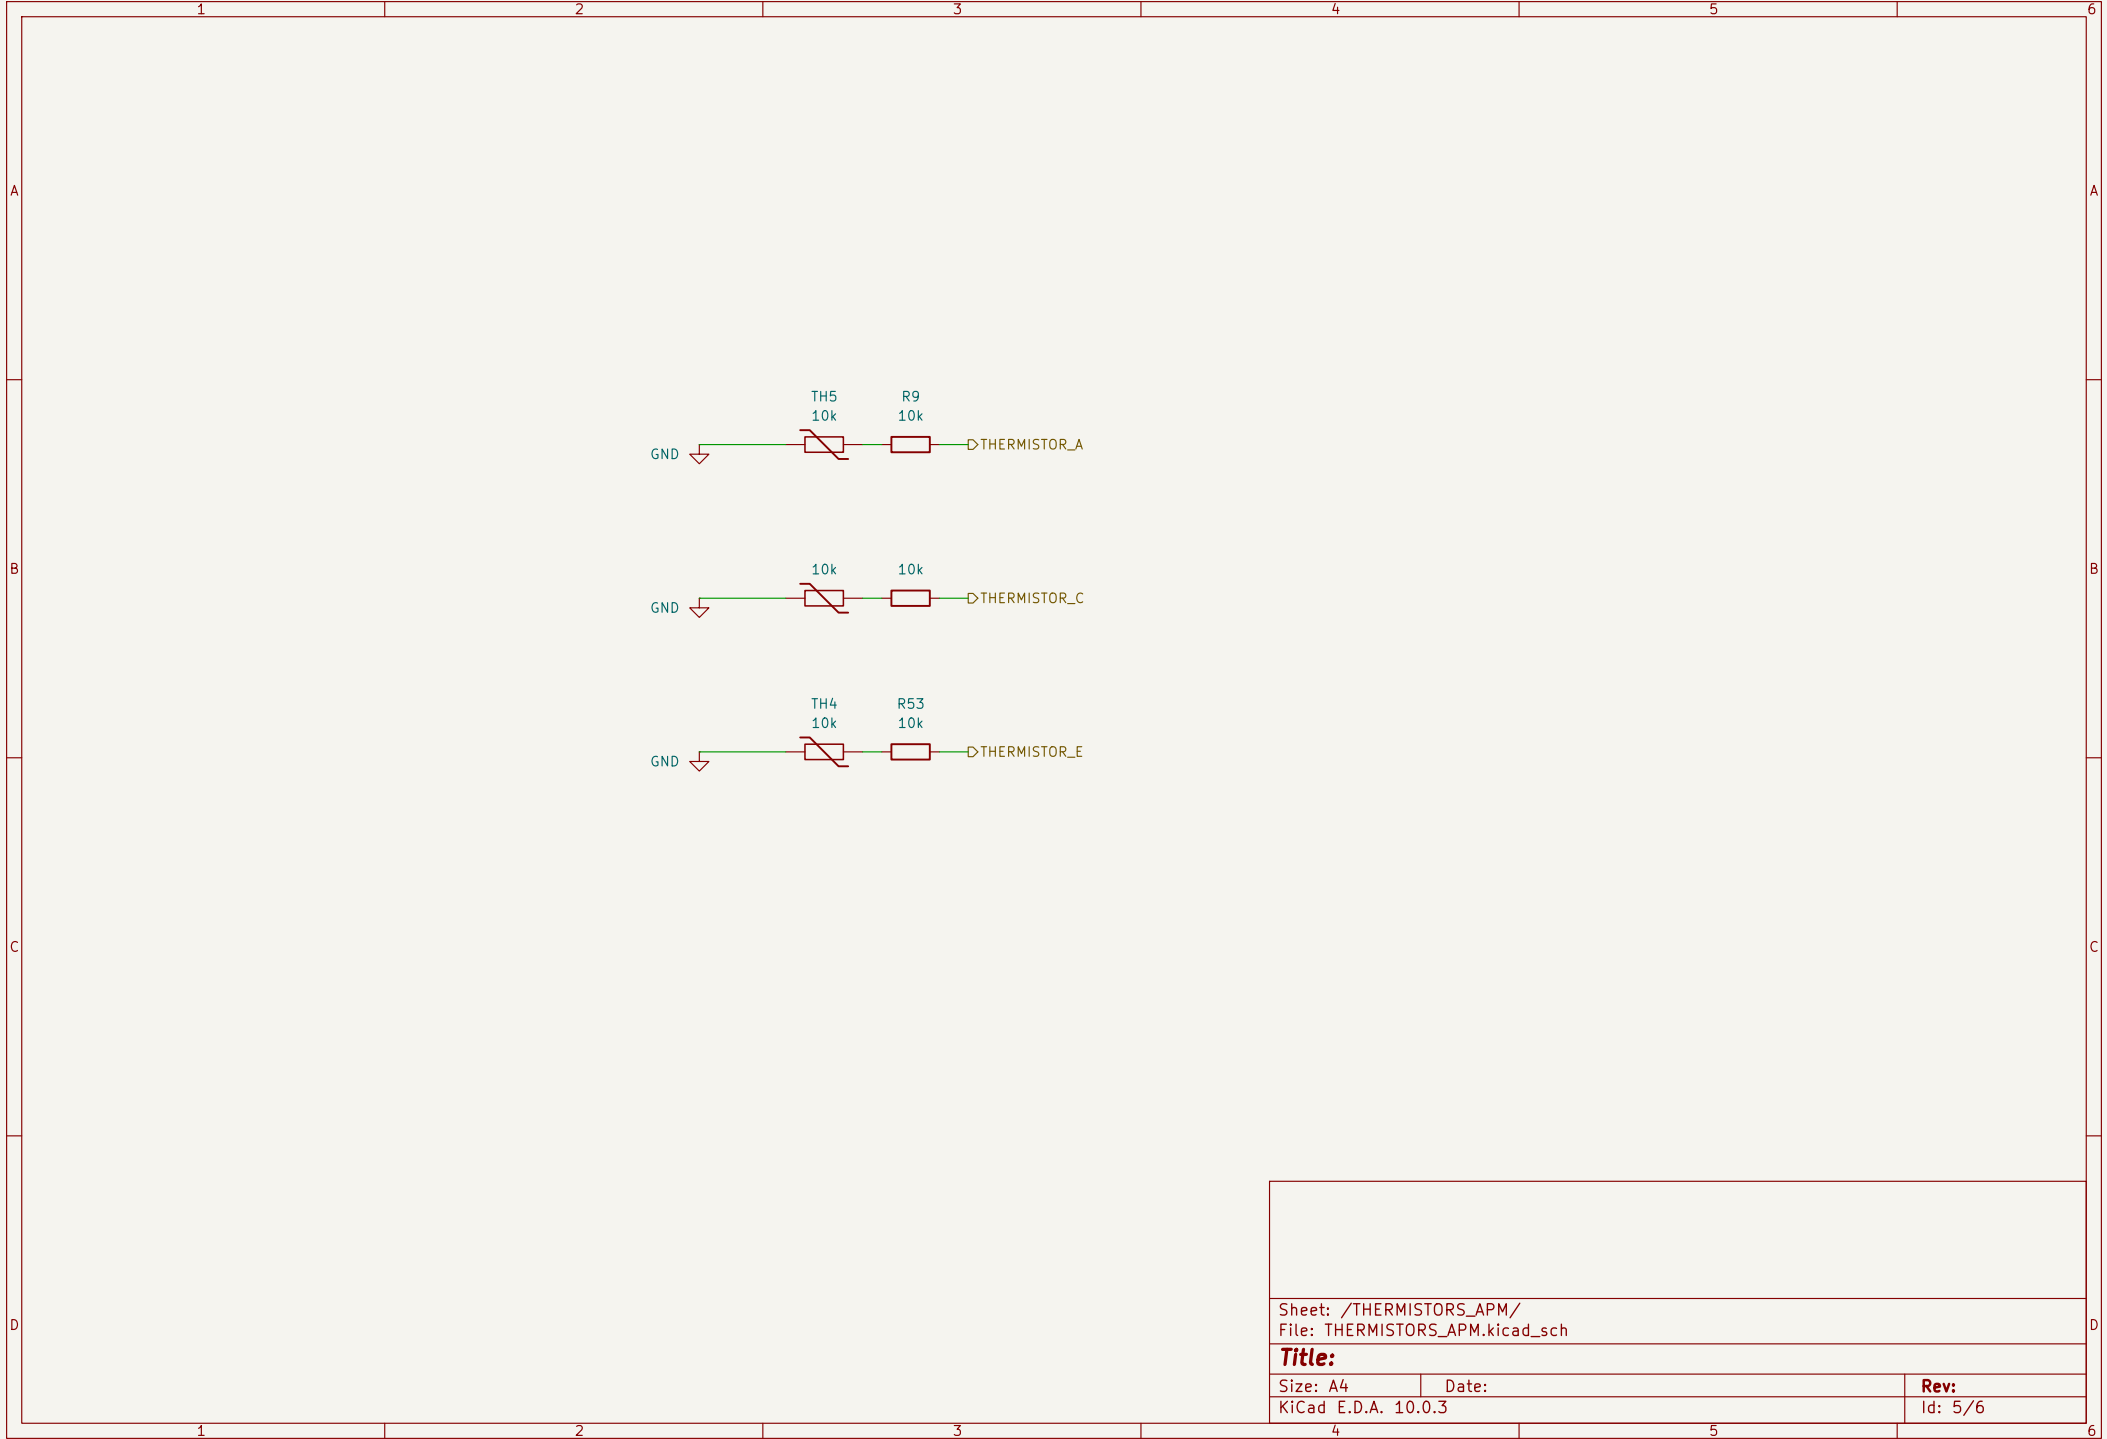

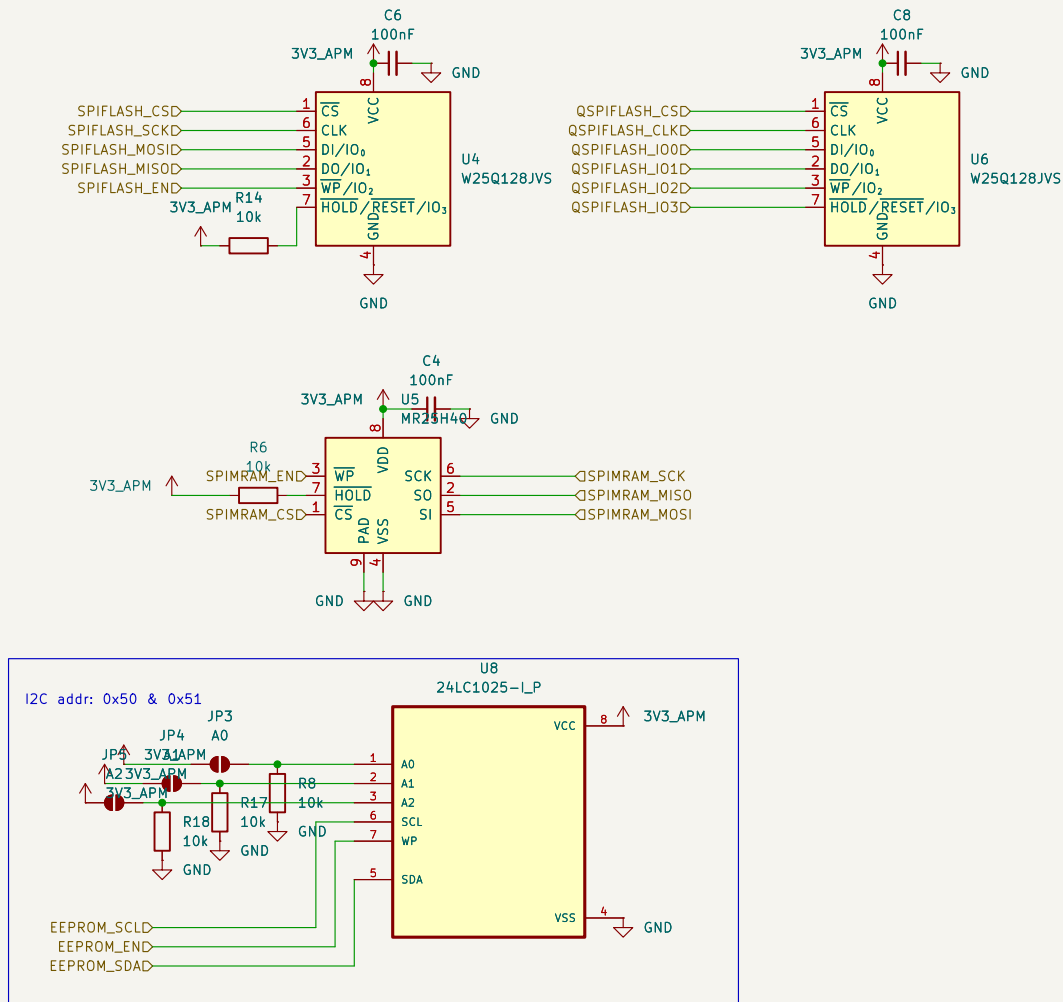

Sheet: /STORAGE_APM/
File: STORAGE_APM.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 10.0.3

Rev:

Id: 6/6