


UART -> USB Debug Port

UART debug messages available via a USB port and a 3 pin jumper for TX, RX, and GND UART connections

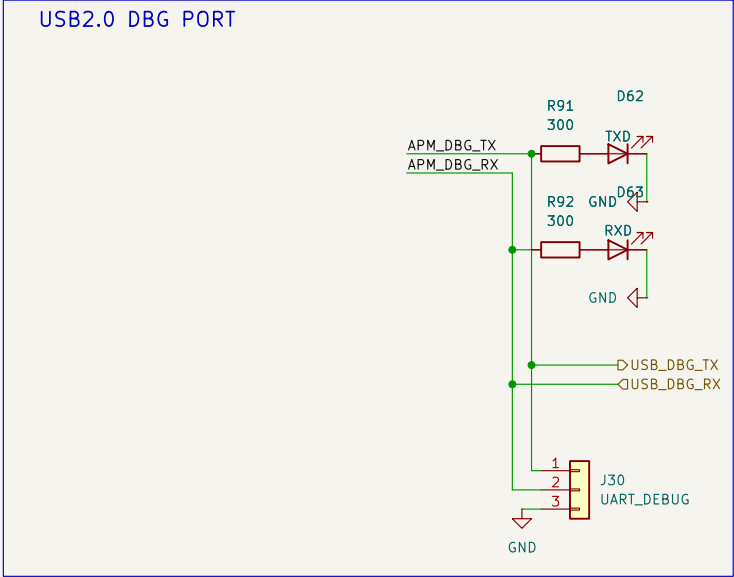

Sheet: /USB_debug_APM/
File: USB_debug_APM.kicad_sch

Title:


Size: A4

Date:



KiCad E.D.A. 10.0.4

Rev:

Id: 2/7

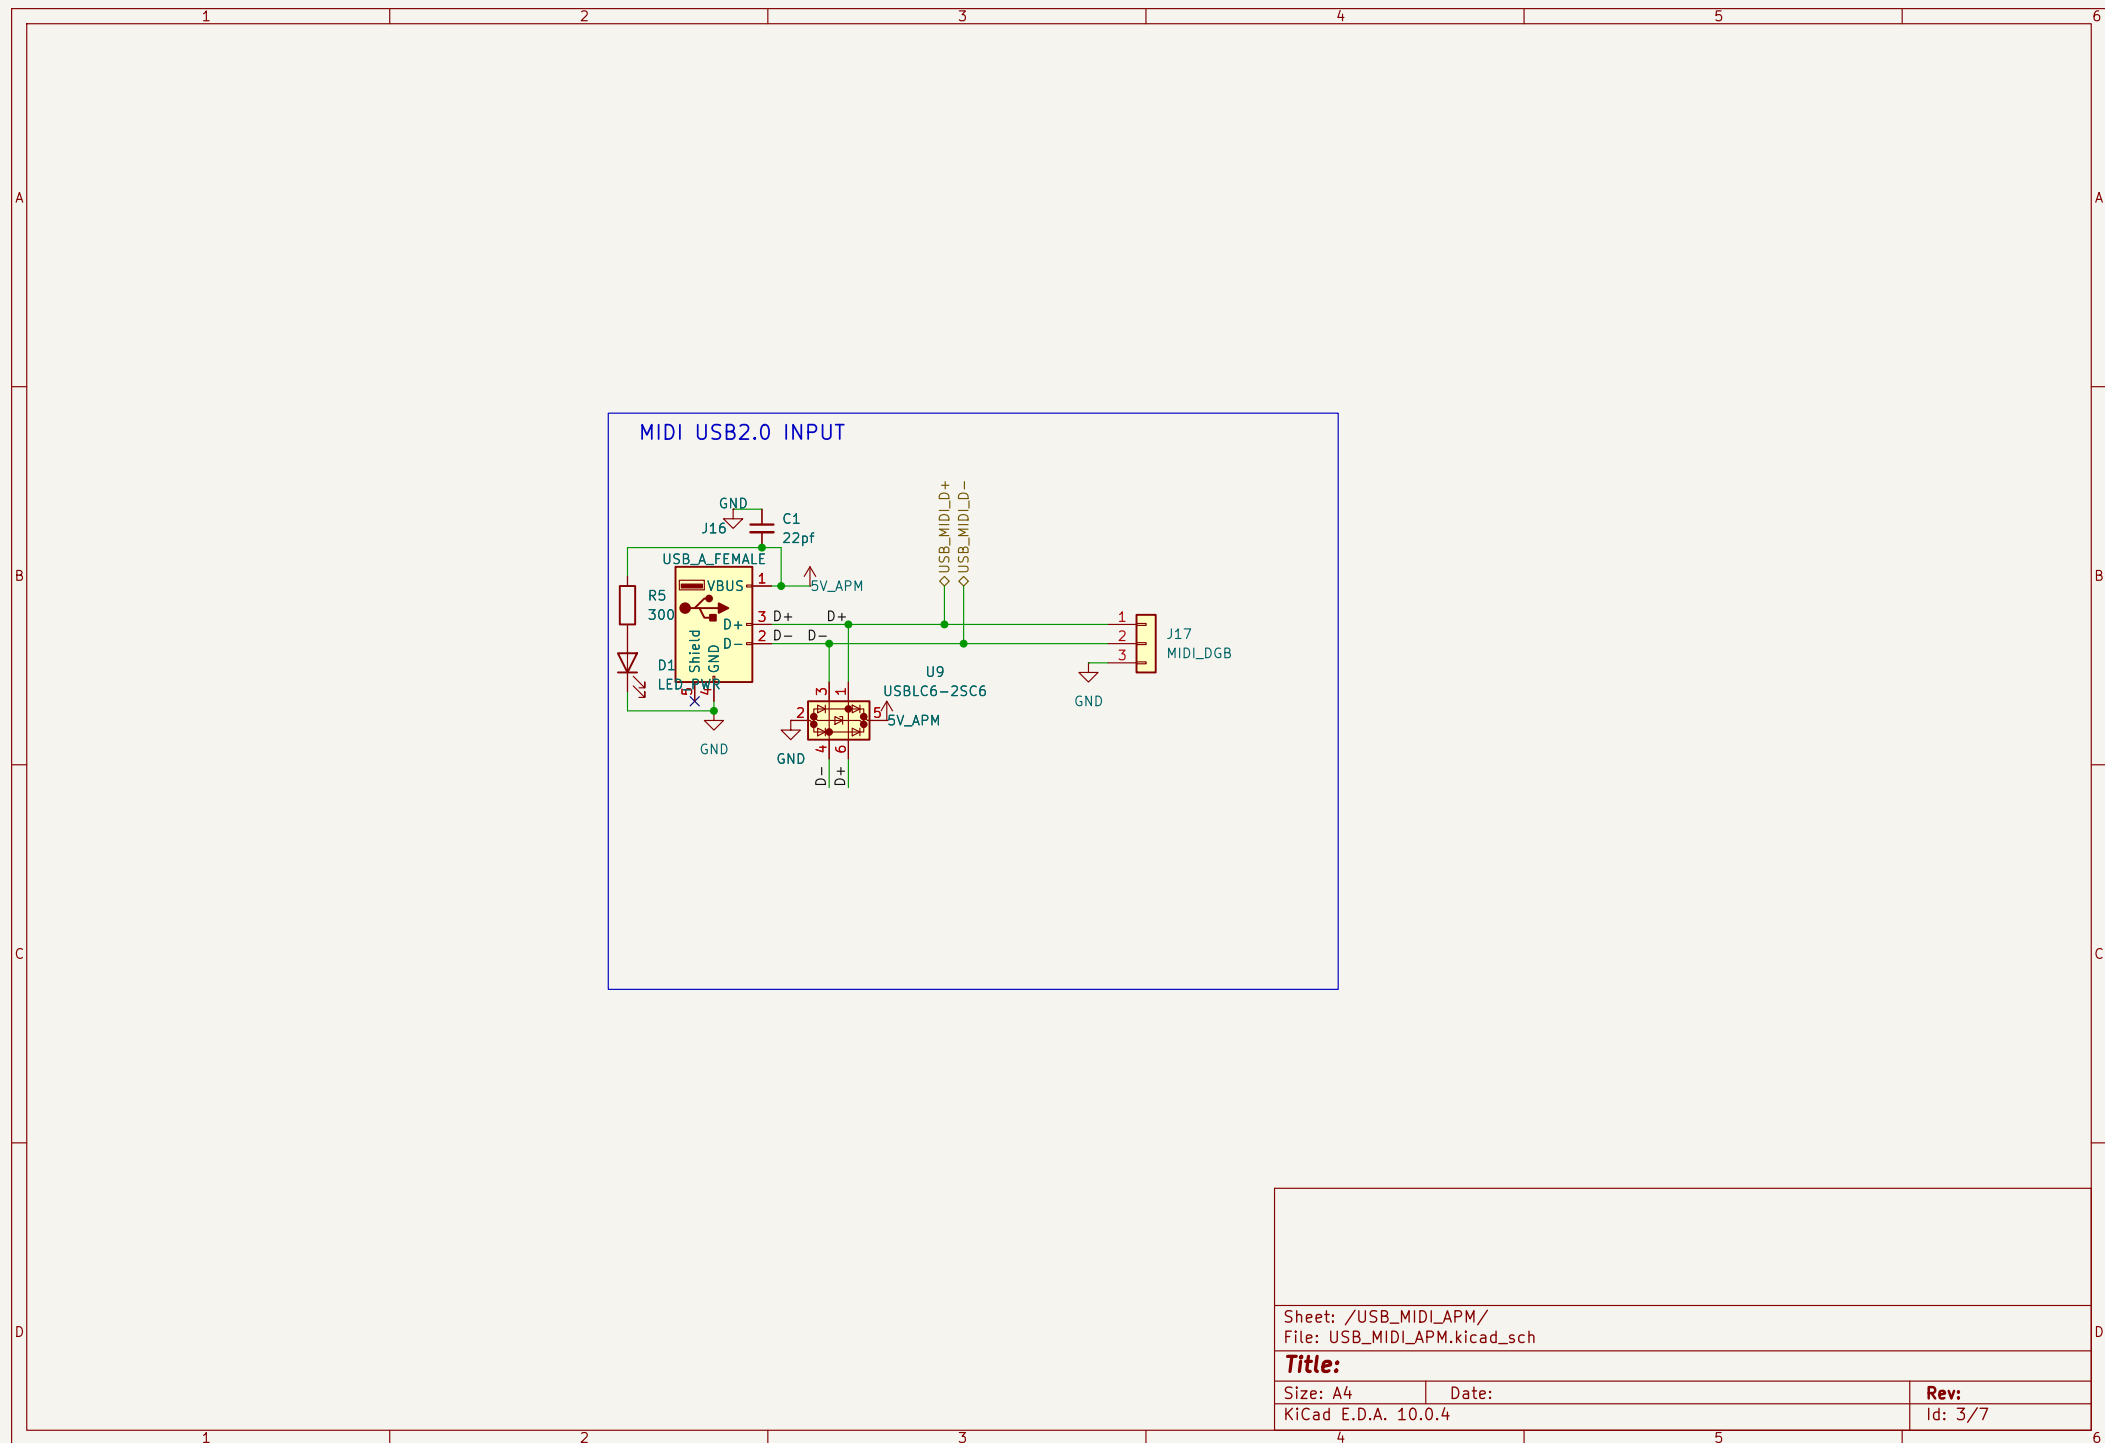


PMS has an INA219 current sensor for each board/node in the PCB. Each takes in the 5V from it's parent board and supplies 5V to said board's circuit (its peripherals) thus enabling monitoring




Size: A4	
KiCad E.D.A. 10.0.4	

0.4

Id: 4/7

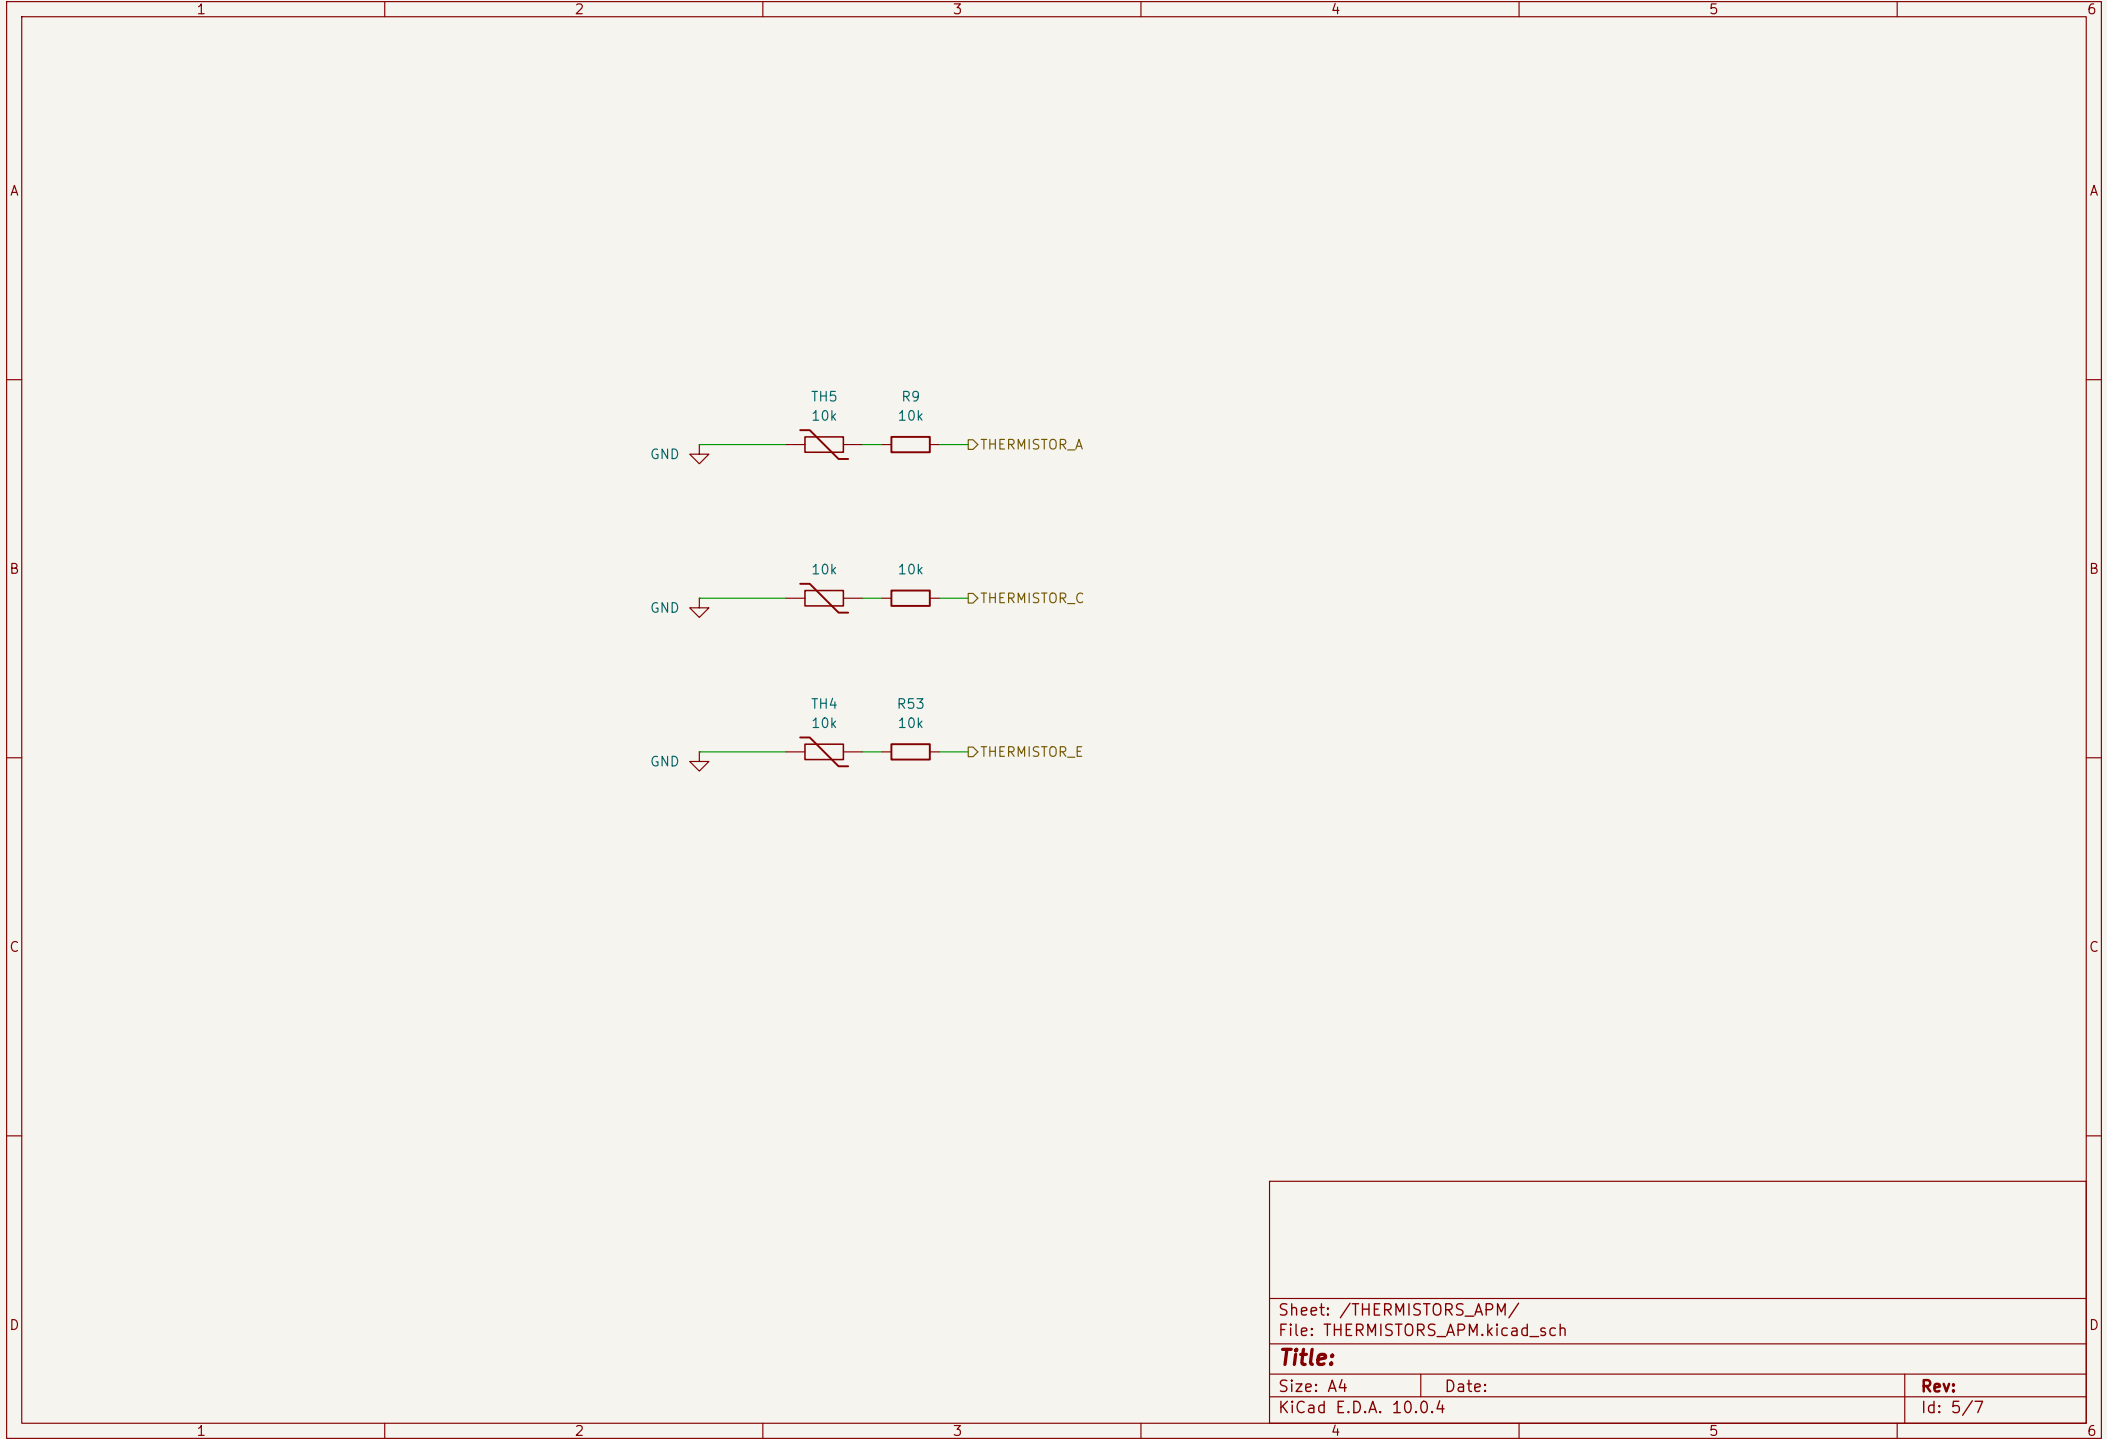

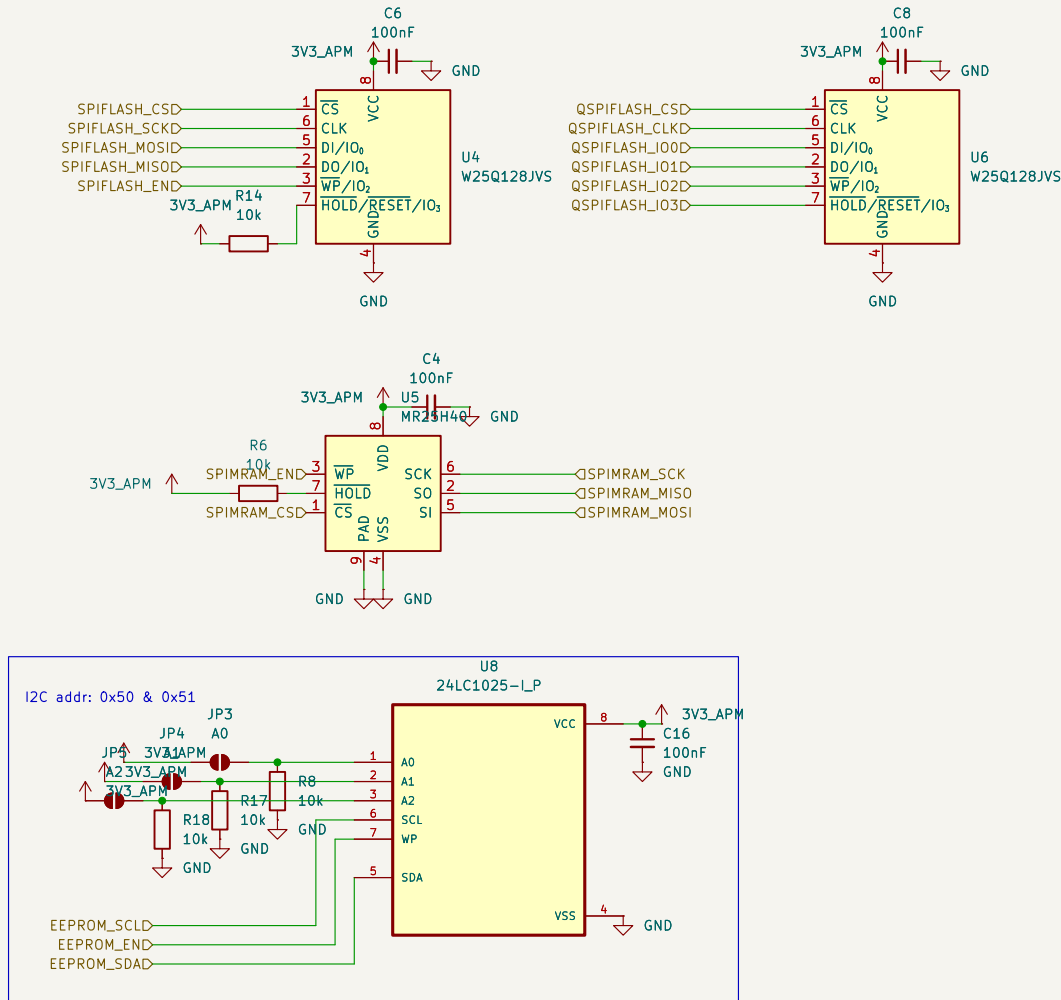

Sheet: /STORAGE_APM/
 File: STORAGE_APM.kicad_sch

Title:



Size: A4

Date:

KiCad E.D.A. 10.0.4

Rev:

Id: 6/7

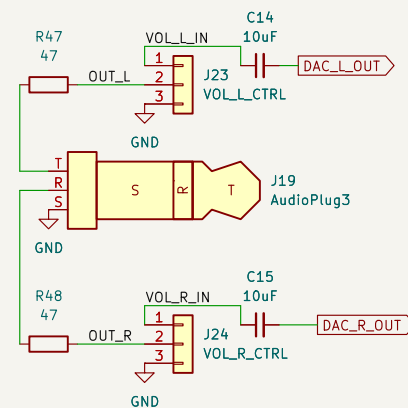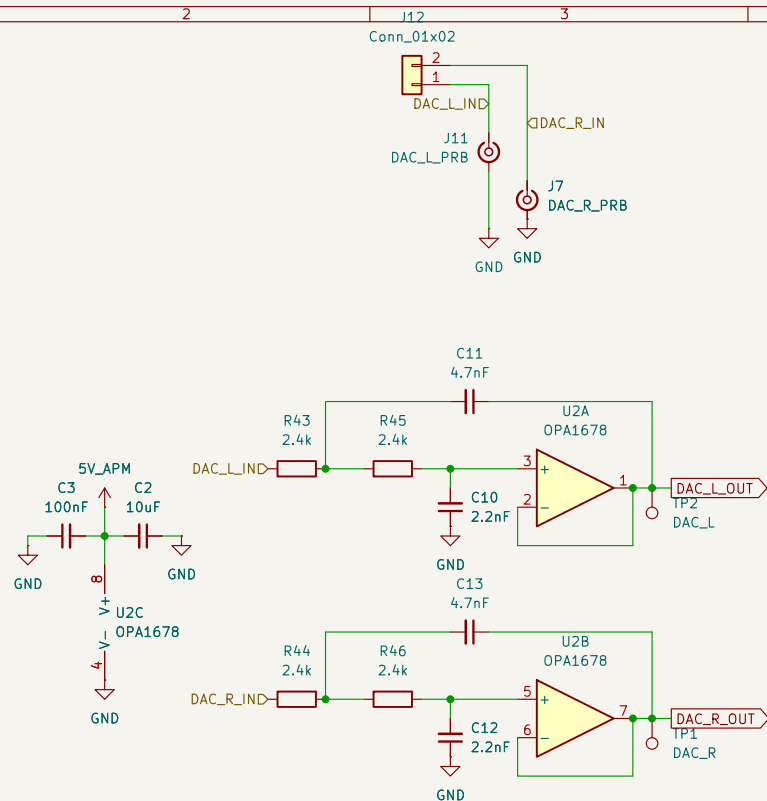

Sheet: /AUDIO_APM/
File: AUDIO_APM.kicad_sch

Title:

Size: A4
KiCad E.D.A. 10.0.4

Date:

Rev:
Id: 7/7