

GUIA (TR-069)

- **Página 2-3:** Ativação de TR-069 na **ONT NOKIA (com Wi-Fi 6)**
- **Página 4-5:** Ativação de TR-069 na **ONT NOKIA (sem Wi-Fi 6)**
- **Página 6-8:** Ativação de TR-069 na **ONT TP-LINK (serve para roteador)**
- **Página 9-10:** Ativação de TR-069 na **ONT HUAWEI**
- **Página 11-12:** Ativação de TR-069 na **ONT EASYLINK**
- **Página 13:** Ativação de TR-069 no **Roteador HUAWEI**
- **Página 14:** Acesso remoto

ONT NOKIA (com Wi-Fi 6)

NOKIA

Overview

WAN

WAN services

WAN statistics

TR-069

Static routing

Optical module status

QoS config

LAN

WiFi

← WAN / WAN services / 1_VOIP_TR069_INTERNET_OTHER_R_VID_425



Delete

Save

WAN connection list

1_VOIP_TR069_INTERNET_OTHER_R_VID_425

Enabled



Connection type

PPPoE



Connection mode

Route Mode



IP mode

→ ATIVAR IPV6

IPv4&IPv6



NAT



TR-069

→ ATIVAR TR-069



ONT NOKIA (com Wi-Fi 6)

 Overview WAN

WAN services

WAN statistics

TR-069

Static routing

Optical module status

QoS config

 LAN WiFi English Sign Out

Enable



Periodic inform enable



Periodic inform interval(s)

3600

URL

<http://madegraph.mxt.net.br:7547>

Username

Admin

Password

AdminAdmin

Connection request username

Admin

Connection request password

AdminAdmin

ONT NOKIA (sem Wi-Fi 6)

Status

Network

LAN

LAN_IPv6

WAN

WAN DHCP

Wireless (2.4GHz)

Wireless (5GHz)

Wireless Schedule

GPON Home Gateway

Logout

[English](#) | [Español](#)

Network>WAN

WAN Connection List

1_INTERNET_R_VID_710

Connection Type

☐ IPoE ☒ PPPoE

IP mode

ATIVAR IPV6

IPv4&IPv6

Enable/Disable

☒

NAT

☒

Service

ATIVAR OPÇÕES

☒ TR-069 ☒ INTERNET ☐ IPTV

ONT NOKIA (sem Wi-Fi 6)

Status

Network

LAN

LAN_IPv6

WAN

WAN DHCP

Wireless (2.4GHz)

Wireless (5GHz)

Wireless Schedule

IP Routing

DNS

TR-069

GPON Home Gateway

Logout

Network>TR-069

PREENCHER OS CAMPOS

Periodic Inform Enable

☒

Periodic Inform Interval(s)

3600

URL

http://madegraph.mxt.net.br:7547

User Name

Admin

Password

.....AdminAdmin

Connect Request Username

Admin

Connection Request Password

.....AdminAdmin

Save

Refresh

ONT TP-LINK

[Quick Setup](#)
[Basic](#)
[Advanced](#)

[Log out](#)
[Reboot](#)

Network

- Internet
- LAN Settings
- XPON Settings
- Dynamic DNS
- Static Routing
- IPv6 Tunnel

Wireless

Guest Network

Default Gateway

Default Gateway:

pppoe_gpon_11...

Save

Internet Connections

Refresh

+

 Add

-

 Delete All

Connection Name	Service Type	VLAN ID	Status	Operation	Enable	Modify
--	--	--	--	--	--	--

Connection Name:

pppoe_gpon_710_1

(Optional)

☒ Enable This Entry

Service Type:
☒ Internet
☐ IPTV
☐ VoIP

☒ TR069
☐ Others


VLAN:
☒ Enable

VLAN ID(1-4094):

710

ATIVAR, MAS SE ESTIVER OCULTO DELETE O PERFIL E CRIE UM NOVO. SE NÃO HOUVER ESSA OPÇÃO, PROSSIGA.

ONT TP-LINK

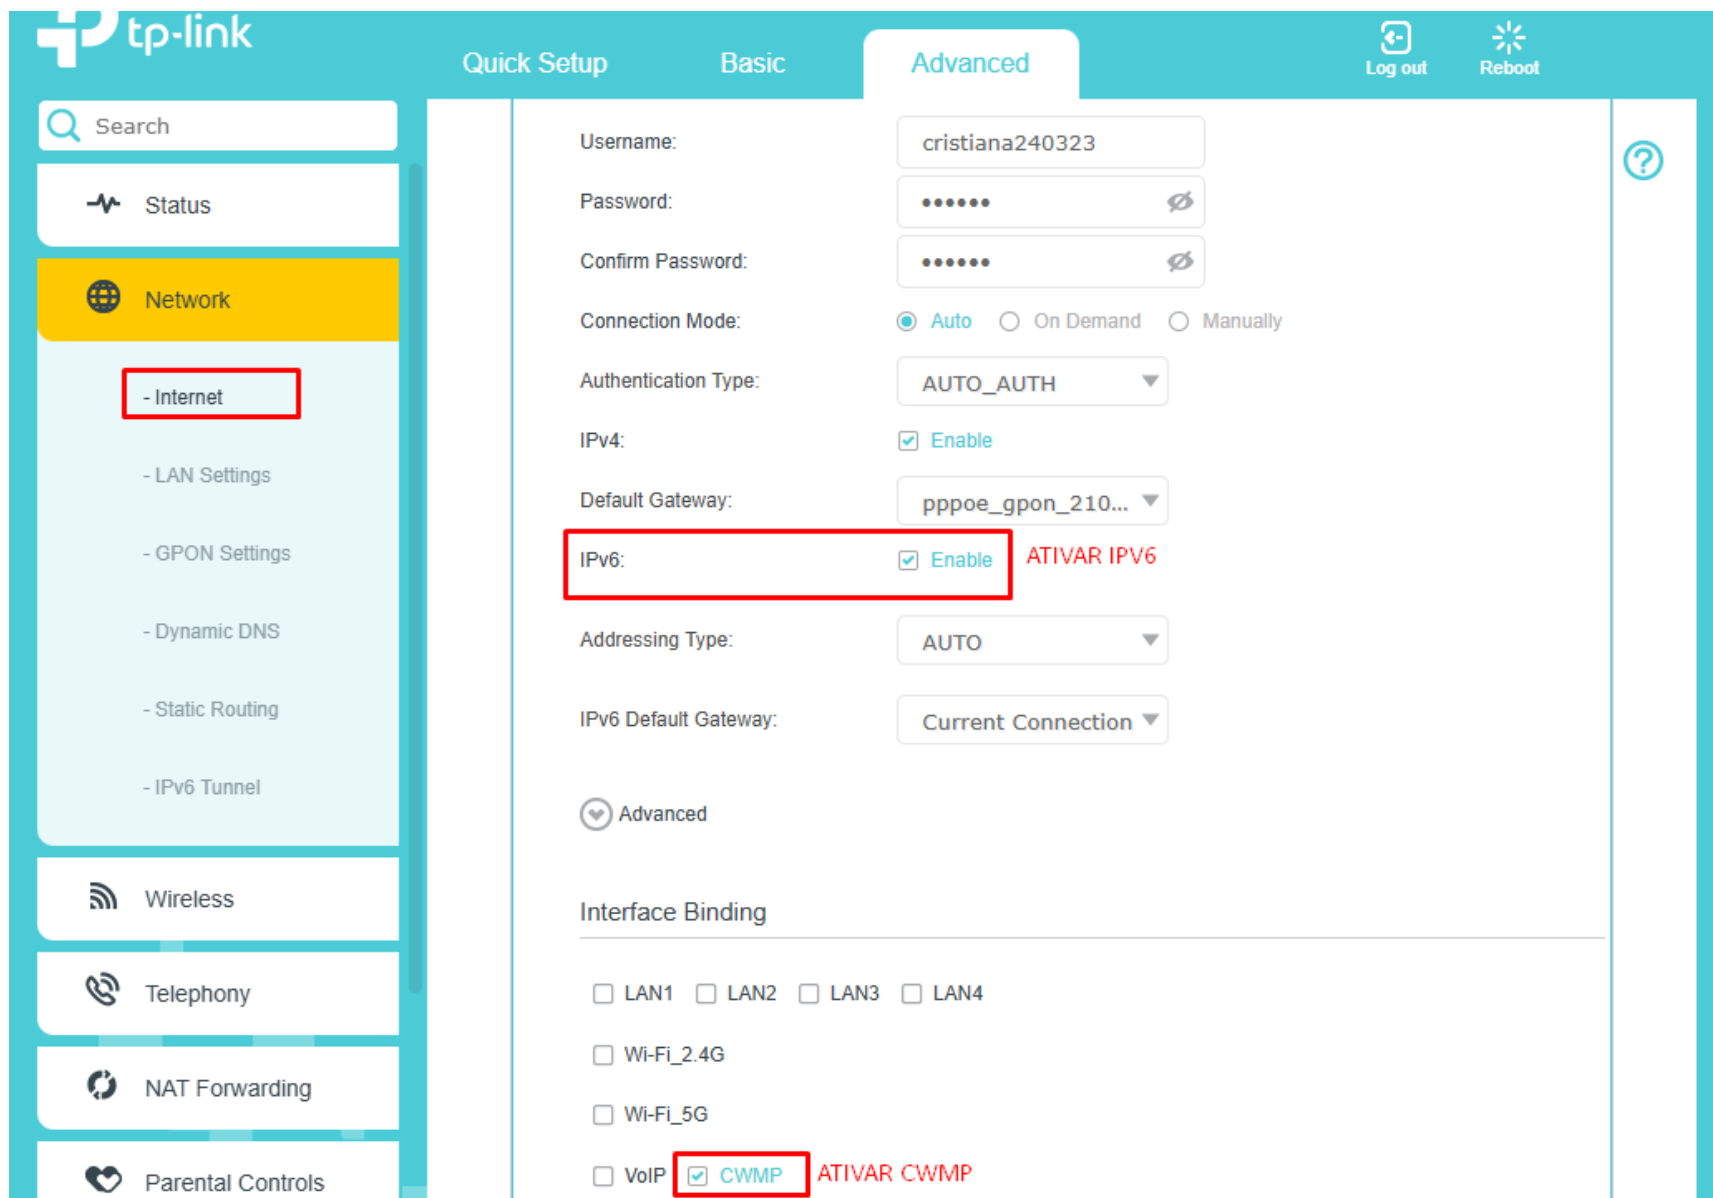

The image shows the TP-Link ONT Advanced Setup page. The left sidebar contains navigation options: Status, Network (highlighted in yellow), Wireless, Telephony, NAT Forwarding, and Parental Controls. The Network menu is expanded, showing sub-options: - Internet (highlighted with a red box), - LAN Settings, - GPON Settings, - Dynamic DNS, - Static Routing, and - IPv6 Tunnel. The main content area is titled 'Advanced' and contains various configuration fields. The 'IPv6' field is highlighted with a red box and has a red text label 'ATIVAR IPV6' next to it. The 'CWMP' field is also highlighted with a red box and has a red text label 'ATIVAR CWMP' next to it. Other fields include Username, Password, Confirm Password, Connection Mode, Authentication Type, IPv4, Default Gateway, Addressing Type, IPv6 Default Gateway, and Interface Binding.

tp-link

Quick Setup Basic **Advanced** Log out Reboot

Search

Status

Network

- Internet
- LAN Settings
- GPON Settings
- Dynamic DNS
- Static Routing
- IPv6 Tunnel

Wireless

Telephony

NAT Forwarding

Parental Controls

Username: cristiana240323

Password:

Confirm Password:

Connection Mode: ☒ Auto ☐ On Demand ☐ Manually

Authentication Type: AUTO_AUTH

IPv4: ☒ Enable

Default Gateway: pppoe_gpon_210...

IPv6: ☒ Enable ATIVAR IPV6

Addressing Type: AUTO

IPv6 Default Gateway: Current Connection

Advanced

Interface Binding

- ☐ LAN1 ☐ LAN2 ☐ LAN3 ☐ LAN4
- ☐ Wi-Fi_2.4G
- ☐ Wi-Fi_5G
- ☐ VoIP ☒ **CWMP** ATIVAR CWMP

ONT TP-LINK (essa parte se aplica ao Roteador TP-LINK também)

Search

Parental Controls

Quality of Service

Security

System Tools

- Time Settings
- LED Control
- Diagnostics
- Reboot Schedule
- Administration
- System Log
- CWMP Settings**

CWMP Settings

CPE WAN Management Protocol (also called TR-069) allows Auto-Configuration Server (ACS) to perform auto-configuration, provision, connection, and diagnostics to this device. You may configure this function under your ISP's instructions.

CWMP: ☒

Inform: ☒

Inform DataModel with TR098: ☒

Inform Interval: 3600

ACS URL: <http://madegraph.mxt.net.br:7547>

ACS Username: Admin

ACS Password: AdminAdmin

Interface used by TR-069 client: ☒ SN ☐ LAN MAC ☐ WAN MAC

CPE ID: ☒ Manual ☐ Random

☒ Connection Request Authentication

Username: Admin

Password: AdminAdmin

Path:

ATIVAR OPÇÕES

Selecionar perfil
PPPoE correto

ONT HUAWEI

 EG8145V5-V2

Fast Setting | Eadmin | Logout

WAN

LAN

Security

Route

Forward Rules

Application

WLAN

Voice

System Management

Maintenance Diagno..

WAN Configuration

On this page, you can set WAN port parameters. A home gateway communicates with an upper-layer device using the WAN port. During the communication, WAN port parameters must be consistent with upper-layer device parameters.

New Delete

	Connection Name	VLAN/Priority	Protocol Type
☐	1_INTERNET_R_VID_710	710/0	IPv4/IPv6
----	----	----	----

Basic Information

Enable WAN:

☒

Encapsulation Mode:

☐ IPoE ☒ PPPoE

Protocol Type:

IPv4/IPv6

← ATIVAR IPV6

WAN Mode:

Route WAN

Service Type:

TR069_INTERNET

SELECIONAR ESSA OPÇÃO

ONT HUAWEI

WAN	
LAN	
Security	
Route	
Forward Rules	
Application	
WLAN	
Voice	
System Management	
TR-069	

ACS Configuration

On this page, you can set ACS parameters, set the password for authentication using an SSL certificate, required SSL certificate.

ACS Parameter Settings

Enable ACS Management:	☒	←
Enable Periodic Informing:	☒	←
Informing Interval:	3600	*[1-2147483647](s)
Informing Time:	0001-01-01T00:00:00Z	yyyy-mm-ddThh:mm:ss (for e 12-20T12:23:34)
ACS URL:	http://madegraph.mxt.net.br:7547	*
ACS User Name:	Admin	
ACS Password:	AdminAdmin	
Connection Request User Name:	Admin	
Connection Request Password:	AdminAdmin	

ONT EASYLINK

EASY4 LINK

Gateway Name: Home Gateway Gateway Type: E4L-H5410WA [Log out](#)

Status **Net** Security APP Manage Diagnose Help

WAN Binding LAN WLAN WLAN5G CWMP QoS Time Route

InternetConnection

MARCAR AS SEGUINTE OPÇÕES DESTACADAS PARA ATIVAR IPV6 E TR-069

Connection Name:
Type:
Service Mode:
Binding Option:

DHCP ServerEnable:

Link Mode:

Protocol Version:

1_INTERNET_R_VID_210

New

Route

Enable: ☒

TR069_INTERNET

☒ LAN1 ☒ LAN2 ☒ LAN3 ☒ LAN4
☐ SSID1 ☐ SSID2 ☐ SSID3 ☐ SSID4
☐ SSIDAC1 ☐ SSIDAC2 ☐ SSIDAC3 ☐ SSIDAC4

☒

Connect via PPP

☐ IPv4 ☐ IPv6 ☒ IPv4/IPv6

Help

ONT EASYLINK

Status	Net	Security	APP	Manage	Diagnose
WAN	Binding	LAN	WLAN	WLAN5G	CWMP

ITMS Server:

Terminal WAN management protocol(TR-069) allows automatic configuration server(ACS) to automatically configure the gateway, assign business, collect status and statistical information and diagnose. After input related information, please click on the "Confirm" to configure the parameters of TR-069 client.

Periodic Notification ☐ Disable ☒ Enable:

Periodic Notification Time Interval[0 - 2147483647]:

Server Domain Name/IP Address and Port:

Platform User Name:

Platform Password:

Terminal User Name:

Terminal Password:

Roteador HUAWEI AX3S

 **HUAWEI** | HUAWEI WiFi AX3S

Sair Português-BR

Início

Conectar-se à Internet

Meu Wi-Fi

Gerenciar dispositivo

Mais funções

Sobre o roteador

Gerenciar as atualizações

Configurações de rede

Configurações de Wi-Fi

DDNS

Configurações de segurança

Configurações do sistema

Alterar a senha de login

Hora da rede

TR-069

O TR-069 usa CWMP e permite gerenciar dispositivos usando um ACS.

 [O que é isso?](#)

Gerenciamento do TR069 ☒

Endereço do servidor ACS

Nome de usuário ACS

Senha ACS

Nome de usuário da solicitação de conexão

Senha de solicitação de conexão

Intervalo de informe ☒

Intervalo de informação segundos

ACESSO REMOTO

Acesso remoto | Roteador TP-LINK

The screenshot displays the TP-Link router's web management interface. The top navigation bar includes the TP-Link logo, tabs for 'Configuração Rápida', 'Básico', and 'Avançado' (selected), a language dropdown set to 'Português', and buttons for 'Sair' and 'Reiniciar'. The left sidebar contains a 'VPN' section and a highlighted 'Ferramentas de Sistema' section with a list of system tools: 'Ajuste de Horário', 'Diagnósticos', 'Atualização de Firmware', 'Reiniciar', 'Administração', 'Log de Sistema', 'Configurações CWMP', 'Configurações SNMP', and 'Estatísticas'. The main content area is titled 'Gerenciamento Remoto' and contains the following settings:

- Gerenciamento Remoto:** ☒ **Habilitar**
- Gerenciamento Remoto via HTTPS:** ☒ **Habilitar**
- Porta:** 443
- Gerencie este roteador através do endereço:**
- Cliente dispositivo permitido para gerenciamento remoto:**
 - ☐ Somente o seguinte endereço IP / MAC
 - ☒ **Todos**
- Verificação do cabeçote de referência HTTP:** ☒ **Habilitar**

Each configuration section has a 'Salvar' (Save) button located at the bottom right of the respective section.

Acesso remoto | Roteador TP-LINK

 1000S

Salvar

Verificação do cabeçote de referência HTTP

Verificação do cabeçote de referência HTTP:

☒ Habilitar

Salvar

Certificado

Install the Certificate in your browser for Local/Remote Management via HTTPS.

Download do Certificado

Ping ICMP

Ping ICMP:

☒ Remoto ☒ Local

Salvar