
VIOLIN TUNING GUIDE

When tuning higher notes, turn the pegs slowly to avoid sudden string breakage.



PREPARE YOUR TOOLS

Use a digital tuner or tuning app set to violin mode.
Select the correct pitch sequence: A → D → G → E.

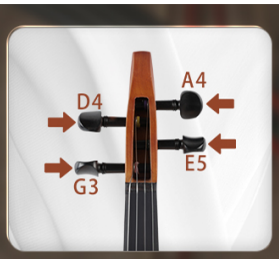

TUNING PROCESS

Turn the peg slowly while gently pushing it inward (for A/E strings, push left; for G/D strings, push right).



FINE-TUNING

For tiny adjustments, use the tailpiece fine tuners.
Turn clockwise to raise pitch counterclockwise to lower.

HOW TO INSTALL A VIOLIN BRIDGE



STEP 1
Loosen the tuning knobs on the headstock to completely relax the four strings.



STEP 2
Place the bridge on the center line of the groove inside the F-hole.



STEP 3
Tighten the strings and readjust the position and angle of the bridge.



STEP 4
Use the fine tuners for final tuning.

HOW TO ADJUST A VIOLIN BOW



Adjust the tension of the bow hair to suit your playing by turning the knob at the end of the bow.
Note: After playing, loosen the bow hair.

HOW TO APPLY ROSIN TO A BOW



STEP 1
Rub the new rosin with the tail of the bow until there are grooves on the surface of the rosin.



STEP 2
Slowly and evenly pull the bow from the bow root to the bow tip, repeating several times.



STEP 3
Always apply the rosin in the direction of "bow root → bow tip."



STEP 4
Apply rosin to the sides of the bow as well to make the tone more full.