

AKLOT


BEATCORE SERIES

B-CORE 543

Electronic Drum Kit

USER MANUAL

DESIGN BY
AKLOT

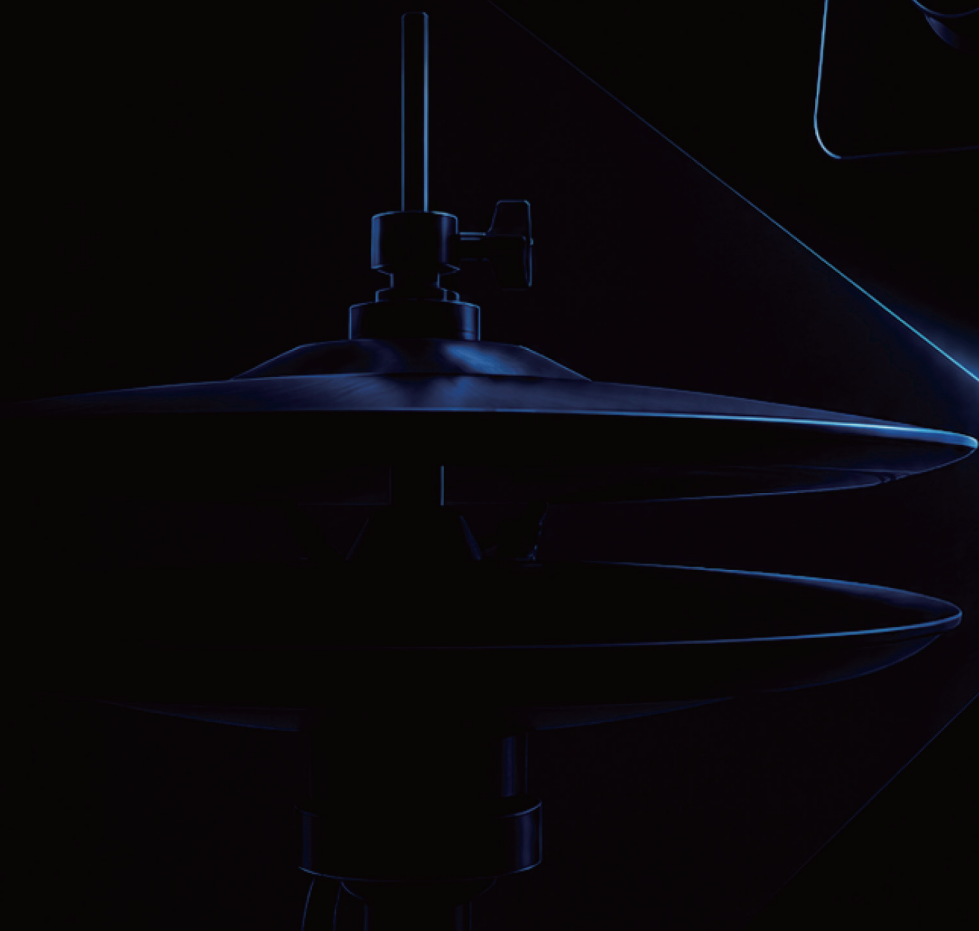

WELCOME

Thank you for choosing **AKLOT**.

The B-CORE 543 is designed to deliver a responsive and natural drumming experience.

This guide will help you assemble, connect, and start playing quickly.



NEED HELP?

CONTACT AKLOT SUPPORT



cs@aklot.com

Our support team is ready to assist you.

We strive to respond as quickly as possible.



SCAN TO ACCESS
EVERYTHING YOU NEED



CONTENTS

GETTING STARTED

Safety Information	01
Package Contents	02

INSTALLATION GUIDE

Rack Installation	03
Hi-Hat Setup	05
Snare Drum & Stand Installation	08
Drum Pad Installation	09
Cymbal Installation	10
Bass Pad & Pedal Setup	12
Sound Module Installation	17

CONNECTION GUIDE

Connecting Pads and Cymbals	18
Connecting Headphones or Speakers	18
USB MIDI & Wireless Audio/MIDI Connection	19
AUX IN / MIDI OUT / Expansion Cymbal	20

SOUND MODULE GUIDE

Module Overview	21
Selecting Drum Kits	21
Voice Selection	22
Pitch / Volume /Pan / MIDI Adjustment	23
Metronome	24
Song Playback	25
Recording	26
Trigger Settings	27
Effects & EQ Settings	31
Utility Functions	32

TROUBLESHOOTING	33
------------------------------	-----------

MIDI NOTE LIST	36
-----------------------------	-----------

SAFETY NOTICE

Please read and follow these safety instructions carefully before using your B-CORE 543.

Keep this manual for future reference.



IMPORTANT

Failure to follow these instructions may result in injury or damage to the product.

1



INTENDED USE

Use this product only for its intended purpose as described in this manual.


2



KEEP DRY

Do not expose the product to rain, moisture, or liquid. Do not place containers with liquid on the product.

3

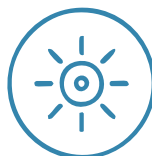

AVOID HEAT

Do not place the product near heat sources such as radiators, heaters, stoves, or in direct sunlight for extended periods.

4



KEEP AWAY FROM CHILDREN

Small parts may present a choking hazard. Keep out of reach of children at all times.

5



MANAGE CABLES

Place cables so they do not become a tripping hazard or get damaged.

6



CLEAN CAREFULLY

Use a soft, dry cloth to clean the product. Do not use chemicals, solvents, or cleaning sprays.

7



SAFE VOLUME

Avoid high volume for extended periods to protect your hearing.

8



DO NOT MODIFY

Do not modify or disassemble the product. This may cause damage and will void the warranty.

PLEASE NOTE



- If you encounter any issues or have questions, please contact AKLOT support.
- Do not attempt to repair the product yourself.
- Use only accessories and parts specified by AKLOT.
- Unplug the power adapter during lightning storms or when the product is not in use for long periods of time.

FOR YOUR SAFETY



Please read this manual completely before assembling and using your B-CORE 543.

PACKAGE CONTENTS

BEFORE YOU BEGIN

Please verify that all items shown below are included in the package. If any items are missing, please contact your dealer.

NOTE



The items included may vary slightly from the images shown. This does not affect assembly or usage of the product.

DRUM COMPONENTS



12" Hi-Hat Cymbal
(x1)




14" Ride Cymbal
(x1)




12" Crash Cymbal
(x2)




Kick pedal
(x1)



12" Snare Drum
(x1)




10" Tom
(x2)



12-inch Floor tom
(dual trigger)
(x1)



Hi-Hat Controller
(x1)



12" Kick Drum
(x1)



Sound Module
Ribbon Cable
(x1)



Power Adapter
(x1)



Crash 2 Cable
(x1)



Sound Module
(x1)

RACK COMPONENTS



Hi-Hat Stand
(x1)



Inner Rod
(x1)



Second-order Tube
(x1)



Cymbal Support Rod
(x3)



Sound Module
Fixing Rod
(x1)



Drum Pad
Support Rod
(x5)

ACCESSORIES



Drumsticks
(x1 Pair)




Drum Stool
(x1)



Headphones
(x1)



Lesson Book
(x1)

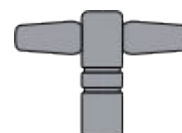


Drum Key
(x1)

INSTALLATION STEPS


1 Installing the Drum Rack (1)

- Remove the drum rack from the package.

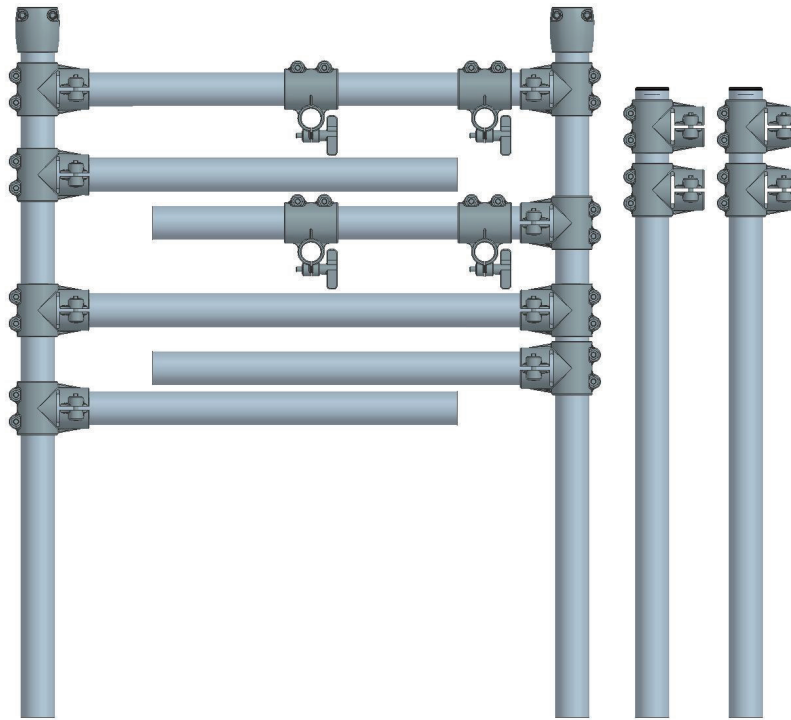



2 Installing the Drum Rack (2)

- Take the main drum rack frame out, unlock the horizontal bars, and adjust the angle to your preference.

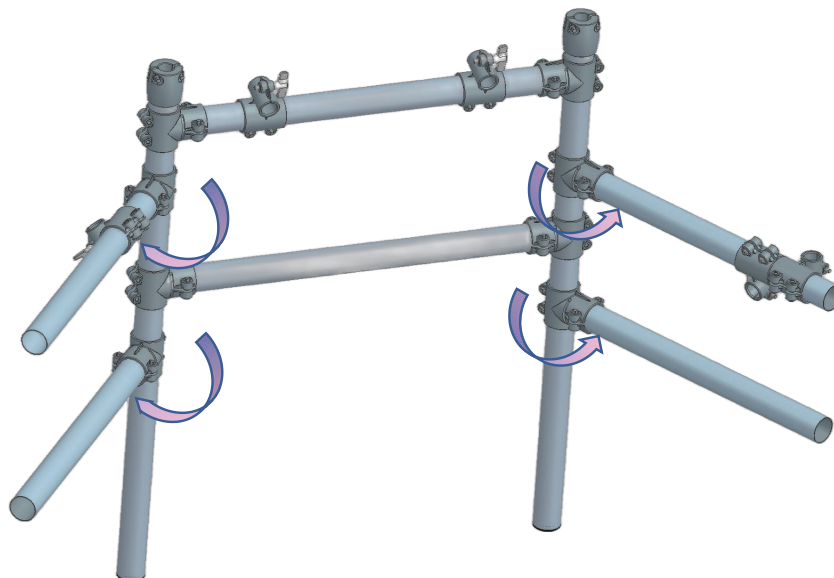



3 Installing the Drum Rack (3)

- Attach the two front support bars to the horizontal bars and tighten the screws.

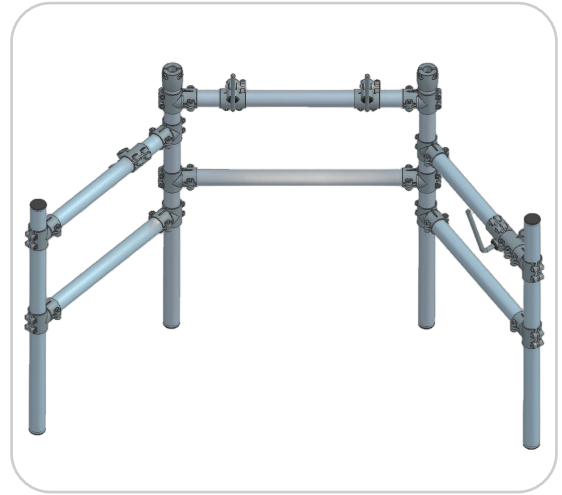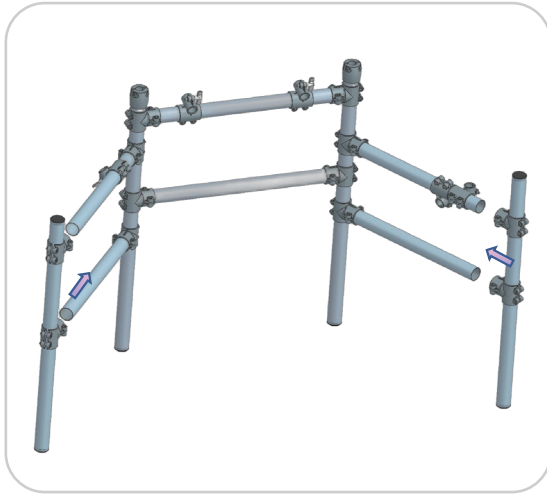


4 Installing the Drum Rack (4)

- Insert the cymbal Mounting rods into the holders and secure them tightly.

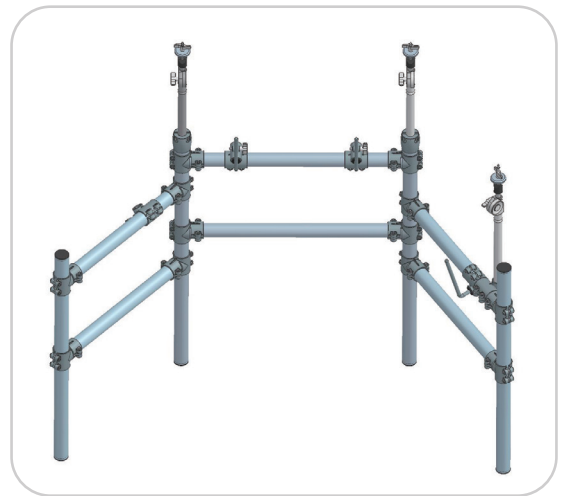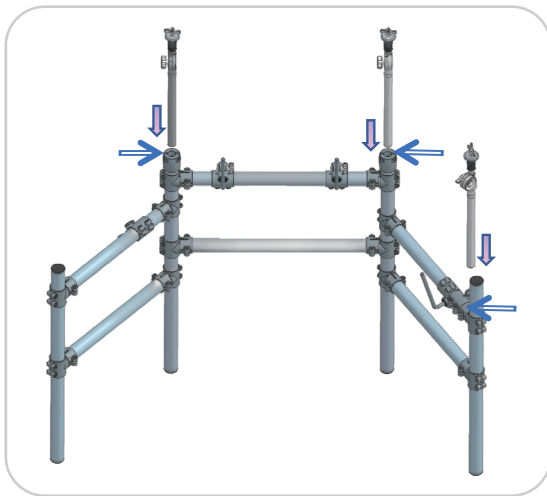


5 Installing the Hi-Hat Stand and Hi-Hat Cymbals

- Take out the hi-hat stand components and dual hi-hat cymbal parts(as shown below).

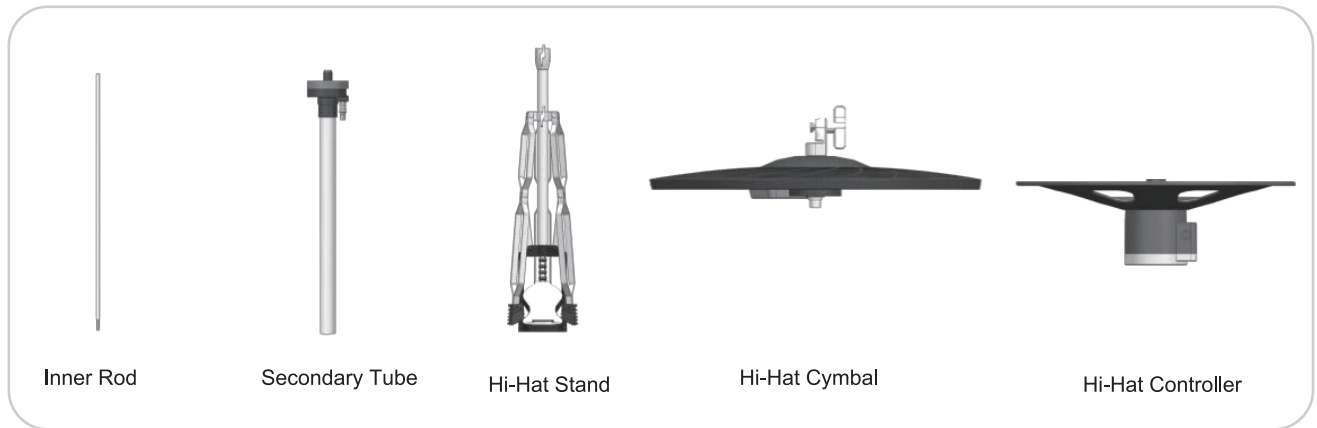


- Take out the hi-hat stand. Lay the footboard flat so that the two connecting rods naturally spread open.

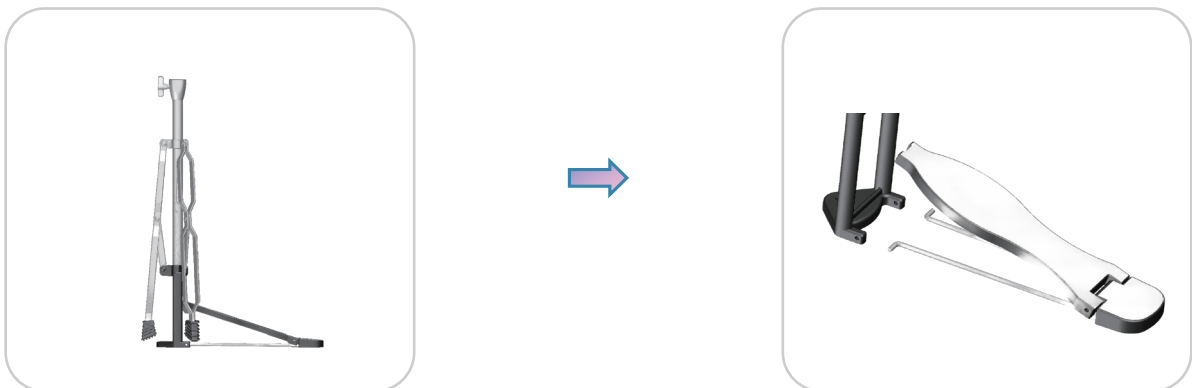

6 ASSEMBLE THE HI-HAT STAND

- Attach both connecting rods to the base of the hi-hat stand.

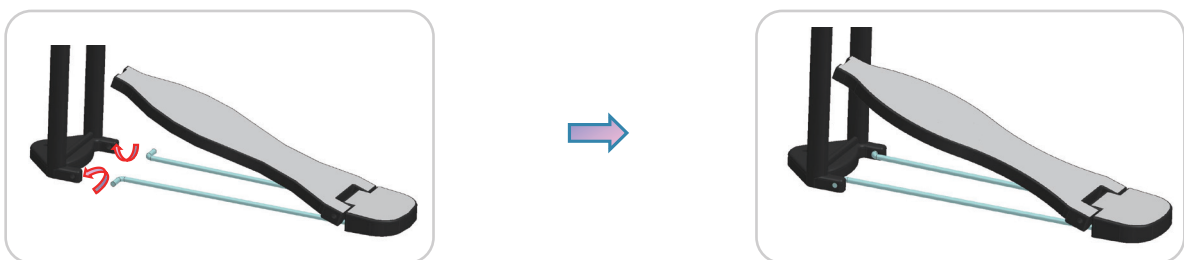


7 Installing the Hi-Hat Stand and Hi-Hat Cymbals


- Take out the inner rod and rotate it into the fixing ring inside the support leg tube of the hi-hat stand.



8 Insert the second-order tube with the felt base into the hi-hat stand. Adjust the height and tighten the knob.

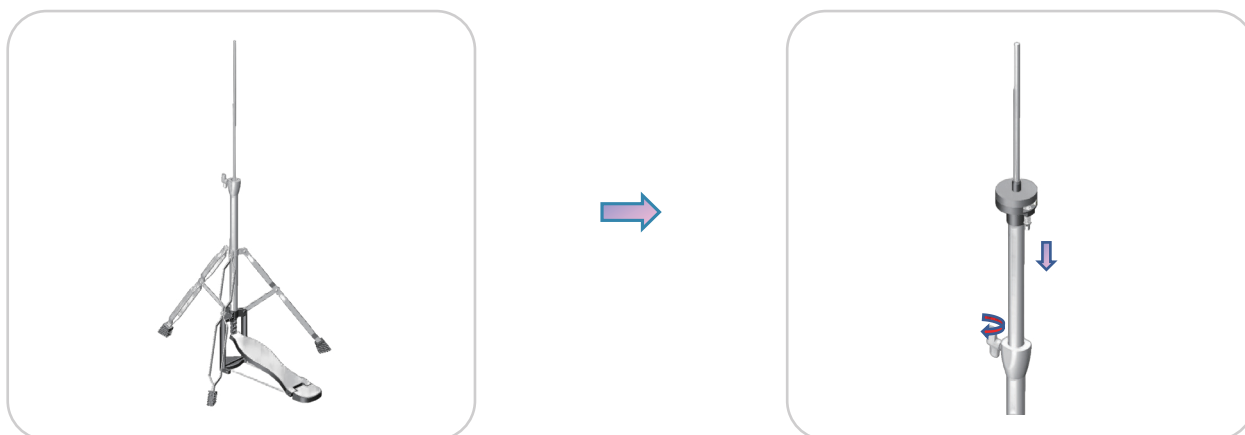

9 Insert the hi-hat controller through the inner rod and place it on the felt base of the second-order tube.

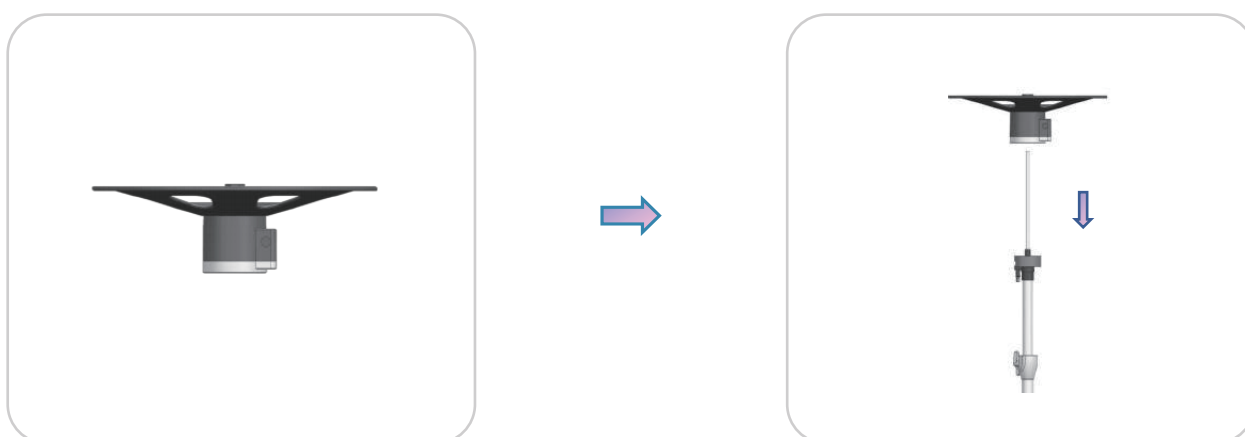

10 INSTALL THE HI-HAT CYMBAL

1 Route Cable Through Lower Cymbal Opening

Route the HI-HAT cable through one of the openings in the lower cymbal as shown.

This prevents cable interference during hi-hat operation




2 Connect HI-HAT Cable

Connect the white hi-hat cable to the upper cymbal jack.



3 Lower Upper Cymbal


Lower the upper hi-hat cymbal until it lightly touches the hi-hat controller.

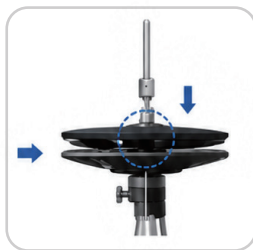

4 Tighten Clutch

Tighten the clutch hand screw securely.

Tighten the clutch hand screw firmly.

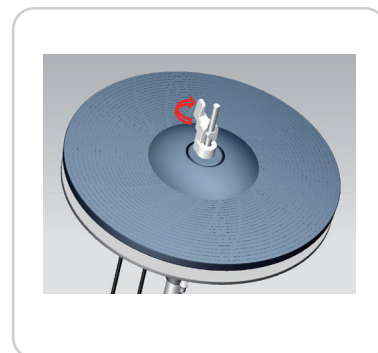


Tighten the clutch hand screw firmly

11 CHECK HI-HAT ALIGNMENT

- Make sure the bottom of the upper hi-hat cymbal is directly above the hi-hat controller.

! When the upper cymbal is lowered, it should lightly contact the controller.

! If the cymbal does not contact the controller, or is pressed too tightly, hi-hat triggering may be incorrect.

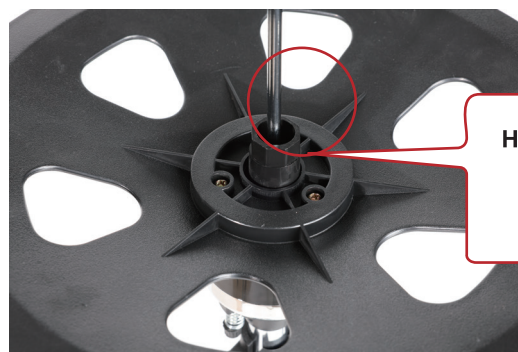


Hi-hat Controller
(Protruding Control)

✓ CORRECT (LIGHT CONTACT)



The upper cymbal lightly contacts the controller. Normal hi-hat response.

✗ INCORRECT (GAP)

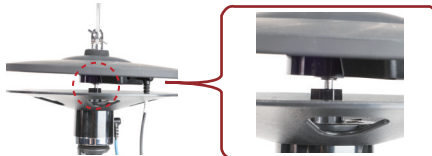

A gap exists between the upper cymbal and the controller. Open hi-hat sounds may trigger, but closed hi-hat sounds may not.



✗ INCORRECT (OVERTIGHTENED)



The upper cymbal presses down on the controller. Closed hi-hat sounds may trigger continuously.


12 Installing the Snare Stand (1)

- Remove the snare stand and insert the support frame into the support legs.

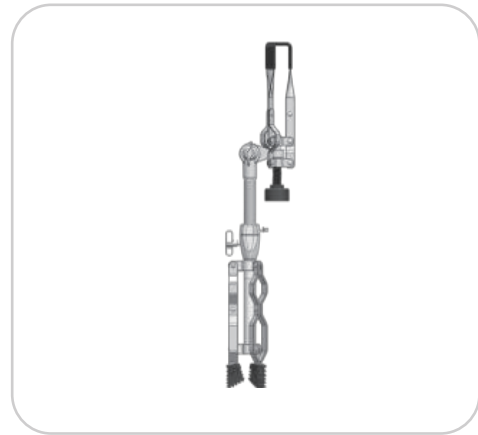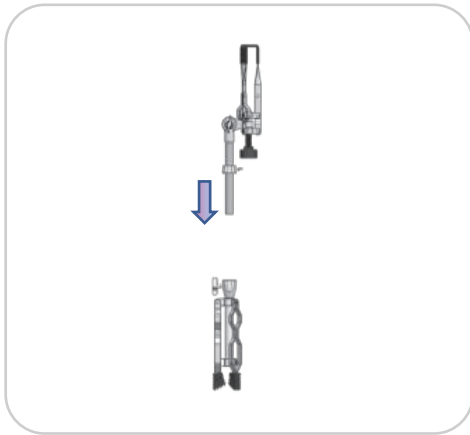


13 Installing the Snare Stand (2)

- Open the support legs.

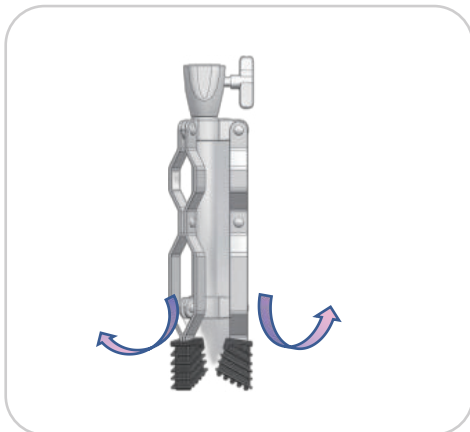

14 Installing the Snare Stand (3)

- Open the support frame to the appropriate angle.

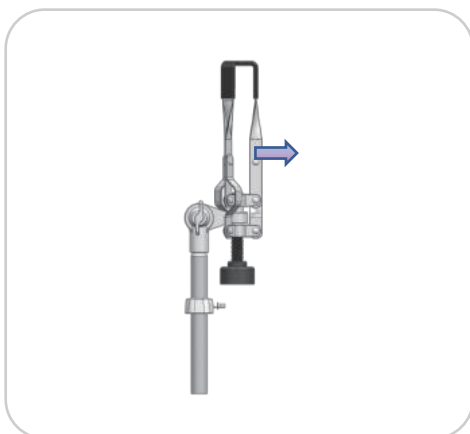



15 Installing the Snare Drum

- Place the snare drum into the snare drum stand and tighten the locking nut.




16 Installing the Tom Drum (1)

- Remove the drum pad support rod and insert it into the pipe clamp that fixes the tom drum.

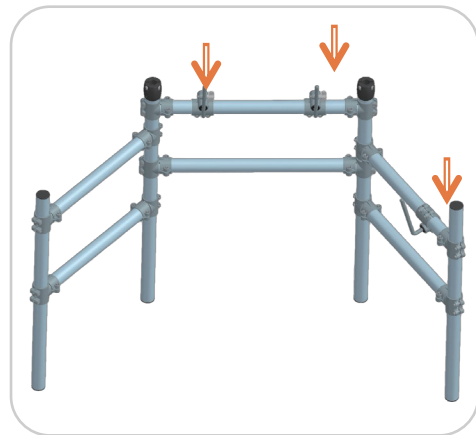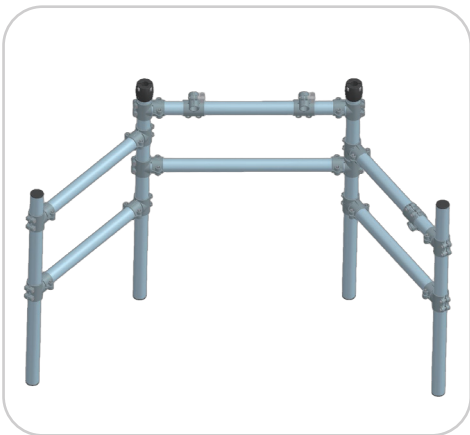



17 Installing the Tom Drum (2)

- Insert the drum pad support rod as shown in the picture, lock it into the pipe, and tighten the hand screw.

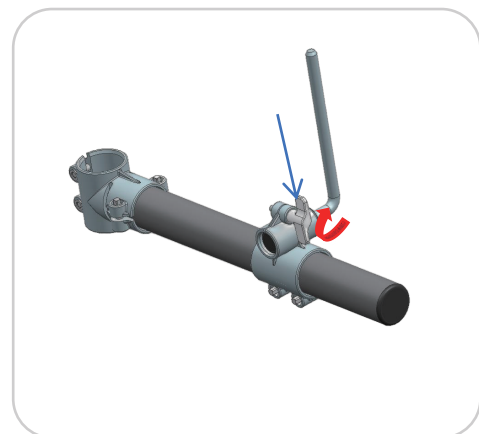


18 Installing the Tom Drum (3)


- Insert the tom drum seat into the drum pad support rod, adjust the height, and then lock the hand screw.

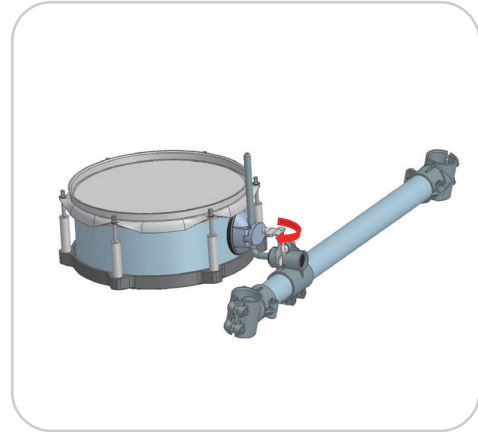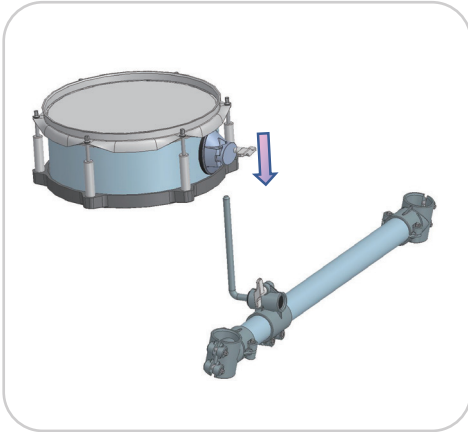**19 Installing the Tom Drum (4)**

- Fix the tom drums separately onto the frame.

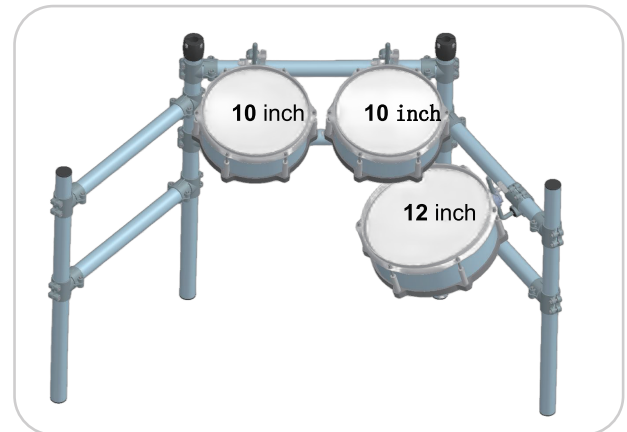
**20 Installing the Cymbals (1)**

- Remove the felt washer and locking knob from the cymbal mounting rod.

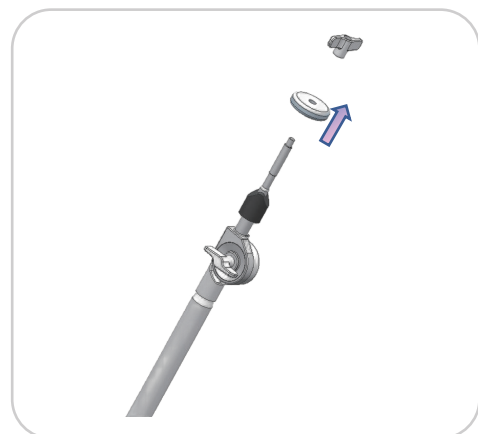


21 Installing the Cymbals (2)

- Place the cymbal onto the mounting rod. Push it down to sit on the rubber base, then add the felt washer and tighten the knob.

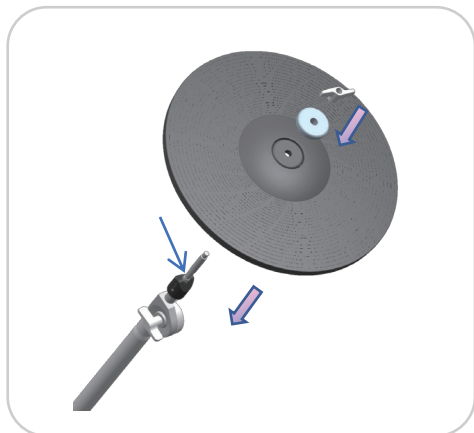


22 Installing the Cymbals (3)

- Install the crash cymbal, ride cymbal, and expansion cymbal onto the cymbal mounting rods in the above - mentioned way.

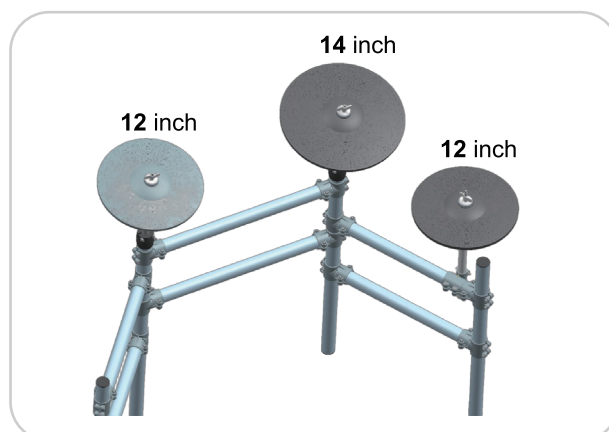

23 Installing the Cymbals (4)

- About the Ride Cymbal!

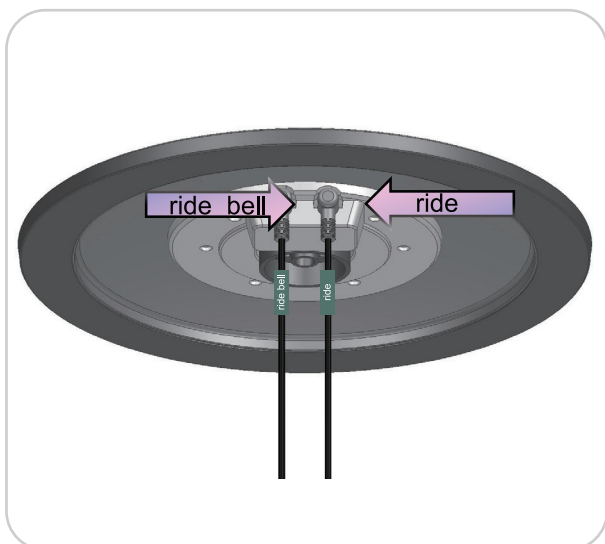

Ride Cymbal Features

- Bell – The center area.
- Bow – The main playing surface.
- Edge – The outer edge.

Cable Connections

Connect both cables:

- Ride Cable → EDGE + BOW
- Ride Bell Cable → BELL





IMPORTANT

Both cables must be connected for full ride cymbal functionality. If either cable is not connected, the corresponding trigger zone will not function.


24 Installation of the Bass Drum(1)

- Take out the bass drum shell and the drum legs. Adjust the angle of the drum legs and then lock them onto the bass drum leg seats.

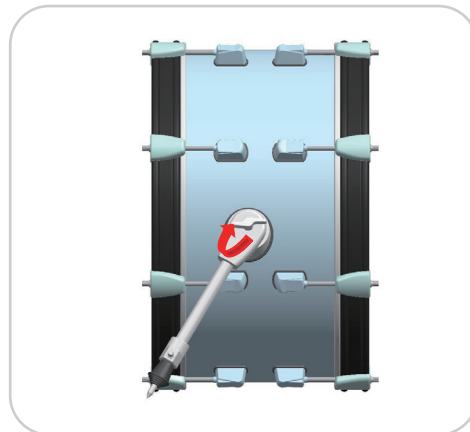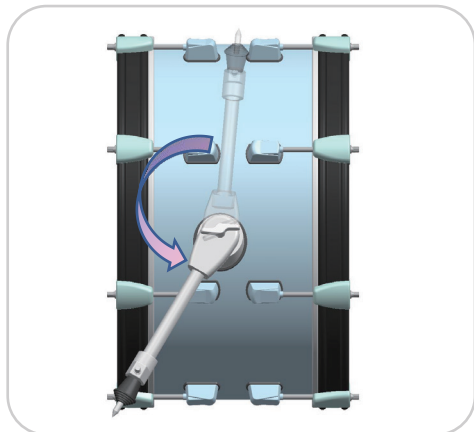


25 Installation of the Bass Drum(2)

- Take out the bass drum pedal. Insert the fixed iron rods into the fixed holes at both ends of the gantry respectively.

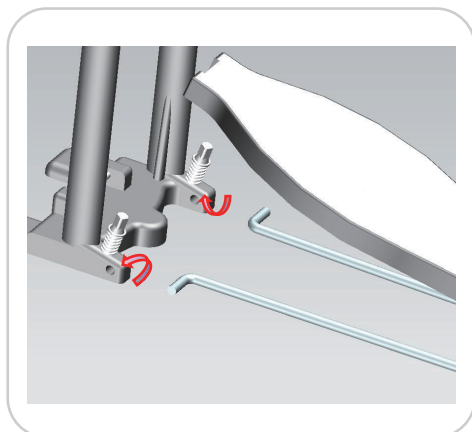


26 Installation of the Bass Drum(3)

- Insert the beater into the fixed hole.

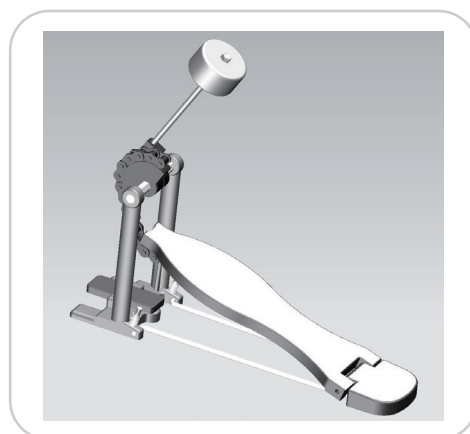

27 Installation of the Bass Drum(4)

- Adjust the height of the beater to a suitable position, then lock the screw to fix the beater.

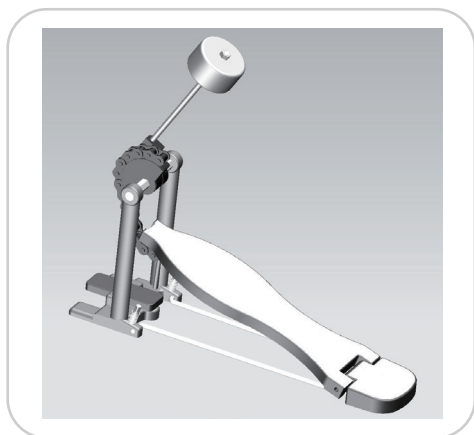


28 Installation of the Bass Drum(5)

- Loosen the bass drum pedal pressure plate and slot it into the bass drum hoop, so that the pressure plate clamps the hoop.




29 Installation of the Bass Drum(6)

- Once the bass drum pedal position is adjusted properly, lock the pressure plate knob tight.

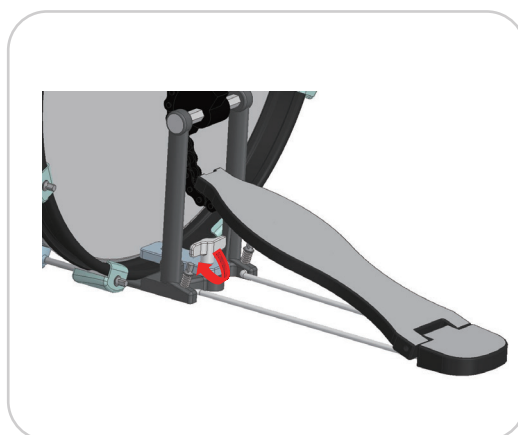

30 Installation of the Bass Drum(7)

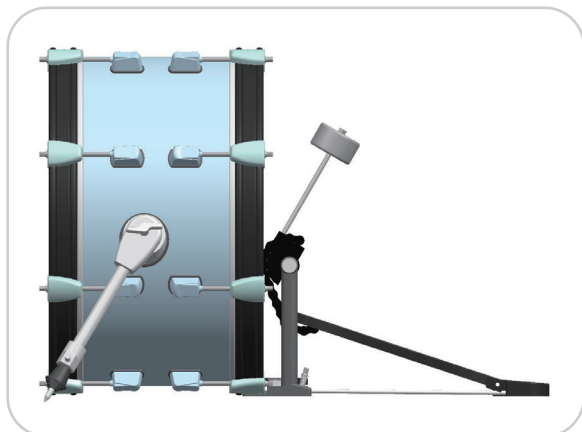

- For the two support legs of the bass drum, try to make their angles and heights as consistent as possible. This keeps the bass drum stable. The bass drum pedal must be locked onto the bass drum hoop to ensure smooth striking.




OPTIONAL SETUP DOUBLE PEDAL MODELS ONLY

The following steps apply only if your kit includes a double pedal. If you are using a single pedal, skip to the next section.


31 INSTALL THE DOUBLE PEDAL BEATERS

- Insert both beaters into the pedal shafts.
- Adjust the height as needed

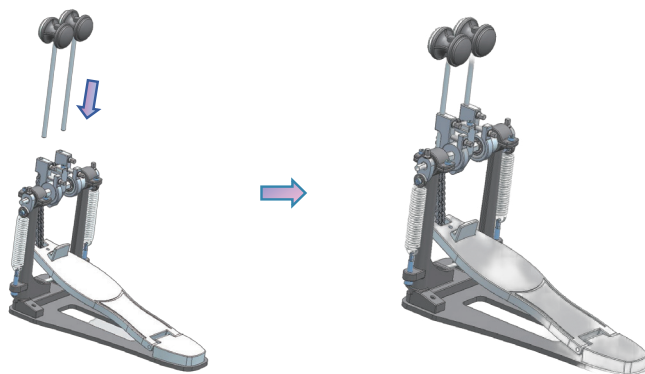



32 ADJUST THE BEATER HEIGHT

- Use the drum key to loosen the set screw.
- Adjust the beater height.
- Retighten the set screw securely.

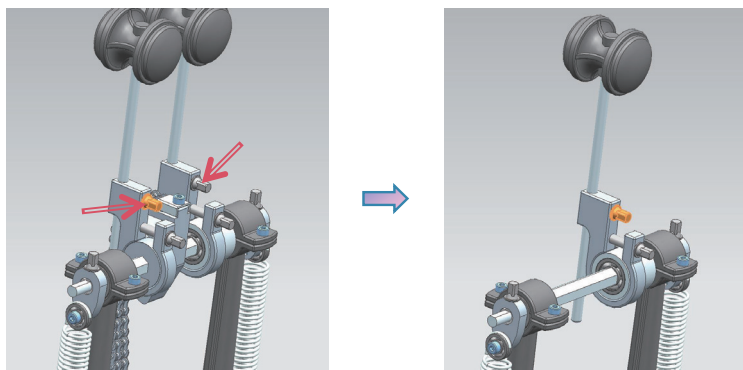



33 CONNECT THE DRIVE SHAFT

- Insert the drive shaft into the universal joints on both pedals.
- Tighten the locking screws securely.

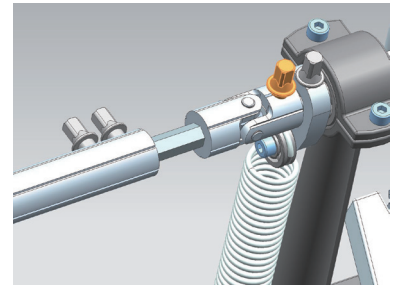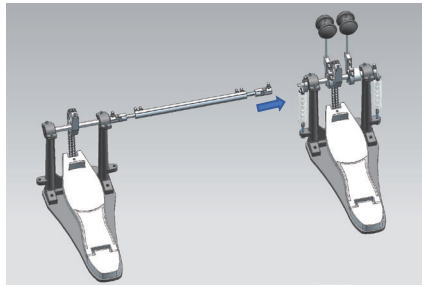



34 SECURE THE DRIVE SHAFT

- Verify that both ends of the drive shaft are fully seated in the universal joints.
- Tighten all locking screws securely.

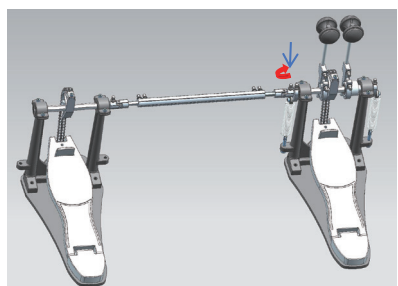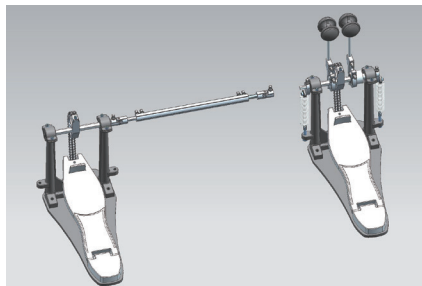


35 ADJUST THE DRIVE SHAFT LENGTH

- Use a drum key to loosen the screws at both ends of the drive shaft.
- Slide the shaft in or out to adjust the length.
- Retighten both screws securely.

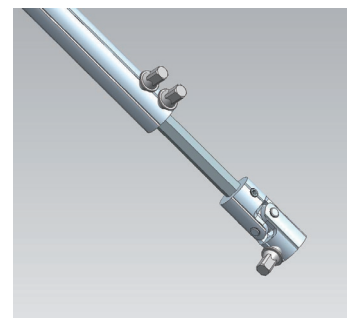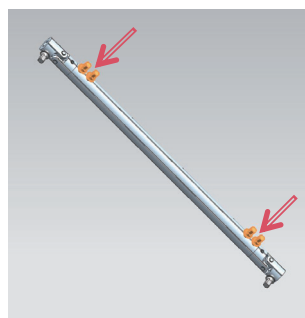


36 ADJUST THE BEATER ANGLE

- Use a drum key to loosen the angle adjustment screw.
- Set the beater angle to the desired position.
- Retighten the screw securely.

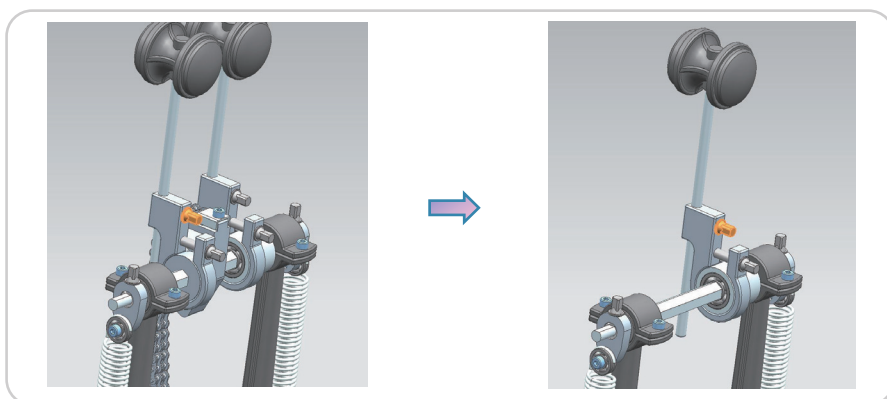


37 ADJUST THE LEFT FOOT-BOARD

- Use a drum key to loosen the screws shown in the diagram.
- Adjust the footboard height and the beater angle.
- Retighten the screws securely.

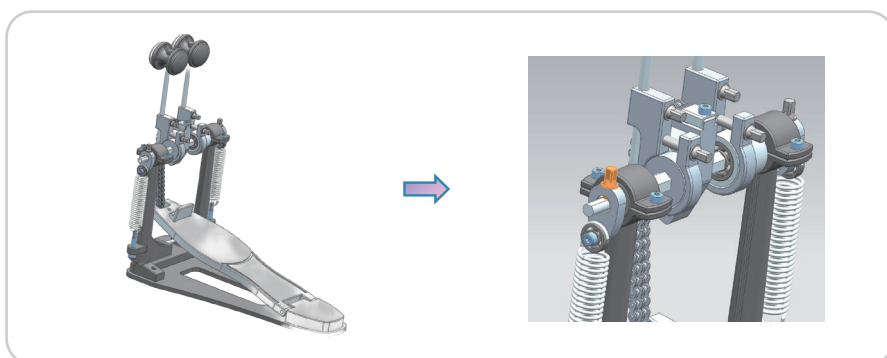

38 ADJUST THE RIGHT FOOT-BOARD

Use a drum key to loosen the screws shown in the diagram. Adjust the footboard height and the beater angle. Retighten the screws securely.

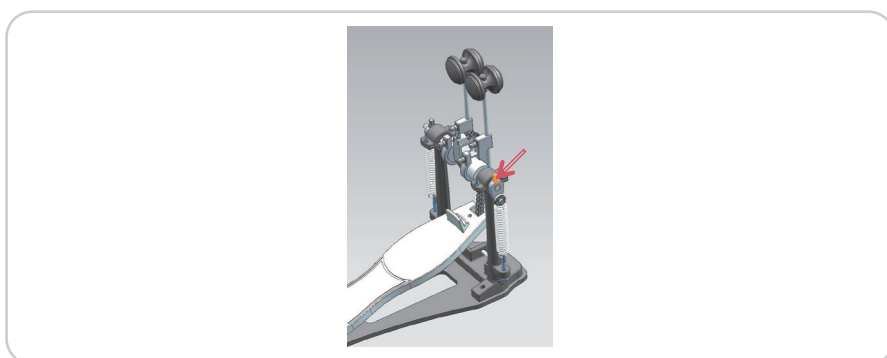

DOUBLE PEDAL SETUP TIP

Proper adjustment is essential for optimal performance and natural playing feel.


Both beaters should strike the center of the kick pad.




Both beaters should be set to the same height.



Keep the drive shaft level.

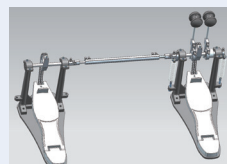

Retighten all locking screws after adjustment.

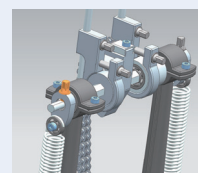

39 INSTALL THE SOUND MODULE

Insert the sound module mounting rod into the slot on the back of the sound module, then attach the rod to the rack clamp and tighten the knob to secure.



1 Insert the mounting rod into the slot on the back of the sound module.

2 Attach the rod to the rack clamp.

3 Adjust the position, then tighten the knob to secure.



MODULE POSITIONING TIPS

Position the module where it is easy to reach and operate.

Do not overtighten the mounting clamp or knob.

Leave enough cable slack for adjustment and movement.

Keep cables away from the pedal area and moving parts.



ASSEMBLY CHECKLIST

Before proceeding to the cable connection guide, please verify that:

☐ Rack is assembled and stable.

☐ All drum pads are installed.

☐ All cymbals are installed.

☐ Hi-hat is installed and adjusted.

☐ Kick pedal is secured.

☐ All clamps and knobs are tightened.

☐ Sound module is mounted firmly.

☐ Ready for cable connections.




CONNECT THE CABLES TO THE MODULE

All cables are labeled.

Match the cable label to the pad or cymbal name.

1 Connect the Main Cable Harness

- Insert the main cable harness connector into the cable port on the module.
- Connect each labeled cable to the corresponding pad or cymbal.

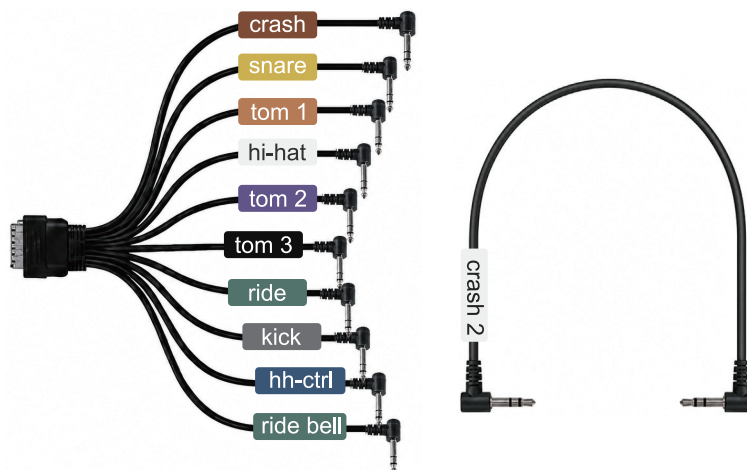

2 Connect Crash 2

Use the supplied extension cable to connect the Crash 2 cymbal to the CRASH2 input on the module.



3 Connect Headphones or Speakers



Option A: Headphones

Connect your headphones to the PHONE jack.



Option B: Speaker / Amplifier

Connect an audio cable from the OUTPUT L/MONO jack to your speaker or amplifier.



ALL SET!

Turn on the module and start playing. You should now hear sound.

ADDITIONAL CONNECTIONS

Optional Connections to Expand Your Setup


These connections are optional. Use them to connect to other devices.



USB MIDI



Connect to a computer.

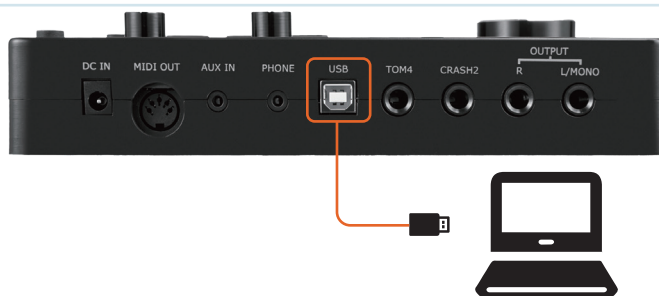

IMPORTANT

- USB transmits MIDI data only.
- USB does NOT transmit audio.
- To record or hear audio, you need audio software and an audio interface.



WIRELESS AUDIO



Play music from your phone or tablet through the module.



Device Name: BT AUDIO

Used for:
Playing music, YouTube, Spotify, and other audio from your phone or tablet.



TIP Connect to "BT AUDIO" to hear music.



WIRELESS MIDI



Connect to apps and send/receive MIDI data.



Device Name: BLE MIDI

Used for:
MIDI communication with drum apps and software.



TIP Connect to "BLE MIDI" for apps and MIDI.



WHICH ONE SHOULD I CONNECT TO?

Play music from your phone/tablet



BT AUDIO

Use this for audio playback.



BLE MIDI

Use this for MIDI communication.



IMPORTANT

Do not connect to "BLE MIDI" if you want to play music. You will not hear any audio.



AUX IN

Connect an external audio device.



Use a 3.5mm audio cable to connect a phone, tablet, CD player, or MP3 player. The audio will play through your headphones or speakers.



MIDI OUT

Connect to external MIDI equipment.



Use a MIDI cable to connect to an external MIDI device such as a sound module, sequencer, or another drum module.



CRASH 2

Connect an optional crash cymbal.



Requires the included extension cable. Connect your optional crash cymbal to the CRASH2 input.

DRUM KIT SELECTION

What is a Drum Kit?

A drum kit is a combination of all drum pads, cymbals and controller sounds and parameters. The module contains 40 kits.

- 001 – 020 Preset Kits (cannot be overwritten)
- 021 – 040 User Kits (can be customized and saved)



TIP
User kits (021–040) allow you to customize and save your own sounds and settings.

How to Select a Drum Kit


- 1 Press [KIT] to enter the Drum Kit screen.



- 2 Use the [+] / [-] buttons or turn the dial to switch between drum kits.



or

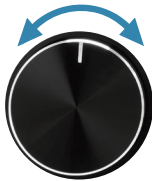

DRUM KIT	001
001	METAL
TEMPO: 120	RHY:1/4

- 3 The screen displays the selected kit information.

1	DRUM KIT	001
2	001	
3	METAL	
4	TEMPO: 120	RHY:1/4
5		

No.	Item	Description
1	DRUM KIT	Screen Title
2	001	Drum Kit Number
3	METAL	Drum Kit Name
4	TEMPO: 120	Tempo
5	RHY:1/4	Beat (Rhythm)

VOICE (SOUND) SELECTION

Change the Sound of Any Pad or Cymbal

Each pad, cymbal, or controller has a voice (sound) assigned to it. You can change the voice to get the sound you want.



TIP

Always strike the pad or cymbal you want to edit first. The module will load the current voice of that pad.

1 Strike the pad or cymbal you want to edit.

The module will load the current voice of that pad.



For example, hit Snare.

or



For example, hit Crash

VOICE SELECT SNARE

120

Maple Snare

TEMPO: 120

RHY: 1/4


2 Press [VOICE] to enter the Voice selection screen.



3 Use the [+] / [-] buttons or turn the dial to choose a new voice.



or

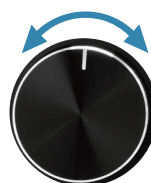

VOICE SELECT SNARE

045

Rock Snare

TEMPO: 120

RHY: 1/4

4 Strike the pad again to preview the sound.



Listen to the new sound.

Try different voices until you find the one you like.

5 Press [SAVE] to save the new voice to the current user kit (021–040).



SAVED!

Your new voice is now saved.

Examples

Here are some common voices you can try.

Snare: 120 Maple Snare

Tom 1: 045 Rock Tom

Tom 2: 046 Studio Tom

Crash: 067 Bright Crash

Ride: 081 Jazz Ride

Hi-Hat: 110 Closed Hi-Hat

Voice Number Guide

000 - 299 Drum & Cymbal

300 - 399 Percussion

400 - 459 Electronic & FX

SOUND PARAMETERS

Adjust Pitch, Volume, Pan and MIDI

You can fine-tune the sound of each pad, cymbal, or controller. These settings are saved in user kits (021-040).



TIP

Strike the pad you want to edit before adjusting the parameters.

How to Adjust Sound Parameters

- 1 Strike the pad you want to edit.
- 2 Press [VOICE] to enter the Voice selection screen.
- 3 Use [▲/▼] or [+/-] to choose the parameter.
- 4 Turn the dial or use [+/-] to adjust the value.



Example: Snare



VOICE SELECT SNARE	
PITCH	+02
RANGE: -12 ~ +12	

Press **[SAVE]** to store your changes.

Parameter	What It Does	When to Adjust It	Increase Value	Decrease Value	Range
PITCH	Changes the pitch (high or low).	When the drum sound is too high or too low.	Higher pitch	Lower pitch	-12~+12
VOLUME	Adjusts the loudness of the pad.	When the pad is too loud or too soft compared to others.	Louder	Softer	0~127
PAN	Adjusts the stereo position (left or right).	When you want the sound to come more from the left or right side.	Moves right	Moves left	L63(L)~00~R63 (R)
MIDI	Shows the MIDI note number assigned to this pad.	Use for reference when connecting to a computer or MIDI device.	—	—	000~127

Parameter Screen Example

VOICE EDIT	SNARE	1	Parameter Name
VOLUME		2	Current Value
105		3	Pad Name
RANGE: 0 - 127		4	Available Range



Important Notes

- These adjustments only affect the selected pad.
- To edit another pad, strike that pad first.
- All parameter changes will be lost if you switch to a preset kit (001~020) or do not save to a user kit (021~040).

METRONOME

Use the Metronome to Improve Your Timing

The built-in metronome helps you practice with a steady beat. You can adjust the tempo, time signature, sound and volume.




TIP

Press [CLICK] anytime to turn the metronome on or off.

How to Use the Metronome




- 1 Press  to turn the metronome on.
- 2 Press [$\blacktriangle$ / $\blacktriangledown$] or [+ / -] to select a parameter.
- 3 Turn the dial or use [+ / -] to adjust the value.
- 4 Press [START/STOP] to start or stop the metronome.

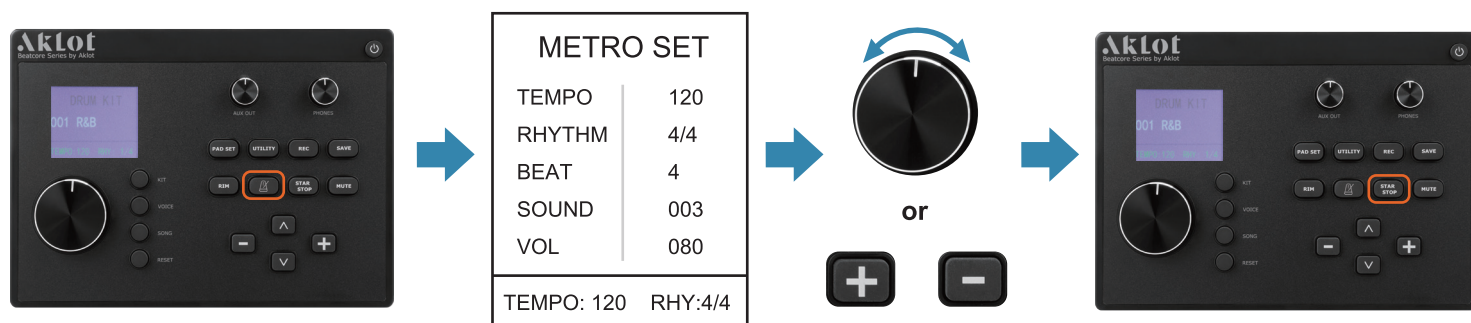

Metronome Parameters

Parameter	What It Does	When to Adjust It	Value Range	Default
TEMPO	Sets the speed (beats per minute).	When the metronome is too fast or too slow.	30 – 250	120
RHYTHM	Selects the time signature (beat pattern).	When you want a different beat pattern.	1/4, 2/4, 3/4, 4/4, 5/4, 6/8, 9/8	4/4
BEAT	Sets which beat the accent (strong beat) is on.	When the accent beat is not where you want it.	1 – 9	1
SOUND	Selects the metronome sound.	When you want a different click or sound.	001 – 005	003
VOL	Adjusts the metronome volume.	When the metronome is too loud or too soft.	0 – 127	080

Metronome Sound Options

001	Click		
002	Wood Block		
003	Electronic Click		
004	Bell		
005	Voice Count		

SONG PLAYBACK

Play Along with Built-in Songs

The module includes 20 built-in songs. You can play along with the song, or mute the drum track to practice on your own.



TIP

Playing along with songs is a great way to improve your timing and have fun!

How to Play a Song

- 1 Press [SONG] to enter the Song selection screen.
- 2 Use [+] / [-] or the dial to select a song.
- 3 Press [START/STOP] to start playback.
- 4 Press [START/STOP] again to stop.



Demo Mode & Accompaniment Mode



Demo Mode (With Drums)

Play the song with the original drums.
Great for listening or performing along.

SONG	DEMO
001	
Rock Beat	
TEMPO: 120	BEAT: 4/4

Drum track



Accompaniment Mode (Drum Mute)

Mute the drum track and play along with the music.

SONG	DEMO
001	
Rock Beat	
TEMPO: 120	BEAT: 4/4

Drum track



How to Mute the Drum Track

During song playback, press [MUTE] to turn the drum track off or on.



Song Information

Item	What It Means	Description
SONG	Screen Title	Indicates you are in the Song (playback) screen.
001	Song Number	Select from 001 to 020.
Rock Beat	Song Name	Name of the selected song.
TEMPO	Tempo	Current tempo of the song.
BEAT	Time Signature	Current time signature (e.g., 4/4, 3/4).

RECORDING

Record Your Performance

You can record your drumming and playback to check your performance. Each user kit can store one recording.

How to Record

- 1 Press [REC] to enter record standby.
- 2 Strike any pad to start recording.
- 3 Play your performance.
- 4 Press [START/STOP] to stop recording.
- 5 Press [REC] or [START/STOP] to playback.



The REC indicator will blink.
The module is ready to record.



The REC indicator
will light solid.



Recording...



The recording is saved
automatically.



The REC indicator
will blink during
playback.

During Playback



Press [+] / [-] or turn the dial
to adjust the playback volume.




Press and hold [-] / [+]
to fast rewind or fast forward.



Press [START/STOP] to stop.

Delete a Recording

1. Press [REC].
2. Use [+] / [-] or the dial to select the recording.
3. Press and hold [REC] for 2 seconds.
4. "DELETE?" will appear.
5. Press [+] (YES) to delete or [-] (NO) to cancel.

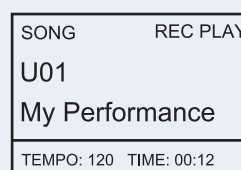

DELETE?

YES: [+]
NO: [-]

Recording Information

Item	Description	Details
Recording Capacity	One recording per user kit	User kits (021-040) only
Recording Time	Maximum length	Approx. 5 minutes
Data Format	Saved as MIDI performance	No audio is recorded
Lost Data	Not saved to a user kit	Will be lost when power is turned off

TRIGGER SETTINGS OVERVIEW

Optimize Pad Response for Better Performance

Trigger settings affect how the pads and cymbals respond to your playing. Adjust these settings when you experience triggering problems.



TIP

Most users do not need to change these settings. Adjust only when you encounter triggering issues.

When Should I Adjust Trigger Settings?

If you experience any of the following problems, try adjusting the corresponding trigger settings.


Pads trigger too easily	Pads do not trigger or miss notes	One pad triggers another pad	Double triggering (one hit sounds twice)	Hi-hat does not open or close correctly	Rimshot or cross stick triggers too easily or too hard
					
Adjust Sensitivity	Adjust Sensitivity or Threshold	Adjust Crosstalk	Adjust Sensitivity or Threshold	Adjust Hi-Hat Settings	Adjust Rim Sensitivity or Rim Function

Access the Trigger Settings Menu



1 Press [MENU].



2 Use the dial to select "TRIGGER".

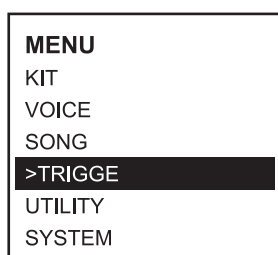

3 Press the dial to enter the Trigger menu.

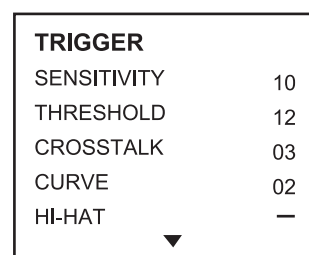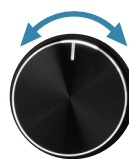

Trigger Setting Categories

Category	What It Does	Key Settings
Sensitivity & Threshold	Controls how hard you need to hit the pad to trigger a sound.	SENS (Sensitivity), THR (Threshold)
Crosstalk & Curve	Prevents other pads from triggering and adjusts response feel.	XTALK (Crosstalk), CURVE (Curve)
Hi-Hat & Rim Settings	Optimizes hi-hat behavior and rimshot/cross stick performance.	HHH (Hi-Hat), RS (Rim Sensitivity), RIM (Rim Function)
Effects & EQ	Adjusts overall reverb and EQ for your drum sound.	REVERB, REVOLUME, HIGH EQ, LOW EQ

TRIGGER SETTINGS: SENSITIVITY & THRESHOLD

Control How Hard You Need to Hit

Sensitivity determines how easily the pad triggers.

Threshold sets the minimum force required to trigger a sound.

Adjust these if pads trigger too easily, miss notes, or feel uneven.




TIP


Make small adjustments and test the pad after each change. Different pads may require different settings.

How to Adjust Sensitivity and Threshold

- 1 Strike the pad you want to adjust.
- 2 Press [MENU] → select "TRIGGER" → enter the Trigger menu.
- 3 Use the dial to select "SENSITIVITY" or "THRESHOLD".
- 4 Use [+] / [-] or the dial to adjust the value.
- 5 Press [SAVE] to store your changes.

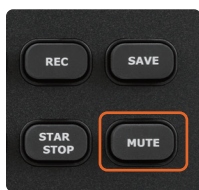

TRIGGER	
SENSITIVITY	10
THRESHOLD	12
CROSSTALK	03
CURVE	02
HI-HAT	—

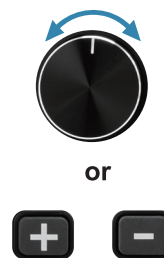

What Do These Settings Do?

Setting	What It Does	Increase (+)	Decrease (–)	Range	Default
Sensitivity	Determines how easily the pad triggers when you hit it. Higher values make it easier to trigger.	Triggers more easily. Requires a lighter hit.	Triggers less easily. Requires a harder hit.	1 - 20	10
Threshold	Sets the minimum hit strength required to trigger a sound. Helps prevent unwanted triggers from light hits.	Requires a stronger hit to trigger. Reduces accidental triggers.	Requires a weaker hit to trigger. Triggers more easily.	1 - 20	12

Recommended Adjustments

Problem	Try This
Pad triggers too easily	Decrease SENSITIVITY or increase THRESHOLD.
Pad does not trigger or misses notes	Increase SENSITIVITY or decrease THRESHOLD.
Double triggering (one hit sounds twice)	Increase THRESHOLD slightly.
Uneven response between pads	Adjust SENSITIVITY to match other pads.



Quick Test

1. Adjust the setting.
2. Hit the pad at different strengths:

Soft Hit
(Light)



Medium Hit
(Normal)



Hard Hit
(Strong)

3. Make sure the pad responds the way you want.

TRIGGER SETTINGS: CROSSTALK & CURVE

Prevent Unwanted Triggers and Shape Response

Crosstalk prevents other pads from triggering when you hit a pad. Curve adjusts how the pad responds to your playing dynamics.




TIP


If a pad triggers another pad, increase Crosstalk. If the pad feels too light or too hard, adjust the Curve.

How to Adjust Crosstalk or Curve

- 1 Strike the pad you want to adjust.
- 2 Press [MENU] → select "TRIGGER" → enter the Trigger menu.
- 3 Use the dial to select "CROSSTALK" or "CURVE".
- 4 Use [+] / [-] or the dial to adjust the value.
- 5 Press [SAVE] to store your changes.

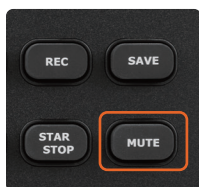

TRIGGER	
SENSITIVITY	10
THRESHOLD	12
CROSSTALK	03
CURVE	02
HI-HAT	—

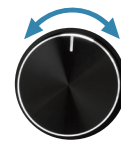

or



What Do These Settings Do?

Setting	What It Does	Increase (+)	Decrease (–)	Range	Default
CROSSTALK	Prevents other pads from triggering when you hit a pad. Higher values reduce unwanted triggers from nearby pads or cymbals.	Better isolation. Less chance of other pads triggering.	More natural feel. Nearby pads may trigger more easily.	0 - 10	03
CURVE	Determines how the pad's output changes based on how hard you hit. Adjust to match your playing style.	More output for hard hits. Response feels more sensitive at higher dynamics.	More output for soft hits. Response feels lighter and easier to play.	0 - 10	02

Crosstalk Example

Problem:

Hitting the Snare also triggers the Tom.



Solution:

Increase Crosstalk value.

Curve Example

Too Hard to Get Loud
(Curve too low)



Solution:

Increase Curve value.



Easier to Get Loud
(Curve higher)

TRIGGER SETTINGS:

HI-HAT & RIM

Optimize Hi-Hat and Rim Performance

Adjust hi-hat behavior for natural open/close response.

Configure rim sensitivity and rim function for snare and tom rims.





TIP


Good hi-hat settings make a big difference in feel and expression. Set rim sensitivity so that only rim shots trigger the rim sound.

How to Adjust Hi-Hat or Rim Settings

- 1 Press [MENU] → select "TRIGGER" → enter the Trigger menu.
- 2 Use the dial to select "HI-HAT" or "RIM".
- 3 Press the dial to enter the setting.
- 4 Use [+] / [-] or the dial to adjust the value.
- 5 Press [SAVE] to store your changes.

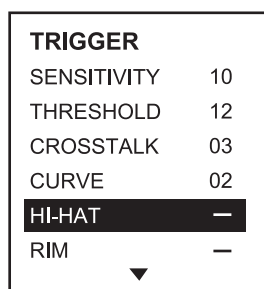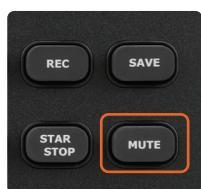

or



Hi-Hat Settings

Setting	What It Does	Range	Default
HH (Hi-Hat)	Adjusts the sensitivity of the hi-hat pedal (open/close detection).	1 - 20	08
HH Sens (Pedal Sens)	Adjusts how hard you need to press the pedal to trigger closed hi-hat.	1 - 20	10
HH Offset	Adjusts the open/close position offset.	-10 - +10	00

Hi-Hat Behavior Guide

Foot Up (Open)

Pedal up



Hi-hat open sound.

Foot Down (Closed)

Pedal down



Hi-hat closed sound.

Half-Open (Chick)

Pedal in between



Chick sound (half-open).

Adjust HHH and HH Offset for smooth and accurate response.

Rim Settings

Setting	What It Does	Range	Default
RS (Rim Sensitivity)	Adjusts how hard you need to hit the rim to trigger the rim sound.	1 - 20	10
RIM (Rim Function)	Selects the rim trigger function.	See below	01

Rim Function Options

01: RIM SHOT

Rim hit triggers the rim sound.

02: CROSS STICK

Rim hit triggers the cross stick sound.

03: RIM SHOT + CROSS STICK

Normal hit = rim sound

Rim edge hit = cross stick sound.

EFFECTS & EQ SETTINGS

Shape Your Drum Sound

Effects and EQ settings let you fine-tune your overall drum sound. Adjust reverb, volume, and EQ to match your playing style and music.



TIP


Start with the default settings and make small adjustments. Use your ears and play along with music to find the best sound.

Access the Effects & EQ Menu

1 Press [MENU].

2 Use the dial to select 'EFFECTS'

3 Press the dial to enter the Effects menu.

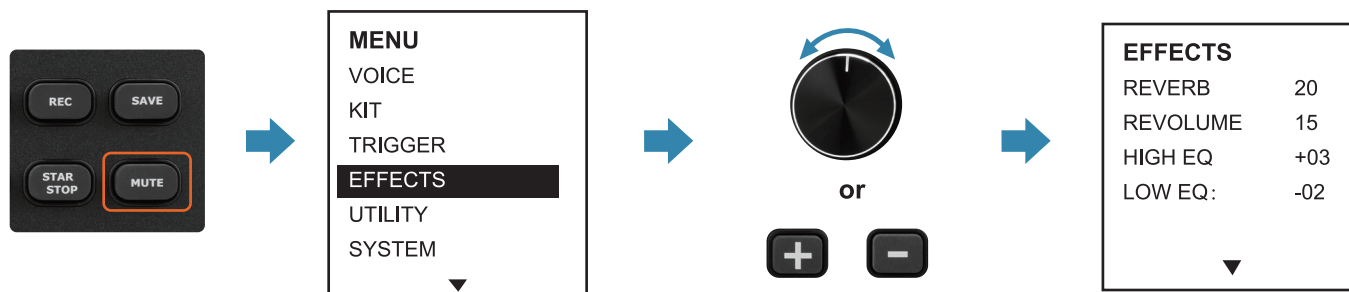

Effects & EQ Parameters

Parameter	What It Does	Value Range	Default
REVERB	Adds ambience and depth to the overall drum sound.	0 – 40	20
REVOLUME	Adjusts the level of the reverb effect.	0 – 30	15
HIGH EQ	Adjusts high-frequency (treble) range. Boost for more brightness and attack.	-10 – +10	+03
LOW EQ	Adjusts low-frequency (bass) range. Boost for more punch and fullness.	-10 – +10	-02


How to Adjust

1 In the EFFECTS menu, select the parameter you want to adjust.

2 Press the dial to select the parameter.

3 Use [+] / [-] or the dial to adjust the value.

4 Press [SAVE] to store your changes.

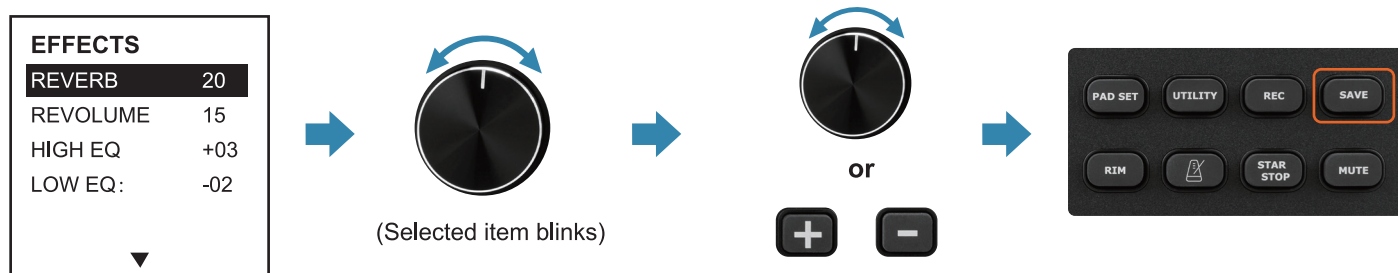

UTILITY FUNCTIONS

Customize Settings for Your Needs

Utility functions help you tailor the drum module to your preferences and playing environment. Make adjustments to suit your setup and workflow.




TIP

Utility settings are saved to the user kit. If needed, reset to factory settings to restore the default values.

Access the Utility Menu

- 1 Press [MENU].
- 2 Use the dial to select 'UTILITY'.
- 3 Press the dial to enter the Utility menu.

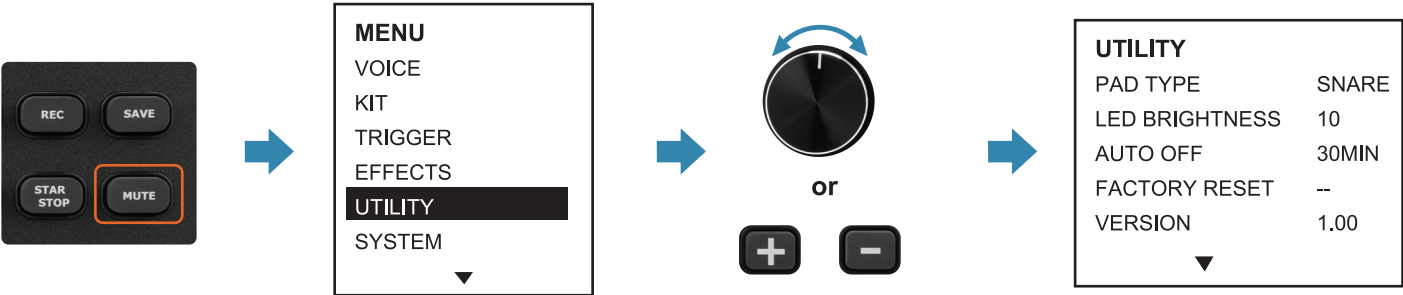


Utility Menu Items

Item	What It Does	Options / Range	Default
PAD TYPE	Sets the pad type for the snare input to optimize trigger response.	SNARE (PDX-6A/8/100) TOM (PDX-6A/8)	SNARE
LED BRIGHTNESS	Adjusts the brightness of the module's LED indicators.	1 (Dim) – 10 (Bright)	10
AUTO OFF	Sets the time before the module automatically turns off when idle.	OFF, 15MIN, 30MIN, 60MIN	30MIN
ACTORY RESET	Restores all settings to factory defaults.	Execute	--
VERSION	Displays the firmware version of the module.	--	--

How to Adjust

- 1 In the UTILITY menu, select the item you want to adjust.
- 2 Press the dial to select the item.
- 3 Use [+] / [-] or the dial to adjust the value.
- 4 Press [SAVE] to store your changes.

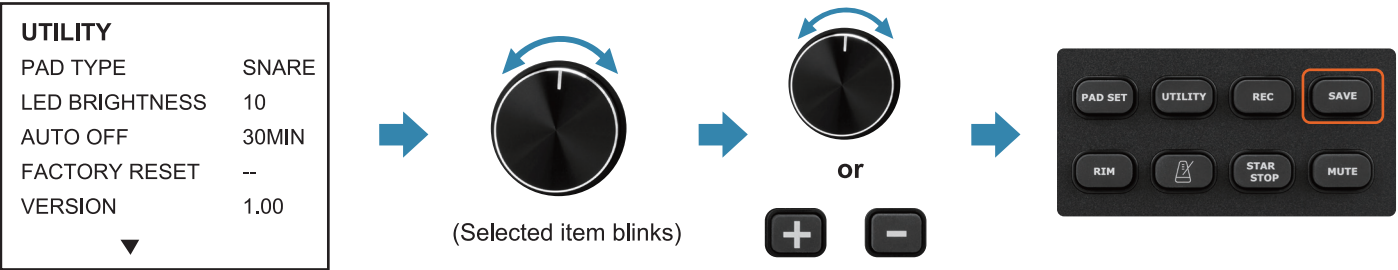

TROUBLESHOOTING

Quick Solutions to Common Issues

If you run into a problem, try the steps below.

Most issues can be fixed by checking connections, settings, or trigger adjustments.



TIP

Small adjustments can make a big difference. If the problem continues, please contact our support team.

Issue	What to Check	Solution
Hi-Hat only plays open sound It sounds the same whether the pedal is pressed or not.	✓ Check HH-CTRL cable connection. ✓ Check hi-hat controller alignment. ✓ Make sure the cymbal presses the controller when closed.	Reconnect the HH-CTRL cable. Align the hi-hat and controller. Adjust HH offset in UTILITY if needed.
One pad triggers another pad Multiple pads sound at the same time.	✓ Check crosstalk (XTALK) setting. ✓ Check pad spacing. ✓ Check sensitivity and threshold.	Increase XTALK. Increase THR. Reduce SENS if necessary.
Pad misses notes or has no sound Some hits are not detected.	✓ Check sensitivity (SENS). ✓ Check threshold (THR). ✓ Check cable connections.	Increase SENS. Decrease THR. Reconnect the pad cable.
Rim sound triggers accidentally Rim shots occur when hitting the head.	✓ Check rim sensitivity (RS / CS). ✓ Check pad mounting. ✓ Check rim function setting.	Adjust RS / CS. Tighten the pad mount. Adjust rim sensitivity.
Settings are not saved Changes are lost after power off.	✓ Check if SAVE was pressed. ✓ Check if you edited a User Kit. ✓ Check firmware version.	Press SAVE after every change. Edit in a User Kit (021–040). Update firmware if needed.
Kit changes disappear Edits revert to the original.	✓ Edited in a Preset Kit. ✓ SAVE not pressed.	Edit in a User Kit (021–040). Press SAVE to store changes.

CABLE SWAP TEST & REPORT RESULTS (2/2)

Advanced Diagnostic Test

Why Perform This Test?

If the troubleshooting steps did not resolve the issue, perform the cable swap test below and send us the results.

This information will help our technical support team determine the next troubleshooting or warranty solution.



TIP

The cable swap test provides important diagnostic information for our support team. Please record the results and send them to us if the issue remains unresolved.

1 Test the problem pad / cymbal

Plug a known working pad/cymbal cable into the problem pad/cymbal, then hit it.

Working
Pad / Cymbal



Problem
Pad / Cymbal

Record the result of Step 1



A. The problem is gone

☐ Record this result (A)



B. The problem remains

☐ Record this result (B)

2 Test the original cable

Plug the original cable from the problem pad/cymbal into a known working pad/cymbal, then hit it.

Working
Pad / Cymbal



Original Cable
(From Problem Pad)

Record the result of Step 2



A. The problem is gone

☐ Record this result (C)



B. The problem remains

☐ Record this result (D)



REPORT YOUR RESULTS

Please record your test results below and send them to AKLOT Support.

Step 1 Result

(Problem Pad + Working Cable)

- ☐ A. The problem is gone
☐ B. The problem remains

Step 2 Result

(Working Pad + Original Cable)

- ☐ It works
☐ It still doesn't work

Photos or Videos

(Of the test)

- ☐ Yes
☐ No



The more information we receive, the faster we can help!

SEND YOUR RESULTS TO AKLOT

After completing the cable swap test, please email the following information to our support team:

- ✓ Test results from Step 1 and Step 2
- ✓ Photos or videos showing the test (if available)
- ✓ Product model
- ✓ Order number
- ✓ Contact information

EMAIL US



cs@aklot.com

Our technical team will analyze the results and provide the appropriate solution.



We will review your information and respond as soon as possible.



HELPFUL RESOURCES



Video Guides

Scan the QR code to watch setup, troubleshooting, and feature videos.



Download Center

Get the latest firmware, manual, and presets.



Official Website

Visit our website for news, updates, and more products.



Timbre

Number	Timbre
Kick	
1	Metal Kick
2	Grunge Kick
3	Jazz Kick
4	Indie Kick
5	Rock Kick
6	Arena Kick
7	HipHop Kick
8	Heavy Kick
9	House Kick
10	Popular Kick
11	Classic Kick
12	Street Kick
13	EDM Kick
14	R&B Kick
15	Dance Kick
16	80' s Kick
17	Cosmic Kick
18	Breakcore Kick
19	D&B Kick
20	Effect Kick
Snare	
21	Metal Snare
22	Grunge Snare
23	Jazz Snare
24	Indie Snare
25	Rock Snare
26	Arena Snare
27	HipHop Snare
28	Heavy Snare
29	House Snare
30	Popular Snare
31	Classic Snare
32	Street Snare
33	EDM Snare
34	R&B Snare
35	Dance Snare
36	80' s Snare
37	Cosmic Snare
38	Breakcore Snare
39	D&B Snare
40	Effect Snare
41	Metal Stick

Number	Timbre
42	Grunge Stick
43	Jazz Stick
44	Indie Stick
45	Rock Stick
46	Arena Stick
47	HipHop Stick
48	Heavy Stick
49	House Stick
50	Popular Stick
51	Classic Stick
52	Street Stick
53	EDM Stick
54	R&B Stick
55	Dance Stick
56	80' s Stick
57	Cosmic Stick
58	Breakcore Stick
59	D&B Stick
60	Effect Stick
61	Metal Snare Rim Shot
62	Grunge Snare Rim Shot
63	Jazz Snare Rim Shot
64	Indie Snare Rim Shot
65	Rock Snare Rim Shot
66	Arena Snare Rim Shot
67	HipHop Snare Rim Shot
68	Heavy Snare Rim Shot
69	House Snare Rim Shot
70	Popular Snare Rim Shot
71	Classic Snare Rim Shot
72	Street Snare Rim Shot
73	EDM Snare Rim Shot
74	R&B Snare Rim Shot
75	Dance Snare Rim Shot
76	80' s Snare Rim Shot
77	Cosmic Snare Rim Shot
78	Breakcore Snare Rim Shot
79	D&B Snare Rim Shot
80	Effect Snare Rim Shot
Hi-Hat	
81	Metal Hi-Hat Half Open
82	Grunge Hi-Hat Half Open
83	Jazz Hi-Hat Half Open

Number	Timbre
84	Metal Hi-Hat Half Open
85	Rock Hi-Hat Half Open
86	Arena Hi-Hat Half Open
87	HipHop Hi-Hat Half Open
88	Heavy Hi-Hat Half Open
89	House Hi-Hat Half Open
90	Popular Hi-Hat Half Open
91	Classic Hi-Hat Half Open
92	Street Hi-Hat Half Open
93	EDM Hi-Hat Half Open
94	R&B Hi-Hat Half Open
95	Dance Hi-Hat Half Open
96	80's Hi-Hat Half Open
97	Cosmic Hi-Hat Half Open
98	Breakcore Hi-Hat Half Open
99	D&B Hi-Hat Half Open
100	Effect Hi-Hat Half Open
101	Metal Hi-Hat Close
102	Grunge Hi-Hat Close
103	Jazz Hi-Hat Close
104	Indie Hi-Hat Close
105	Rock Hi-Hat Close
106	Arena Hi-Hat Close
107	HipHop Hi-Hat Close
108	Heavy Hi-Hat Close
109	House Hi-Hat Close
110	Popular Hi-Hat Close
111	Classic Hi-Hat Close
112	Street Hi-Hat Close
113	EDM Hi-Hat Close
114	R&B Hi-Hat Close
115	Dance Hi-Hat Close
116	80's Hi-Hat Close
117	Cosmic Hi-Hat Close
118	Breakcore Hi-Hat Close
119	D&B Hi-Hat Close
120	Effect Hi-Hat Close
121	Metal Hi-Hat Pedal
122	Grunge Hi-Hat Pedal
123	Jazz Hi-Hat Pedal
124	Indie Hi-Hat Pedal
125	Rock Hi-Hat Pedal
126	Arena Hi-Hat Pedal

Number	Timbre
127	HipHop Hi-Hat Pedal
128	Heavy Hi-Hat Pedal
129	House Hi-Hat Pedal
130	Popular Hi-Hat Pedal
131	Classic Hi-Hat Pedal
132	Street Hi-Hat Pedal
133	EDM Hi-Hat Pedal
134	R&B Hi-Hat Pedal
135	Dance Hi-Hat Pedal
136	80's Hi-Hat Pedal
137	Cosmic Hi-Hat Pedal
138	Breakcore Hi-Hat Pedal
139	D&B Hi-Hat Pedal
140	Effect Hi-Hat Pedal
141	Metal Hi-Hat Open
142	Grunge Hi-Hat Open
143	Jazz Hi-Hat Open
144	Indie Hi-Hat Open
145	Rock Hi-Hat Open
146	Arena Hi-Hat Open
147	HipHop Hi-Hat Open
148	Heavy Hi-Hat Open
149	House Hi-Hat Open
150	Popular Hi-Hat Open
151	Classic Hi-Hat Open
152	Street Hi-Hat Open
153	EDM Hi-Hat Open
154	R&B Hi-Hat Open
155	Dance Hi-Hat Open
156	80's Hi-Hat Open
157	Cosmic Hi-Hat Open
158	Breakcore Hi-Hat Open
159	D&B Hi-Hat Open
160	Effect Hi-Hat Open
Tom	
161	Metal Tom1
162	Grunge Tom1
163	Jazz Tom1
164	Indie Tom1
165	Rock Tom1
166	Arena Tom1
167	HipHop Tom1
168	Heavy Tom1

Number	Timbre
169	House Tom1
170	Popular Tom1
171	Classic Tom1
172	Street Tom1
173	EDM Tom1
174	R&B Tom1
175	Dance Tom1
176	80' s Tom1
177	Cosmic Tom1
178	Breakcore Tom1
179	D&B Tom1
180	Effect Tom1
181	Metal Tom1 Rim
182	Grunge Tom1 Rim
183	Jazz Tom1 Rim
184	Indie Tom1 Rim
185	Rock Tom1 Rim
186	Arena Tom1 Rim
187	HipHop Tom1 Rim
188	Heavy Tom1 Rim
189	House Tom1 Rim
190	Popular Tom1 Rim
191	Classic Tom1 Rim
192	Street Tom1 Rim
193	EDM Tom1 Rim
194	R&B Tom1 Rim
195	Dance Tom1 Rim
196	80' s Tom1 Rim
197	Cosmic Tom1 Rim
198	Breakcore Tom1 Rim
199	D&B Tom1 Rim
200	Effect Tom1 Rim
201	Metal Tom2
202	Grunge Tom2
203	Jazz Tom2
204	Indie Tom2
205	Rock Tom2
206	Arena Tom2
207	HipHop Tom2
208	Heavy Tom2
209	House Tom2
210	Popular Tom2
211	Classic Tom2

Number	Timbre
212	Street Tom2
213	EDM Tom2
214	R&B Tom2
215	Dance Tom2
216	80' s Tom2
217	Cosmic Tom2
218	Breakcore Tom2
219	D&B Tom2
220	Effect Tom2
221	Metal Tom2 Rim
222	Grunge Tom2 Rim
223	Jazz Tom2 Rim
224	Indie Tom2 Rim
225	Rock Tom2 Rim
226	Arena Tom2 Rim
227	HipHop Tom2 Rim
228	Heavy Tom2 Rim
229	House Tom2 Rim
230	Popular Tom2 Rim
231	Classic Tom2 Rim
232	Street Tom2 Rim
233	EDM Tom2 Rim
234	R&B Tom2 Rim
235	Dance Tom2 Rim
236	80' s Tom2 Rim
237	Cosmic Tom2 Rim
238	Breakcore Tom2 Rim
239	D&B Tom2 Rim
240	Effect Tom2 Rim
241	Metal Tom3
242	Grunge Tom3
243	Jazz Tom3
244	Indie Tom3
245	Rock Tom3
246	Arena Tom3
247	HipHop Tom3
248	Heavy Tom3
249	House Tom3
250	Popular Tom3
251	Classic Tom3
252	Street Tom3
253	EDM Tom3
254	R&B Tom3

Number	Timbre
255	Dance Tom3
256	80's Tom3
257	Cosmic Tom3
258	Breakcore Tom3
259	D&B Tom3
260	Effect Tom3
261	Metal Tom3 Rim
262	Grunge Tom3 Rim
263	Jazz Tom3 Rim
264	Indie Tom3 Rim
265	Rock Tom3 Rim
266	Arena Tom3 Rim
267	HipHop Tom3 Rim
268	Heavy Tom3 Rim
269	House Tom3 Rim
270	Popular Tom3 Rim
271	Classic Tom3 Rim
272	Street Tom3 Rim
273	EDM Tom3 Rim
274	R&B Tom3 Rim
275	Dance Tom3 Rim
276	80's Tom3 Rim
277	Cosmic Tom3 Rim
278	Breakcore Tom3 Rim
279	D&B Tom3 Rim
280	Effect Tom3 Rim
281	Metal Tom4
282	Grunge Tom4
283	Jazz Tom4
284	Indie Tom4
285	Rock Tom4
286	Arena Tom4
287	HipHop Tom4
288	Heavy Tom4
289	House Tom4
290	Popular Tom4
291	Classic Tom4
292	Street Tom4
293	EDM Tom4
294	R&B Tom4
295	Dance Tom4
296	80's Tom4
297	Cosmic Tom4

Number	Timbre
298	Break core Tom4
299	D&B Tom4
300	Effect Tom4
301	Metal Tom4 Rim
302	Grunge Tom4 Rim
303	Jazz Tom4 Rim
304	Indie Tom4 Rim
305	Rock Tom4 Rim
306	Arena Tom4 Rim
307	HipHop Tom4 Rim
308	Heavy Tom4 Rim
309	House Tom4 Rim
310	Popular Tom4 Rim
311	Classic Tom4 Rim
312	Street Tom4 Rim
313	EDM Tom4 Rim
314	R&B Tom4 Rim
315	Dance Tom4 Rim
316	80's Tom4 Rim
317	Cosmic Tom4 Rim
318	Breakcore Tom4 Rim
319	D&B Tom4 Rim
320	Effect Tom4 Rim
Ride	
321	Metal Ride
322	Grunge Ride
323	Jazz Ride
324	Indie Ride
325	Rock Ride
326	Arena Ride
327	HipHop Ride
328	Heavy Ride
329	House Ride
330	Popular Ride
331	Classic Ride
332	Street Ride
333	EDM Ride
334	R&B Ride
335	Dance Ride
336	80's Ride
337	Cosmic Ride
338	Breakcore Ride
339	D&B Ride

Number	Timbre
340	Effect Ride
341	Metal Ride Edge
342	Grunge Ride Edge
343	Jazz Ride Edge
344	Indie Ride Edge
345	Rock Ride Edge
346	Arena Ride Edge
347	HipHop Ride Edge
348	Heavy Ride Edge
349	House Ride Edge
350	Popular Ride Edge
351	Classic Ride Edge
352	Street Ride Edge
353	EDM Ride Edge
354	R&B Ride Edge
355	Dance Ride Edge
356	80' s Ride Edge
357	Cosmic Ride Edge
358	Breakcore Ride Edge
359	D&B Ride Edge
360	Effect Ride Edge
361	Metal Ride Bell
362	Grunge Ride Bell
363	Jazz Ride Bell
364	Indie Ride Bell
365	Rock Ride Bell
366	Arena Ride Bell
367	HipHop Ride Bell
368	Heavy Ride Bell
369	House Ride Bell
370	Popular Ride Bell
371	Classic Ride Bell
372	Street Ride Bell
373	EDM Ride Bell
374	R&B Ride Bell
375	Dance Ride Bell
376	80' s Ride Bell
377	Cosmic Ride Bell
378	Breakcore Ride Bell
379	D&B Ride Bell
380	Effect Ride Bell
Crash	
381	Metal Crash1

Number	Timbre
382	Grunge Crash1
383	Jazz Crash1
384	Indie Crash1
385	Rock Crash1
386	Arena Crash1
387	HipHop Crash1
388	Heavy Crash1
389	House Crash1
390	Popular Crash1
391	Classic Crash1
392	Street Crash1
393	EDM Crash1
394	R&B Crash1
395	Dance Crash1
396	80' s Crash1
397	Cosmic Crash1
398	Breakcore Crash1
399	D&B Crash1
400	Effect Crash1
401	Metal Crash1 Edge
402	Grunge Crash1 Edge
403	Jazz Crash1 Edge
404	Indie Crash1 Edge
405	Rock Crash1 Edge
406	Arena Crash1 Edge
407	HipHop Crash1 Edge
408	Heavy Crash1 Edge
409	House Crash1 Edge
410	Popular Crash1 Edge
411	Classic Crash1 Edge
412	Street Crash1 Edge
413	EDM Crash1 Edge
414	R&B Crash1 Edge
415	Dance Crash1 Edge
416	80' s Crash1 Edge
417	Cosmic Crash1 Edge
418	Breakcore Crash1 Edge
419	D&B Crash1 Edge
420	Effect Crash1 Edge
421	Metal Crash2
422	Grunge Crash2
423	Jazz Crash2
424	Indie Crash2

Number	Timbre
425	Rock Crash2
426	Arena Crash2
427	HipHop Crash2
428	Heavy Crash2
429	House Crash2
430	Popular Crash2
431	Classic Crash2
432	Street Crash2
433	EDM Crash2
434	R&B Crash2
435	Dance Crash2
436	80' s Crash2
437	Cosmic Crash2
438	Breakcore Crash2
439	D&B Crash2
440	Effect Crash2
441	Metal Crash2 Edge
442	Grunge Crash2 Edge

Number	Timbre
443	Jazz Crash2 Edge
444	Indie Crash2 Edge
445	Rock Crash2 Edge
446	Arena Crash2 Edge
447	HipHop Crash2 Edge
448	Heavy Crash2 Edge
449	House Crash2 Edge
450	Popular Crash2 Edge
451	Classic Crash2 Edge
452	Street Crash2 Edge
453	EDM Crash2 Edge
454	R&B Crash2 Edge
455	Dance Crash2 Edge
456	80' s Crash2 Edge
457	Cosmic Crash2 Edge
458	Breakcore Crash2 Edge
459	D&B Crash2 Edge
460	Effect Crash2 Edge

Drum combination timbre _____

Number	Timbre
1	Metal
2	Grunge
3	Jazz
4	Indie
5	Rock
6	Arena
7	HipHop
8	Heavy
9	House
10	Popular
11	Classic
12	Street
13	EDM
14	R&B
15	Dance
16	80' s
17	Cosmic
18	Breakcore
19	D&B
20	Effect

User drum kit _____

U01 - U20 (20 user - preset drum kits in total)

Demonstration music _____

D01 - D20 (20 songs in total)

AKLOT

KEEP THE BEAT GOING

Practice · Create · Perform.

Thank you for choosing AKLOT.
We're proud to be part of your
musical journey.



VIDEO GUIDES

Step-by-step videos
to get you started.



PRODUCT SUPPORT

Get help with
setup, usage, and
troubleshooting.



WARRANTY

Register your product
to activate your
warranty and updates.



cs@aklot.com



www.aklot.com

