Aklot

USER MANUAL

Electronic Drum Set

B-CORE53 NEO



Unleash Your Rhythm Anytime, Anywhere

Aklot

Scan for Setup Guide & Tips



Setup Guide | Pro Tips | Warranty

Warranty

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.

- ◆ 1-Year Warranty
- ◆ 24/7 Online Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email:【cs@ aklot.com】

If any questions related to orders, please contact the seller through the shopping platform.

Content

Content ---------- 2

Function Introduction ---------- 3

Installation Guide ---------- 8

Sound Module Port Diagram ---------- 9

Operation Guide ---------- 11

Appendix ---------- 11

Product Maintenance ---------- 14


Safety Precautions ---------- 15


Troubleshooting ---------- 17

on Introduction



- Maximum polyphony of 32 notes, with 6 layers of velocity sensitivity
- 30drum kits, with 360drum sounds
- 20 built-in songs
- Adjustable sensitivity for each drum pad
- Tempo control: 30-280 BPM
- Metronome
- Additional features: Parameter memory, reset function
- LED display
- Connections: USB MIDI, headphone jack, line-in, line-out
- Ability to create and edit custom drum kits

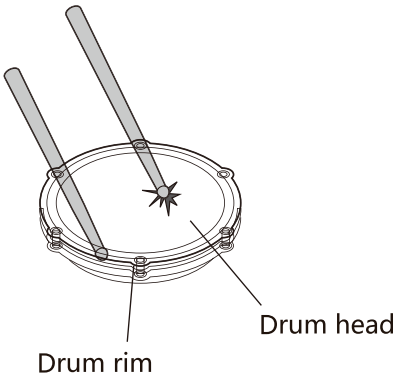

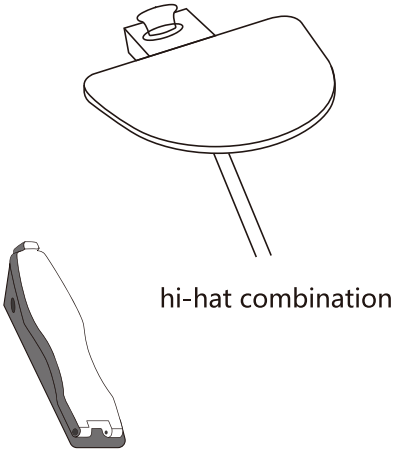

Notice


● This product is an electronic musical instrument. A slight humming noise from the speakers or headphones when powered on is normal. To avoid interference, please keep the device away fro "radios, televisions, antenna receivers, routers, refrigerators, televisions, electric motors, and any other sources of radio frequency interference."

01 Check the Included Items


- Upon opening the package, please immediately check to ensure all items are included. If anything is missing, contact your dealer.




Sound module




Sound module stand

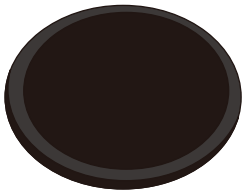


Tom drum * 3

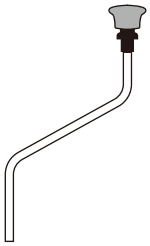

Cymbal support rod * 3

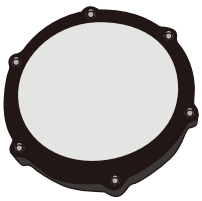


Snare drum

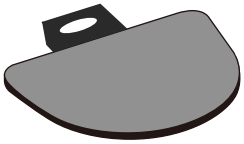


Cymbals * 3




USB cable

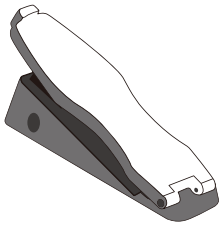

Hi-hat pedal

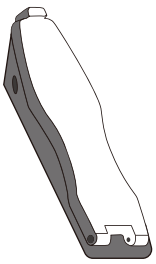


Kick drum pedal




Drumsticks



Connection cables

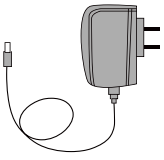

Power adapter

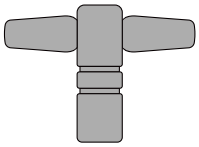

Drum key



Headphones




Lesson book


Intallation Guide

01 Drum Pad Installation

- Proceed with caution to avoid pinching your fingers.

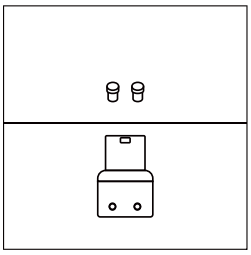


When installing the sound module, make sure the bracket is placed under the drum panel with its holes aligned underneath, then insert and tighten the screws from the top.

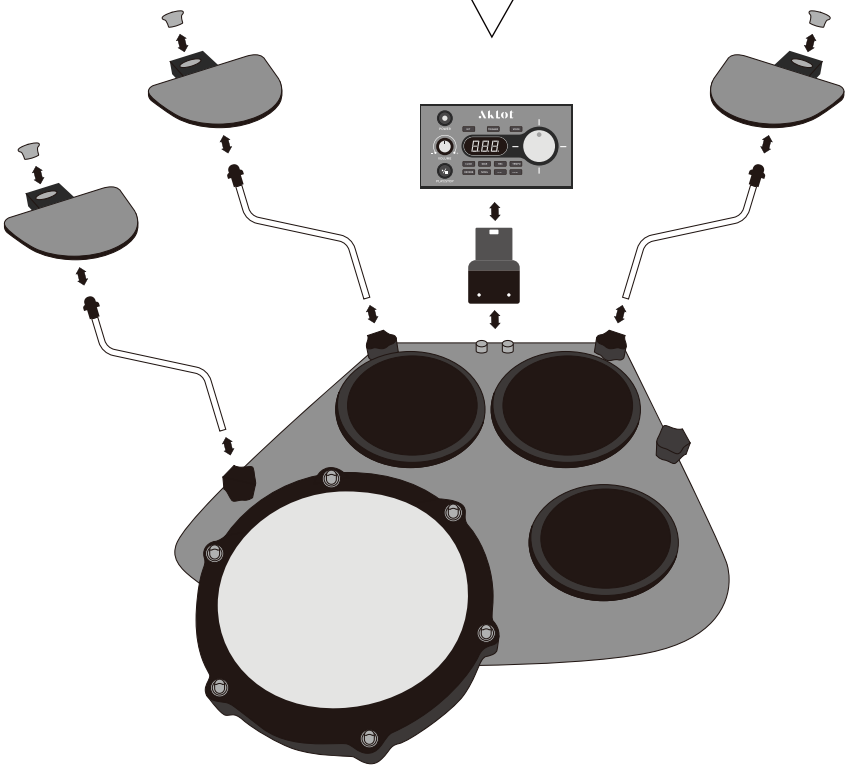


According to the diagram, first secure the three cymbals to the support rods, then use the drum key to fasten the assembled cymbal units to the drum panel.

02

- The labels affixed to the cables indicate the pad to which they should be connected. Make connections as shown in the illustration.

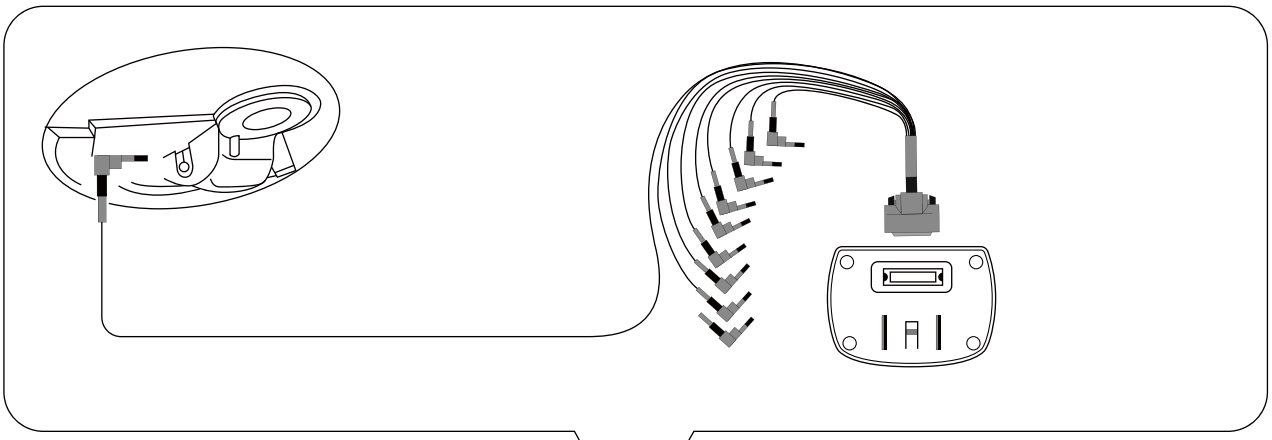


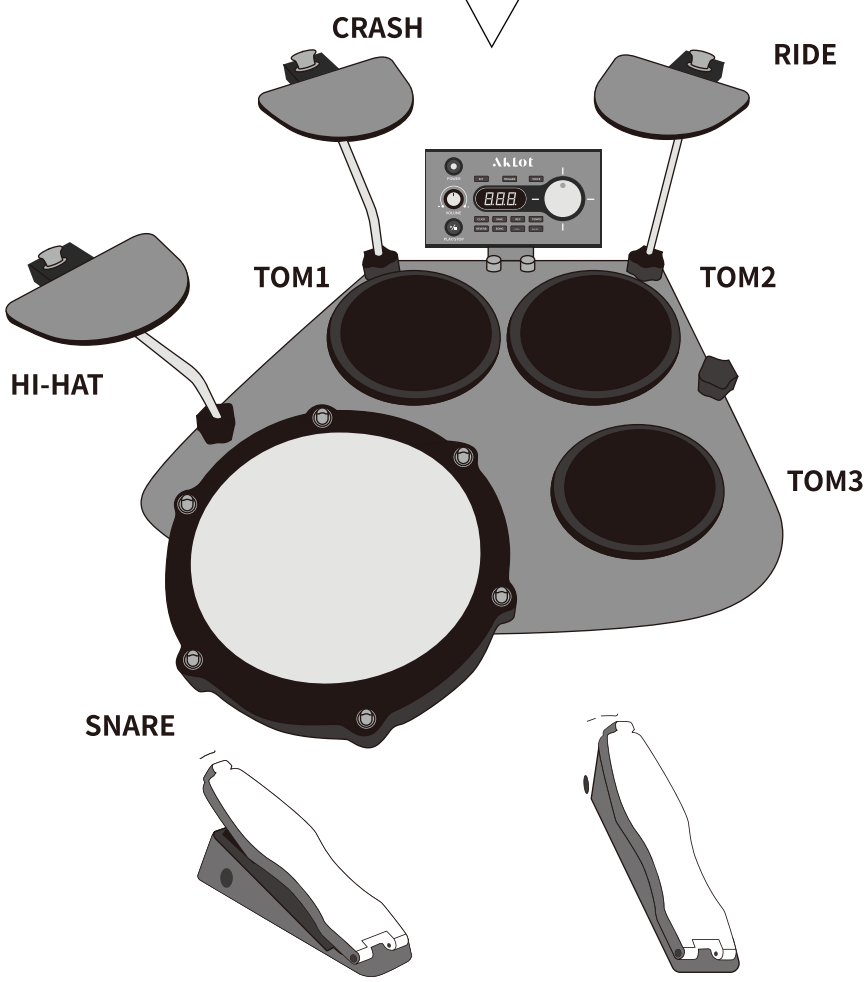

Hi-hat pedal

Kick drum pedal

03 Sound Module Port Diagram

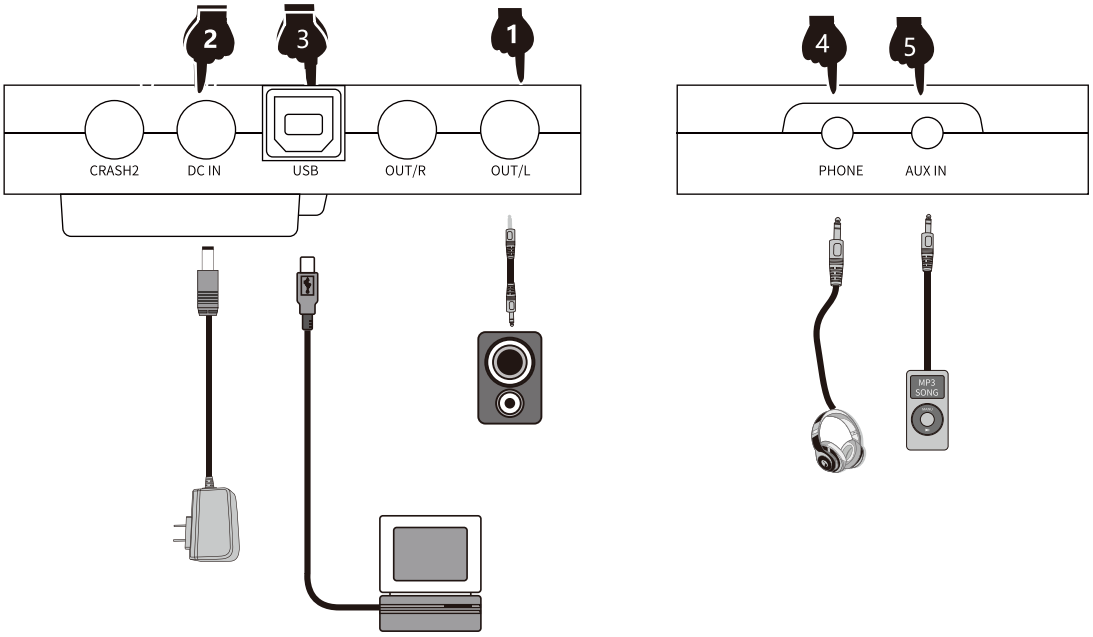

1 Output Port

For connecting a drum amplifier or other loudspeaker. (Fig 1)

2 Power Cord Connection

1. Connect the power cord as shown, with one end plugged into the drum control module's power port and the other end into a 100-240V household outlet. (Fig 2)
2. When the product is not in use for an extended period, please unplug the power cord and store it properly.(Fig 2)

3 USB MIDI Port

The electronic drum's MIDI USB interface can be used to interact with other musical devices equipped with MIDI.

1. It enables learning, performing, composing, and storing functionalities through pre-installed software on computers or tablets. (Fig3)
2. When connected to a computer or tablet, the device's audio output needs to be connected to the drum control module's audio input port to synchronize the sound effects. (Fig 3)

4 Headphone Port

Connecting headphones allows you to monitor the nuances of your playing without disturbing others when you are not connected to external speakers.(Fig 4)

5 Audio Input Port

The audio input port can connect external audio sources to the drum sound module for playback (such as)MP3, linear audio signal input from mobile phones, etc.) (Fig 5)

Operation Guide

1 KIT: Drum Kit Mode

Upon powering on, the device defaults to Drum Kit Vode, indicated by a constantly lit key indicator showing"001." which represents Drum Kit 1. There are a total of 30 drum kits, with 1~20 being preset drum kits andU01~U10 being user drum kits. Drum kits can be adjusted using the number wheel or the [-] or [+] keys.

2 Trigger



Users can adjust the trigger parameters according to personal needs. There are three types of parameters: threshold, and crosstalk control, which can be switched through by pressing the [TRIGGER] key.

A. Threshold is displayed as “Txx,” with a range of 1~10.
B. Sensitivity is displayed as “Sxx,” with a range of 1~15.
C. Crosstalk control is displayed as “Cxx,” with a range of 0~9.

} Can be adjusted via the numerical wheel

3 Voice

There are four parameters that can be adjusted: sound, volume, and pitch, indicated by a constantly lit key indicator.

D. Sound is displayed as “xxx,” with a range of 1~360.
E. Volume is displayed as “Lxx,” with a range of 0~32.
F. Pitch is displayed as “Pxx,” with a range of -8~8.
G. Transposition is displayed as “txx,” with a range of -6~6.

} Can be adjusted via the numerical wheel

4 Song

There are 20 songs, displayed as " Sxx " with a range of 1~20, indicated by a constantly lit key indicator.

5 Click

Short press the [CLICK] key to play and stop the metronome. Press and hold the [CLICK] to enter the metronome time signature adjustment. "x-x" is displayed, has 4 beats per measure, and time signatures range from 1/4 to 9/4, 1/8 to 9/8.

6 Tempo

Pressing the [TEMPO] key enters the song tempo adjustment page, displaying “xxx”with a range of 30~280.

7 Playback Stop

In recording mode, controls the playback and stop of the recording. On other pages, controls theplayback and stop of the song.

8 Record

Pressing the [REC] key, indicated by a constantly lit key indicator, starts recording the drumming.
The indicator flashes during recording. Pressing the [REC] key again stops the recording and the indicator turns off.

9 Creating User Drum Kit

Press the VOICE button to hit one of the drum discs that needs to be modifed in terms of tone color. By using theVOICE button, you can enter the interface of tone color, volume, phase, and shif tone in sequence. Use the encoderto adjust to satisfactory results, then use the above method to modify other drum disc parameters. Finally, press theSAVE] button, W01 will flash. Rotate the wheel to select the drum group number (U01-010) that you want to save. and press the [SAVE] button again to save the drum group.

10 Reverb key

Press the [REVERB] key to display "rxx", which has 16 levels and can be selected using the digital wheel. The higher the value, the greater the reverberation.

11 Add-substract Key

Select the drum set based on personal preference and return to the KIT page while pressing the addition and subtraction keys.

12 System Settings

There are 4 adjustable parameters in the system settings, namely: Local Control, Song Loop, Bluetooth Switch, Factory Reset, and Keypad Indicator Always-On.
a) Local Control: Displays "LoN" for enabling the connection between the trigger and the sound source (default); displays "LoF" for disconnecting.
b) Song Loop: Displays "SLN" for looping the song (default); displays "SLF" for playing the song once.
c) Wireless Connection Function: Displays "boF": Wireless connection is off (default); Displays "boN": Wireless connection is on.【Audio device number: EDRUM】
d) Factory Reset: Displays "AoF" for not performing a factory reset; displays "AoN" for performing a factory reset.

13 Muting the Drum Sound in Demo Songs

When a demo song is playing, press the 【DRUM OFF】 key to enable or disable the drum muting function. The DRUM OFF LED indicator will light up when this function is enabled.

14 Power Key

Press the 【POWER】 key to turn the device on or off. If no function is activated, the system will shut down automaticallyafter 10 minutes.
All parameters can be adjusted via the digital wheel.

Appendix

KICK

1	KICK01
2	KICK02
3	KICK03
4	KICK04
5	KICK05
6	KICK06
7	KICK07
8	KICK08
9	KICK09
10	KICK10
11	KICK11
12	KICK12
13	KICK13
14	KICK14
15	KICK15
16	KICK16
17	KICK17
18	KICK18
19	KICK19
20	KICK20
21	KICK21
22	KICK22
23	KICK23
24	KICK24
25	KICK25
26	KICK26
27	KICK27
28	KICK28
29	KICK29
30	KICK30
31	KICK31

SNARE

32	SNARE01
33	SNARE02
34	SNARE03
35	SNARE04
36	SNARE05
37	SNARE06
38	SNARE07
39	SNARE08
40	SNARE09
41	SNARE10
42	SNARE11
43	SNARE12
44	SNARE13
45	SNARE14
46	SNARE15
47	SNARE16
48	SNARE17
49	SNARE18
50	SNARE19
51	SNARE20
52	SNARE21
53	SNARE22
54	SNARE23
55	SNARE24
56	SNARE25
57	SNARE26
58	SNARE27
59	SNARE28
60	SNARE29
61	SNARE30
62	SNARE31
63	SNARE32
64	SNARE33
65	SNARE34
66	SNARE35
67	SNARE36
68	SNARE37
69	SNARE38
70	SNARE39
71	SNARE40
72	SNARE41
73	SNARE42
74	SNARE43
75	SNARE44
76	SNARE45
77	SNARE46
78	SNARE47
79	SNRIM01
80	SNRIM02
81	SNRIM03
82	SNRIM04
83	SNRIM05
84	SNRIM06
85	SNRIM07
86	SNRIM08
87	SNRIM09
88	SNRIM10
89	SNRIM11
90	SNRIM12
91	SNRIM13
92	ESNARE1
93	ESNARE2

HIHAT

94	CLOSEDHH01
95	CLOSEDHH02
96	CLOSEDHH03
97	CLOSEDHH04
98	CLOSEDHH05
99	CLOSEDHH06
100	CLOSEDHH07
101	CLOSEDHH08
102	CLOSEDHH09
103	CLOSEDHH10
104	PEDALHH01
105	PEDALHH02
106	PEDALHH03
107	PEDALHH04
108	PEDALHH05
109	PEDALHH06
110	PEDALHH07
111	PEDALHH08
112	PEDALHH09
113	PEDALHH10
114	OPENHH01
115	OPENHH02
116	OPENHH03
117	OPENHH04
118	OPENHH05
119	OPENHH06
120	OPENHH07
121	OPENHH08
122	OPENHH09
123	OPENHH10
124	LOOSEHH01
125	LOOSEHH02
126	LOOSEHH03
127	LOOSEHH04
128	LOOSEHH05
129	LOOSEHH06
130	LOOSEHH07
131	LOOSEHH08
132	LOOSEHH09
133	LOOSEHH10
134	EHIHAT1
135	EHIHAT2
136	EHIHAT3
137	EHIHAT4

TOM

138	HITOM01
139	HITOM02
140	HITOM03
141	HITOM04
142	HITOM05
143	HITOM06
144	HITOM07
145	HITOM08
146	HITOM09
147	HITOM10
148	HITOM11
149	HITOM12
150	HITOM13
151	HITOM14
152	MIDTOM01
153	MIDTOM02
154	MIDTOM03
155	MIDTOM04
156	MIDTOM05
157	MIDTOM06
158	MIDTOM07
159	MIDTOM08
160	MIDTOM09
161	MIDTOM10
162	MIDTOM11
163	FLOORTOM01
164	FLOORTOM02
165	FLOORTOM03
166	FLOORTOM04
167	FLOORTOM05
168	FLOORTOM06
169	FLOORTOM07
170	FLOORTOM08
171	FLOORTOM09
172	FLOORTOM10
173	FLOORTOM11
174	FLOORTOM12
175	ETOM1
176	ETOM2
177	ETOM3
178	ETOM4
179	ETOM5
180	ETOM6

CYMBAL

181	CRASH01
182	CRASH02
183	CRASH03
184	CRASH04
185	CRASH05
186	CRASH06
187	CRASH07
188	CRASH08
189	CRASH09
190	CRASH10
191	CRASH11
192	CRASH12
193	CRASH13
194	CRASH14
195	CRASH15
196	CRASH16
197	CRASH17
198	CRASH18
199	CRASH19
200	CRASH20
201	RIDE1
202	RIDE2
203	RIDE3
204	RIDE4
205	RIDE5
206	RIDEBELL1
207	RIDEBELL2
208	RIDEBELL3
209	RIDEBELL4
210	RIDEBELL5
211	ECYMBAL1
212	ECYMBAL2
213	ECYMBAL3
214	ECYMBAL4
215	ECYMBAL5
216	ECYMBAL6
217	ECYMBAL7
218	ECYMBAL8

PERCUSSION

219	HI_Q
220	SPACEHIT
221	X-RAY
222	SLAP
223	PUSH
224	PULL
225	STICK
226	SQCLCK
227	CLICK
228	BELL
229	CLAP1
230	CLAP2
231	CLAP3
232	TAMBRINE1
233	TAMBRINE2
234	COWBELL1
235	COWBELL2
236	COWBELL3
237	COWBELL4
238	COWBELL5
239	VIBRASLAP
240	HIBONGO
241	LOBANGO
242	MUTED CONGA
243	HI CONGA
244	LO CONGA1
245	LO CONGA2
246	HI TIMBALE
247	LO TIMBALE
248	HI AGOGO
249	LO AGOGO
250	CABASA
251	MARACS
252	SHORT WHISTLE
253	LOONG WHISTLE
254	SHORT GUIRO
255	LONG GUIRO
256	CLAVE
257	HI WOODBLOCK
258	LO WOODBLOCK
259	METED CUICA
260	OPEN CUICA
261	MUTED TRINGLE
262	OPEN TRINGLE
263	SHKER1
264	SHKER2
265	JINGLEBELL
266	BELL TREE
267	CASTANETS1
268	CASTANETS2
269	MUTED SURDO
270	OPEN SURDO
271	TALKING DRUM
272	TABLA1
273	TABLA2
274	SNAP
275	CAJON1
276	CAJON2
277	CAJON3
278	TIMPANI1
279	TIMPANI2
280	LOW GONG
281	E_LCLICKH
282	E_LCLICKL
283	TAIKO
284	BELL
285	BAN
286	SIGU
287	DONG1
288	DONG2
289	MID_GONG
290	PIATTI
291	SMALL_GONG1
292	SMALL_GONG2
293	CN_GONG1
294	CN_GONG2
295	ESCRCH
296	BOOM
297	BENDIR1
298	BENDIR2
299	BENDIR3
300	BENDIR4
301	BENDIR5

302	DAF1	321	KRIN6	340	DJEMBE19	359	RIQ6
303	DAF2	322	DJEMBE01	341	DUNUN01	360	RIQ7
304	DAF3	323	DJEMBE02	342	DUNUN02		
304	DAF4	324	DJEMBE03	343	DUNUN03		
306	DARBUKA1	325	DJEMBE04	344	DUNUN04		
307	DARBUKA2	326	DJEMBE05	345	DUNUN05		
308	DARBUKA3	327	DJEMBE06	346	DUNUN06		
309	DARBUKA4	328	DJEMBE07	347	DUNUN07		
310	DARBUKA5	329	DJEMBE08	348	DUNUN08		
311	DAVUL1	330	DJEMBE09	349	DUNUN09		
312	DAVUL2	331	DJEMBE10	350	DUNUN10		
313	DOHOLA1	332	DJEMBE11	351	DUNUN11		
314	DOHOLA2	333	DJEMBE12	352	DUNUN12		
315	DOHOLA3	334	DJEMBE13	353	DUNUN13		
316	KRIN1	335	DJEMBE14	354	RIQ1		
317	KRIN2	336	DJEMBE15	355	RIQ2		
318	KRIN3	337	DJEMBE16	356	RIQ3		
319	KRIN4	338	DJEMBE17	357	RIQ4		
320	KRIN5	339	DJEMBE18	358	RIQ5		

Preset Drum Kits

1	ROCK	6	POP3	11	VINTAGE	16	ELE2
2	HARD ROCK	7	FUNK/POP	12	JAZZ	17	ELE3
3	METAL	8	FUNK1	13	BRUSH	18	MACHING
4	POP1	9	FUNK2	14	LATIN	19	PERC.1
5	POP2	10	HIP-HOP	15	ELE1	20	PERC.2

User Drum Kits

21	USER1	24	USER4	27	USER7	30	USER10
22	USER2	25	USER5	28	USER8		
23	USER3	26	USER6	29	USER9		

Demonstration Music

001	ROCK	006	DISCO	011	FUNKY POP	016	LONG LONG AGO
002	ROCK	007	SIMPLE ROCK	012	BLUES	017	DECK THE HALL
003	FUNK	008	SYNTHY POP	013	SYMPHONY 9	018	XMAS TREE
004	HARDROCK	009	POP	014	SCARBOROUGH FAIR	019	SKIP TO MY LAU
005	HEAVY	010	POP	015	GREEN SLEEVES	020	RED RIVER VALLEY

Product Maintenance

Proper maintenance and protection of this product play a crucial role in extending its lifespan and reducing malfunctions.

1 Avoid Heat ,Moisture,or Direct Sunlight

Do not expose the product excessively to direct sunlight, or place it near air conditioning units or in extremely hot locations.

2 Do not Use Near Televison or Radios

This product may cause video or audio interference with televisions and radios. If this occurs, move th e product away from the television or radio.

3 Do not Clean with Paint, Thinners, or Similar Chemicals

To clean surface stains on the product, use a soft, clean cloth lightly dampened with water or a specific cleaning solution.


4 Do not Shake or Subject to Impact

When moving the product, handle it with care. It is strictly forbidden to shake violently or collide with other objects, as this may damage the casing or internal electronic components.

Safety Precautions

POWER

Be sure to turn off the power when the product is not in use temporarily and unplug the power cord from the outlet when not in use for an extended period, storing it properly.

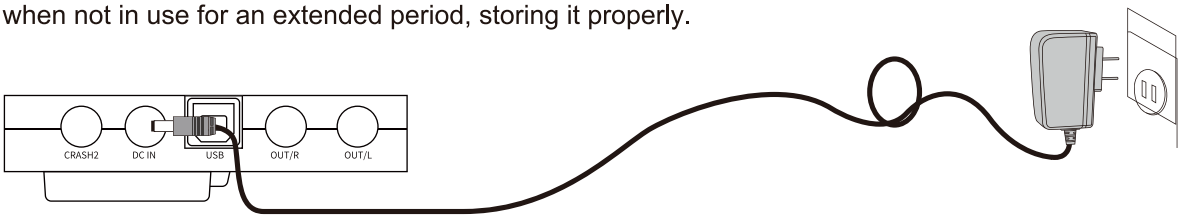

Symbols

To ensure the safe and correct use of this product, to prevent injury to the user and others, as well as damage to property, this manual and the product itself are marked with a series of safety symbols. The various symbols and their meanings are as follows:

⚠ Warning

This symbol indicates that ignoring the content marked with this symbol and mishandling the product could lead to death or serious injury.

⚠ Caution

This symbol indicates that if this symbol is ignored and the product is operated incorrectly, there is a potential risk of personal injury or other financial damage.

Symbol Examples

The triangular symbol indicates matters that the user should be aware of.
(The example on the left is for electric shock hazard.)

The circle with a diagonal line through it indicates prohibited actions. The symbol inside or next to the circle indicates the specific prohibited action.
(The example on the left is for no disassembly.)

The circle with a black background indicates actions that must be complied with. The symbol inside the circle indicates the specific action that must be followed.
(The example on the left is for unplugging the power cord from the outlet.)

Safety Precautions

⚠ Warning

Smoke, Odd Smell, Overheating

If the product produces smoke, emits an odd smell, or overheats, continuing to use it could lead to fire and electric shock. In such cases, immediately perform the following actions:

1. Turn off the power.
2. Unplug the power cord from the electrical outlet.
3. Contact your dealer.

Power Cord

1. Improper use of the power cord can leadto fire and electric shock. The following precautions be observed:



- Use only the designated power cord specified for this product.



- Use only AC power sources with output voltages within the rated voltage range for household use.
- Do not overload wall outlets and extension cords.



2. Mishandling the power cord, causing it to become damaged or frayed, can lead to fire and electric shock. The following precautions must be observed:



- Do not place heavy objects on the power cord or subject it to heat.
- Do not attempt to modify the power cord or bend it excessively.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace it with one of the same type and specificationsb



3. Never touch the power cord or plug with wet hands, as this could lead to electric shock.



4. Use the power cord in places where it will not be splashed with water. Water can cause fire and electric shock.



5. Do not place vases or any other container filled with water on the product. Water can cause fire and electric shock



6. Do not allow minors to plug or unplug the power cord or touch the connection panel Minors lack knowledge of electrical safety , which could lead to electric shock.。



⚠ Notice

Improper use of the power cord can result in fire and electric shock. The following precautions must be observed:



- Never place the power cord near stoves or other heat sources.
- When unplugging from the power outlet, do not pull on the power cord. Always grasp the plug itself.
- Ensure the power cord is fully inserted into the outlet.
- Before connecting or disconnecting the power cord, always make sure the power is turned off.



- During thunderstorms or when going on trips or leaving for an extended period, unplug the power cord from the wall outlet
- At least once a year, unplug the power cord from the wall outlet and clean the accumulated dust around the plug.

Do Not Dispose of This Product in Fire



- Never place this product in fire. Doing so can cause the product to burn and its internal electronic components to explode, leading to fire and injury.

Water and Foreign Objects



Water, other liquids, or foreign objects (such as metal pieces) entering the product can cause fire and electric shock. In such cases, immediately perform the following actions:

1. Turn off the power.
2. If using a power cord for power supply, unplug it from the wall outlet.
3. Contact your dealer.

Disassembly and Modification



Do not disassemble or modify this product in any way. Doing so could lead to electric shock, burns, or other personal injuries. All internal inspections, adjustments, and maintenance should be referred to your dealer

Safety Precautions

Dropping or Impact

Using this product after it has been dropped or subjected to a strong impact poses a risk of fire and electric shock. In such cases, immediately perform the following actions:

1. Turn off the power.
2. If using a power cord for power supply, unplug it from the wall outlet.
3. Contact your dealer.



Plastic Bags

Do not let anyone put the plastic bags used for packaging this product over their head or in their mouth, as it poses a risk of suffocation. Families with small children should pay particular attention to this.



Maintain Distance from This Product and Its Stand

Climbing on the stand can cause it to tip over or get damaged, posing a risk. Families with small children should pay particular attention to this.



Placement

Avoid placing this product on uneven surfaces or any other unstable locations. Doing so can cause the product to fall, posing a risk of injury.



Moving the Product

Before moving this product, you must first unplug the power cord from the wall outlet and disconnect all other cables and connections. Failing to do so can result in damage to the cables, leading to fire and electric shock.



Cleaning

Before cleaning this product, you must first unplug the power cord from the wall outlet to avoid the risk of fire and electric shock.



Ports

Only specified devices and equipment should be connected to the ports of this product. Connecting unspecified devices or equipment can cause fire and electric shock.



Location Selection

Avoid placing this product in locations that might lead to fire and electric shock, such as:

- Areas with high temperatures or excessive dust.
- Kitchens or other areas prone to oily smoke.
- Direct sunlight exposure or any other conditions that could cause the product to overheat.



Volume

Do not listen to music at high volumes for long periods. This is especially important when using headphones. Excessive volume can damage your hearing.



Heavy Objects

Do not place heavy objects on this product. Doing so can make the product top-heavy, causing it to tip over or objects to fall off, which could lead to injury.



Proper Stand Assembly

Improper assembly of the stand can cause it to tip over, leading to the product falling and potential injury.
Therefore, it is essential to assemble the stand following the instructions provided in the installation guide to ensure the product is securely mounted on its stand.



TROUBLESHOOTING

Suppose you suspect a malfunction, please read the information first.

Cymbal sound triggered when hitting the kick pad

If you hear a faint cymbal sound when striking the kick pad:

- Identify which cymbal pad is unintentionally triggering the sound.
- Enter the Pad Settings menu.
- Strike the affected cymbal and gradually increase its SEN (Sensitivity) value. Continue adjusting until the cymbal no longer responds when the kick pad is played.
- If adjusting sensitivity doesn't resolve the issue, increase the THR (Threshold) value for that cymbal.
- Important: Only adjust the cymbal pad that is producing the unexpected sound. Overly high sensitivity on cymbal pads can result in false triggering due to crosstalk.
- This issue is usually caused by excessive pad sensitivity or insufficient crosstalk suppression. It can be resolved by adjusting the SEN, THR, or XTALK parameters accordingly.

Cannot turn on the power

- Power switch not on.
- Power supply not connected.
- Bad power supply.
- Improper supply.Power supply must be 9V DC.

No sound/low volume

- Check the volume switch.
- Is the unit properly connected to other devices? Check the connections.
- Are the volume settings and input /output connections correct?
- Could the volume of the connected amplified speaker be lowered? Adjust the volume to an appropriate level If you are using headphones, are the headphone jack or OUTPUT jack correctly connected?

The timbre is too soft / loud during performance

- Inspect the sensitivity adjustment status.

The output timbre is distorted

- Reduce the volume of the electronic drum sound module. If the connected amplifier is equipped with an input level adjustment function, corresponding adjustments can be made to improve the problem of distorted output timbre.

The sound in the headphones is distorted

- Adjust the volume.
- Are the headphones working properly? Check the headphones by connecting them to other audio devices.

An instance of double - triggering arises.

- Check the bolts of the fixed tom - drum trigger pad.
- Make sure the connecting wires do not touch the trigger pad.
- Use wire ties to help with loose connections.
- Check that the cable is not pulled by the cymbal pad movement.

The external sound source connected to the AUX IN interface does not produce sound

- If the connecting cable you are using contains resistance, the volume will decrease. Please use a cable without resistance.
- Have you used a damaged connecting cable? Please replace the connecting cable.
- Are the volume settings of the connected sound source equipment correct?
- Are the connections and settings of the amplifier or audio system proper?

If you still can't find the information needed to solve the problem, please contact our after - sales staff for assistance.

Aklot

Beatcore Series by Aklot

If there is anything you would like to say to us

contact our brand after-sales:cs@aklot.com
www.aklot.com