AKLOT

# ELECTRONIC DRUM

## B-CORE530 AIR

USER MANUAL

# AKLOT Warranty & Support

**Scan the QR code to register your 2-year warranty and get support for your AKLOT electronic drum.**

## 2-YEAR WARRANTY

Register your AKLOT electronic drum kit to activate your 2-year warranty. Covers defects in materials and workmanship under normal use.

## 24/7 SUPPORT

Get support anytime for setup, connection, module use, and product questions. We're here to help whenever you need us.

## CONTACT US

Email: cs@aklot.com
Our support team will reply as soon as possible.

# Content



**AKLOT Warranty & Support** ---- 1
**Content** ---- 2
**Function introduction** ---- 3
**Intallation Guide** ---- 4
Check the Included Items ---- 4
Pipe parts ---- 5
Bracket installation ---- 5
Installing Cymbals, Control Module, Pedal Placement ---- 6
Check the included items ---- 7
**Control Module Port Diagram** ---- 8
Audio Input Port ---- 8
Power Cord Connection ---- 8
USB MIDI Port ---- 8
Headphone Port ---- 8
Audio Input Port ---- 8
**Operation Guide** ---- 9
KIT: Drum Kit Mode ---- 9
Trigger ---- 9
Voice ---- 9
Song ---- 9
Click ---- 9
Tempo ---- 9
Playback Stop ---- 9
Record ---- 9
Creating User Drum Kit ---- 9
Reverb key ---- 9
Add-substract Key ---- 9
**Appendix** ---- 10
Drum Sounds ---- 10
Preset Drum Kits ---- 10
User Custom Drum Kits ---- 11
Demonstration Songs ---- 11
**Product Maintenance** ---- 12
**Safety Precautions** ---- 12


# Function introduction


Thank you for choosing our electronic drum set. This product is finely crafted and technologically advanced, making it the perfect companion to start your musical journey.
·Be sure to read this manual carefully before using this instrument.




- Maximum polyphony of 32 notes, with 6 layers of velocity sensitivity
- Support for cymbal choke
- 25 drum kits, with 200drum sounds
- 10 built-in songs
- Adjustable sensitivity for each drum pad
- Tempo control: 30-250 BPM
- Metronome
- Additional features: Parameter memory, reset function
- LED display
- Connections: USB MIDI, headphone jack, line-in, line-out
- Ability to create and edit custom drum kits

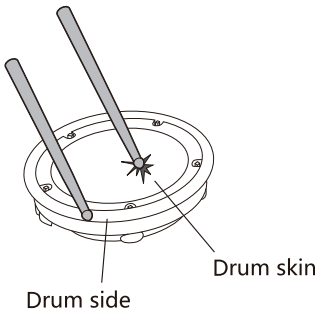

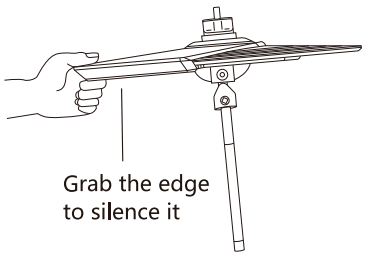
## Notice

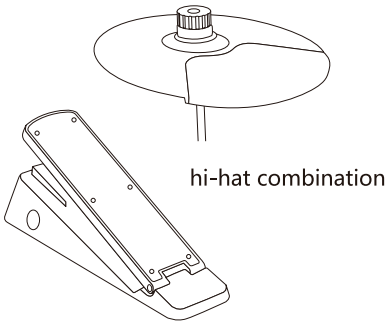
● This product is an electronic musical instrument. A slight humming noise from the speakers or headphones when powered on is normal. To avoid interference, please keep the device away fro m "radios, televisions, antenna receivers, routers, refrigerators, televisions, electric motors, and a ny other sources of radio frequency interference."

## 01 Check the Included Items


- Upon opening the package, please immediately check to ensure all items are included. If anything is missing, contact your dealer.





Control module




Control module stand



Hi-hat



Crash cymbal




Ride cymbal




Cymbal support rod (2 pieces)



Cymbal support rod

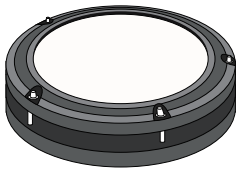


Tom-Drum * 3

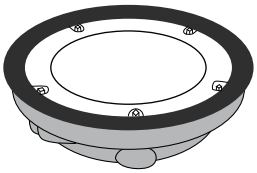


Snare drum




Headphones

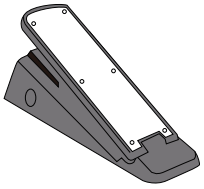


Hi-hat control pedal




Bass drum control peda




Drumsticks

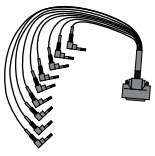

Connection cables

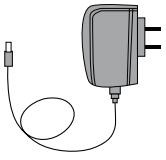

Power adapter

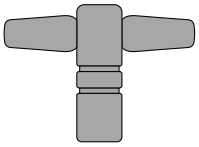


Drum key



Drum Throne

## 02 Pipe parts

- The pipe parts are located in a small individual package inside the box.

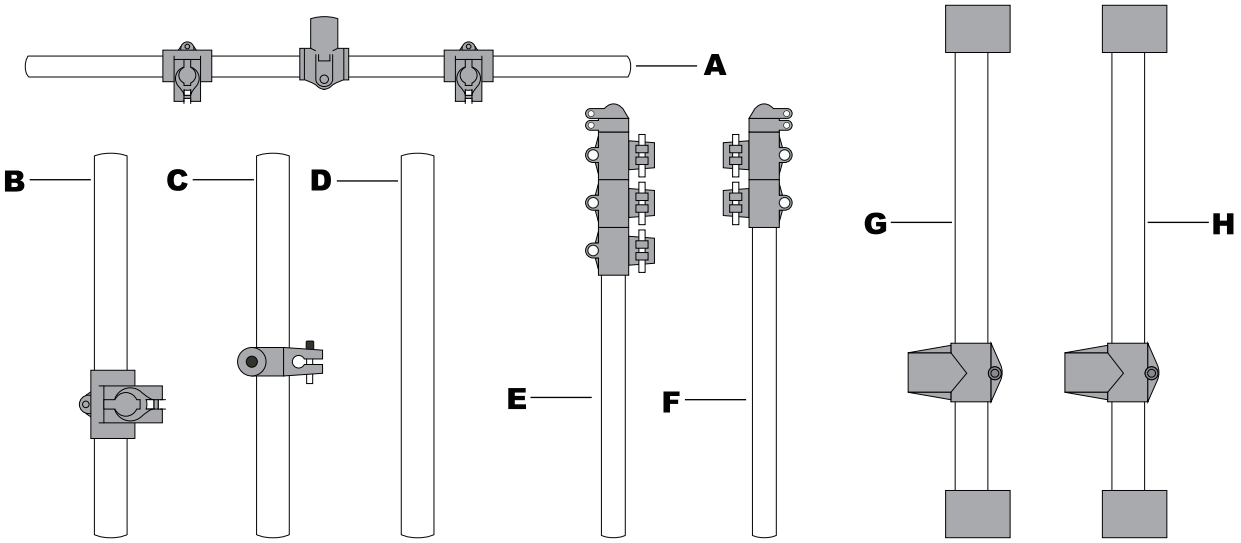



## 03 Bracket installation

- Please insert the pipe into the plastic part of the same number and secure it.
- The bracket need to be installed in place and tightly twisted the screw to avoid dropping.

Insert the bracket and drum tray into the corresponding positi ons, and then tighten the screws.


Note: (tom, snare) the functions are different, you need to refer to the accessories lo go for correct installation!

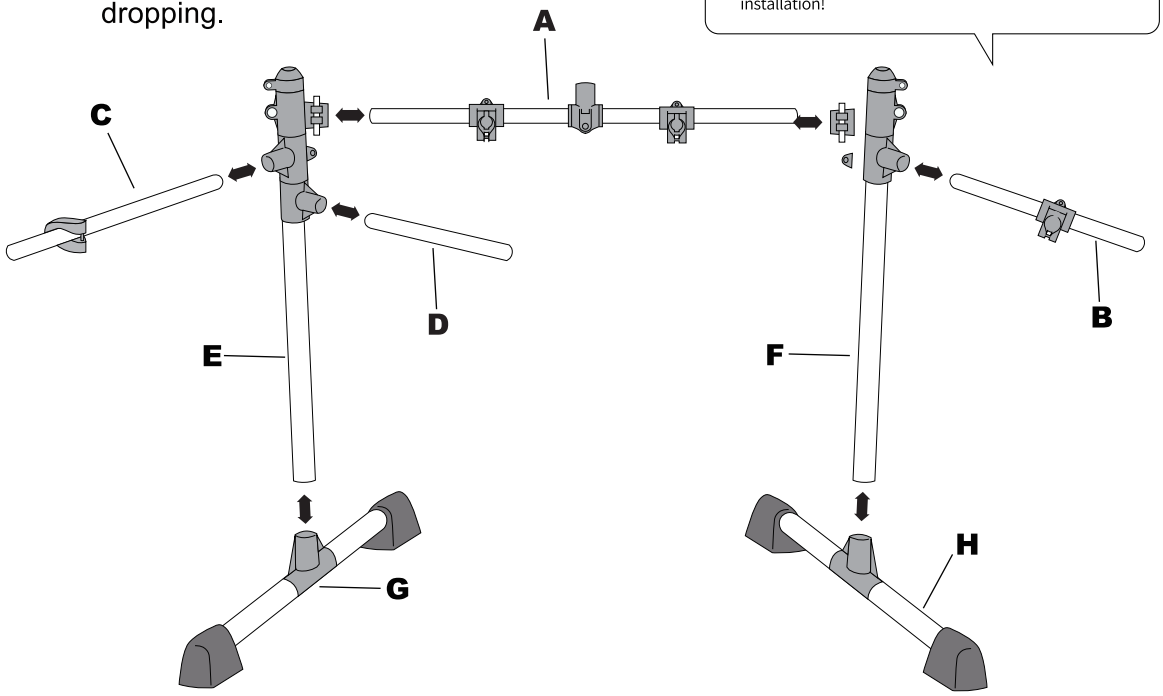

## 04 Installing Cymbals, Control Module, Pedal Placement

- Proceed with caution to avoid pinching your fingers.

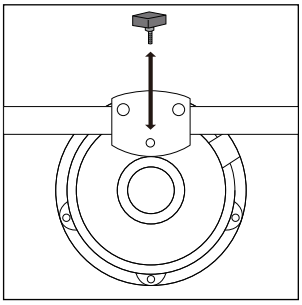



According to the diagram, insert the three tom-toms and one snare drum into the tubes and secure with the plastic tightening screws.

## 05 Check the included items


- After opening the package, please immediately check to ensure all items are included. If anything is missing, contact your dealer.

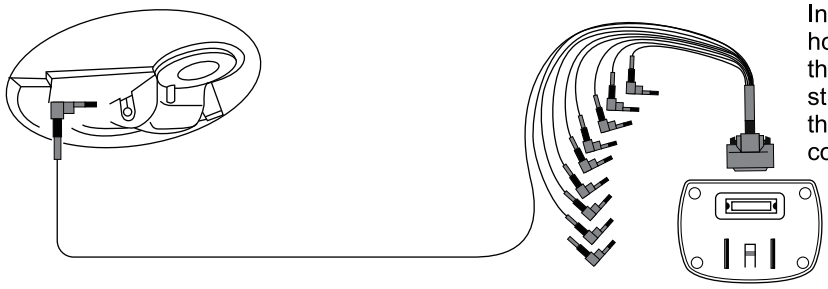

Insert the parallel port plug into the host box as shown in the figure, and then insert it into the corresponding striking component hole according to the English label on the head of the connecting cable.

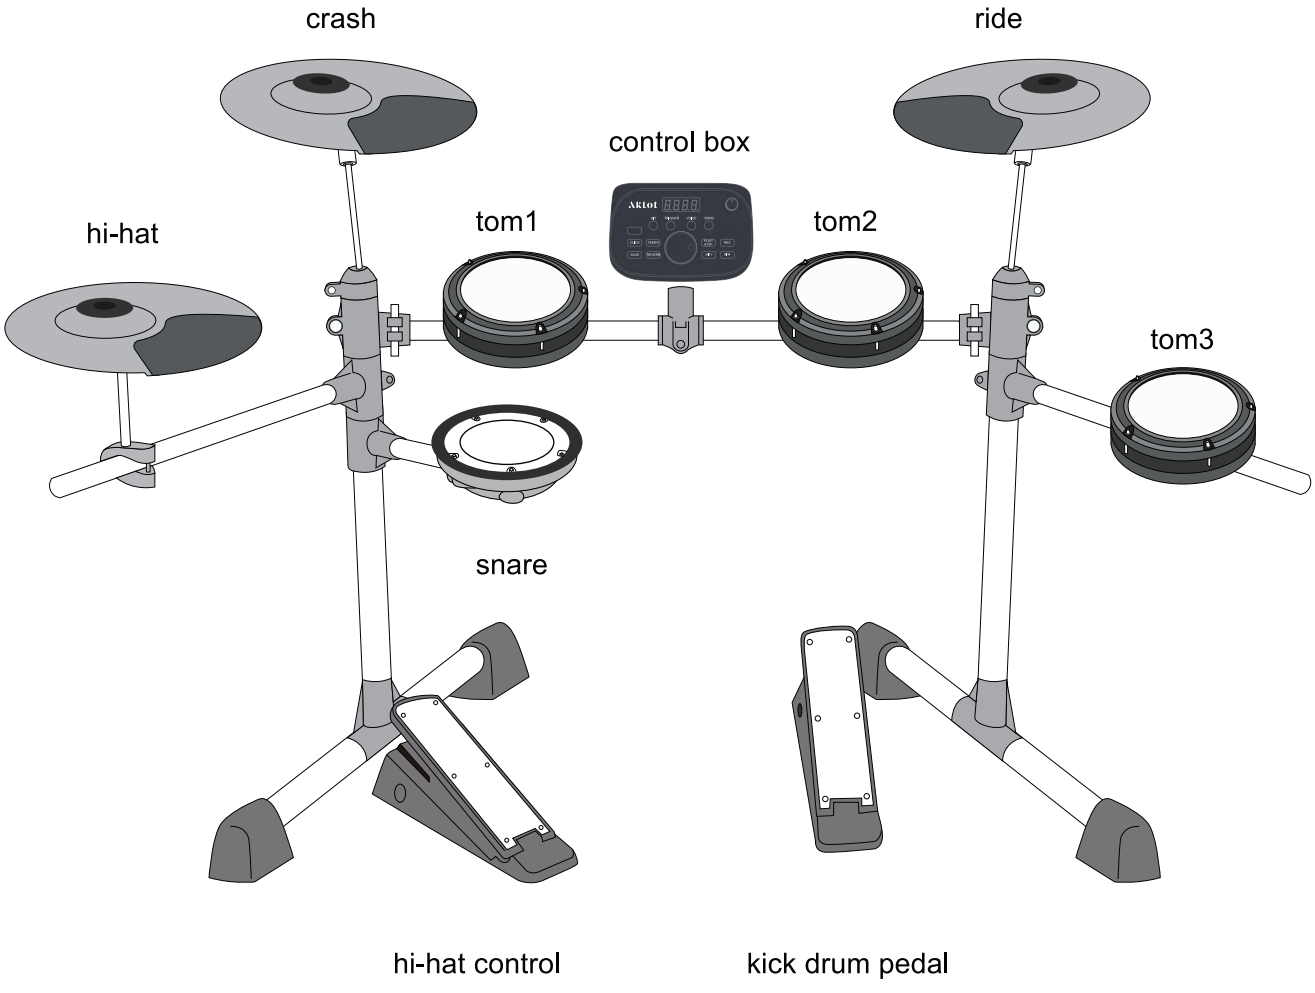

## 06 Control Moudule Port Diagram

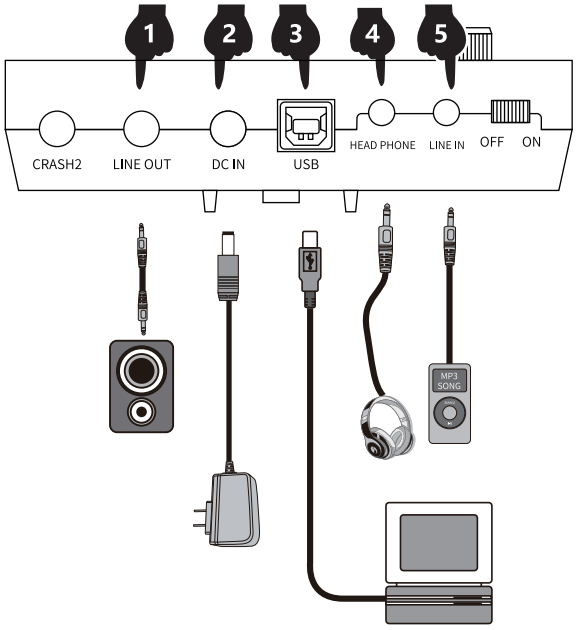


### 1 Audio Input Port

The audio input port allows the connection of external audio sources to the drum control module for playback, such as MP3 players, smartphones, and other line-level audio signals. (Figure 1)

### 2 Power Cord Connection

1. Connect the power cord as shown, with one end plugged into the drum control module's power port and the other end into a 100-240V household electrical outlet. (Figure 2)
2. When the product is not in use for an extended period, please unplug the power cord and store it properly.(Figure 2)

### 3 USB MIDI Port

The electronic drum's MIDI USB interface can be used to interact with other musical devices equipped with MIDI.
1. It enables learning, performing, composing, and storing functionalities through pre-installed software on computers or tablets. (Figure 3)
2. When connected to a computer or tablet, the device's audio output needs to be connected to the drum control module's audio input port to synchronize the sound effects. (Figure 3)

### 4 Headphone Port

Connecting headphones allows you to monitor the nuances of your playing without disturbing others when not connected to external speakers.(Figure 4)

### 5 Audio Input Port

The audio input port can connect external audio sources to the drum control box for playback (such as MP3, linear audio signal input from mobile phones, etc.) (Figure 5)

# Operation Guide

## 1 KIT: Drum Kit Mode

Upon powering on, the device defaults to Drum Kit Mode, indicated by a constantly lit key indicator showing "001," which represents Drum Kit 1. There are a total of 25 drum kits, with 1~20 being preset drum kits and U01~U05 being user drum kits. Drum kits can be adjusted using the number wheel or the [-] or [+] keys.

## 2 Trigger

Users can adjust the trigger parameters according to personal needs. Before adjusting a specific drum pad or cymbal, strike the pad or cymbal you want to set first, then adjust the parameter with the numerical wheel. There are three types of parameters: threshold, sensitivity, and crosstalk control, which can be switched by pressing the [TRIGGER] key.




A. Threshold is displayed as "Txx", with a range of 1–10.
B. Sensitivity is displayed as "Sxx", with a range of 1–15.
C. Crosstalk control is displayed as "Cxx", with a range of 0–9.

## 3 Voice

There are four parameters that can be adjusted: sound, volume, and pitch, indicated by a constantly lit key indicator.

D. Sound is displayed as "xxx," with a range of 1~200.
E. Volume is displayed as "Lxx," with a range of 0~32.
F. Pitch is displayed as "Pxx," with a range of -8~8.
G. Transposition is displayed as "txx," with a range of -6~6.

## 4 Song

There are 10 songs, displayed as "001", with a range of 001–010 indicated by a constantly lit key indicator. Press the [PLAY/STOP] button to play or stop the selected song.

## 5 Click

Short press the [CLICK] key to start or stop the metronome. Press and hold the [CLICK] key for 3 seconds to enter the metronome time signature adjustment. The time signature is displayed as "x-x", such as "4-4", and can be adjusted from 1/2 to 9/8.

## 6 Tempo

Pressing the [TEMPO] key enters the song tempo adjustment page, displaying "xxx"with a range of 30~250.

## 7 Playback Stop

In recording mode, controls the playback and stop of the recording. On other pages, controls the playback and stop of the song.

## 8 Record

Pressing the [REC] key, indicated by a constantly lit key indicator, starts recording the drumming. The indicator flashes during recording. Press the [REC] key again to stop recording, and the indicator turns off.Press the [PLAY/STOP] key to play or pause the recorded performance.

## 9 Creating User Drum Kit

Press the VOICE button to hit one of the drum discs that needs to be modified in terms of tone color. By using the VOICE button, you can enter the interface of tone color, volume, phase, and shift tone in sequence. Use the encoder to adjust to satisfactory results, then use the above method to modify other drum disc parameters. Finally, press the [SAVE] button, U01 will flash. Rotate the wheel to select the drum group number (U01-U05) that you want to save, and press the [SAVE] button again to save the drum group.

## 10 Reverb key

Press the [REVERB] key to display "rxx", which has 16 levels and can be selected using the digital wheel. The higher the value, the greater the reverberation.

## 11 Add-substract Key

Select the drum set based on personal preference and returns to the KIT page while pressing the addition and subtraction keys.

## Drum Sounds

### KICK

| | |
|---|---|
| 1 | KICK01 |
| 2 | KICK02 |
| 3 | KICK03 |
| 4 | KICK04 |
| 5 | KICK05 |
| 6 | KICK06 |
| 7 | KICK07 |
| 8 | KICK08 |
| 9 | KICK09 |
| 10 | KICK10 |
| 11 | KICK11 |
| 12 | KICK12 |
| 13 | KICK13 |
| 14 | KICK14 |
| 15 | KICK15 |

### SNARE

| | |
|---|---|
| 16 | SNARE01 |
| 17 | SNARE02 |
| 18 | SNARE03 |
| 19 | SNARE04 |
| 20 | SNARE05 |
| 21 | SNARE06 |
| 22 | SNARE07 |
| 23 | SNARE08 |
| 24 | SNARE09 |
| 25 | SNARE10 |
| 26 | SNARE11 |
| 27 | SNARE12 |
| 28 | SNARE13 |
| 29 | SNARE14 |
| 30 | SNARE15 |
| 31 | SNARE16 |
| 32 | SNARE17 |
| 33 | SNARE18 |
| 34 | SNARE19 |
| 35 | SIDESTICK1 |
| 36 | SIDESTICK2 |
| 37 | E_SNARE1 |
| 38 | E_SNARE2 |

### HIHAT

| | |
|---|---|
| 39 | CLOSED HH01 |
| 40 | CLOSED HH02 |
| 41 | CLOSED HH03 |
| 42 | CLOSED HH04 |
| 43 | CLOSED HH05 |
| 44 | CLOSED HH06 |
| 45 | CLOSED HH07 |
| 46 | PEDAL HH01 |
| 47 | PEDAL HH02 |
| 48 | PEDAL HH03 |
| 49 | PEDAL HH04 |
| 50 | PEDAL HH05 |
| 51 | PEDAL HH06 |
| 52 | PEDAL HH07 |
| 53 | OPEN HH01 |
| 54 | OPEN HH02 |
| 55 | OPEN HH03 |
| 56 | OPEN HH04 |
| 57 | OPEN HH05 |
| 58 | OPEN HH06 |
| 59 | OPEN HH07 |
| 60 | HALF HH01 |
| 61 | HALF HH02 |
| 62 | HALF HH03 |
| 63 | QUATER HH01 |
| 64 | QUATER HH02 |
| 65 | QUATER HH03 |
| 66 | E_HIHAT1 |
| 67 | E_HIHAT2 |
| 68 | E_HIHAT3 |
| 69 | E_HIHAT4 |

### TOM

| | |
|---|---|
| 70 | HITOM1 |
| 71 | HITOM2 |
| 72 | HITOM3 |
| 73 | HITOM4 |
| 74 | HITOM5 |
| 75 | HITOM6 |
| 76 | HITOM7 |
| 77 | MIDTOM01 |
| 78 | MIDTOM02 |
| 79 | MIDTOM03 |
| 80 | MIDTOM04 |
| 81 | MIDTOM05 |
| 82 | MIDTOM06 |
| 83 | MIDTOM07 |
| 84 | MIDTOM08 |
| 85 | MIDTOM09 |
| 86 | MIDTOM10 |
| 87 | MIDTOM11 |
| 88 | LOTOM1 |
| 89 | LOTOM2 |
| 90 | LOTOM3 |
| 91 | LOTOM4 |
| 92 | LOTOM5 |
| 93 | LOTOM6 |
| 94 | E_TOM1 |
| 95 | E_TOM2 |
| 96 | E_TOM3 |
| 97 | E_TOM4 |

### CYMBAL

| | |
|---|---|
| 98 | CRASH01 |
| 99 | CRASH02 |
| 100 | CRASH03 |
| 101 | CRASH04 |
| 102 | CRASH05 |
| 103 | CRASH06 |
| 104 | CRASH07 |
| 105 | CRASH08 |
| 106 | CRASH09 |
| 107 | CRASH10 |
| 108 | CRASH11 |
| 109 | CRASH12 |
| 110 | CRASH13 |
| 111 | CRASH14 |
| 112 | RIDE1 |
| 113 | RIDE2 |
| 114 | RIDE3 |
| 115 | RIDEBELL1 |
| 116 | RIDEBELL2 |
| 117 | RIDEBELL3 |
| 118 | E_CYMBAL1 |
| 119 | E_CYMBAL2 |
| 120 | E_CYMBAL3 |
| 121 | E_CYMBAL4 |
| 122 | E_CYMBAL5 |
| 123 | E_CYMBAL6 |

### PERCUSSION

| | |
|---|---|
| 124 | HI_Q |
| 125 | SPACEHIT |
| 126 | X-RAY |
| 127 | SLAP |
| 128 | PUSH |
| 129 | PULL |
| 130 | STICK |
| 131 | SQCLCK |
| 132 | CLICK |
| 133 | BELL |
| 134 | CLAP |
| 135 | TAMBRINE |
| 136 | COWBELL1 |
| 137 | COWBELL2 |
| 138 | COWBELL3 |
| 139 | COWBELL4 |
| 140 | VIBRASLAP |
| 141 | HIBONGO |
| 142 | LOBANGO |
| 143 | MUTED CONGA |
| 144 | HI CONGA |
| 145 | LO CONGA1 |
| 146 | LO CONGA2 |
| 147 | HI TIMBALE |
| 148 | LO TIMBALE |
| 149 | HI AGOGO |
| 150 | LO AGOGO |
| 151 | CABASA |
| 152 | MARACS |
| 153 | SHORT WHISTLE |
| 154 | LOONG WHISTLE |
| 155 | SHORT GUIRO |
| 156 | LONG GUIRO |
| 157 | CLAVE |
| 158 | HI WOODBLOCK |
| 159 | HI WOODBLOCK |
| 160 | METED CUICA |
| 161 | OPEN CUICA |
| 162 | MUTED TRINGLE |
| 163 | OPEN TRINGLE |
| 164 | SHKER1 |
| 165 | SHKER2 |
| 166 | JINGLEBELL |
| 167 | BELL TREE |
| 168 | CASTANETS1 |
| 169 | CASTANETS2 |
| 170 | MUTED SURDO |
| 171 | OPEN SURDO |
| 172 | TALKING DRUM |
| 173 | TABLA1 |
| 174 | TABLA2 |
| 175 | SNAP |
| 176 | DJEMBE1 |
| 177 | DJEMBE2 |
| 178 | DJEMBE3 |
| 179 | CAJON1 |
| 180 | CAJON2 |
| 181 | CAJON3 |
| 182 | TIMPANI1 |
| 183 | TIMPANI2 |
| 184 | LOW GONG |
| 185 | E_LCLICKH |
| 186 | E_LCLICKL |
| 187 | TAIKO |
| 188 | BELL |
| 189 | BAN |
| 190 | SIGU |
| 191 | DONG1 |
| 192 | DONG2 |
| 193 | MID_GONG |
| 194 | PIATTI |
| 195 | SMALL_GONG1 |
| 196 | SMALL_GONG2 |
| 197 | CN_GONG1 |
| 198 | CN_GONG2 |
| 199 | ESCRCH |
| 200 | DOWN |

## Preset Drum Kits

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 1 | ROCK | 6 | POP3 | 11 | VINTAGE | 16 | ELE2 | 21 | USER1 |
| 2 | HARD ROCK | 7 | FUNK/POP | 12 | JAZZ | 17 | ELE3 | 22 | USER2 |
| 3 | METAL | 8 | FUNK1 | 13 | BRUSH | 18 | MACHING | 23 | USER3 |
| 4 | POP1 | 9 | FUNK2 | 14 | LATIN | 19 | PERC.1 | 24 | USER4 |
| 5 | POP2 | 10 | HIP-HOP | 15 | ELE1 | 20 | PERC.1 | 25 | USER5 |

# Appendix

## User Custom Drum Kits

U01 U02 U03 U04 U05

## Demonstration Songs

001 POP 002 FUNK 003 ROCK 004 SAMBA 005 DANCE
006 DISCO 007 SWING 008 BALLADE 009 COUNTRY 010WALTZ

# Product Maintenance

Proper maintenance and protection of this product play a crucial role in extending its lifespan and reducing malfunctions.

### 1 Avoid Heat ,Moisture,or Direct Sunlight

Do not expose the product excessively to direct sunlight, or place it near air conditioning units or in extremely hot locations.

### 2 Do not Use Near Televison or Radios

This product may cause video or audio interference with televisions and radios. If this occurs, move th e product away from the television or radio.

### 3 Do not Clean with Paint, Thinners, or Similar Chemicals

To clean surface stains on the product, use a soft, clean cloth lightly dampened with water or a specific cleaning solution.


### 4 Do not Shake or Subject to Impact

When moving the product, handle it with care. It is strictly forbidden to shake violently or collide with other objects, as this may damage the casing or internal electronic components.

# Safety Precautions

## POWER

Be sure to turn off the power when the product is not in use temporarily and unplug the power cord from the outlet when not in use for an extended period, storing it properly.

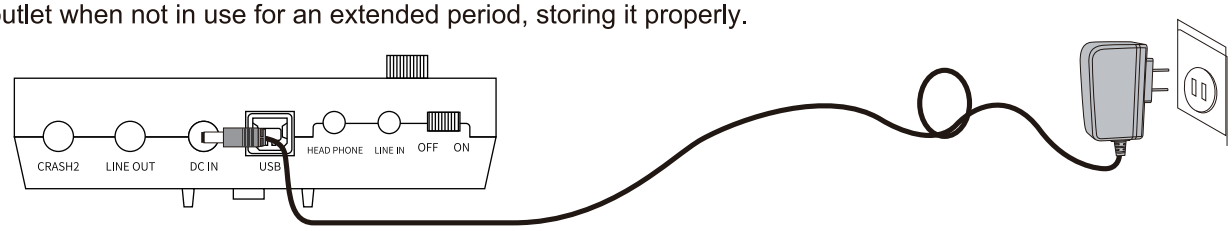


## Symbols

To ensure the safe and correct use of this product, to prevent injury to the user and others, as well as damage to property, this manual and the product itself are marked with a series of safety symbols. The various symbols and their meanings are as follows:

### ⚠ Warning

This symbol indicates that ignoring the content marked with this symbol and mishandling the product could lead to death or serious injury.

### ⚠ Caution

This symbol indicates that if this symbol is ignored and the product is operated incorrectly, there is a potential risk of personal injury or other financial damage.

## Symbol Examples



The triangular symbol indicates matters that the user should be aware of.
(The example on the left is for electric shock hazard.)



The circle with a diagonal line through it indicates prohibited actions. The symbol inside or next to the circle indicates the specific prohibited action.
(The example on the left is for no disassembly.)



The circle with a black background indicates actions that must be complied with. The symbol inside the circle indicates the specific action that must be followed.
(The example on the left is for unplugging the power cord from the outlet.)

## ⚠ Warning

### Smoke, Odd Smell, Overheating

If the product produces smoke, emits an odd smell, or overheats, continuing to use it could lead to fire and electric shock. In such cases, immediately perform the following actions:

1. Turn off the power.
2. Unplug the power cord from the electrical outlet.
3. Contact your dealer.

### Power Cord

1. Improper use of the power cord can leadto fire and electric shock. The following precautions be observed:



- Use only the designated power cord specified for this product.



- Use only AC power sources with output voltages within the rated voltage range for household use.
- Do not overload wall outlets and extension cords.



2. Mishandling the power cord, causing it to become damaged or frayed, can lead to fire and electric shock. The following precautions must be observed:



- Do not place heavy objects on the power cord or subject it to heat.
- Do not attempt to modify the power cord or bend it excessively.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace it with one of the same type and specificationsb



3. Never touch the power cord or plug with wet hands, as this could lead to electric shock.



4. Use the power cord in places where it will not be splashed with water. Water can cause fire and electric shock.



5. Do not place vases or any other container filled with water on the product. Water can cause fire and electric shock



6. Do not allow minors to plug or unplug the power cord or touch the connection panel Minors lack knowledge of electrical safety , which could lead to electric shock.。



## ⚠ Notice

Improper use of the power cord can result in fire and electric shock. The following precautions must be observed:



- Never place the power cord near stoves or other heat sources.
- When unplugging from the power outlet, do not pull on the power cord. Always grasp the plug itself.
- Ensure the power cord is fully inserted into the outlet.
- Before connecting or disconnecting the power cord, always make sure the power is turned off.



- During thunderstorms or when going on trips or leaving for an extended period, unplug the power cord from the wall outlet
- At least once a year, unplug the power cord from the wall outlet and clean the accumulated dust around the plug.

### Do Not Dispose of This Product in Fire

- Never place this product in fire. Doing so can cause the product to burn and its internal electronic components to explode, leading to fire and injury.



### Water and Foreign Objects

Water, other liquids, or foreign objects (such as metal pieces) entering the product can cause fire and electric shock. In such cases, immediately perform the following actions:



1. Turn off the power.
2. If using a power cord for power supply, unplug it from the wall outlet.
3. Contact your dealer.

### Disassembly and Modification

Do not disassemble or modify this product in any way. Doing so could lead to electric shock, burns, or other personal injuries. All internal inspections, adjustments, and maintenance should be referred to your dealer



# Safety Precautions

**Dropping or Impact**

Using this product after it has been dropped or subjected to a strong impact poses a risk of fire and electric shock. In such cases, immediately perform the following actions:

1. Turn off the power.
2. If using a power cord for power supply, unplug it from the wall outlet.
3. Contact your dealer.



**Plastic Bags**

Do not let anyone put the plastic bags used for packaging this product over their head or in their mouth, as it poses a risk of suffocation. Families with small children should pay particular attention to this.



**Maintain Distance from This Product and Its Stand**

Climbing on the stand can cause it to tip over or get damaged, posing a risk. Families with small children should pay particular attention to this.



**Placement**

Avoid placing this product on uneven surfaces or any other unstable locations. Doing so can cause the product to fall, posing a risk of injury.



**Moving the Product**

Before moving this product, you must first unplug the power cord from the wall outlet and disconnect all other cables and connections. Failing to do so can result in damage to the cables, leading to fire and electric shock.



**Cleaning**

Before cleaning this product, you must first unplug the power cord from the wall outlet to avoid the risk of fire and electric shock.



**Ports**

Only specified devices and equipment should be connected to the ports of this product. Connecting unspecified devices or equipment can cause fire and electric shock.



**Location Selection**

Avoid placing this product in locations that might lead to fire and electric shock, such as:

- Areas with high temperatures or excessive dust.
- Kitchens or other areas prone to oily smoke.
- Direct sunlight exposure or any other conditions that could cause the product to overheat.



**Volume**

Do not listen to music at high volumes for long periods. This is especially important when using headphones. Excessive volume can damage your hearing.



**Heavy Objects**

Do not place heavy objects on this product. Doing so can make the product top-heavy, causing it to tip over or objects to fall off, which could lead to injury.



**Proper Stand Assembly**

Improper assembly of the stand can cause it to tip over, leading to the product falling and potential injury.
Therefore, it is essential to assemble the stand following the instructions provided in the installation guide to ensure the product is securely mounted on its stand.



Aklot

BIG BEATS FOR LITTLE ROCKSTARS

# B-CORE530 AIR ELECTRONIC DRUM

## USER MANUAL

cs@aklot.com

www.aklot.com

FOLLOW US

**THANK YOU FOR CHOOSING AKLOT**

We appreciate your trust in AKLOT.
This manual will help you get the most
out of your **B-CORE530 AIR** electronic drum.