

How to Replace MB (Main Body)

► How to Replace MB (Main Body)


<Notice!>

1. Wear the protective gear before disassembling the MB module because it may be fallen.

**Calibrate the CDU10 after replacing the main PCBA.
(see the Calibration menu.)**

► Replace the MB Module

1. Remove the hook of the main cover by using the long nose.

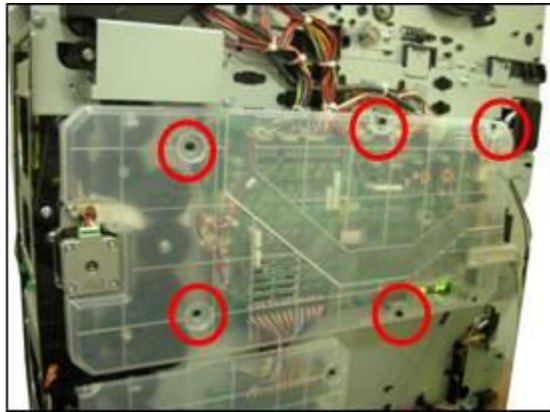


2. Remove the main board cover.




3. Pull off the connectors (J1, JP3, JP4, CN21, CN15, CN25, CN26, CN17, CN27, and CN11) connected to the MB module.



4. Loose two screws (M4x6, A) bound to the FF.

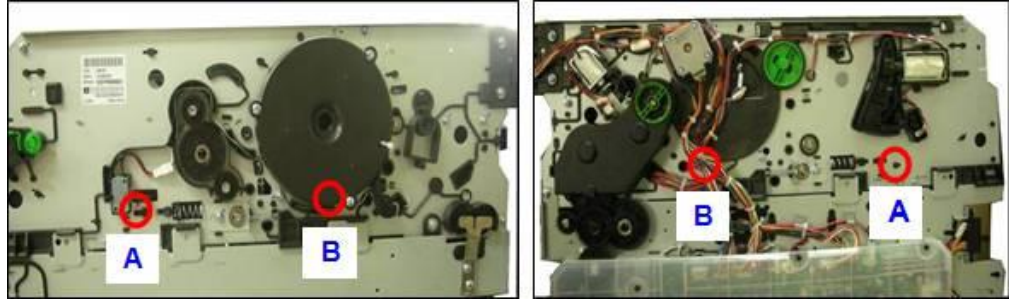

5. Push the MB module to the arrow ① direction and lift upward to the arrow ② direction to disassemble it.

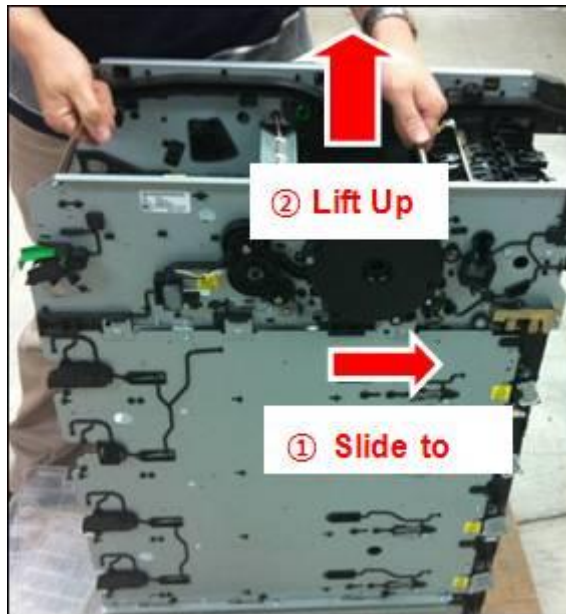

6. Re-assemble parts in the reverse order of disassembling.
Check the groove position of the assembly.