

How to Replace SF Module

► How to Replace SF Module

<Notice!>

1. Wear the protective gear before disassembling the SF module because it may be fallen.
2. Remove the cassette before replacing the SF module. Otherwise, the cable may be broken.
3. There are two types of SF module: the one that has HS003A/B sensor and the other that has not. Be careful of the type when re-assembling it.


► Replace the SF module

1. Remove the cassette of the part.


For example, remove CST1 and CST2 before disassemble SF12. Remove CST3 and CST4 before disassemble SF34.




2. Remove the cable connector from the main PCBA.

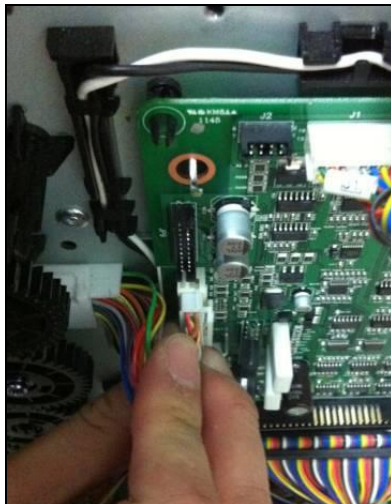


3. Disassemble the FF gear.

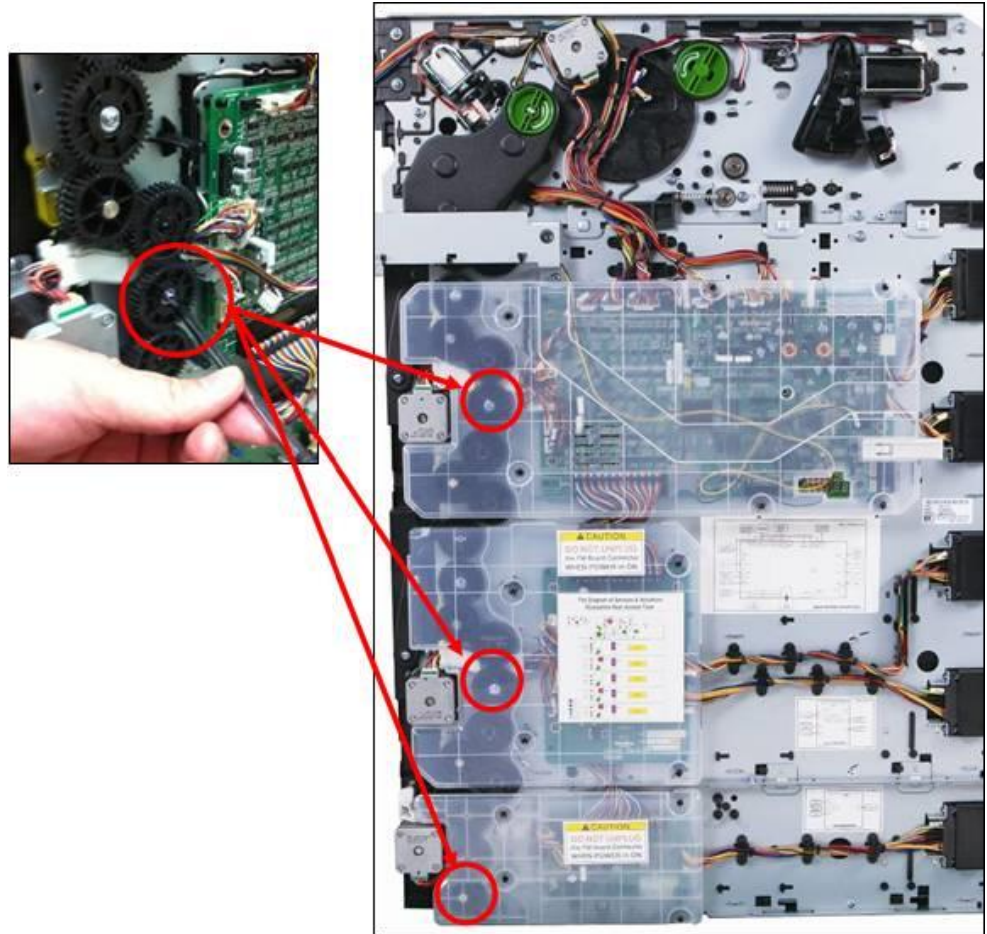

4. Loose two screws (M4x12) connected to the FF by using the phillips screwdriver (+).

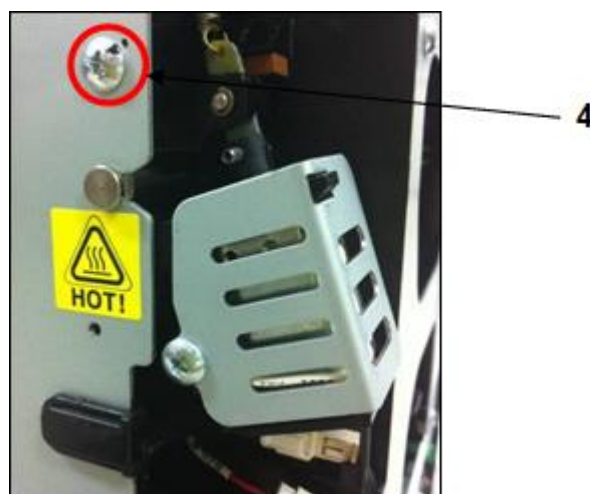

5. Loose a screw (M3x12) bound to the FF by using the phillips screwdriver (+).
6. Turn the LOCK LEVEL (2ea) to the direction shown in the figure.

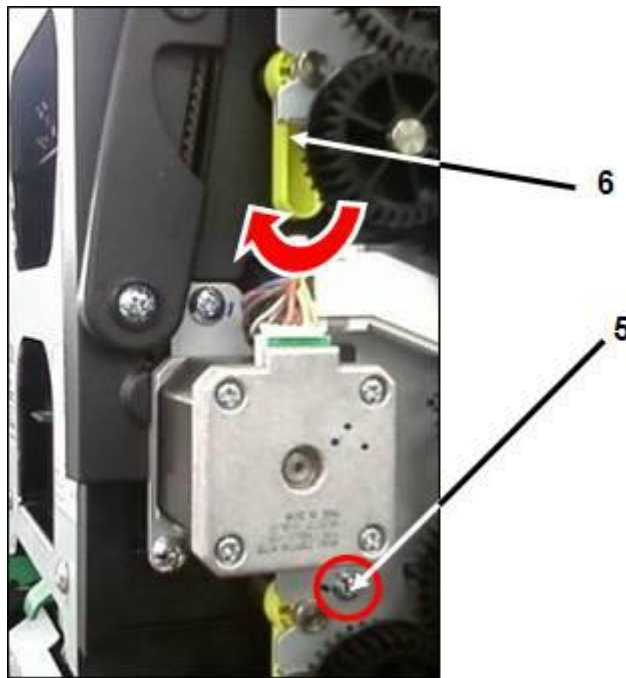

7. Remove the SF module from the FF.



8. Re-assemble parts in the reverse order of disassembling.

* Make sure that the cable cover and cables does not interfere the gear while re-assembling.

