



How to Replace Throat

► Replace the MB Module

1. Remove the hook of the main cover by using the long nose.

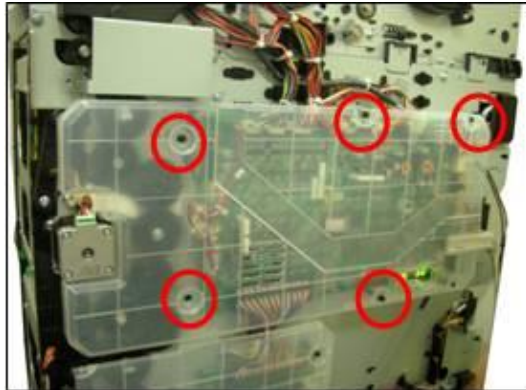

2. Remove the main board cover.

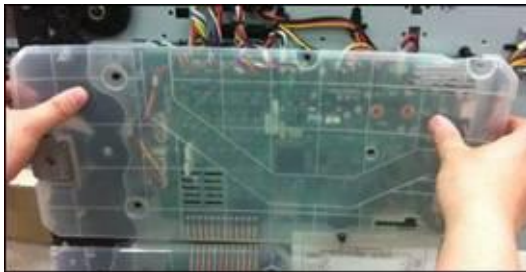

3. Pull off the connectors of JP3 and CN17.



4. Loose four screws (M4x10) bound to the MB.



5. Separate the THROAT module from the MB.



6. Re-assemble parts in the reverse order of disassembling.