


BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

28 Wheels and tires - general information

1 All vehicles covered by this manual are equipped with metric-sized fiberglass or steel belted radial tires (see illustration). Use of other size or type of tires may affect the ride and handling of the vehicle. Don't mix different types of tires, such as radials and bias belted, on the same vehicle as handling may be seriously affected. It's recommended that tires be replaced in pairs on the same axle, but if only one tire is being replaced, be sure it's the same size, structure and tread design as the other.

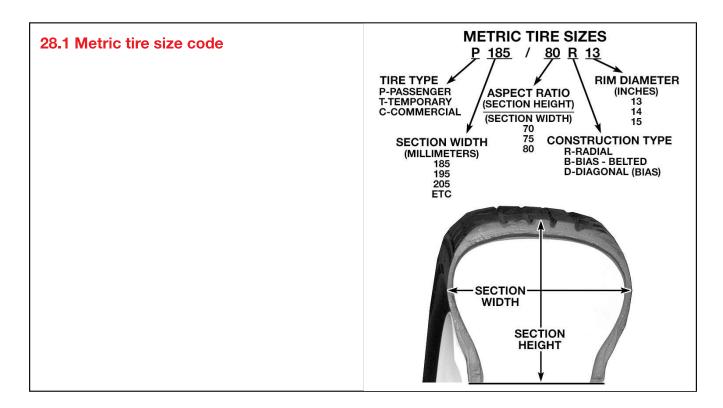

- 2 Because tire pressure has a substantial effect on handling and wear, the pressure on all tires should be checked at least once a month or before any extended trips (see <u>Chapter 1</u>).
- 3 Wheels must be replaced if they are bent, dented, leak air, have elongated bolt holes, are heavily rusted, out of vertical symmetry or if the wheel bolts won't stay tight. Wheel repairs that use welding or peening are not recommended.
- 4 Tire and wheel balance is important in the overall handling, braking and performance of the vehicle. Unbalanced wheels can adversely affect handling and ride characteristics as well as tire life. Whenever a tire is

12/8/24, 11:56 PM installed on a wheel, the tire and wheel should be balanced by a shop with the proper equipment.

© 2024 Haynes Manuals, Inc. Contact us