PROGRESSIVE SYSTEM

User´s Manual



MIKOHN SIGN

LIMA - PERÚ

© 2010 MIKOHN SIGN CORPORATION
This document is distributed to Mikohn Sign customers to be divulged among technical service personnel and workers operating or supervising a Progressive System of our company.

Total or partial reproduction of this manual is forbidden, including its transmittal or storage in magnetic media without prior agreement or authorization of Mikohn Sign Corporation. The other products or brands named in this manual have been registered by their respective companies.

License and Warranty Agreement

Importante

The purchase and use of this product indicates acceptance of the terms and conditions established herein.

Customer Obligations

Once the customer approves the received product, he assumes full responsibility for it and its specifications as well as for any other hardware, software or environmental requirements herein indicated for optimum performance of this product.

Warranty Limits

MikohnSign Corporation products are covered by a limited one-year warranty counted from the date of purchase.

If the product is transferred to another person or company, the license agreement and corresponding warranty will be deemed as automatically voided. This warranty may only be transferred with prior authorization in writing from Mikohn Sign Corporation.

This warranty does not cover breakdowns due to mishandling by Customer or technicians not authorized by MikohnSign Corporation.

Mikohn Sign Corporation does not assume any responsibility nor provides any warranty on a purchased product, should it be damaged while in route to the customer's venue, unless said service has been directly retained by Mikohn Sign Corporation

Mikohn Sign Corporation does not assume any responsibility for failures in hardware or software owned by third parties that are installed at the customer's venue and that may cause malfunctioning of this product.

Scope of Warranty

Responsibilities of Mikohn Sign Corporation and the scope of this warranty before customer are:

A.Defective Software
In case of malfunctioning of software purchased from Mikohn Sign Corporation, during the warranty period, it shall be returned to Mikohn Sign Corporation or to an authorized representative. All returned software shall be examined by qualified personnel of Mikohn Sign Corporation; once the failure has been determined, it shall be replaced with one of the same characteristics provided the failure was due to a factory defect and not to a misuse or mishandling of product by customer or technicians not authorized by Mikohn Sign Corporation.

B. Defective Hardware
In case of malfunctioning of hardware purchased

Use of warranty

The warranty and solutions put forward in the present clauses are for the exclusive use of products directly purchased from Mikohn Sign Corporation or an authorized representative.

This warranty may only be modified, extended or replaced in writing by common agreement between the customer and Mikohn Sign Corporation or an authorized representative.

Technical support

Technical support service for this product is subject to warranty in force. Contact us through the phone numbers or e-mail indicated in this manual to be assisted by specialized personnel that will answer your inquiries.

License and Warranty Agreement

License

Mikohn Sign Corporation grants the customer a non-exclusive license to use its products according to the following terms:

A. Customer can make copies of software owned by Mikohn Sign Corporation only for normal performance of business or for training of its personnel.

B. Customer can make copies of the original documentation of this product for its personal use or for training of its employees. Every copy of original documentation or part of it shall contain the indication that the original is property of Mikohn Sign Corporation.

Mikohn Sign Corporation hereby agrees to grant the customer a non-exclusive license to use software and hardware of its property associated to this product, in accordance with terms and conditions established in this license agreement.

This license is not a sale of software property of Mikohn Sign Corporation or of the engineering logic concepts used in the software and hardware of this product.

© Mikohn Sign Corporation

MIKOHN SIGN CORPORATION

Thank you for purchasing a product of Mikohn Sign Corporation for your organization. We manufacture high quality instruments for the gaming industry. This is why our products can be found in most casinos of Latin America and increasingly in the European Community countries. This confirms that our company is one of the most important suppliers in the international gaming industry.

Address: Calle Sucre 195 Urb. Vulcano – Ate, Lima - Perú.
Telephone: (511) 349 2192
Fax: (511) 349 1343
E-mail: sales@mikohn.net / support@mikohn.net
WEB: www.mikohn.net

Index

Chapter 1: Introduction

1.1 About this manual 1
1.2 Who should use this manual? 1
1.3 Terms used in this manual 1
1.4 Symbols used in this manual 1

Chapter 2: Progressive System description

2.1 What machine can be connected to the Progressive System? 2
2.2 How does the Progressive System work? 2
2.3 What is required to implement the Progressive Sytem? 3
    2.3.1 Universal Controller 3
    2.3.2 Progressive Interface Card 3
2.4 Minimum hardware and software requirements in the PC 3
2.5 Operation diagram 4

Chapter 3: Electronic components

3.1 Universal Controller 5
    3.1.1 Universal Controller features 5
    3.1.2 Front view of Universal Controller 6
    3.1.3 Back view of Universal Controller 7
3.2 Interface Card 8

Chapter 4: Accesories installation

4.1 Bally cable 9
4.2 IGT cable 9
4.3 Display-Controller cable 9
4.4 Output cable ti bell 9
4.5 Serial cable (Male-Female) 10
4.6 8-strand network cable (standard 586b) 10
4.7 12VDC power supply 10

Chapter 5: Electrical, enviromental and safety conditions

5.1 Precautions measures regarding electrostatic discharge 11
5.2 Precautions mesaures regarding divece safety 11
5.3 Previous considerations for apropriate system implementation 11
5.4 Enviromental conditions 12
5.5 Electrical conditions 12

Chapter 6: Interface card number

Interface card number 13-14

Chapter 7: Interface cards interconnection

Interface cards interconnections 15-16

Chapter 8: Connection Interface card - Slot machine

8.1 Connection Interface card - IGT Slot machine 17
8.2 Connection Interface card - BALLY Slot machine 17

Chapter 9: Connection Interface card - Universal Controller

Connection Interface card- Universal Controller 18

Index

Chapter 10: Connection Universal Controller - Other devices

10.1 Connection of Universal Controller - PC 19
10.2 Connection of Universal Controller - other device 19
19

Chapter 11: Set configuration parameters

11.1 Configuration from Universal Controller 20
11.1.1 Jackpot Programing 21
11.1.2 Hidden Jackpot 22
11.1.3 Symbols and Current Setup 23
11.1.4 Message Programing 24
11.1.5 Time/Date setting 25
11.1.6 Controller test mode 25
11.2 Configuración from PC 26
11.2.1 Downloading and installing files 26-27
11.2.2 Device SW3 and language selctions 28
11.2.3 Messages menu 29
11.2.4 Symbol and numerical expresion 30
11.2.5 Jackpot Configuration 31-32

Annex

Chapter 1: Introduction

1.1 About this manual:

In order to ensure the proper use of this product, read carefully this user's manual and keep it for future reference

1.2 Who should use this manual?


This manual is distributed to personal of Casinos and Gaming Rooms that supervise, operate, or give technical support to the Progressive System.

1.3 Terms used in this manual:

- Casino: organization or establishment conditioned to perform gambling.
- Operator: casino employee in charge of handling various technical devices.
- Player: person making bets through tokens or credits in a slot machine.
- Jackpot: payment or reward granted by the slot machine to the player achieving the best combination of symbols in a game.
- Progressive / Progressive jackpot: additional prize generated through a contribution percentage from every bet made on a machine connected to a game system. The more intense the gambling and the larger the system's machine number, the faster the increase of prize value.
- Hidden jackpot: hidden contribution percentage accrued in the game and enabling to attain a more attractive initial value for next Progressive Jackpot.

1.4 Symbols used in this manual

Danger: warns user about dangerous voltage in the product case or components. Be careful not to be injured.



Caution: advises user to pay attention and protect components (hardware or software) that may be damaged.



Note: additional and important information for user.



Chapter 2: Progressive System description

The Progressive System developed by Mikohn Sign Corporation is implemented in casinos or gaming rooms in order to increase winnings and credit collection in a secure manner.

The strategy developed by the Progressive System is granting additional prizes to players connected to a set of slot machines from the same manufacturer, game and name.

The Progressive Jackpot of Mikohn Sign is an additional prize to be granted by the machine to the player achieving a winning combination of symbols.

The various prizes won by players will be shown on a plasma screen and display screen through attractive messages.

This system allows for implementing different increment percentages of Jackpots and hidden jackpots to continue offering attractive additional prizes even after an accumulated Progressive Jackpot has been paid out.

2.1 What machines can be connected to the Progressive System?

Every IGT or Bally slot machines having a built-in progressive device can be connected to the Progressive System.

2.2 How does the Progressive System work?

After installing and configuring the Progressive System, through a PC (computer) or in the Universal Controller, the system is ready to start operating.

When a player achieves a winning symbol combi nation, he will receive the respective prize or jackpot. Additionally, the machine will pay an attractive progressive jackpot prize composed of a percentage contributed from every machine connected to the Progressive System.

The winning machine will be locked automatically and activate a sound or signal in the gambling area that will help to identify it. At the same time, the plasma TV and display will show intermittently the number of the winning machine, the amount won and the new progressive jackpot.

The Progressive System is designed to connect a total of 31 slot machines in a network that must be of the same manufacturer and share the same game and name.

According to the customer needs, the Progressive System has availability to configure up to 8 progressive jackpots and an equal number of hidden jackpots.



The machine manufacturer is responsible for setting up the conditions to generate jackpots, pots or prizes.

Chapter 2: Progressive System description

2.3 What is required to implement the Progressive System?

The following electronic devices are required for the implementation of the Progressive System:
• Universal Controller
• Interface card

2.3.1 Universal Controller
It manages and controls the Progressive System, interacting with the interface cards.

The Controller detects:

- Every credit played in machines participating in the Progressive System.
- The increase of each jackpot.

It also shows the increase of corresponding prize on the display or plasma TV.

2.3.2 Progressive Interface Card
Progressive System Component used as a connection between the slot machine and Universal Controller.

2.4 Minimum hardware and software requirements in the computer

Processor: Intel Pentium IV 1.8 GHz or higher
Memory: 512 MB or higher
Hard Disc: 20 GB or higher
Output connector: RS/232 DB9
Operating System: Windows 2000 or higher

Phone free skype: 1 888 406 4250

Chapter 2: Progressive System description

2.5 Operation diagram




PC (computer)
Machine where the Progressive System is installed, configured and supervised.




Plasma Screem
It is used to display attractive images, animations and prize messages. It is located at a place visible for players.



Universal Controller
Detects every credit bet on machines participating in Progressive System prizes

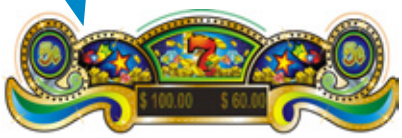

Display
Visual Display Unit of prize quantities or amounts

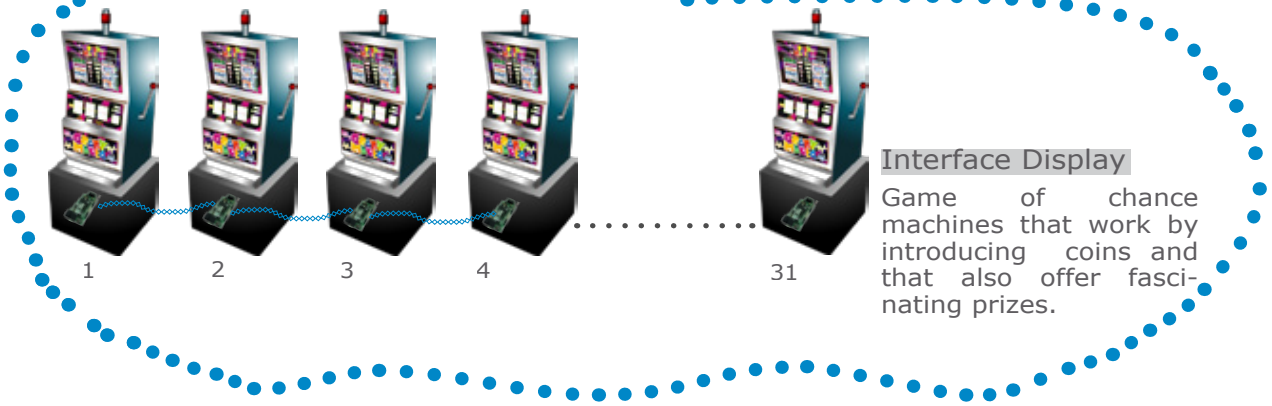

Interface Display
Game of chance machines that work by introducing coins and that also offer fascinating prizes.

Chapter 3: Electronic component

3.1 Universal Controller

Set of interface devices that allow obtaining data from slot machines having progressive. Data obtained by the Universal Controller can be used in various computer applications for Casinos and Gaming Rooms.

Mikohn Sign has developed 4 computer applications that interact with the Controller.
- Progressive
- Mystery System
- Slot machine accounting
- Player Tracking

3.1.1 Universal Controller Features

• Communication: Bi-directional Bus Network with slot machines through interface cards in each machine.

• RS232 connection: For interface communication with the PC (computer).

• Game Jackpot Management: Multiple game jackpots can be managed, including hidden jackpots.

• Security: 2 types of access are available for entering and configuring the system:
• Administrator Group (access to all system files)
• User Group (access to system reports)

• Slot machine management: Depending on the mo- del, up to 248 machines can be controlled. In case there is a high machine number, the required contro- llers and con- centrators must be installed.

• Control and configuration in real time.

• Configuration tests: Testing routines for the controller and interface cards. Control and configuration of system parameters through pre-installed software in the system and displayed on an LCD screen.

• Status indicators: LED's (Light emitting diodes) that inform on the operation status of the controller and interface card connected to the system.

• PS/2 interface: Allows connecting a PC keyboard to perform configurations such as: base amount for every jackpot, system test and others. The entire configuration is dis- played on an LCD screen in the controller.

• Controller display or LCD screen: Visual support for game configuration and connection status of system interface cards.


- Local area connection: hows the system connection status. (Connected / discon- nected).

- Machines: shows the number of slot machines con- nected to the system.

Phone free skype: 1 888 406 4250

Chapter 3: Electonic component

3.1.2 Front view of Universal Controller

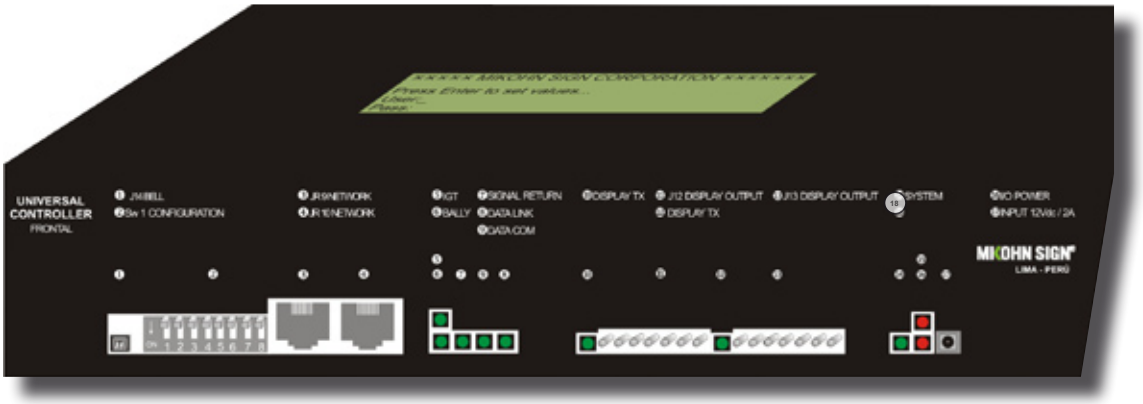

(1) J4 Bell: output to Bell. (2-pin connector).

(2) Sw1 Configuration: internal configuration for the proper operation of the Controller. Position 3 should always be On (down) and the other positions Off (up).

(3) y (4) JR9 y JR10 Network: Network 485. Network Connectors for a system with up to 31 interface cards.

(5) y (6) Return signal indicators: IGT (a) Bally (b). They emit red color light.

(7) Signal return: operation status indicators for network.

(8) Data Link: LED indicator of comunication

(9) Data Com: LED indicator of data transfer.

(10) y (12) Display tx: LED indicator of output signal to Mikohn Display.

(11) y (13) output connector to Mikohn Display.

(14) System: system operation status indicator. It emits red color light.

(15) y (16) Logic power y I/O Power: power status indicators. Emit red light.

(17) Input: 12VDC / 2A Power source connector.

(18) Display: LCD screen

Chapter 3: Electronic component

3.1.3 Back view of controller



Comp Interface RS 232: RS232 connector to the PC.

① y ② Receiver y Transmit: (a)receiver , (b) Transmit.

③ JP1 Keyboard: PS/2 connector. (Optional)

④ Keyboard test: PS/2 keyboard status indicator. It emits green light.

⑤ Jackpot reset: reset button to jackpot base value.

Jr1 Channels: 8 RJ-45 connectors for connection output to concentrator (the first at left corresponds to the initial concentrator).


Selections channels: network operation status indicators. Each indicator corresponds to the communication with each of the concentrators following the same order.

Phone free skype: 1 888 406 4250

Chapter 3: Electronic component

3.2 Interface card

Progressive System component, which function is to be a connection between the slot machine and the Universal Controller. The interface card counts every credit bet on the slot machine and delivers it as data to the Universal Controller. Interface card that provides information of a single counter. It adapts to machines with SAS protocol or with mechanical counter.

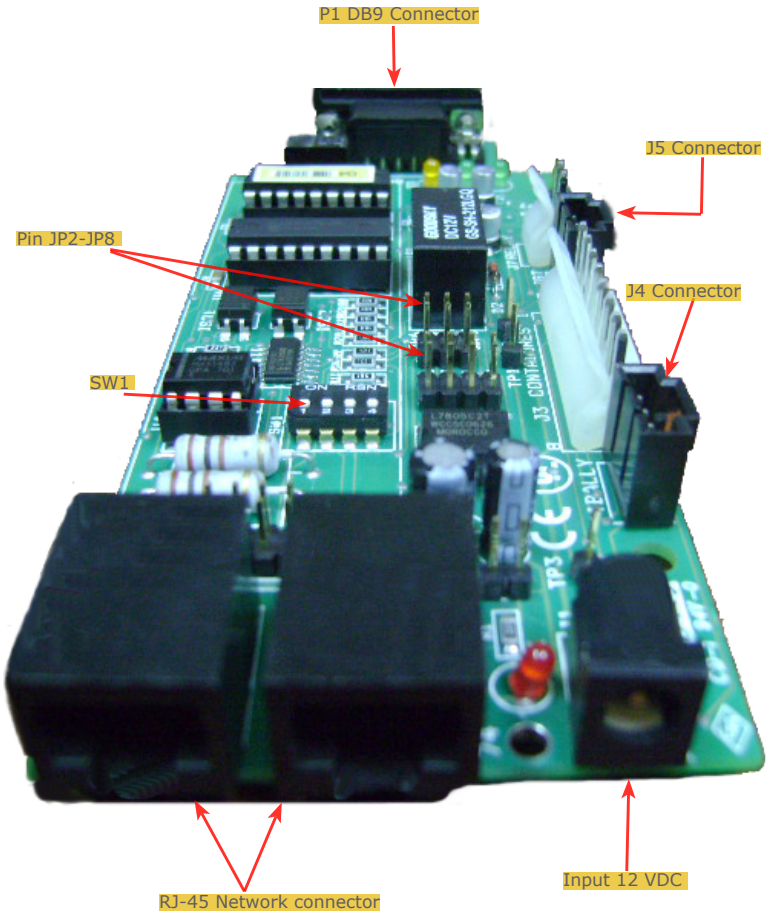

• P1 DB9 Connector: Serial communication connector for SAS protoco.

• JP2-JP8 Pins: JP2 and JP6 pins are used to confi- gure BALLY machines. JP3 and JP6 pins are used to configure IGT machines (2 jumpers are included).

• J4 Bally connector: Communication connector to
BALLY machine.

• J5 IGT Connector: Communication con- nector to IGT machine.

• SW1: internal configuration to couple im- pedances in the network.

• Network connectors RJ-45: Network input and
output. Both connectors are the same.

• Input 12VDC: 12VDC power input.

Chapter 4: Accesories Installation

4.1 Bally Cable

It is used to:
• Communicate interface card with BALLY machine.



4.2 IGT Cable

To be used in the following
cases:
• Communicate Controller withe PC.
• Communicate an interface card with IGT machine.



4.3 Cable Display-Controller

This cable connects the Controller to Display



4.4 Output cable to Bell (Optional)

The bell output cable allows Connecting the Universal Controller to the bell.



Phone free skype: 1 888 406 4250

Chapter 4: Accesories Installation

4.5 Serial cable (Male – Female)

Be used in the following cases:
• Communicate with the PC controller.
• Communicate an interface card with the PC.



4.6 8-strand network cable (standard 586B)

It is used to:
• Link interface cards to Generate an interconnected network (in bus)

• Link the interface card to Concentrator.



4.7 12VDC power supply

• Power supply Controller.
• Power supply interface card



Chapter 5: Electrical, enviromental and safety conditions

5.1 Precaution measures regarding electrostatic discharge

When handling the devices that make up the Progressive System, electrostatic precaution Measures must be taken such as: a grounding wrist band or heel cap.

5.2 Precaution measures regarding device safety

• Observe carefully the ends' signs. Always consult the manual before making any connection.

• Do not operate the system in humid environments.

• Do not operate any system device without their respective covers or caps.

5.3 Previous considerations for appropriate system implementation

The requirements and instructions that should be taken into account for an appropriate implementa- tion and optimal operation of the Progressive System are the following:
1) Determine the slot machines to be part of the
Universal Controller.

2) Define the place where the Universal Controller and Interface card will be located. Said place must be ventilated, free of humidity and with restricted access.

3) Establish the distance existing between the components of the Universal Controller and take pre- cautions when measuring the cabling that will link the various system components.

4) UTP cables must be properly protected (use cable trays) throughout the route. The following recommendation must be followed for cabling:
a. The maximum distance between machines must be 3 meters.
b. The maximum distance between the Concentrator and first machine should not exceed 10 meters. c. The maximum distance between the Concentrator and the Controller should not exceed 50 meters.

5) The communication cable between the Controller and the computer (PC) must not exceed 10 meters.



Danger: before handling electric components you should be protected against electric discharges.

Phone free skype: 1 888 406 4250


Chapter 5: Electrical, enviromental and safety conditions

5.4 Enviromental conditions

- Location: closed place, protected from any external environment.
- Maximum temperature: 104º F (40º C)
- Minimum temperature: 32º F (0º C)
- Maximum operating relative humidity: 95% without condensation.
- Accessibility: Restricted access location.

5.5 Electrical conditions

- Voltage line input: through external power supply:
  AC INPUT: 100-250 v~1 A
  DC OUTPUT: +12V DC, 2.5 A
- Rated power supply range: 50/60 Hz.
- Protection against polarity inversion: Yes.
- Electrical connection: Permanently connected.

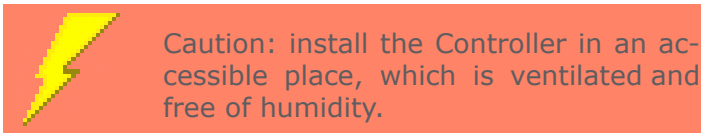

Caution: install the Controller in an accessible place, which is ventilated and free of humidity.

Chapter 6: Interface card number

Interface card number

In order to physically identify a progressive interface card, a number or address is assigned to it.

To perform this process, read carefully the following steps:

• Place jumpers in positions JP5 and JP8 of progres- sive interface card.

• Connect serial cable to the P1 DB9 of interface card and the other end to the output port 232 DB9 of Computer or PC.

• Connect the 12VDC power supply to the supply input connector of interface card.

• Check that LED´s D4 and D5 of interface card emit a green color light.

• Insert the installation CD or enter the download menu in the web page (www.mikohn.net). Locate the Configure interface program.

• Install and open the Configure interface program.

Chapter 6: Interface card number

• Enter the interface card number in the data box and click on Save. The message shown on figure 2 should appear; otherwise, click on Save again.

• To confirm the card number was correctly configured click on Read, the message shown in figure 3 will appear automatically.

• If the slot machine has SAS protocol counters, pla- ce jumpers in positions JP5 and JP7. Place jumpers in positions JP2 and JP6 if it has mechanical coun ters.

• After identifying the interface cards that will be part of the Progressive System they will be connected in a network.

Chapter 7: Interface cards interconnection

Interface cards interconnection

For performing the connection between interface cards, the following accessories and components must be available:

• Interface cards.

• 8-strand network cables, 568-B standard. They will be used to network all interface cards.

• 12 VDC power supply.


• Grounding cable.

Next, follow these steps:

1) For proper electrical and data distribution form 2 interface card groups. A group must have a maximum of 16 cards.

2) Select the interface card to be directly connected to the Controller. Such card must be identified as: First group card.

First group card
Bally Model

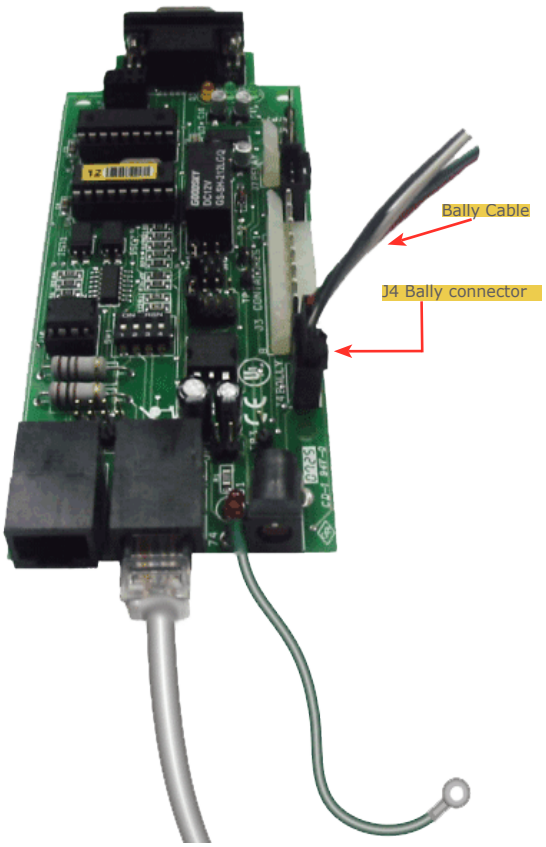

First group card
IGT Model



Phone free skype: 1 888 406 4250


Chapter 7: Interface card interconnection

3) Next, link cards to a bus network.

Select the network connector of the first group card and join it to one end of the 8-strand UTP cable. The other cable end should be joined to the network connector of the following interface card.

4) Repeat step 3 with the remaining cards. In other words, join cards using 8-strand cables.


5) After installing interface cards, connect the ground cable to the slot machine frame.

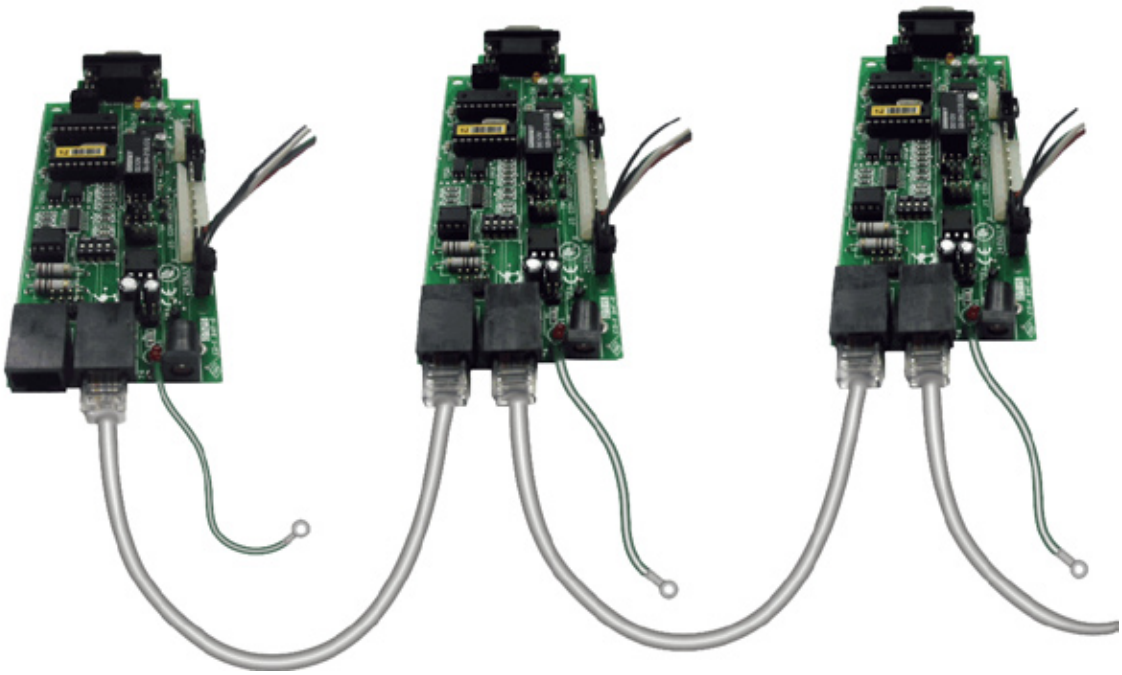

Chapter 8: Connection Interface Card - Slot Machine

In order to connect an interface card to another de- vice, make sure you have the following components and accessories:

- Interface card
- Grounding cable.
- 12 VDC power supply. Additional accessories per each new group of 12 cards.

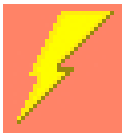

Danger: the interface card should not touch the metal cover of the machine. A short circuit may occur.

Before connecting an interface card to a slot machine, make sure to carry out the following:

- Find out machine model and manufacturer.
- Locate its base plate.
- Find the counter contact points (Coin in) in the base plate (rear side).

8.1 Connection Interface card - IGT Slot Machine

Para conectar la tarjeta de interfaz con una máquina IGT realice los siguientes pasos:

1) Insert the jumpers JP3 and JP6 pins of the interface card.

2) The black color connector cable into the connector insert IGT J5 interface card.

3) The other end of IGT (red connector) is a device which is attached to the connector for the progressive system installed on the motherboard.

8.2 Connection Interface card - Bally Slot machine

1) Insert the jumper at JP2 and JP6 pins of the interface card.

2) The 4-pin connector (black) cable into the connector insert Bally Bally J4 interface card.

3) The other two connectors are attached to the progressive system devices located on the motherboard.



Remember to arrange cables and thus prevent possible failures or breakdowns in the system or the machine.

Chapter 9: Connection Interface card - Universal Controller

① Insert one end of the 8-wire network cable to the interface card identified as the first card of set. Introduce cable in the network connector of card. The other end of the network cable is inserted into one of the two network inputs (JR9 or JR10) of the Controller.

② Turn on switch 3 of the SW1 device controller configuration.

③ Connect the 12 VDC power supply to the connector INPUT 12Vdc / 2A of Universal Controller.

Check that cards are working properly. The LED'S should be on.

For a number of machines higher than 31, interface cards are connected through the Controller and concentrators.

①



②



Switch 3
ON

③



Chapter 10: Connection Universal Controller - Other device

10.1 Connection of Controller to the computer (PC)

Connect the serial cable to computer interface connector Rs232 of Universal Controller. Connect the other cable end to the serial input connector RS232 DB9 of computer (PC).



10.2 Connection of Controller to other devices

10.2.1 Output to Bell (Optional):

Connect one end of the output to bell cable to connector J14 BELL of Universal Controller.



10.2.2 Output to Display (Optional):

Insert one end of the display controller cable to one of the display output connectors (J12 or J13) of Universal Controller. The other end is connected to the display.




Chapter 11: Set configuration parameters

The client has the possibility of choosing 2 ways for configuring game parameters:

1) Configuration from Universal Controller
2) Configuration from PC (computer)

11.1 Configuration from Universal Controller

In order to start configuring the game parameters through the universal controller, turn (ON) switch 4 of the SW1 Configuration device installed in the front of the controller (See next picture).

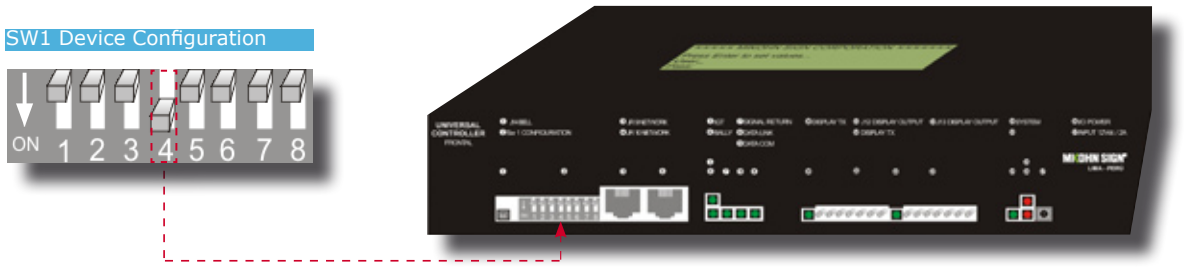


Using the keyboard, enter the user name and password provided by Mikohn Sign



The initial screen for menu configuration will automatically appear. (See image below)

The customer can enter the menu he wishes to configure by using the numerical keyboard (1-6).

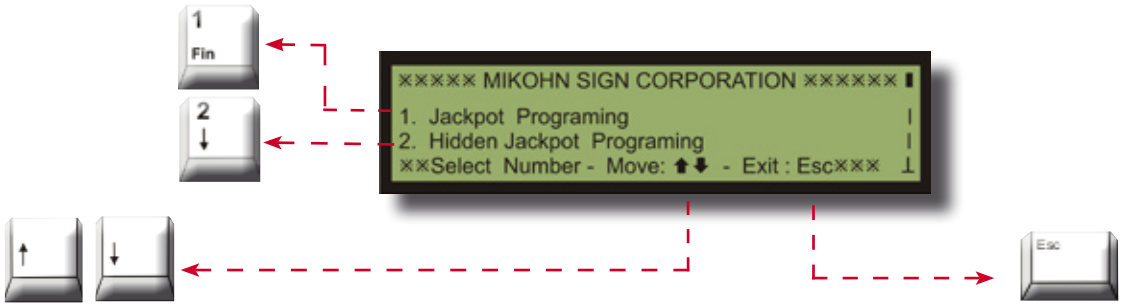

Press cursor arrows (up and down) to move the cursor over specific areas of the controller screen.

Press the Escape key to exit the configuration screen or return to sub-menus or main menu.

Chapter 11: Set configuration parameters

The Progressive System has 6 configuration menus. In the universal controller screen, each menu is represented by a number between 1 and 6.

1. Jackpot Programming: configuration of parameters for progressive jacknots.

2 Hidden Jackpot Programming:



3. Symbols and current setup: configuration of symbols and currency values.

4. Message programming: configuration of messages.



5. Time/Date settings: Time and date confi- guration.

6. Controller test mode: connection status control.




11.1.1 Jackpot Programing

Enter the menu configuration screen. Then press number 1 using the numerical keyboard.




You will enter the configuration screen for the Jackpot Programming menu. Each progressive jackpot is represented by a number between 0 and 7. The Progressive System identifies Jackpot 0 as the main jackpot.

Press the number of progressive jackpot you wish to configure. The customer will observe 5 configuration sub-menus for the progressive jackpot. Each sub- menu is represented by a number between 1 and 5.

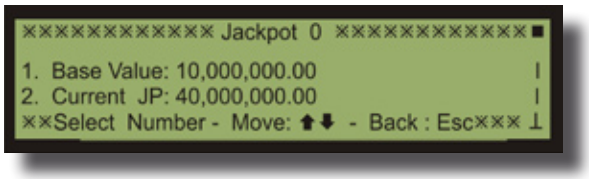

Base Value

In this sub-menu, the customer must set the base value to start the progressive jackpot To configure this value press number 1 in the sub-menu. The cursor will be placed on the respective digit line.

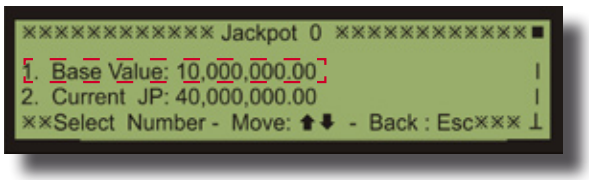


Phone free skype: 1 888 406 4250

Chapter 11: Set configuration parameters


Current JP

If this value is configured for the first time, press number 2 to configure this value

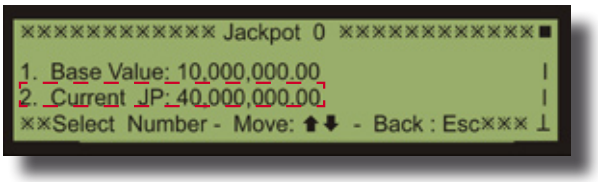


Increment 1

Increment value that enters the progressive jackpo per each credit played. It will deactivate after excee-ding the JP limit.

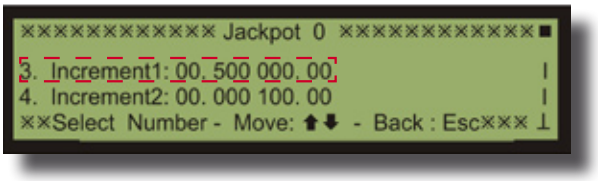


Increment 2

Increment value that will activate after exceeding the JP limit.

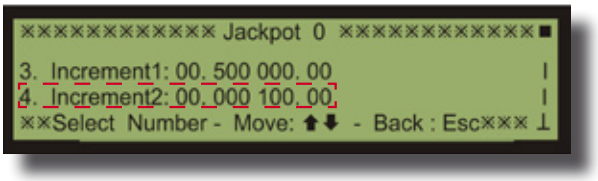

JP Limit

Limit value of progressive jackpot. When this value is exceeded, the system will activate increment 2.

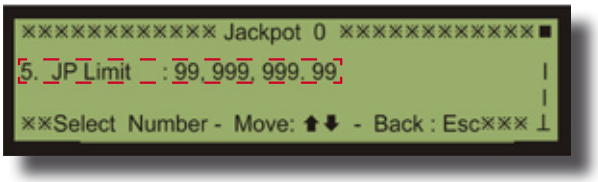


11.1.2 Hidden Jackpot Programing

Contribution percentage that accrues in a hidden manner to the game; allowing reaching a more attractive initial value for the next Progressive Jackpot.


There is a hidden jackpot for every progressive Jackpot. Enter the Hidden Jackpot number you wish to configure. The base value is the same as that of its progressive jackpot.

The Hidden Jackpot has 4 sub-menus.

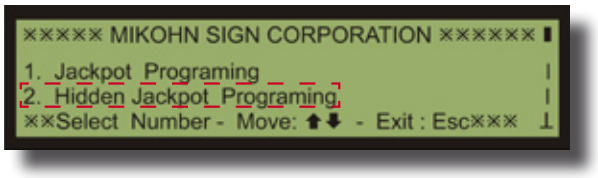

Hidden JP


Update value of Hidden Jackpot.

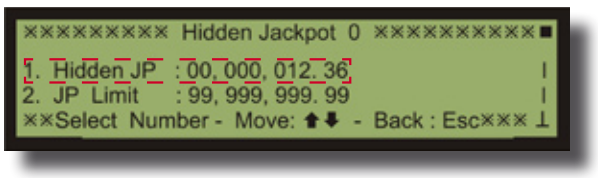

Chapter 11: Set configuration parameters


JP Limit

Limit value of Hidden jackpot. When this value is exceeded, the system will activate the increment 2 parameter.

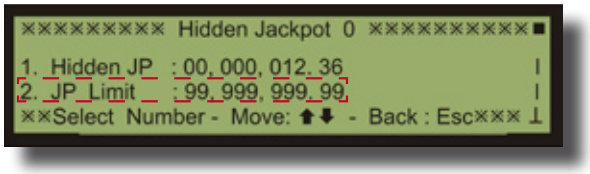


Increment 1

Increment value entered into the Hidden jackpot per credit played. It will deactivate after exceeding the JP limit.

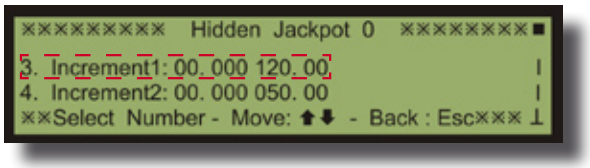

Increment 2


Increment value entered into the Hidden jackpot per credit played. It will activate after exceeding the JP limit.

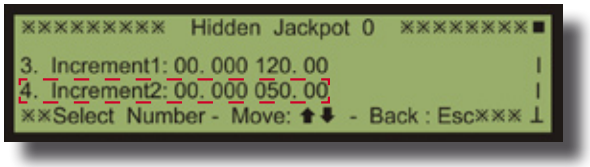

11.1.3 Symbols and current setup

Configuration menu for current value numbers and symbols.



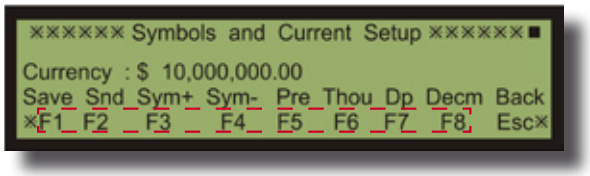

F1 Use this key to save configuration or changes made.

F2 Press this key to send to the display the configuration or changes made.

F3-F4 Keys to select the currency symbol. The Customer has 30 currency symbols available in the Progressive System.

F5 Use this key to place the currency symbol as a suffix or prefix of the number value

F6 Key to select thousands separation symbol:
coma, point or space. Examples:
10 000 000 / 10. 000. 000 / 10, 000, 000

F7 Key to select the decimal separation sign:
coma and point. Examples:
10 000 000. 00 / 10. 000. 000. 00
10 000 000, 00 / 10. 000. 000,00

F8 Key to select numbering format. Whole or with decimals. Examples:
10 000 000 / 10 000 000, 00
10. 000. 000 / 10. 000. 000. 00

Phone free skype: 1 888 406 4250

Chapter 11: Set configuration parameters

11.1.4 Message programing

Configuration menu for messages shown on the display.

The customer has 6 configuration sub-menus available in this parameter. The client can enter 240-text characters in each sub-menu. (see annex)





F1 Press F1 to send to the display messages in F2 sub-menus 1 thru 4.

F2 Press F2 to send to the display the message in sub-menu 5.

F3 Press the F3 key to send to the display the message in sub-menu 6.


The Message programming menu includes the following sub-menus.

Sub-menus 1 to 4

Use following sub-menus to enter attractive messa- ges that motivate bets.




Press F1 to place cursor on the text line. Write the message. Then, press F1 again to save the message.

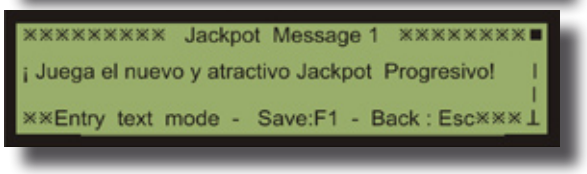


Sub-menu 5-Message Jackpot

Press F1 to place cursor on the text line. Then press F1 again to save the message.

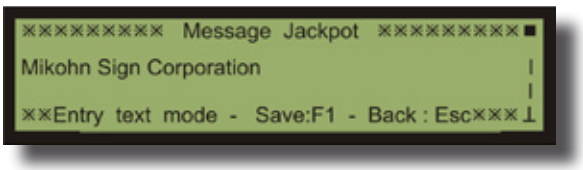

Sub-menu 6-Message Inactivity

Press F1 to place cursor on the text line. Then press F1 again to save the message.

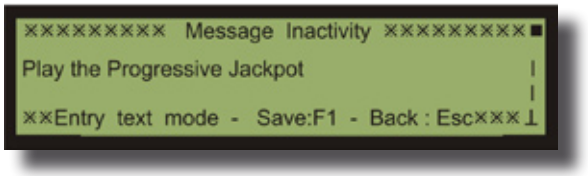

Chapter 11: Set configuration parameters


11.1.5 Time /Date settings

Date and time configuration menu. Press key number 5 to enter this menu.

Upon entering, two configuration sub-menus can be observed:

Date: Press F1 to start date configuration.

Time: Press F2 to setup the time.

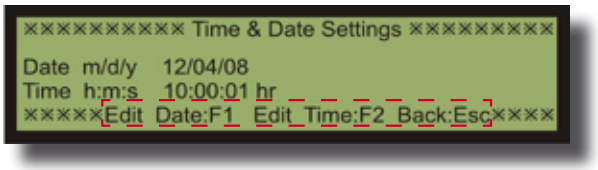

11.1.6 Controller test mode


Menu for connection status control. Supervision of each machine connected to the Progressive System.

It also provides information of credits played on each machine.

Data and information will be projected on the LCD screen of universal controller and display.

It is recommended to use this menu after the network cable has been installed.

When you finish setting the switch SW4 return to its original position. Verify the screen displays the image of prizes. See example below.

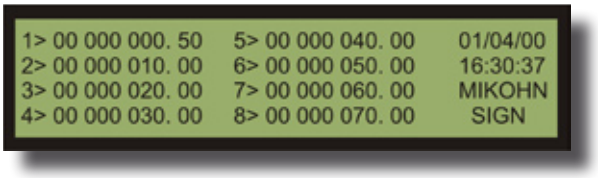

Phone free skype: 1 888 406 4250

Chapter 11: Set configuration parameters


11.2 Configuration form the PC

The following must be previously carried out in order to configure game parameters through the PC (computer):

• Install the Progressive software included in the installation CD.
• Next, turn (ON) switch 4 in the SW1 Configuration device located on the front side of the Universal Controller.


11.2.1 Downloading and installing files:

1. . In the installation CD, find directory \ Progressivee Installer and double click on file *Setup.exe*. If the installer file was downloaded from the Mikohn Sign web site (www.mikohn.net) follow the same procedure.

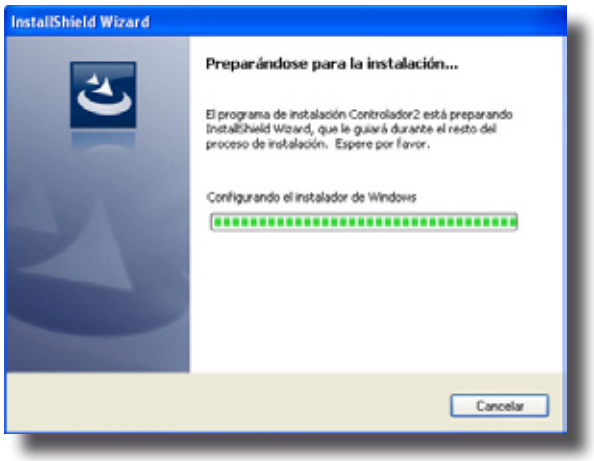


2. Wait a few minutes while the system downloads the installation assistant

3. The Welcome screen will appear. Click *Next* to continue the installation.

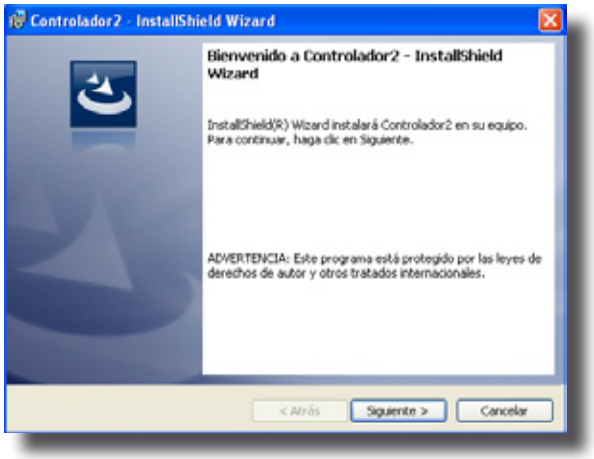


Chapter 11: Set configuration parameters


4. Click *install* to start the downloading files.

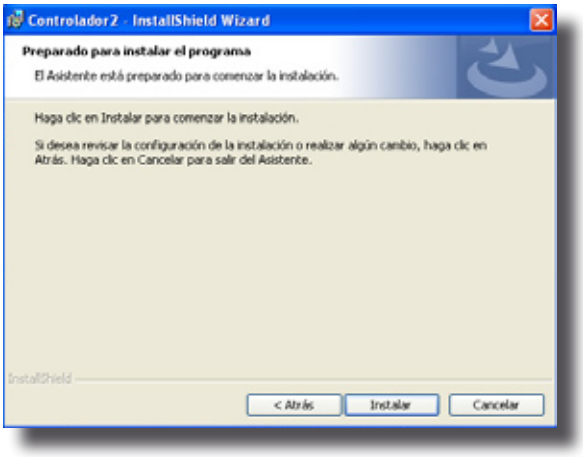

5. Wait a few minutes while the system is installed.

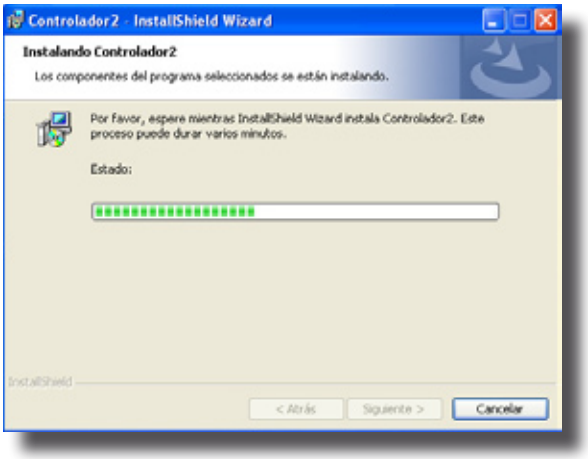

6. Click *finish*.

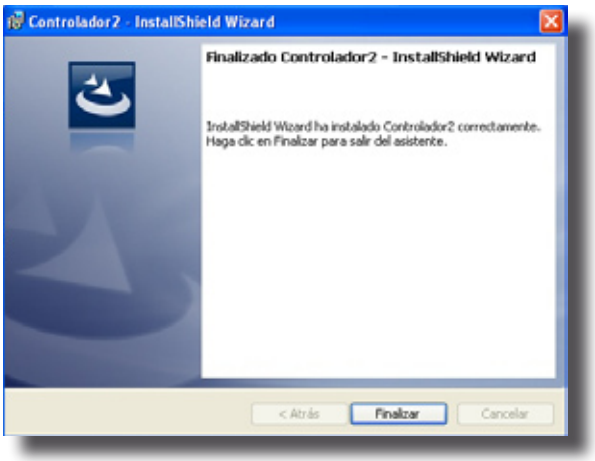


Phone free skype: 1 888 406 4250


Chapter 11: Set configuration parameters

11.2.2 Device SW3 and language selections


Turn on switch 3 of the SW1 Configuration device located in the front side of universal controller.

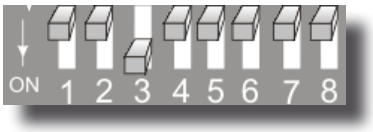

Click on the icon to access the Progressive System installed on the PC desktop.

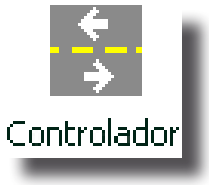


Enter the game configuration screen. On the menu bar click on "Language" and select the one of your preference: Spanish or English.

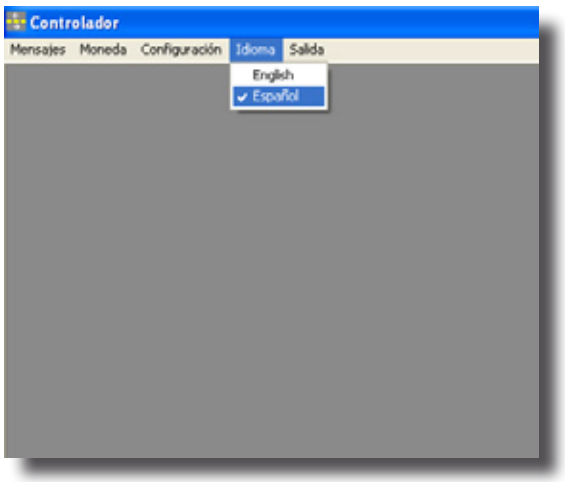

Chapter 11: Set configuration parameters

11.2.3 Messages menu

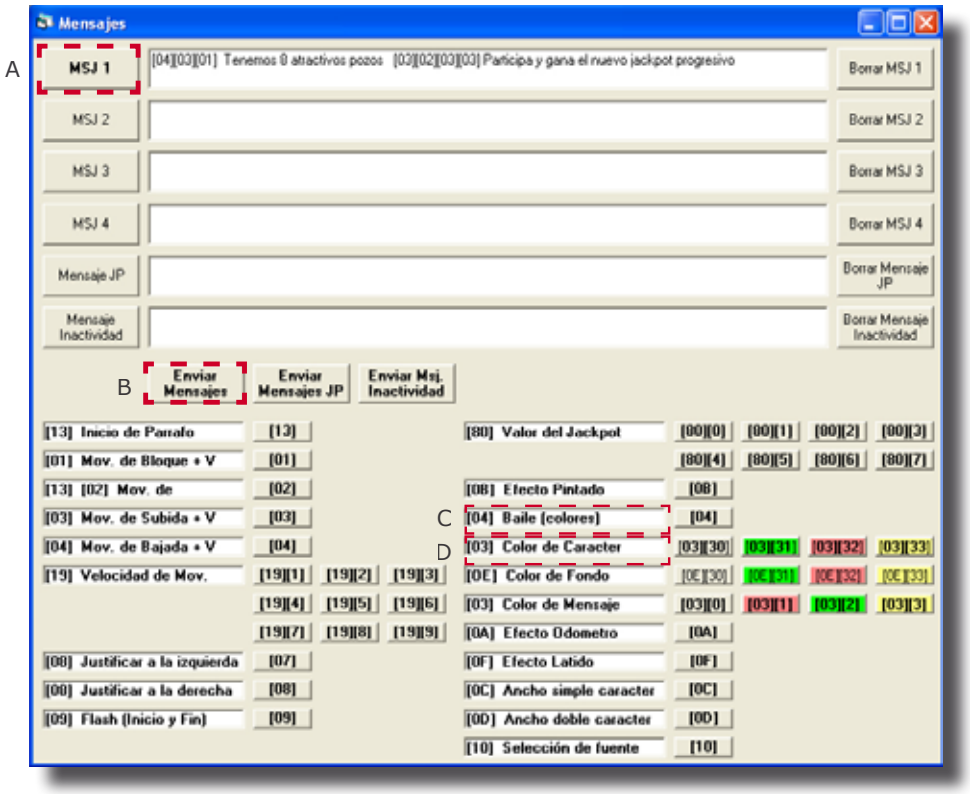

Parameters enabled for configuring the message menu from the PC are as follows:

A. MSJ1: Click this button and place cursor in the text box to write messages that motivate the game. The client has 240 characters available (small and capital letters).

B. Send message: Click this button to send message to the controller.

C. Dance (colors): use this parameter to apply to color mix effect to characters.

D. Character color: use this parameter to personalize your messages applying colors (red, green and yellow) to characters.

Message configuration example:

1. Click on the MSJ1 button. Then place cursor in the text box.

2. Select the effect desired to apply to the message.

3. Write message.


4. Click on "Send message".

Phone free skype: 1 888 406 4250

Chapter 11: Set configuration parameters

11.2.4 Symbol and numerical expression

Configuration menu for numbers and symbols of current value.

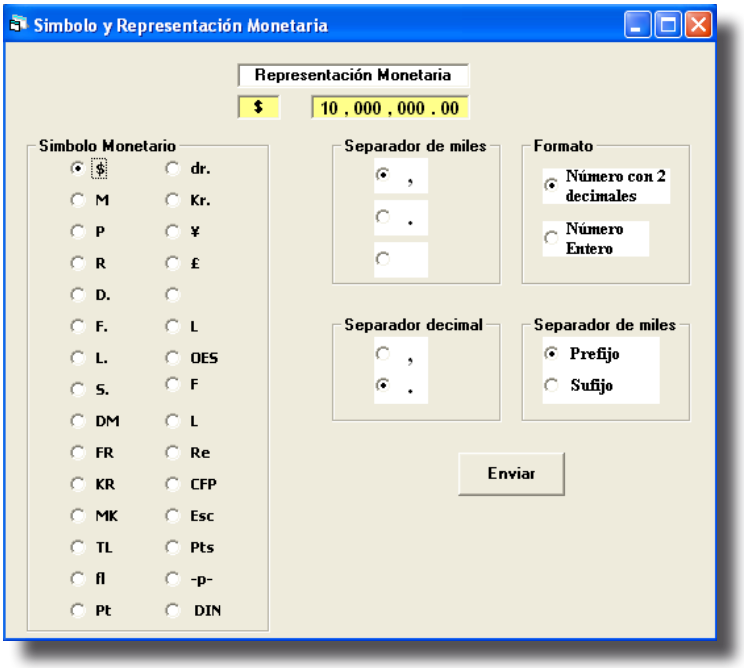

Currency Symbol

Select your preferred currency symbol. There are 30 currency symbols available to the customer

Thounsands separator

Key to select the thousand separation sign: coma, point or space.

Decimal separator

Key to select decimal separation sign: coma or point. Examples:

Coma decimal	Punto decimal
10 000 000, 00	10 000 000. 00

Format

Key to select number format. Whole or with decimals. Examples:

Entero	Decimal
10 000 000	10 000 000, 00
10. 000. 000	10. 000. 000. 00

Thousand separator


Use this key to place the currency symbol as a suffix or prefix of the number value.

Prefijo	Sufijo
$ 10 000 000	10 000 000 $

Chapter 11: Set configuration parameters

11.2.5 Jackpot Configuration

Configuration of jackpot and hidden jackpot values. Every progressive jackpot has a hidden jackpot.

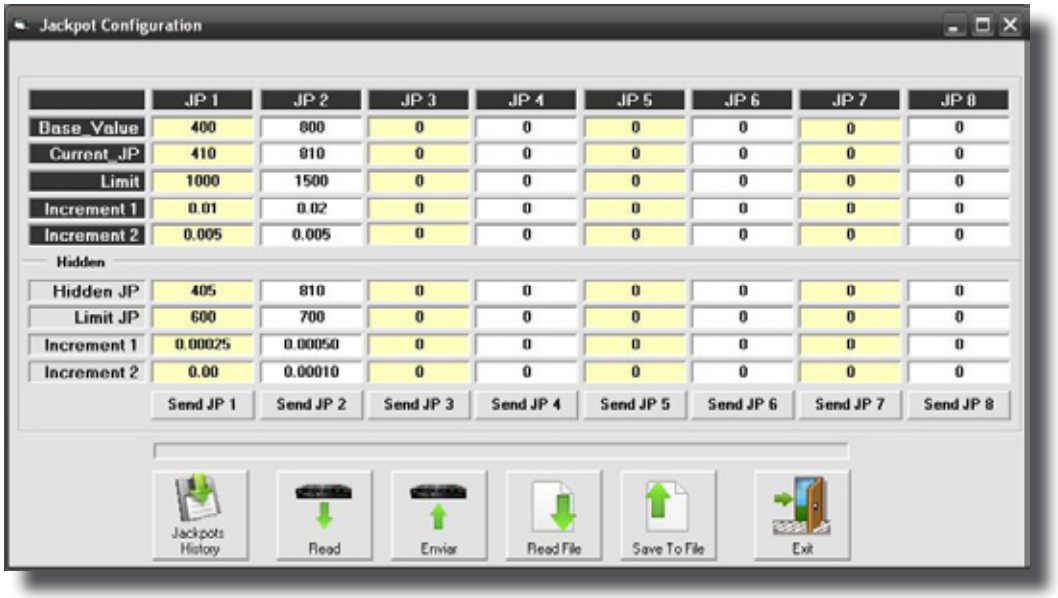

Jackpot **Hidden Jackpot**

Base Value

In this sub-menu the client must set the base value to start the progressive jackpot. Place cursor on the corresponding digit box.

Current JP

If this value is configured for the first time, press number 2 to configure this value

JP Limit

Limit value of progressive jackpot. When this value is exceeded, the system will activate increment 2.

Increment 1

Increment value that will enter the progressive jackpot per each credit played. This value is automati- cally deactivated after exceeding the JP limit.

Increment 2

Increment value that will enter the progressive jackpot per each credit played. It is automatically activated after exceeding the JP limit. This value is always lower than Increment 1.

Contribution percentage that is accrued in a hidden manner to the game, thus enabling to reach a more attractive initial value for the next progressive jackpot.

There is a hidden jackpot for each progressive jackpot. The base value of a hidden jackpot is the same as that of its progressive jackpot. Place cursor on the hidden jackpot you wish to configure.

Hidden JP

Valor actual del hidden jackpot.

JP Limit

Reference limit value of Hidden jackpot. When this value is exceeded the system will activate the Increment 2.

Increment 1

Increment value entered into the Hidden jackpot per credit played. It will be deactivated after exceeding the JP Limit.

Increment 2

Increment value entered into the Hidden jackpot per credit played. It will be activated after exceeding the JP Limit.

Phone free skype: 1 888 406 4250

Chapter 11: Set configuration parameters




If you press this button, you will receive historical information of all progressive jackpots. Day, time, number of jackpot and machine. This file is generated automatically after reboot.



Press this button to display on screen information configured in the controller



Press this button to send information to the controller configured through software.

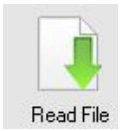

Pressing this button will read configuration information that was stored in a file.



Pressing this button will save configuration information in a specific file.

When you finish setting the switch SW3 back to its original position.

Annex

CHARACTER SPECIAL CODE

To set up and log in currency symbols and accents gradually through the controller use the following codes:

Symbol	Code	Description
€	[80]	Euro
L$	[81]	Lempira
Bs.F	[82]	Bolívar
US$	[83]	Dollar
C$	[84]	Cordoba
á	[E1]	
é	[E9]	
í	[ED]	
ó	[F3]	
ú	[FA]	
ñ	[F1]	
Ñ	[D1]	