
Bally S6000 TITO settings

Connect the red connector on the cable to the board as shown in the photo below:



The 40 pin black connector gets plugged into the system location (J10) on the back plane of the machine.

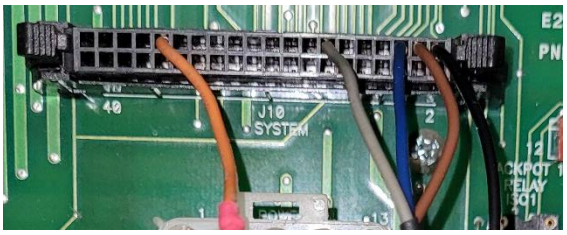

The following settings need to be set up on the machine to get the TITO to work. Other settings may be needed for your setup to get non-TITO settings in as well as setting min and max voucher settings . I do have a file that can be sent to you if needed that shows the various code numbers in the setup and what they are used for. As far as the values needed for those, it would be something you would need to setup based on your needs.

For S6000 machines you may need to have 2005 or newer mains chips in your machine to access all the required settings.

The settings that must be set are:

50HI Machine ID – 0001

50LO Machine ID – 0001

78HI SAS ID (To set you need to set other settings first and set this on the second round) – 0001

78LO Machine Number – 0001

73 Voucher Validation Level – 0003

64 Minimum voucher pay – 0000

67 Maximum voucher pay – 9999

92 SAS Bonusing – 0003

98 Primary Host – 0001

99 Secondary Host – 0000

29 AFT registration – 0000

Bally S6000 TITO settings

19HI Asset – 0001

19LO Number – 0001

17 Set SAS Version – 0001

I have also built in a feature to add credits to the machine when you want to by pressing the service or change button. The DIP switches on the board is what controls the free play. To turn the feature off set both switches to off. To set the feature to 1,000 credits, turn switch 1 on and switch 2 off. To set the feature to 5,000 credits, turn switch 1 off and switch 2 on. To set the feature to 10,000 credits, set both switches on.

TITO@Home version 4.0 data LED information:

If your red data LED is blinking slowly (once per second), your machine is not communicating with the TITO board.

If your red data light is blinking rapidly (approximately 4 time per second) the machine and board are communicating.