DISPLAY MIKOHN

USER MANUAL



© 2009 MIKOHN SIGN CORPORATION
This document is distributed to Mikohn Sign customers to be disseminated among technical service personnel and workers who operate or supervise a product of our company.

The total or partial reproduction of this manual, as well as its transmission or storage on magnetic media is prohibited without the prior agreement or permission of Mikohn Sign Corporation. The other products or trademarks named in this manual are registered by their respective companies.

License and Warranty

Important

The acquisition and use of this product indicates acceptance of the terms and conditions set forth in these clauses.

Obligations of the Client

Once the customer agrees to the product received, the customer assumes full responsibility for the product, as well as for the specifications and any other hardware, software or environmental conditions requirements indicated in this manual, for the optimal operation of this product.

Warranty Limitations

Mikohn Sign Corporation's products are covered by a one-year limited warranty from the date of purchase.

If the product is transferred to another person or company, the license agreement and its respective warranty will be automatically terminated. This warranty will only be transferred with the prior written permission of Mikohn Sign Corporation

The warranty does not cover damage due to mishandling by the Client or technicians not authorized by Mikohn Sign Corporation.

Mikohn Sign Corporation does not assume any responsibility or cover any warranty on the purchased product, if it is damaged during transport to the customer's premises, unless such service has been contracted directly by Mikohn Sign Corporation

Mikohn Sign Corporation assumes no responsibility for failures in hardware or software owned by third parties, which are installed on the customer's premises and that could lead to the malfunction of this product.

Scope of the warranty

The responsibilities of Mikohn Sign Corporation and the scope of this warranty to the customer are:

A. Faulty Software
In the event of a malfunction of software purchased from Mikohn Sign Corporation during the warranty period, it must be returned to Mikohn Sign Corporation or an authorized representative. All returned software will be examined by qualified personnel of Mikohn Sign Corporation, once the fault has been determined, it may be replaced by one of the same characteristics, as long as the failure has been due to a manufacturing defect and not due to misuse or manipulation of the same by the customer or technicians not authorized by Mikohn Sign Corporation.

B. Faulty Hardware
In the event of malfunction of hardware purchased from Mikohn Sign Corporation during the warranty period, it must be returned to Mikohn Sign Corporation or an authorized representative. All returned hardware will be examined by qualified personnel of Mikohn Sign Corporation, once the fault has been determined, it may be replaced by one of the same characteristics, as long as the failure has been due to a manufacturing defect and not due to misuse or manipulation of the same by the customer or technicians not authorized by Mikohn Sign Corporation.

Use of the

The warranty and remedies set forth in these clauses are for use only with products purchased directly from Mikohn Sign Corporation or an authorized representative.

This warranty may only be modified, extended, or replaced in writing by mutual agreement between the customer and Mikohn Sign Corporation or an authorized representative.

Technical

Technical support for this product is subject to the current warranty. Please contact us at the telephone numbers or e-mails specified in this manual to be attended by specialized personnel who will answer your queries.

License and Warranty

License

Mikohn Sign Corporation grants the customer a non-exclusive license to use its products under the following conditions:

A. The Client may make copies of the software owned by Mikohn Sign Corporation only for the normal practice of business or for the training of its personnel.

B. The customer may make copies of the original documentation of this product for their personal use or employee instruction. Any copy of the documentation, original or part thereof, must contain the indication that it is the property of the original Mikohn Sign Corporation.

Mikohn Sign Corporation hereby agrees to grant Customer a non-exclusive license to use the proprietary software and hardware associated with this product in accordance with the terms and conditions set forth in this License Agreement.

This license is not a sale of Mikohn Sign Corporation's proprietary software or the engineering concepts and logic embodied in the software and hardware of this product.

© Mikohn Sign Corporation

MIKOHN SIGN CORPORATION

Thank you for purchasing a Mikohn Sign Corporation product for your company. Currently, there is a product of our company in most casinos in Latin America and increasingly in the countries of the European Community. This affirms us as one of the most important suppliers to the international gaming industry.

Address: Calle Sucre 195 Urb. Vulcano – Ate, Lima - Peru. Phone:
(511) 349 2192
Fax: (511) 349 1343
E-mail: sales@mikohn.net / soporte@mikohn.net
WEB: www.mikohn.net

Content

Chapter 1: Introduction 1
1.1 About this manual 1
1.2 Who should use this manual? 1
1.3 Terms used in this manual 1
1.4 Symbols used in this manual 1

Chapter 2: Description of the Mikohn Display 2
2.1 What do you need to install the Mikohn Display? 2
2.2 How does the Mikohn Display work? 2

Chapter 3: Electronic Components 5
3.1 Display Mikohn Models 5
3.2 Control Display Card 6
3.3 Display Module 7

Chapter 4: Installation Accessories 8
4.1 10-wire flat cable 8
4.2 Control Card Power Cable 8
4.3 RS 485 Communication Cable 8
4.4 Power Cord for Cells 8

Chapter 5: Connecting Control Card Display - Display Module 9

Chapter 6: Connecting Control Display Card - Information Device Chapter 10

7: Connecting Control Display Card - Power Connector Chapter 8: 11

Connecting Display Modules 12-14

Chapter 9: Configuring Display Parameters 15
9.1 Symbol Menu 15
9.2 Align Menu 16
9.3 Mode set menu 16
9.4 Number JP Menu (1x2 model) 16
9.5 Window Menu (1x3 and 2x3 model) 17
9.6 Number JP Menu (1x3 & 2x3 Model) 18
9.7 Time Animation set menu 18
9.8 Repeat Menu 18
9.9 Exit Menu 18

Chapter 10: Setting Up Money Messages and Symbols 19
10.1 Messages Menu 19
10.2 Symbol & Numeric Expression Menu 20
10.3 Jackpot Parameters 21

Chapter 11: Supplementary Information 22
11.1 Goings-on 22
    11.1.1 Code C1 22
    11.1.2 Code C2 22
11.2 Operating LEDs of control card display 22
    11.2.1 Led D7 22
    11.2.2 Led D5 22

Chapter 1: Introduction

1.1 About this manual

To ensure proper use of this product, please read this user manual carefully and retain it for future reference.

1.2 Who should use this manual?


This manual is distributed to Casino and Gaming Hall personnel who supervise, operate or provide technical support to the Mikohn Display.

1.3 Terms used in this manual

- Casino: organization or establishment where the gaming hall operates.
- Player: A person who places and participates in bets using chips or credits on the slot machine.
- Prize: A payment or reward given to the player who has landed a winning combination of game symbols.
- Progressive Jackpot: A prize that is generated through a percentage contribution of the bet received from each machine connected to a gaming system. The more intense the game and the greater the number of machines in the system, the faster the value of the prize increases.

1.4 Symbols used in this manual

- Hazard: Prevents the user from dangerous voltage in the product box or component. You need to be careful not to get hurt.



- Caution: instructs the user to pay attention to and protect components (hardware or software) that may be damaged.



- Note: Additional information that is useful and important for the user.



Chapter 2: Description of the Mikohn Display

The Mikohn Display is an electronic product that will help you visualize information of the prizes and jackpots of a game system.

Display Mikohn models have been produced to project information from up to four wells simultaneously.

Its high information reception capacity has been designed to cover a distance of up to 1 km. In addition, it is adaptable to almost all gaming systems on the market.

2.1 What do you need to install the Display Mikohn?


It is only necessary to have an information device (controller) compatible with the Mikohn Display. Optionally you can use a computer (PC)

2.2 How does the Mikohn Display

After installing and configuring your system connect the display to the device of information.

If you have a Mikohn Sign game system, connect the display to the controller or concentrator (See diagrams 1 and 2)

With the help of the software and hardware provided with the display model you have purchased; You can easily configure the visualizations you want to present: messages, jackpots, animations, etc.

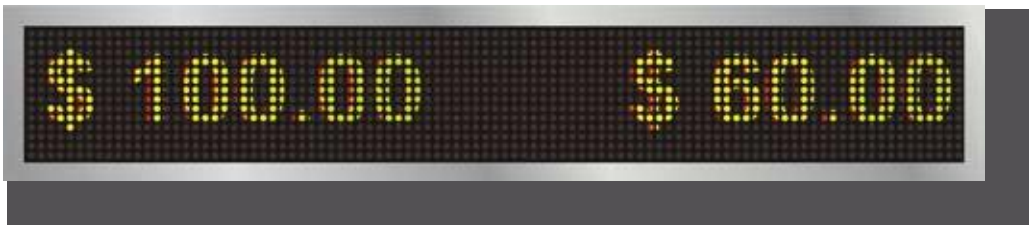

Chapter 2: Description of the Mikohn Display

Diagram 1

PC (computer)
Machine where the Mystery System is installed, configured and monitored.





Universal Controller
Detects each credit played on the machines that participate in the prizes of the Mystery System.




Display
Quantity Viewer
o Prize Amounts



Interface Cards
When networked, they will serve as a connection between the machines and the controller

Chapter 2: Description of the Mikohn Display

Diagram 2

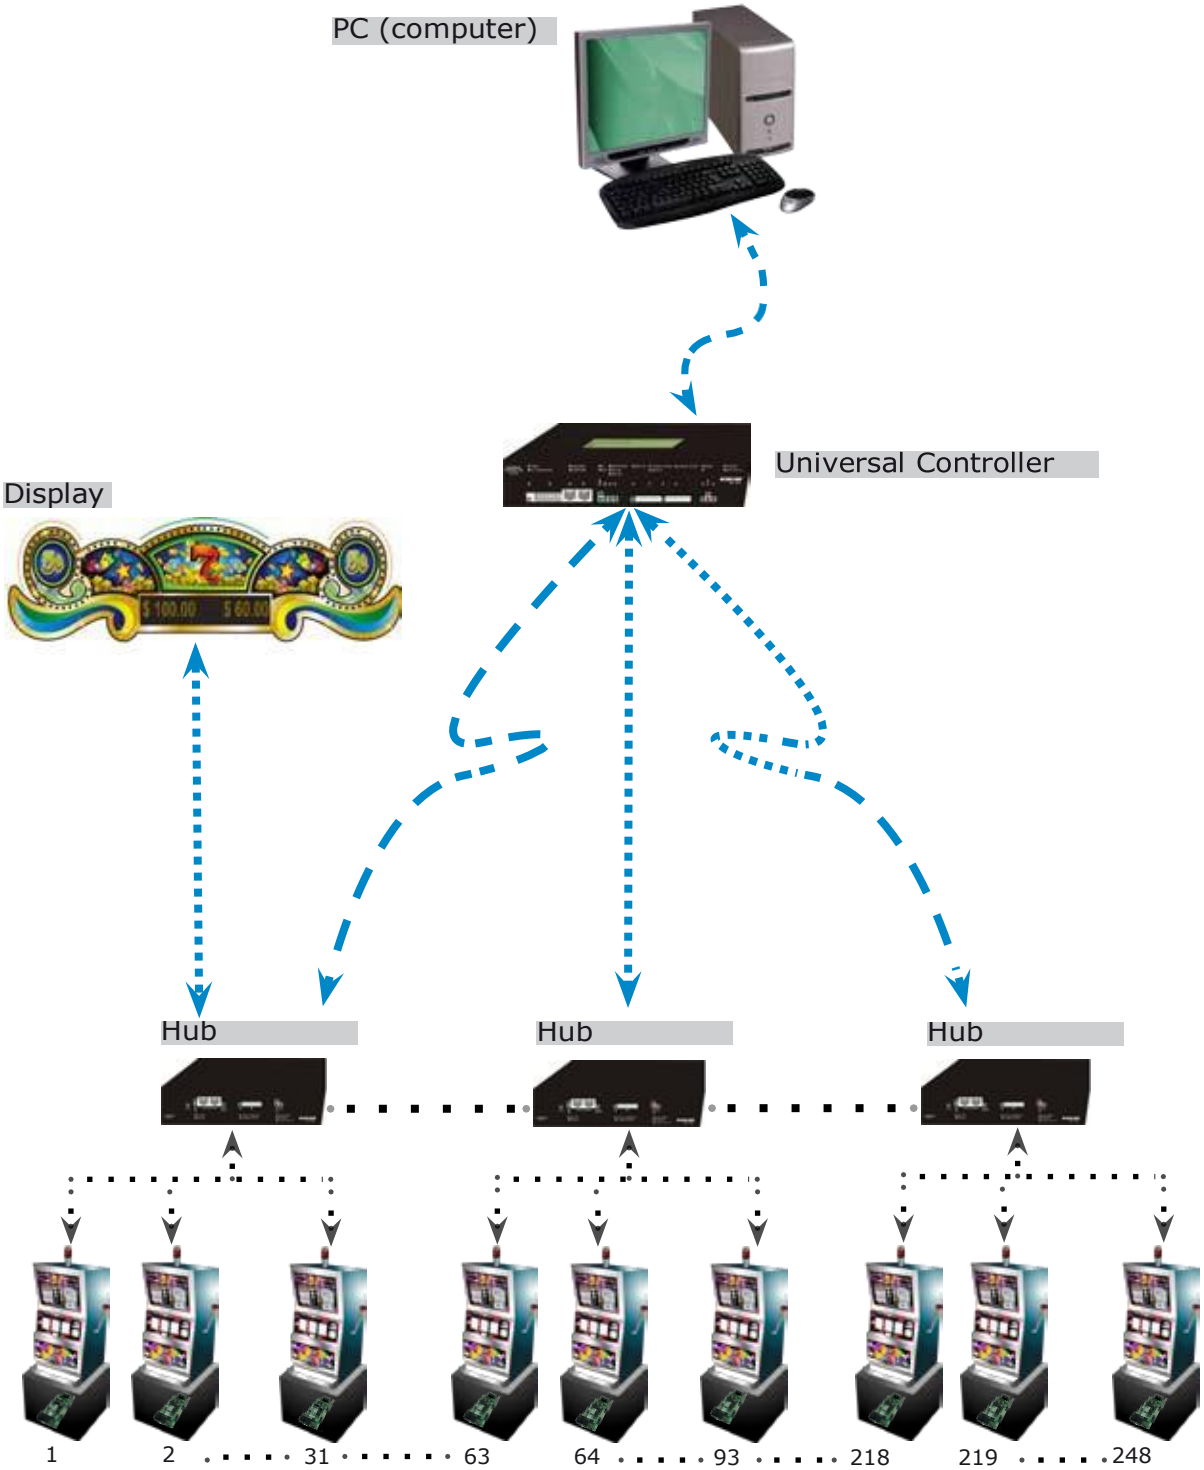


Chapter 3 : Electronic Components

3.1 Mikohn Display Models

We currently offer 3 models: 1x2

model

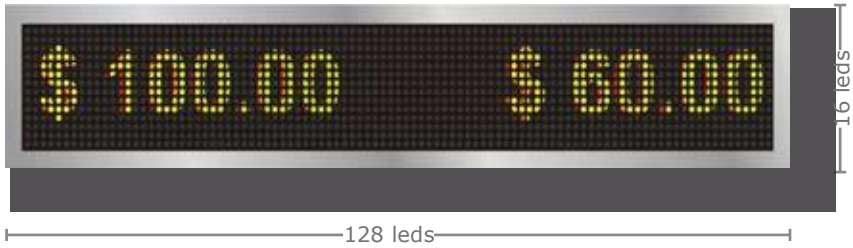

1x3 Model




2x3 model



Chapter 3: Electronic Components

3.2 Control Card Display

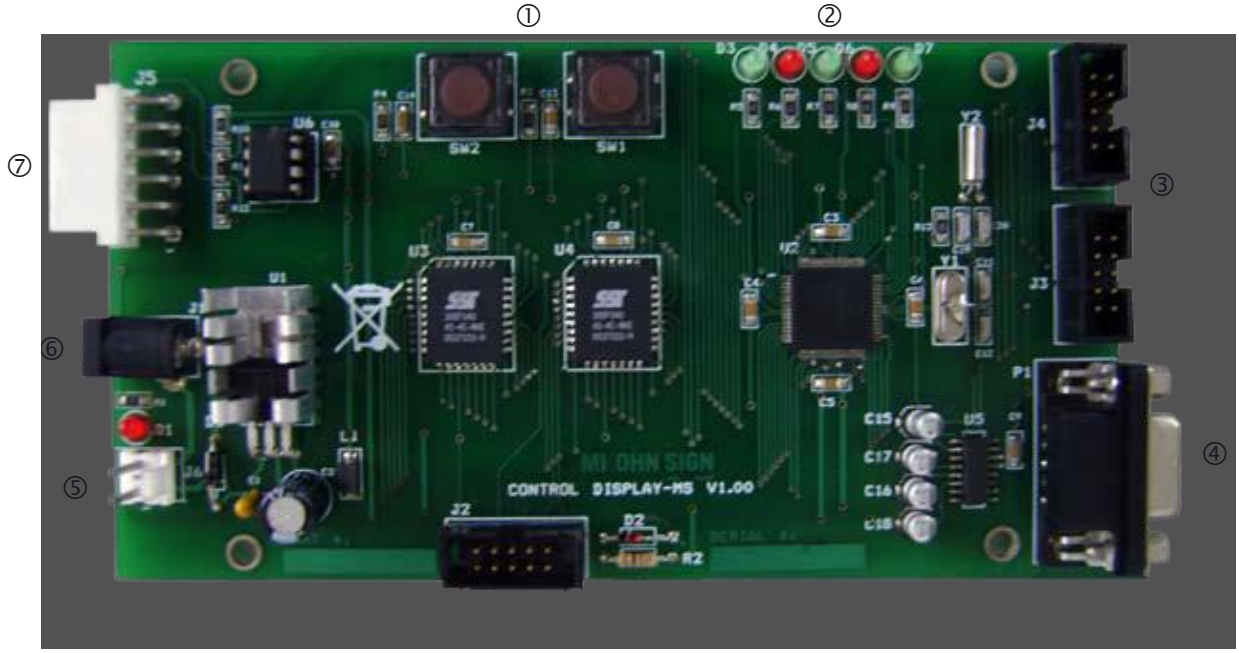

① SW1 /SW2 configuration buttons

② LEDs for receiving and transmitting information from the PC or controller.

③ Connectors for connection to dis- play matrix (J3 and J4).

④ RS 232 communication port


⑤ Primary Power Connector

⑥ Secondary Power Connector


⑦ RS 485 (J5) communication port

Chapter 3: Electronic Components

3.3 Display Module

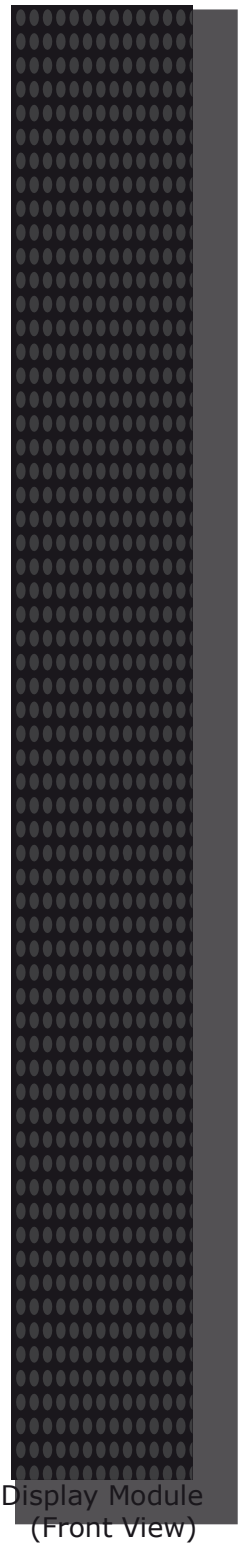

Display Module (Front View)

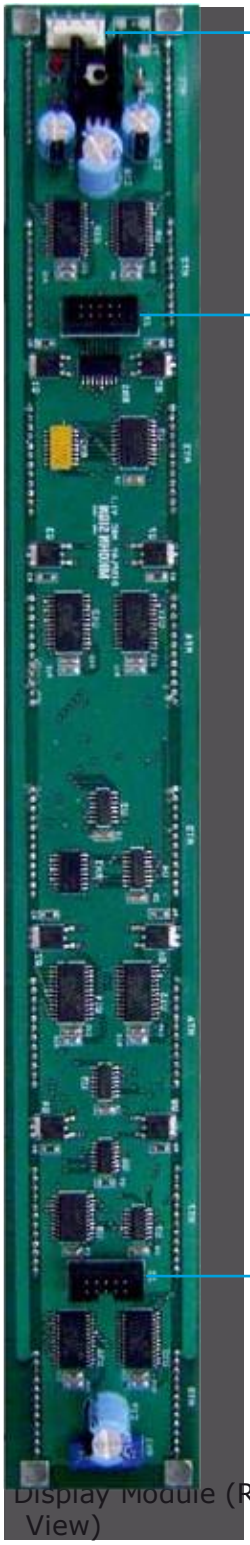

Display Module (Rear View)

① Power Supply Connector

② J2 Data Entry Connector

③ J3 data output connector

Chapter 4: Installation Accessories

4.1 10-wire flat cable


It is used to communicate the display control card with the display modules.

In addition, used to join the output connectors and Data entry of the modules.




4.3 RS 485 Communication Cable

It is used to communicate the display control card with the information device (controller).

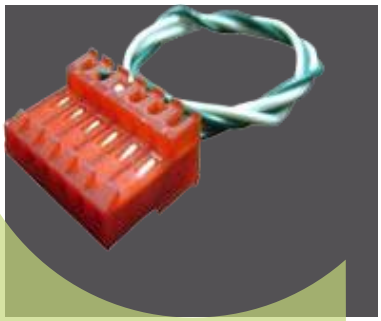

4.2 Card Power Cable Control

It is used to communicate the display control card with the source of

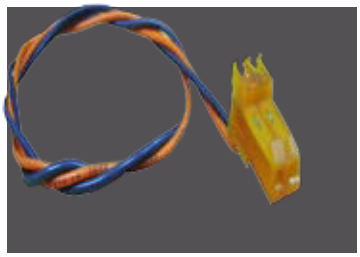

4.4 Power Cable for Cells


It is used to communicate the display modules with the source of energy.



Chapter 5: Connecting Control Card Display - Display Module


Attach a 10 x flat cable to one of the display connecting to m display (J3 or J4) control card

Thread
Thread
Thread
Play.

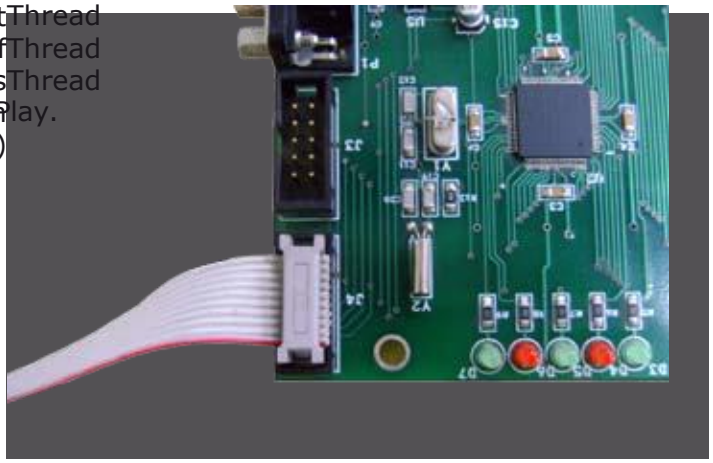


Choose the display module in the upper right corner (view from the back side).

The other end of the 10-wire flat cable is attached to the J2 input connector of the display module chosen above.

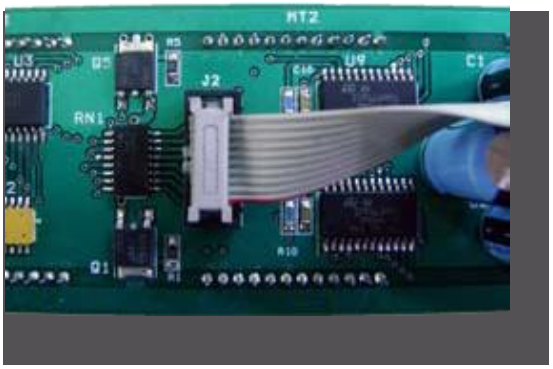

Chapter 6: Connecting Control Card Display - Information Device

Attach one end of the RS communication cable 485 to the J5 connector of the display control card.

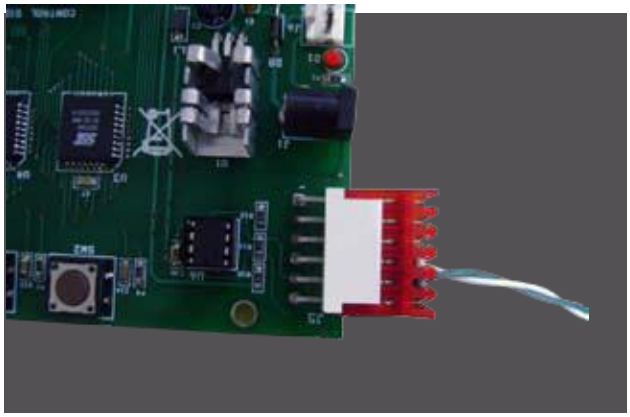


The other end of the communication cable attaches to the connector of the information device (controller)




Chapter 7: Connecting Control Card Display - Power Connector

Attach the control card power cable to the primary power connector (J6) of the control display card.

The other end of the cable attaches to the power source

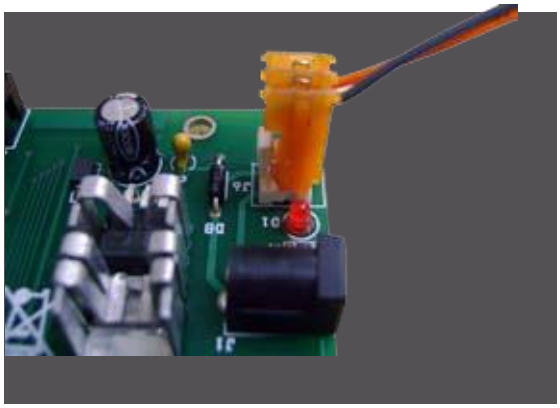

Fully wired Control Display card

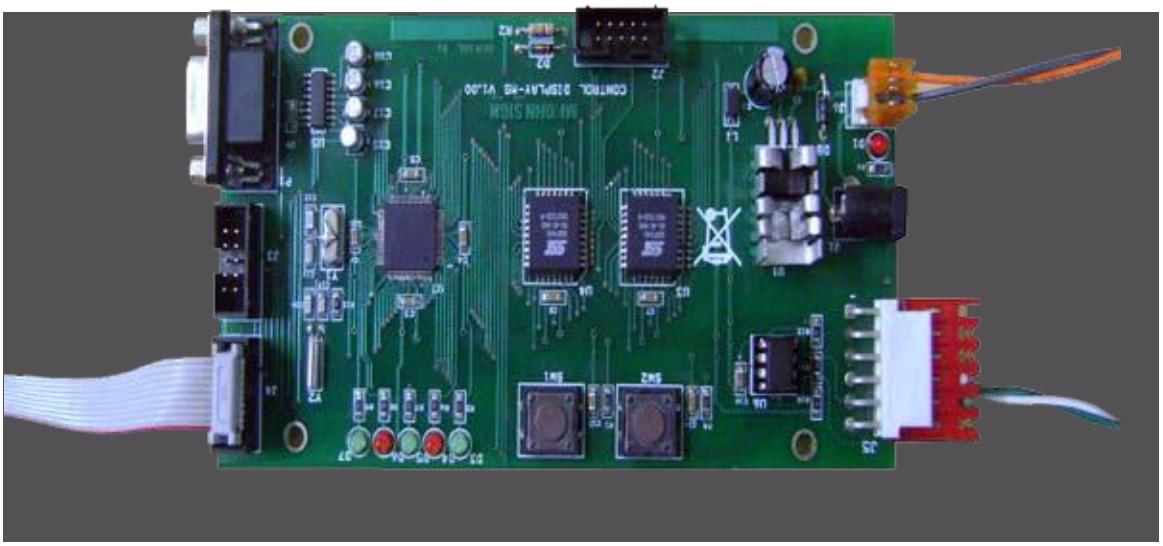

Chapter 8: Connecting Display Modules


Use the 10-wire flat cables to connect the input (J2) and data output (J3) connectors. (See image below)

Remember that the data entry connector (J2) of the display module located at the upper right end must be connected to the display control card (see page 9).




Aerial view

1x2 Model

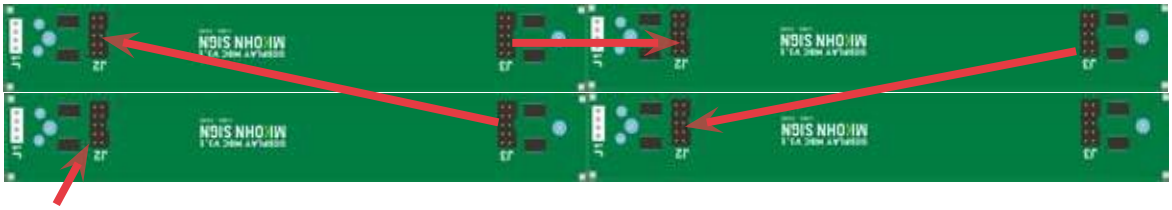


Upper Right Module

Front view

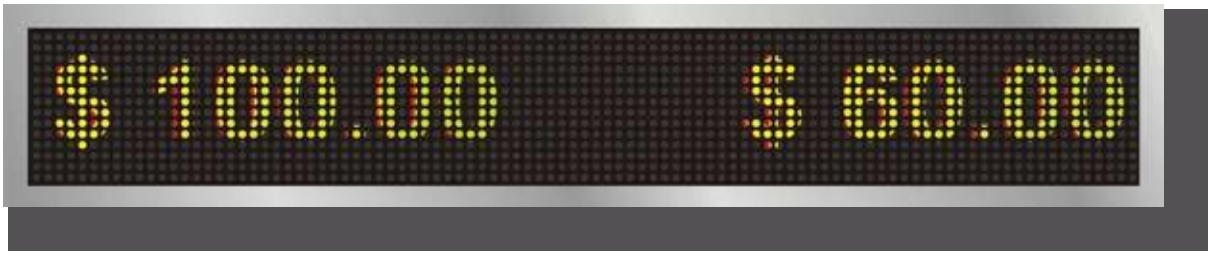


Chapter 8: Connecting Display Modules

Aerial view

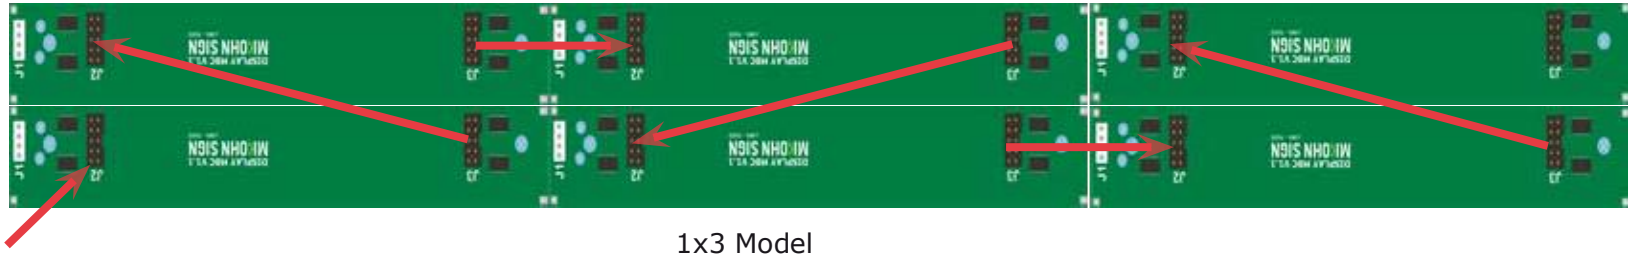

1x3 Model


Aerial view

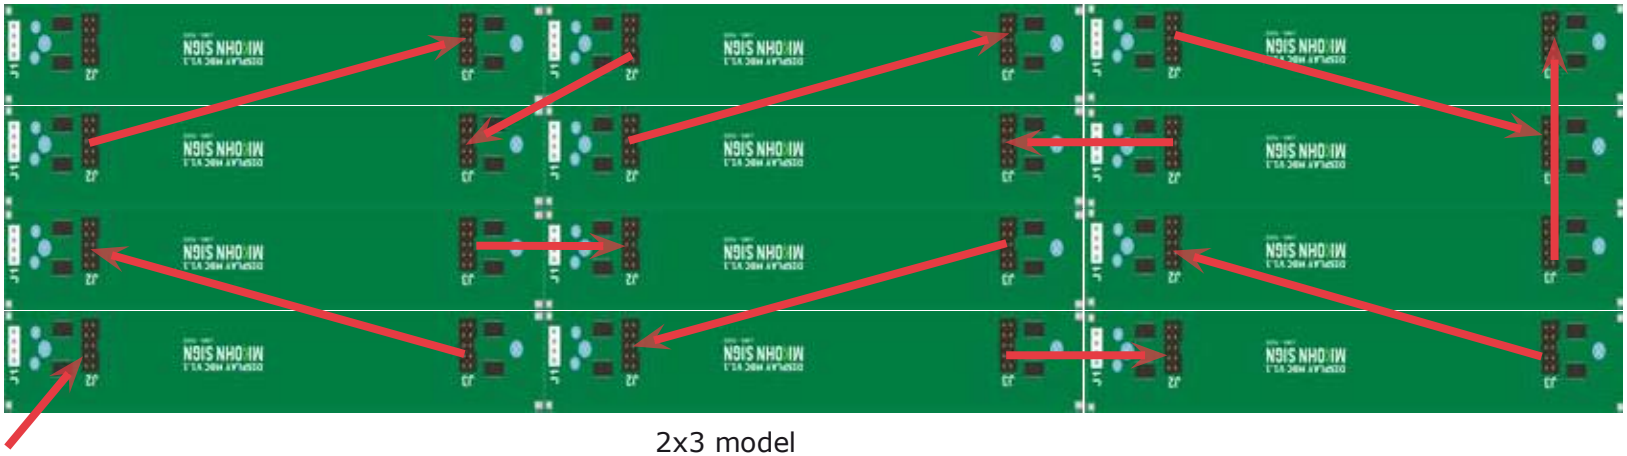


2x3 model

Chapter 8: Connecting Display Modules

Insert the cell power cables into the connectors of your power supply (J1). The other ends of the wires connect to the power source.

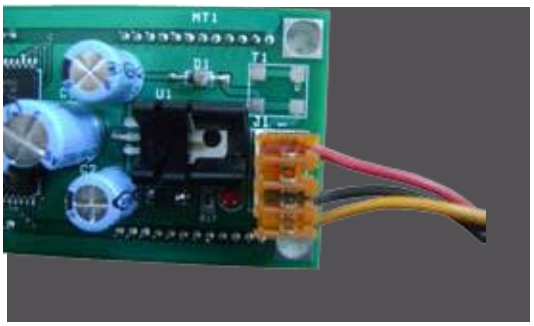

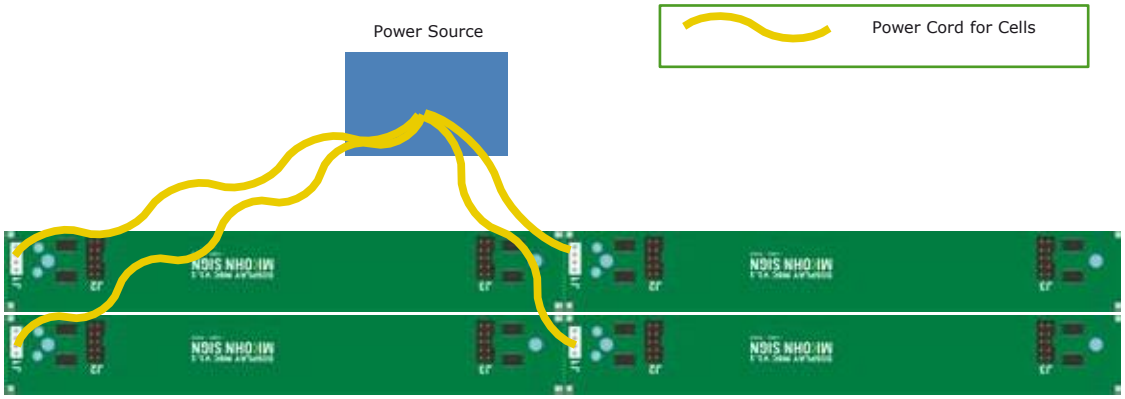


Chapter 9: Configuring Display Parameters


If you have made the connections correctly; the Mikohn display will turn on automatically.



Wait a few seconds for the device to recognize all the configuration parameters. At the end of this process, you will see the initial screen (value in zero).

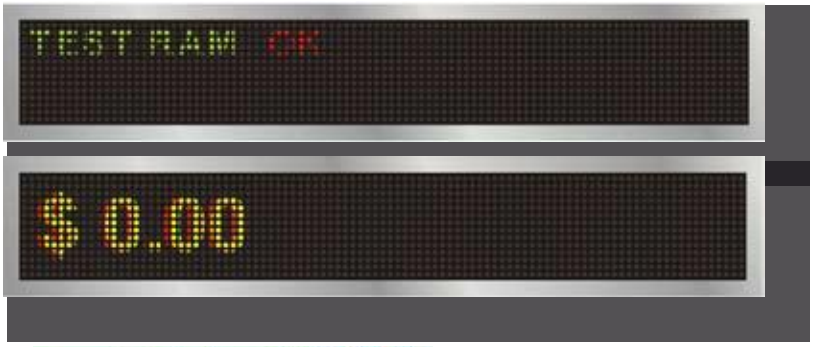

To configure display parameters, use the SW1 and SW2 switches.

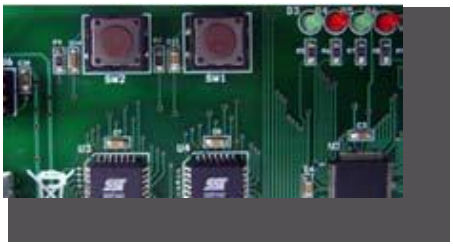

Press the SW1 switch to enter the configuration menu and switch menus.

Press the SW2 switch to switch options in each menu.

9.1 Symbol Menu

The first parameter to be set will be that of a monetary symbol. With the SW2 switch you can choose the symbol of your choice.



The Mikohn Display offers you 12 types of symbols from the most representative coins on the market.


After choosing the symbol, press SW1 to enter the next menu.

Chapter 9: Configuring Display Parameters

9.2 Align Symbol

In this menu, you can choose where you will place the symbol: to the right (suffix) or left (prefix) of the monetary value.

Press SW2 to choose the option of your preference. Then, press SW1 to enter the next menu.

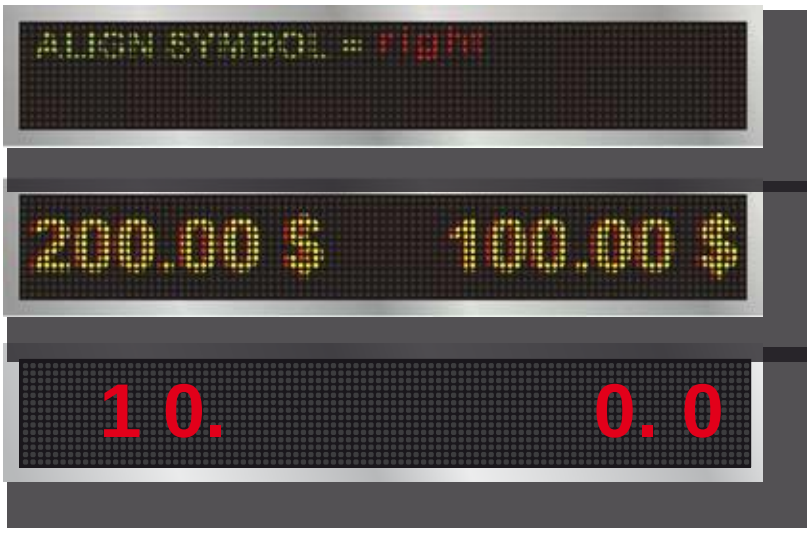

9.3 Mode

With the SW2 switch, select the display model you have purchased.

Then press SW1 to enter the next menu.



If you select the 1x2 model, you will be taken directly to the Number JP (Jackpot) menu. If you use the 1x3 or 2x3 model, you will first enter the Windows menu.

9.4 Number JP Menu (1x2 Model)

Press the SW2 switch to select the Jackpot you want to project on the display.

Then press SW1 to enter the following menu: Time Animation.



Chapter 9: Configuring Display Parameters

9.5 Window Menu (1x3 and 2x3

If you have the 1x3 or 2x3 display models, the window menu will appear after the mode menu.

With the SW2 device, select the number of windows (wells) you want to display on the display.

After choosing the option of your preference, press SW1 to enter the next menu.

Window 1 Option



Window 2 Option



Window 4 Option



Chapter 9: Configuring Display Parameters


9.6 Number JP Menu (1x3 & 2x3 Model)

In this menu you will be able to choose the number of the well and the window, position within the display, where you intend to place the well.

With the SW1 device you will be able to locate the window you want to configure.

With the SW2 device you can select the well number (0-7) you want to project.

After configuring the wells and windows of your choice; press SW1 to enter the next menu.

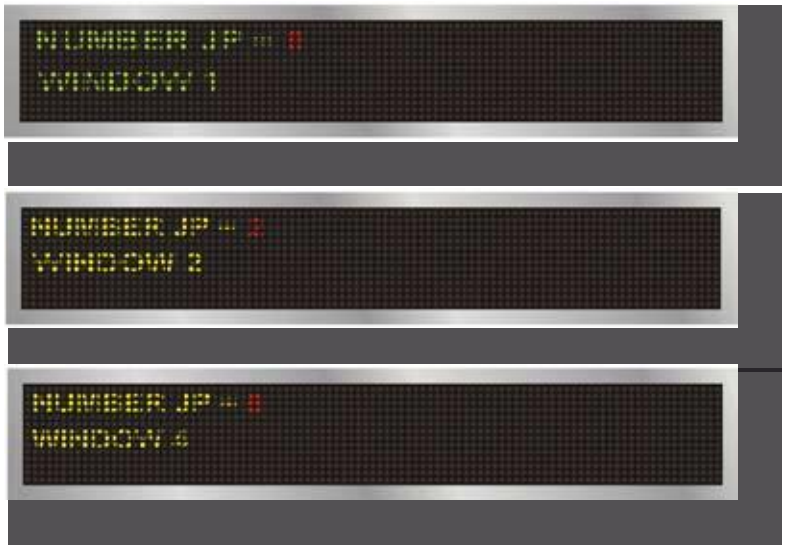

9.7 Time Animation

Press SW2 to set the time (minutes) in which the animation will appear.

Then press SW1 to enter the next menu.



9.8 Repeat Menu

With the SW2 device, determine the number of times you want the animation to appear

Then, press SW1 to enter-sar to the final menu.



9.9 Menu Exit

With the SW2 device, select the YES option.

You will observe all the configuration parameters made.




Chapter 10: Setting Up Money Messages and Symbols

Insert the installation CD and run the Display Manager installer. Verify that in the desktop the shortcut icon has been created 

Double-click on the shortcut to enter the message setup program and Currency symbols.

10.1 Messages

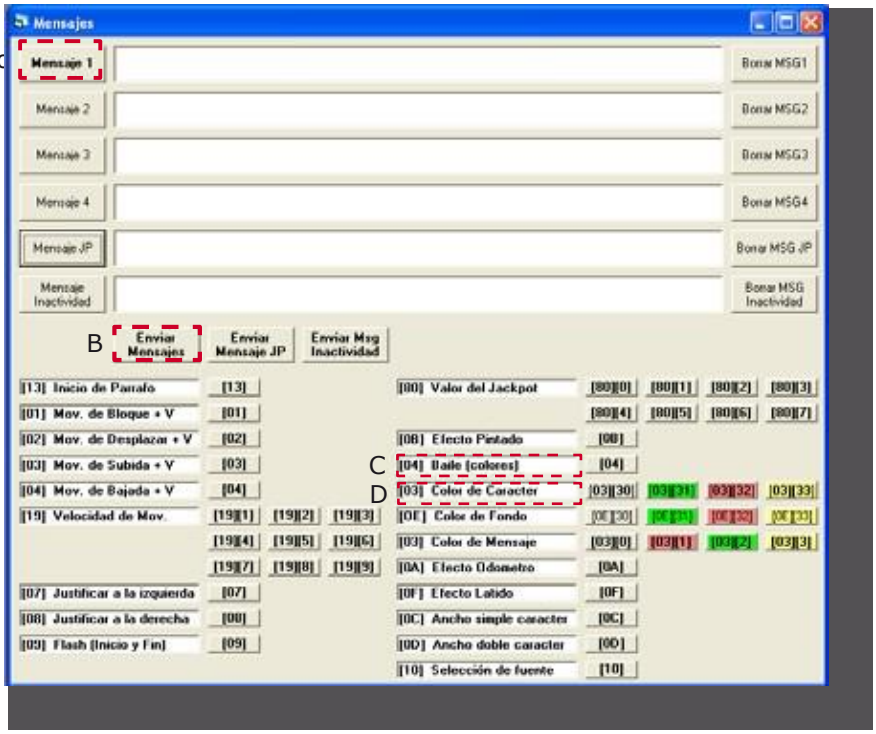

The parameters enabled for the configuration of the message menu from the PC are as follows:

A. MSJ1: Press this button and place the cursor in the text box to compose the messages that animate the game. The customer has 240 characters (lowercase and uppercase).

B. Send Message: Press this button to send the message to the controller.

C. Dance (colors): Characters change color constantly (every 1/2 second) between green, yellow, and red.

D. Character color: Use this parameter to personalize your messages by applying colors (red, green, or yellow) to the characters.

Example of message configuration:

To enter messages correctly, follow these steps:

1. Click the MSJ1 button. Then, place the cursor in the text box.

2. Choose the effect you want to apply to the message: dance (colors) or character color.


3. Compose your message.

4. Tap the Send Message button.

Chapter 10: Setting Up Money Messages and Symbols

10.2 Symbol and Numerical Expression

Configuration menu for numbers and monetary value symbols.

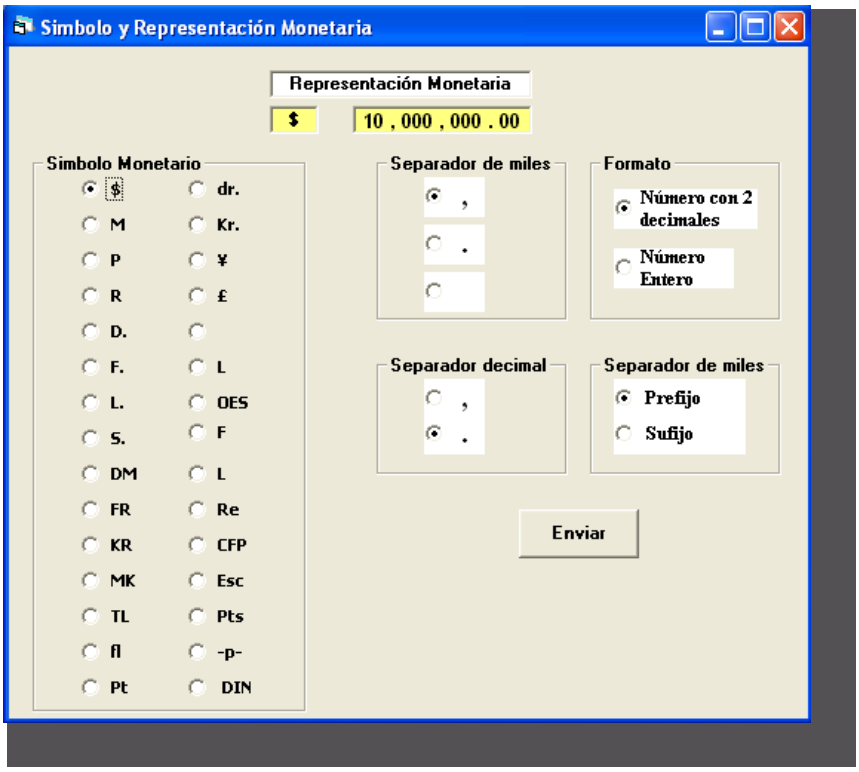

Currency Symbol

Select the currency symbol of your choice. The customer has 12 currency symbols available.

Thousands Separator

Parameter for choosing thousands separation sign: comma, period, or space

Decimal Separator

Parameter for choosing the decimal separator sign (comma or period). Examples:

Coma decimal	Decimal point
10 000 000, 00	10 000 000. 00

Format

Use this parameter to choose the numbering form. Integer or decimal. Examples:

Whole	Decimal
10 000 000	10 000 000, 00
10. 000. 000	10. 000. 000. 00

Thousands Separator


Use this parameter to locate the monetary symbol as a suffix or prefix to the numerical value.

Prefix	Suffix
$ 10 000 000	10 000 000 $

Chapter 10: Setting Up Money Messages and Symbols

10.3 Jackpot Parameters

The jackpot parameters menu is used as a performance simulator. Enter the corresponding values and perform any tests you think are necessary.

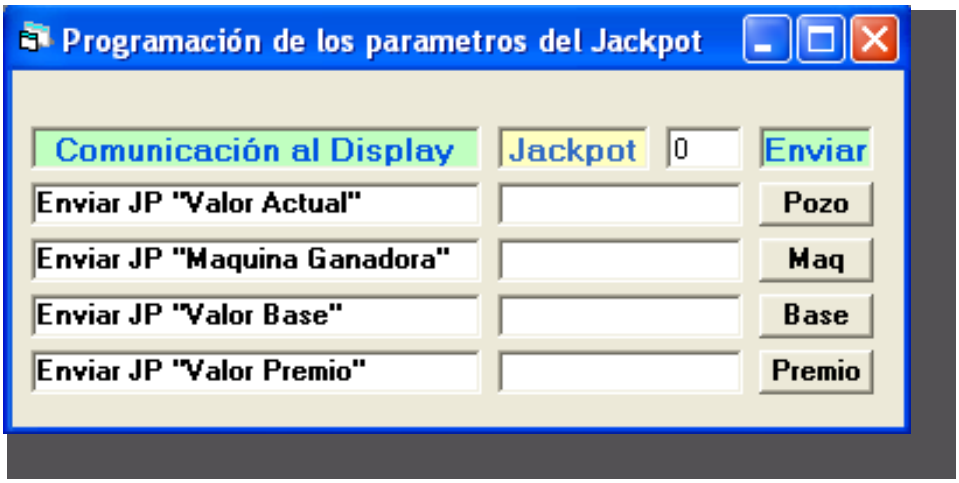

Jackpot: Enter the jackpot number you want to display.

Present Value: Current value of the well.

Winning Machine: Enter the winning machine number.

Base Value: Enter the base value.

Prize Value: Submit the value of the prize.

Chapter 11: Supplementary Information

11.1

11.1.1 Code C1

This occurrence occurs when no information has been sent from the configured well.



11.1.2 Code C2

C2 is an occurrence that is generated when the value of a well exceeds the 10-digit barrier.



11.2 Operating Card LEDs control display

11.2.1 D7 LED: Lights up when data arrives from the well to the display

11.2.2 LED D5: Lights up when a message arrives on the display

