NXGEN Technology AG

Axis IO Input Module Onboarding Guide

Pre-requisites:

a.Site is created in Genesis and the user knows the steps to add a device.

b. The device is reachable with the external IP and Http/Https port to access the device is open

1.. Device addition in Genesis:

1.1. On the Add Device Dialog, Enter the following details - Discover and save the device.

Type = Axis

IP Address = External IP of the device

Serial number of the device

User Name and password to access the device

All the ports to be configured with the HTPP / Https Port

Device Timezone

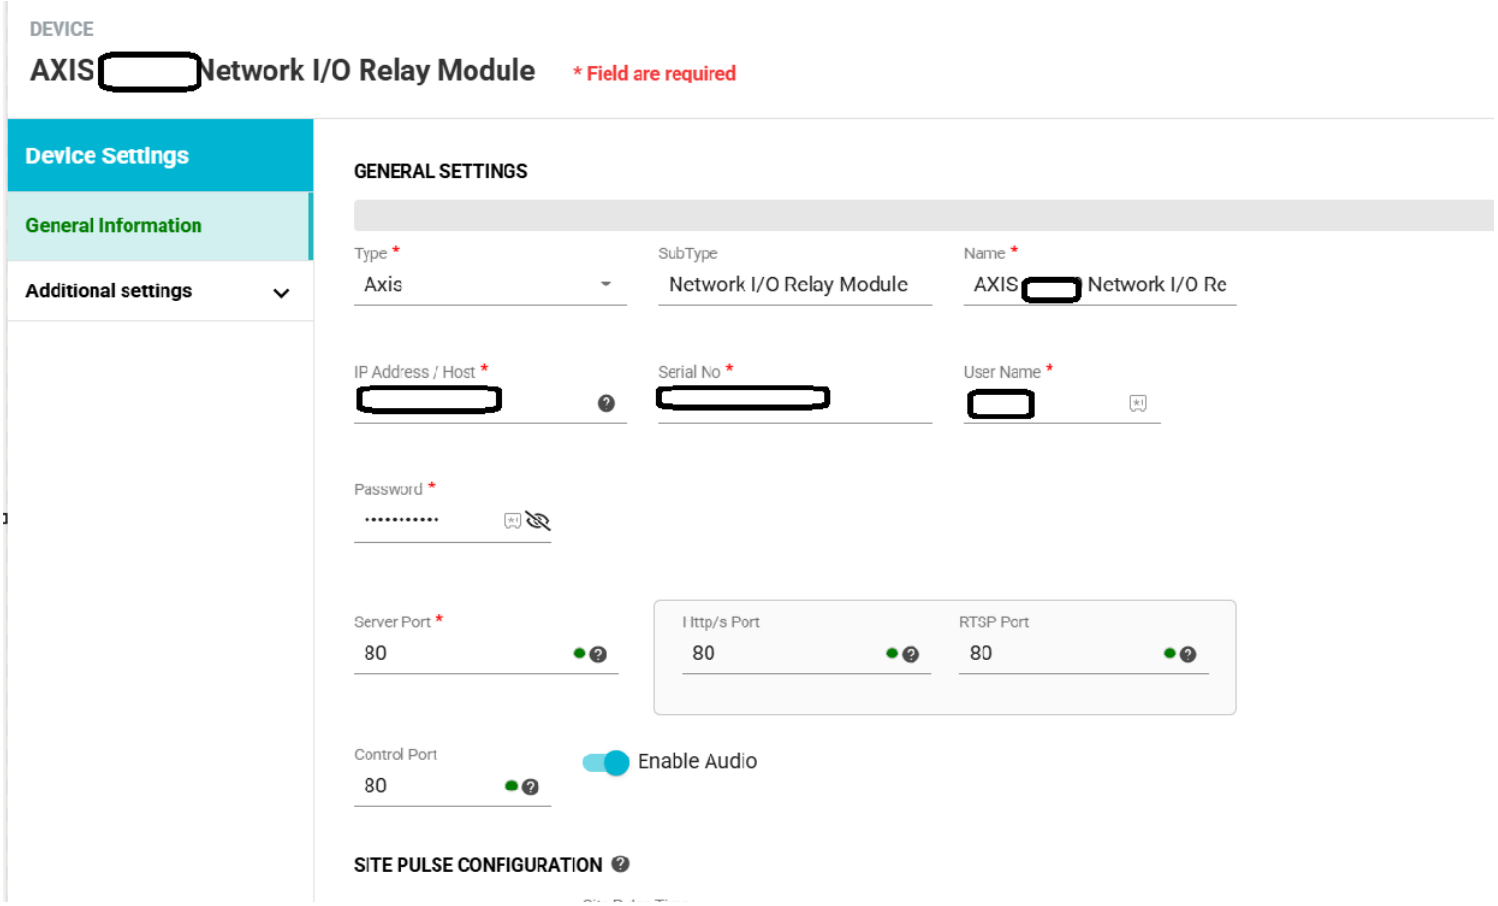

1.2.1. **Copy the Device ID** - On the configuration page select the Axis IO Module device onboarded to Genesis and Click on Edit as seen below

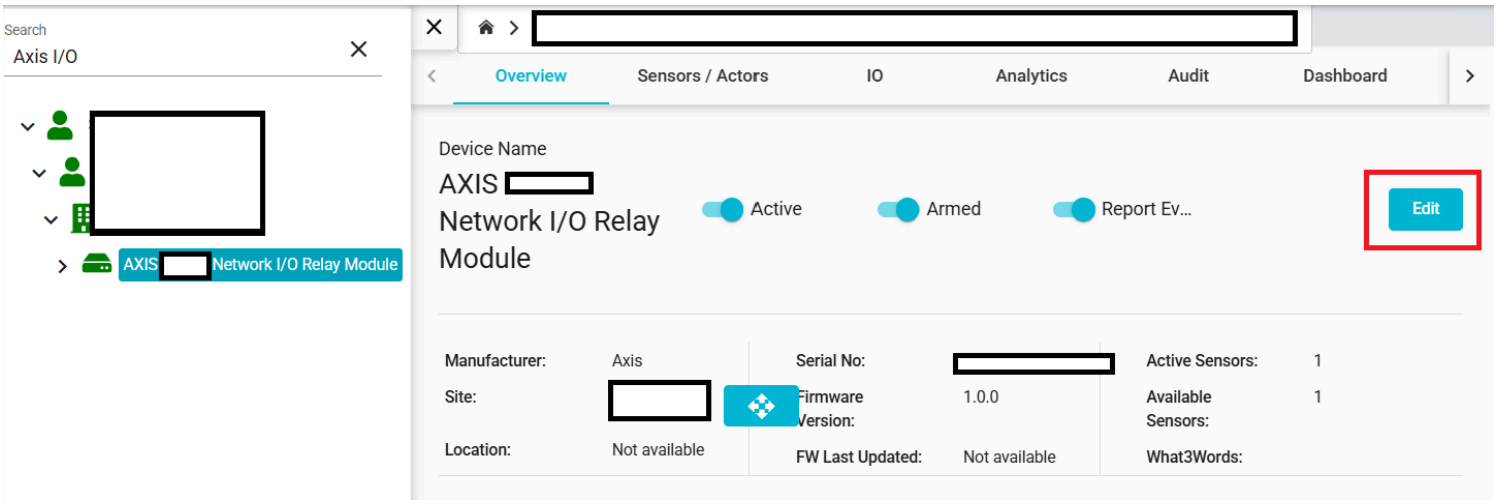

1.2.2. Scroll down and copy the **Device Unique Number** to use in Step 2.2.2

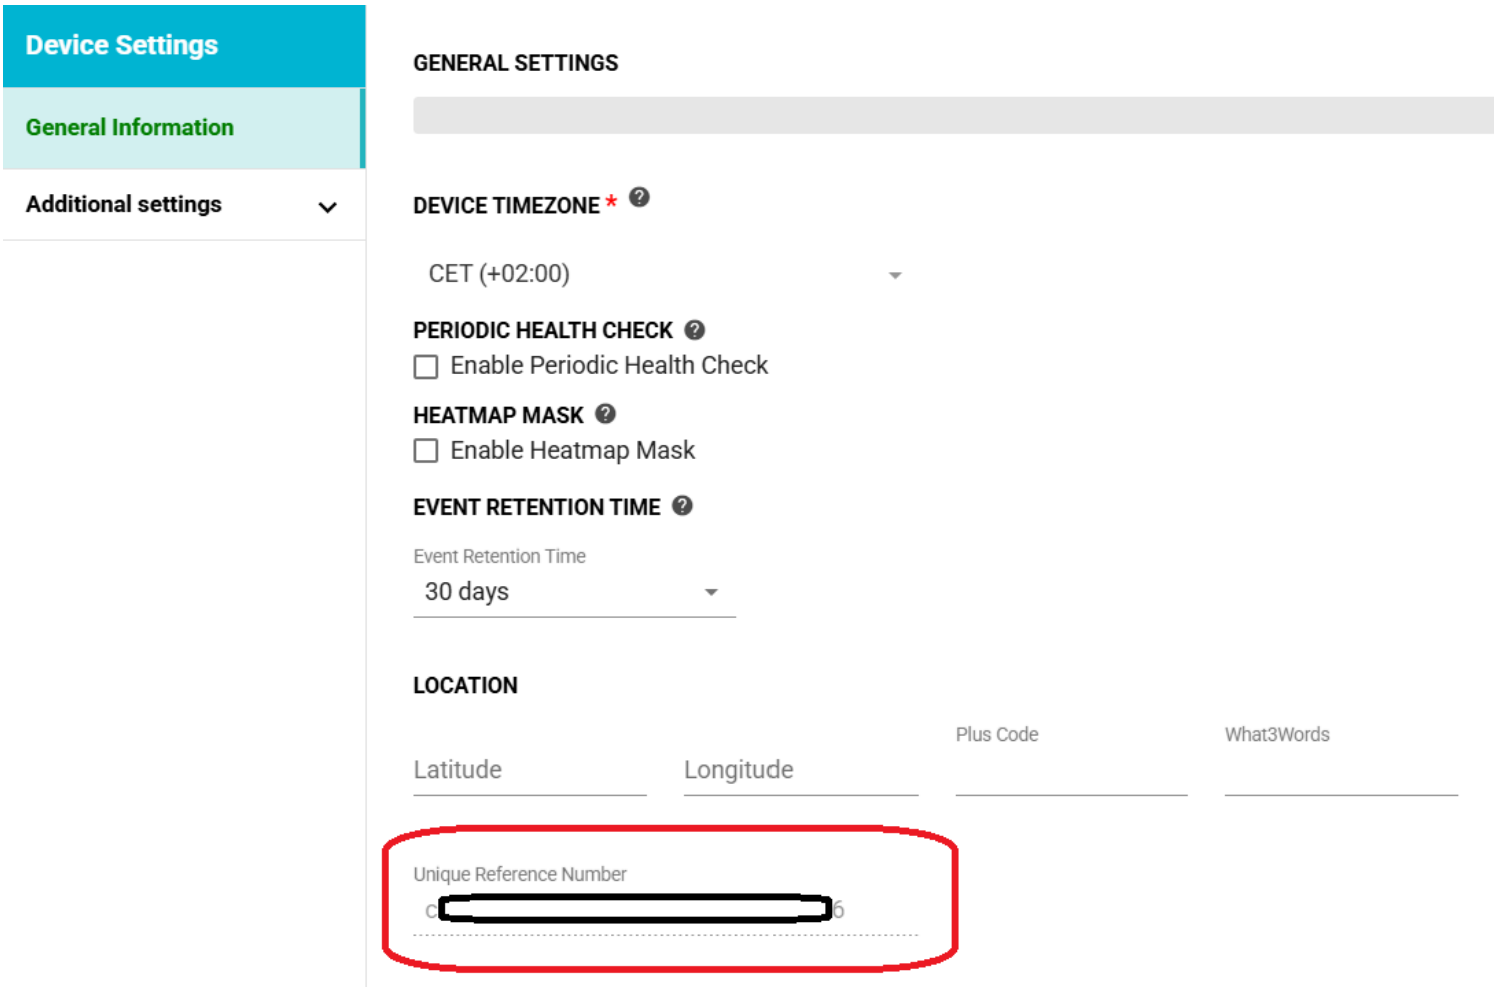

2. Configurations on Axis IO Module:

2.1. Login into Axis IO Module and Navigate to Events Configuration

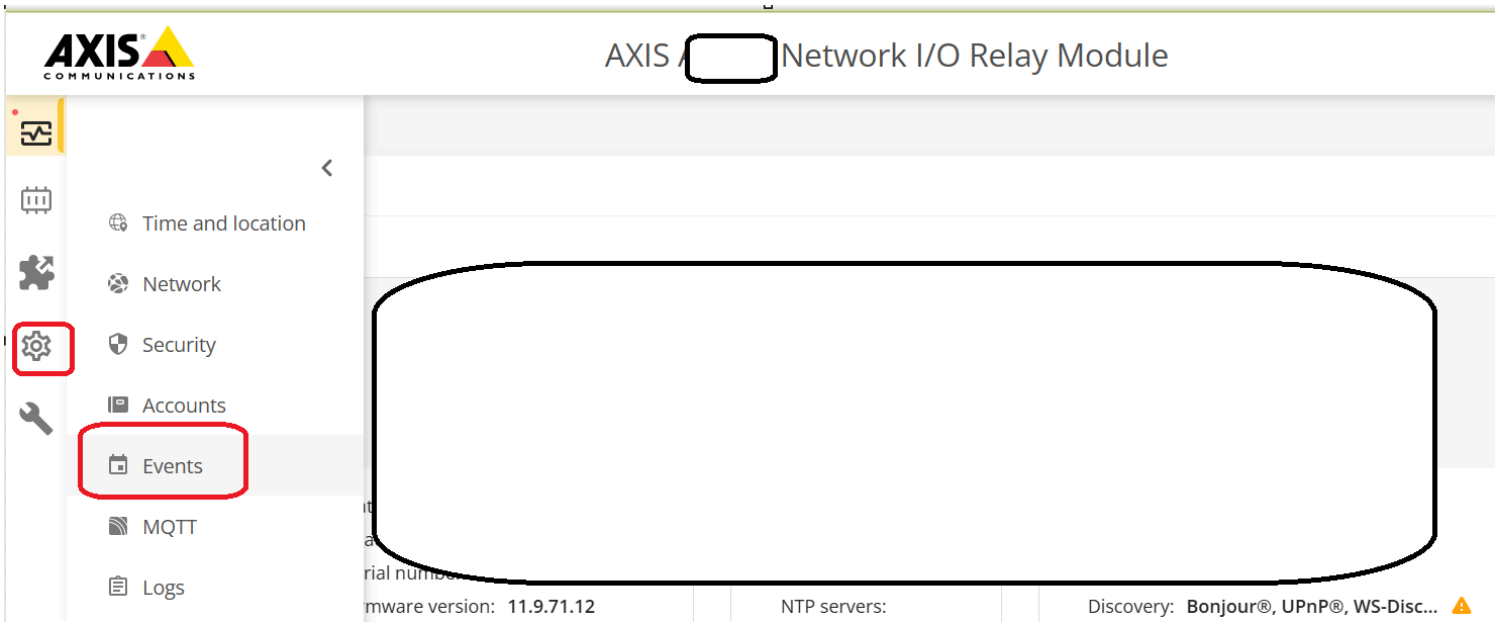

2.2. Configure a Recipient

2.2.1. Goto Recipients tab and 'Add recipient'

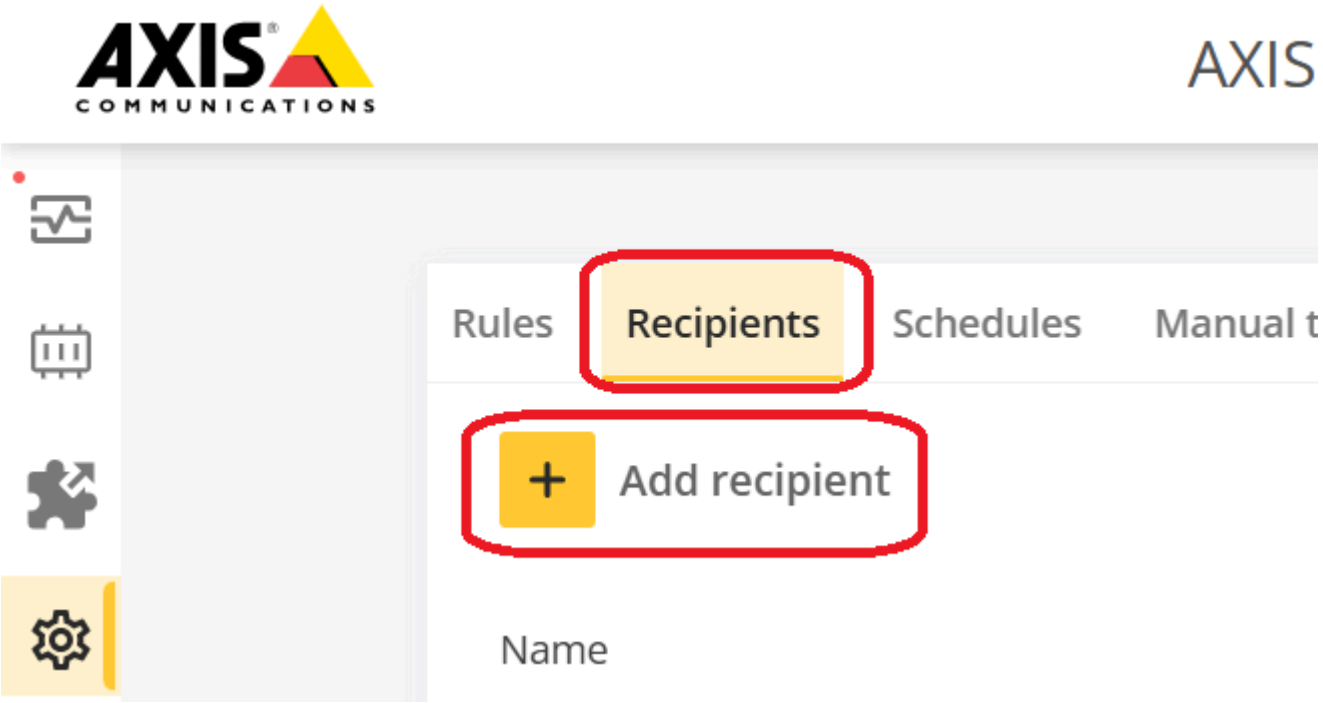

2.2.2. Enter the following details and save the recipient

Name for the Recipient

Type = Https

URL = https://axisproxy.nxgen.cloud/eventIngest/*Device ID (copied in step 1.2.2)*

User name and password used to access the Axis IO Module

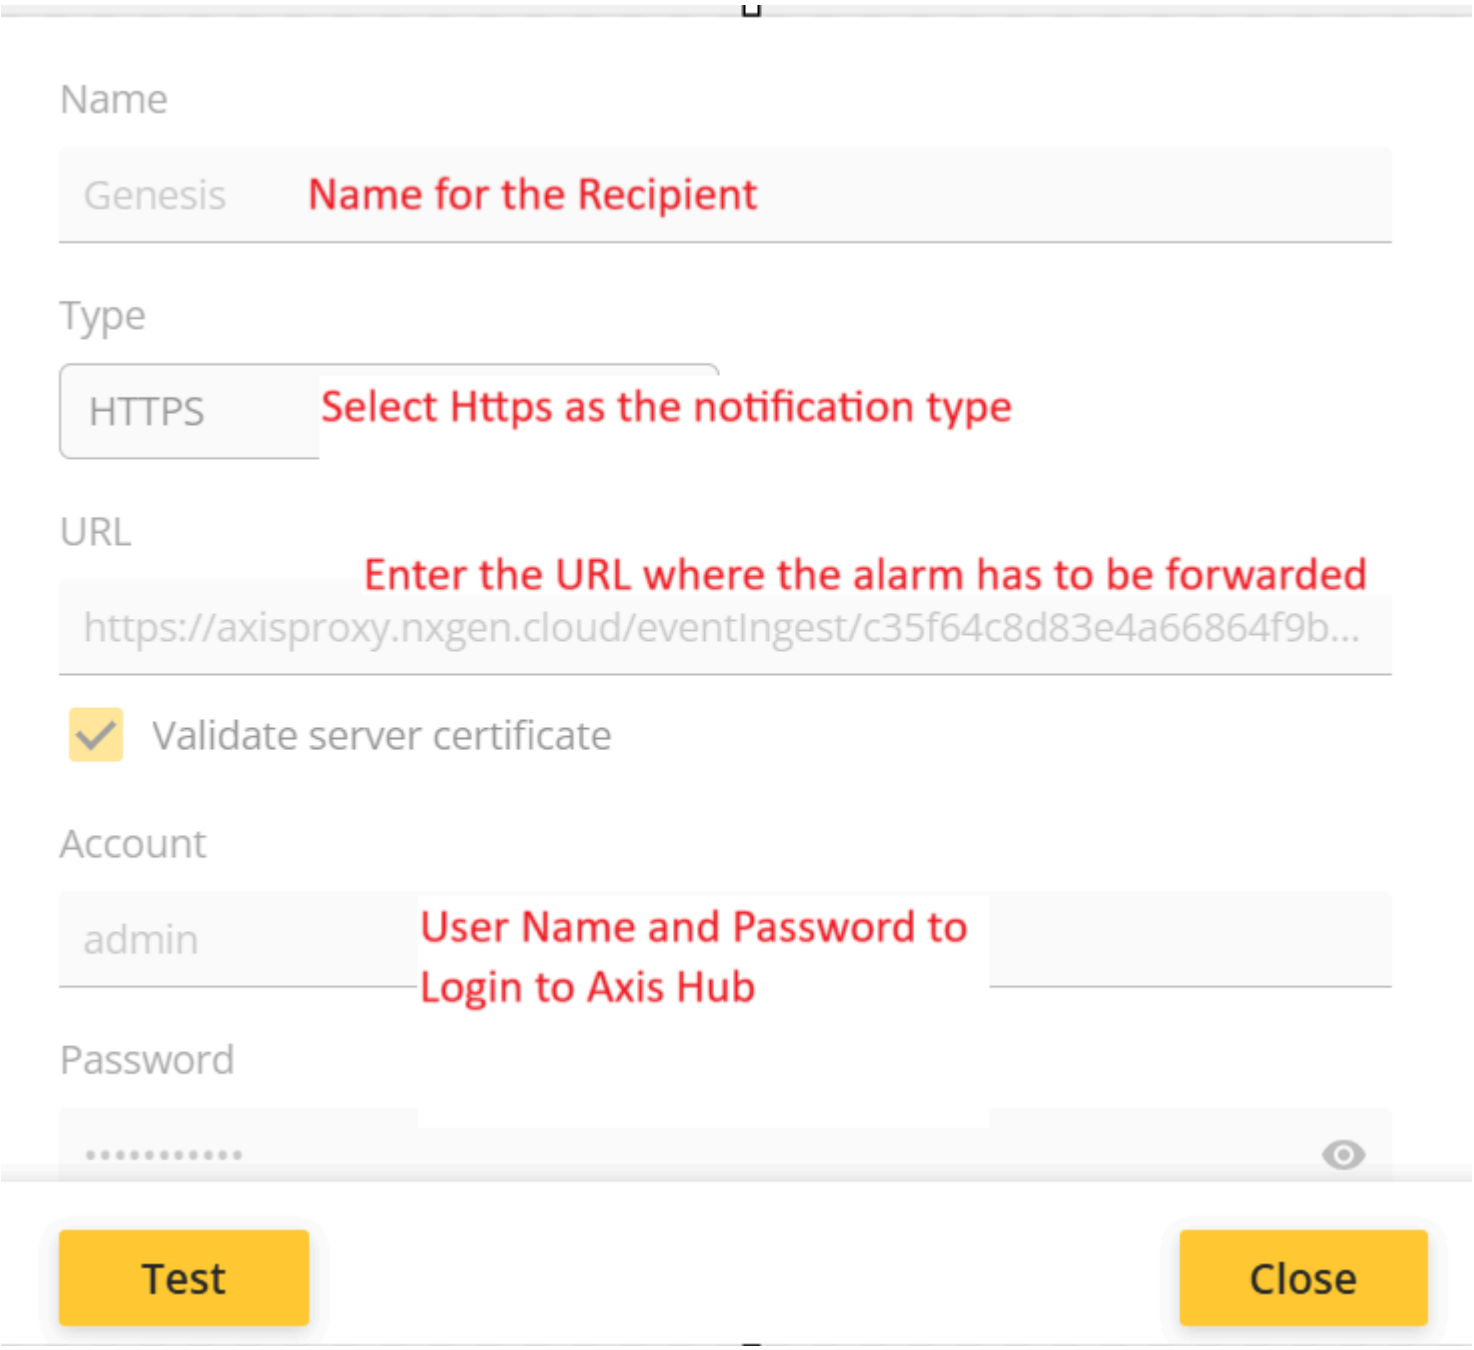

2.2. Configure a Rule:

Configure the Alarm trigger conditions and action

Action = Send notification through HTTPS

Recipient = Recipient created in step 2.1

Query String = message=**Perimeter+Protection+N9**&alarmcode=io.trigger&type=**alarm**&dc09code=**AT**

***(Replace the text in Bold with the value that you have to Pass to Genesis)**

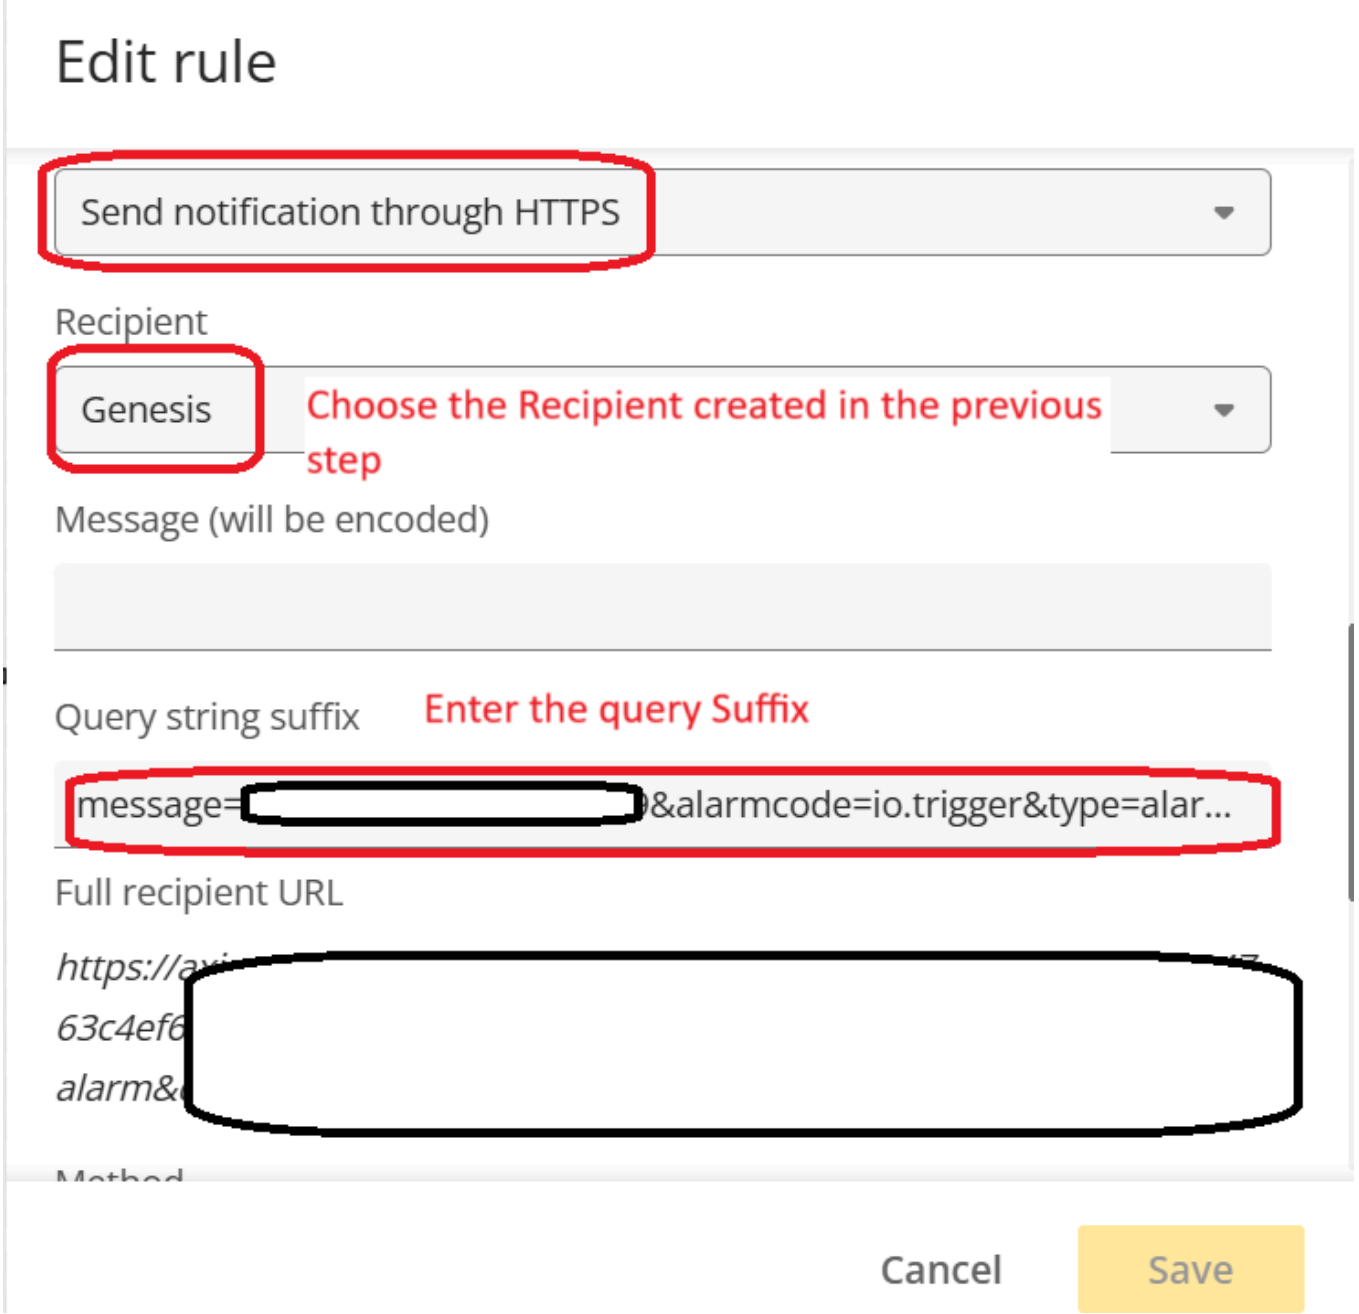

3. Configurations on Talos (Optional):

The Alarms with Alarm Code 'io.trigger' is forwarded to talos. If you want to replace the alarm code with that message that is configured in the above step, Please perform the configuration below

3.1. Navigate to Criteria Mapping in Site/Site Group

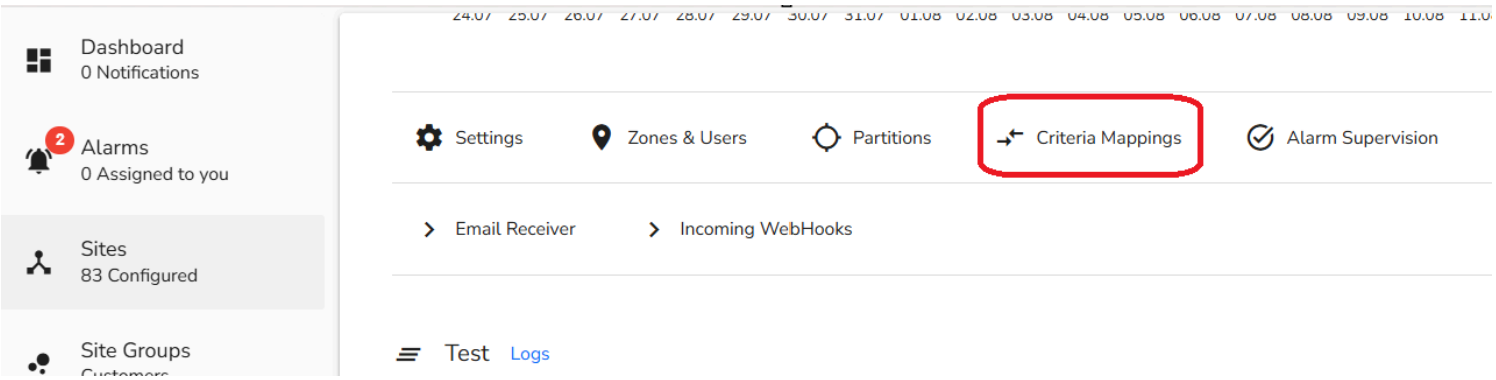

3.2. Replace io.trigger alarms with {{ alarm.headers['IO_Message'] }} as seen below.