Hikvision

NXGEN
Technology
AG

Hikvision Configuration

INSTALLATION DOCUMENT

Prepared by CSM team

Disclaimer:

This document is provided under NXGEN Technology Ltd's (NXGEN) General Terms & Conditions.

https://www.nxgen.io/en/gtc/

Intellectual Property and Copyright:

All content, including but not limited to text, graphics, logos, images, audio clips, and software, available on NXGEN's platforms and services is the intellectual property of NXGEN or its licensors and is protected by copyright laws. Unauthorized reproduction, distribution, or modification of any content without prior written consent from NXGEN is strictly prohibited. Users are granted limited, non-exclusive, and revocable permission to access and use the content for personal or internal business purposes only. Any misuse or infringement of NXGEN's intellectual property rights will be subject to legal action.

https://www.nxgen.io/

Table of Contents

Disclaimer: 2

Introduction: 4

Prerequisites: 4

Configuring Hikvision device 5

Chapter 1: System 5

Chapter 2: Network 9

Chapter 3: Events 9

Hikvision Device Configuration Guide with GCX-ONE 17

Introduction:

In order to achieve seamless integration between your Hikvision Portal and GCX-ONE platform, it is essential to configure various network and software settings accurately. This document provides a step-by-step guide to configuring your Hikvision portal, ensuring that it communicates effectively with both internal and external systems. Proper configuration will not only enhance the functionality of your surveillance system but also ensure data security and optimal performance. By following the detailed instructions below, you will set up your system to handle video surveillance tasks efficiently, enabling robust management and monitoring capabilities.

If any issues arise with the configuration, please raise a ticket on NXGEN's Help-desk portal to the NXGEN support team for swift issue resolution.

Prerequisites:

The Hikvision device is set up with Continuous Recording

Whitelist the IP address 35.156.60.98 (Hikvision Receiver).

Local Mode is installed (For P2P streaming, Audio, Encrypted stream).

Configuring Hikvision device

Chapter 1: System

Time Management:

Step 1: Log in to your Hikvision portal by providing the credentials needed.

****Step 2: ****Navigate to the **configuration** page, then select **System**. Proceed to **System Settings** and choose Time **Settings**. The below window will appear:

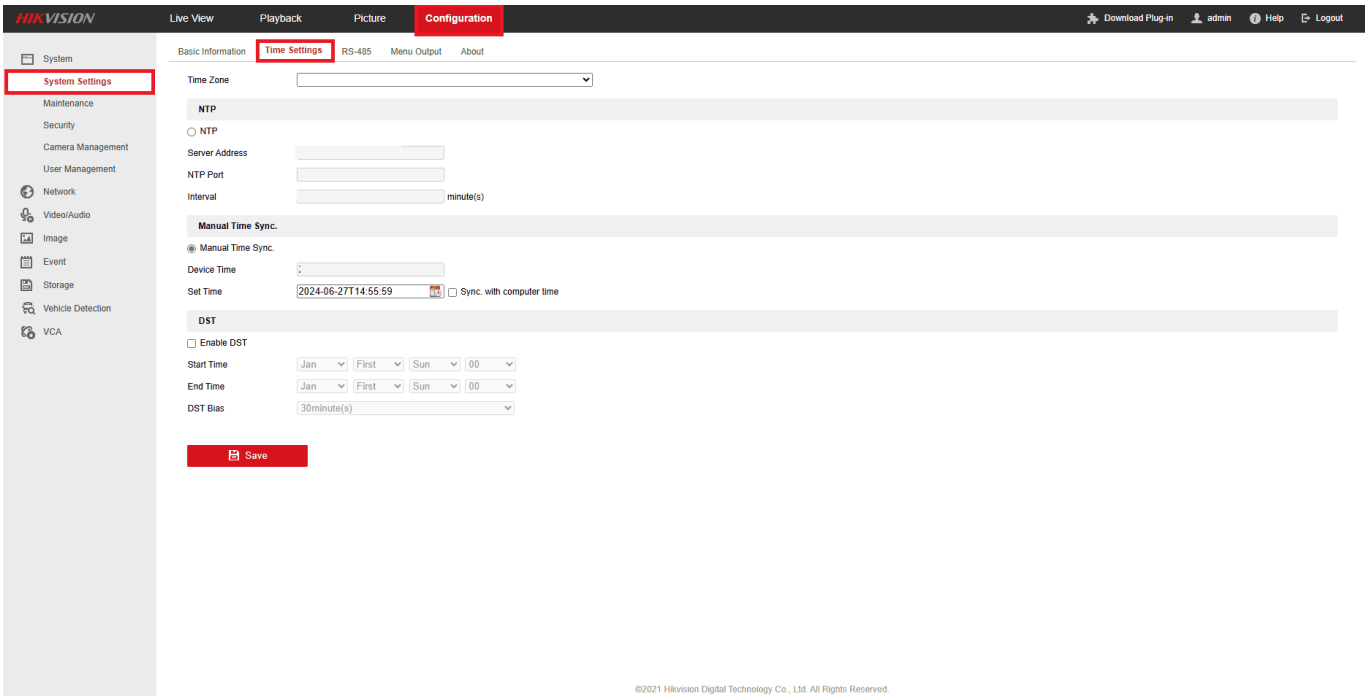

Choose the **time zone** of your device and make sure to enable the **NTP**, It is a protocol used to synchronize the clocks of computers and other devices over a network.

If your device supports DST, we recommend enabling it. The primary goal of DST is to make better use of daylight during the longer days of summer.

User Management:

Step 1: Navigate to the **configuration** page, then select **System**. Proceed to ****User management ****then click on "Add".

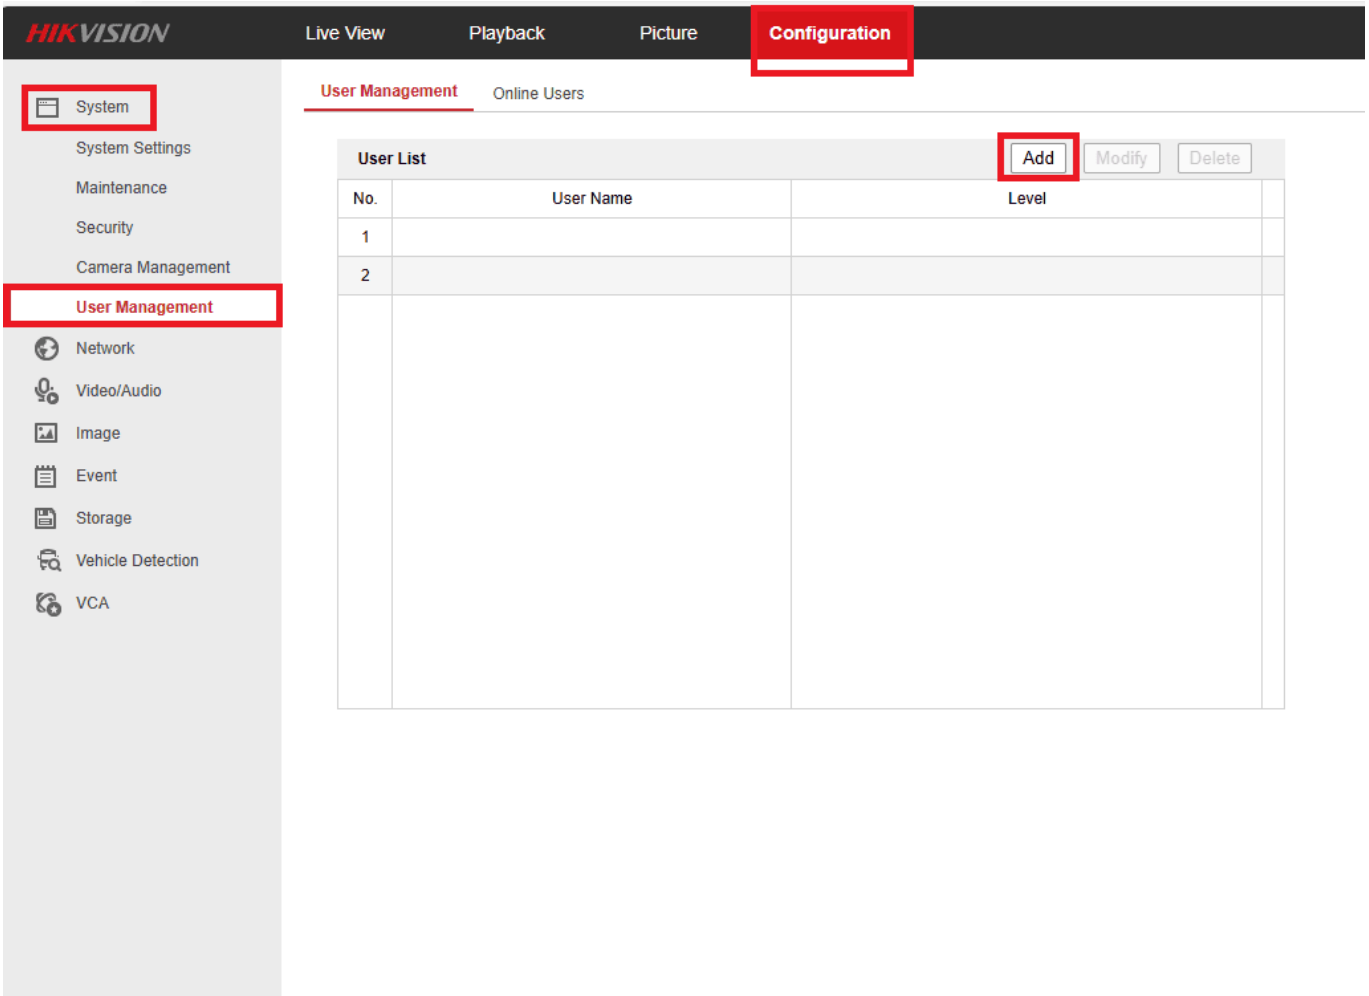

****Step 2: ****A new window will open, allowing you to enter the username and password for NXGEN. We recommend setting the username to "NXG" with the specified permissions.

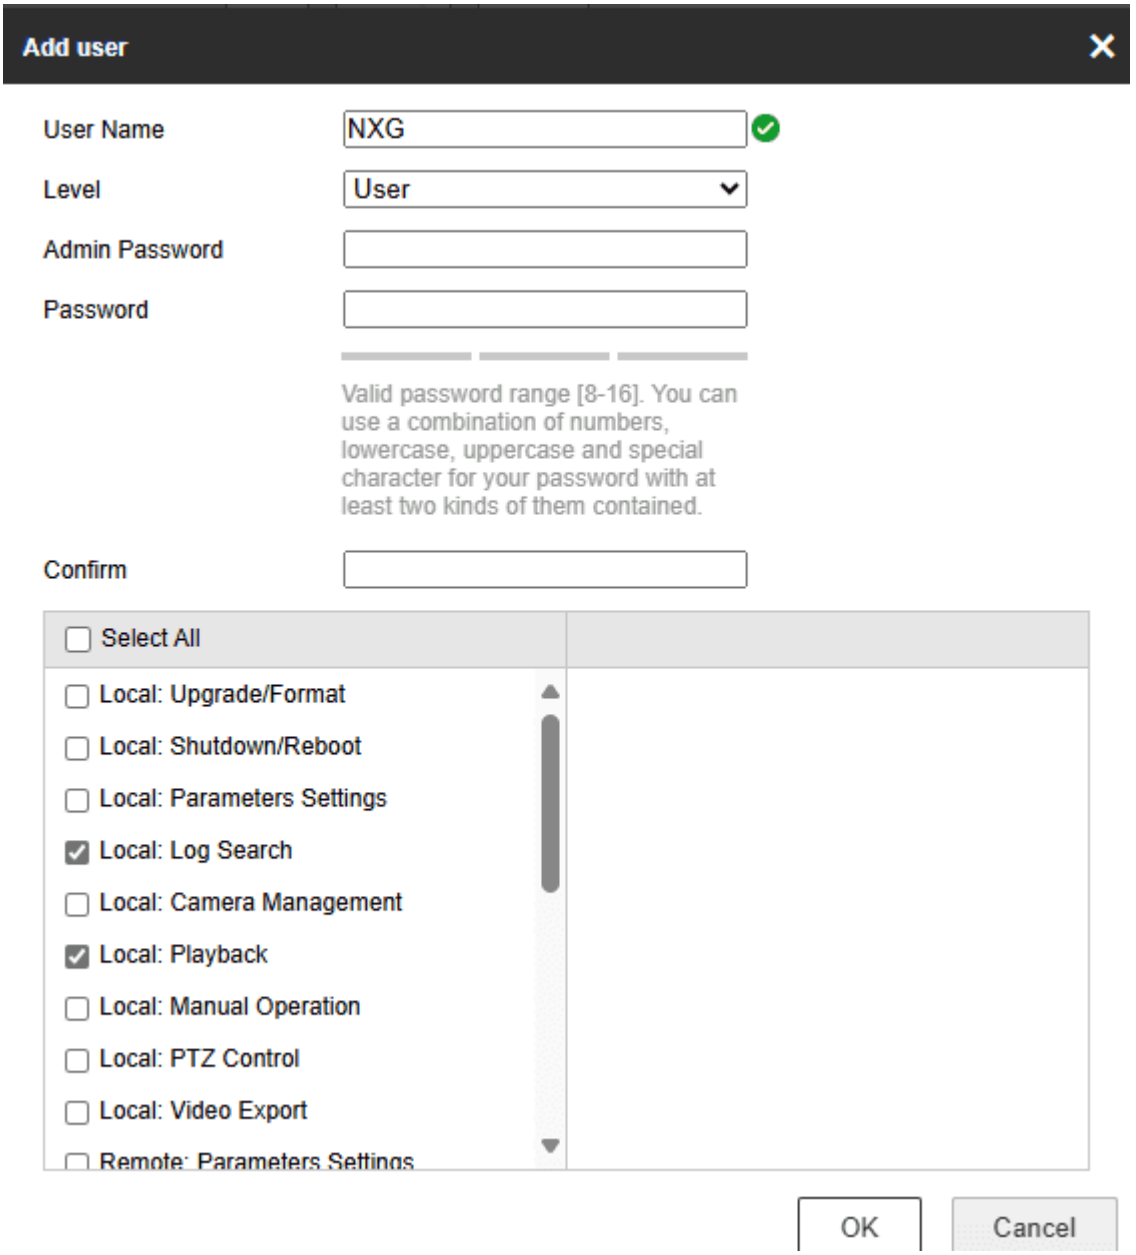

Step 3: Permissions:

Choose the permissions below for the user "NXG" and select the specific cameras you want to apply these permissions to.

Local: Parameters Settings.

Local: Log Search.

Local: Playback.

Local: Manual Operation.

Local: PTZ Control.

Local: Video Export.

Remote: Parameters Settings.

Remote: Log Search / Interrogate Working.

Remote: Two-way Audio.

Remote: Notify Surveillance Center / Trigger.

Remote: Video Output Control.

Remote: Live View.

Remote: PTZ Control.

Remote: Playback/Download.

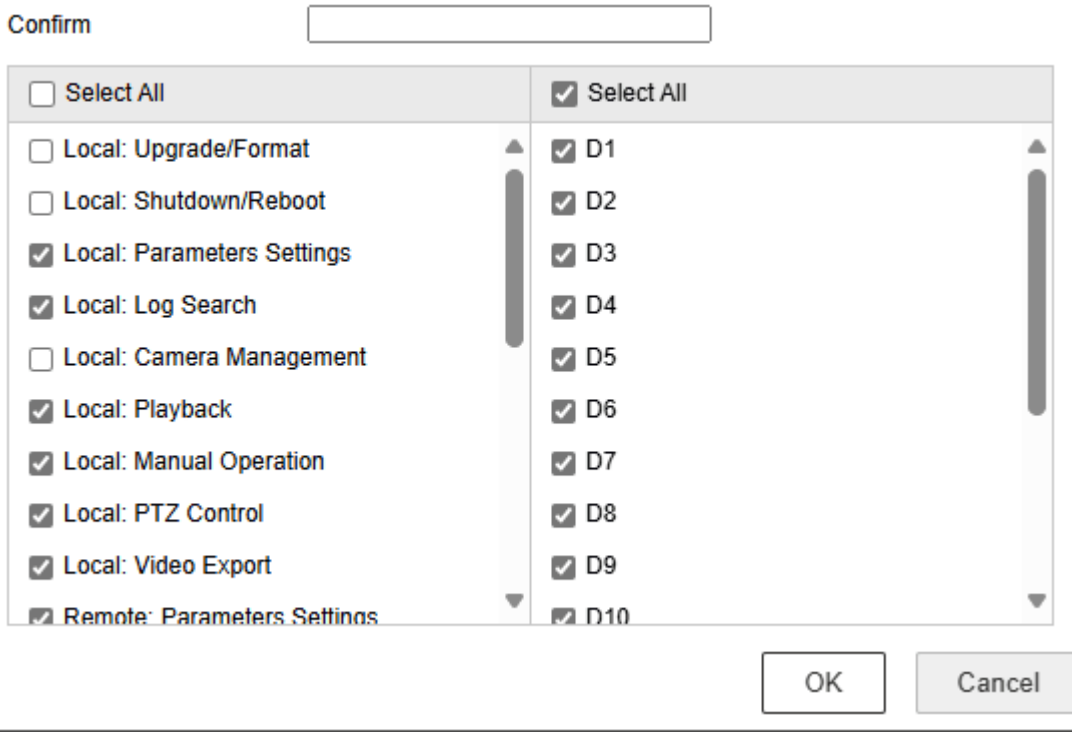

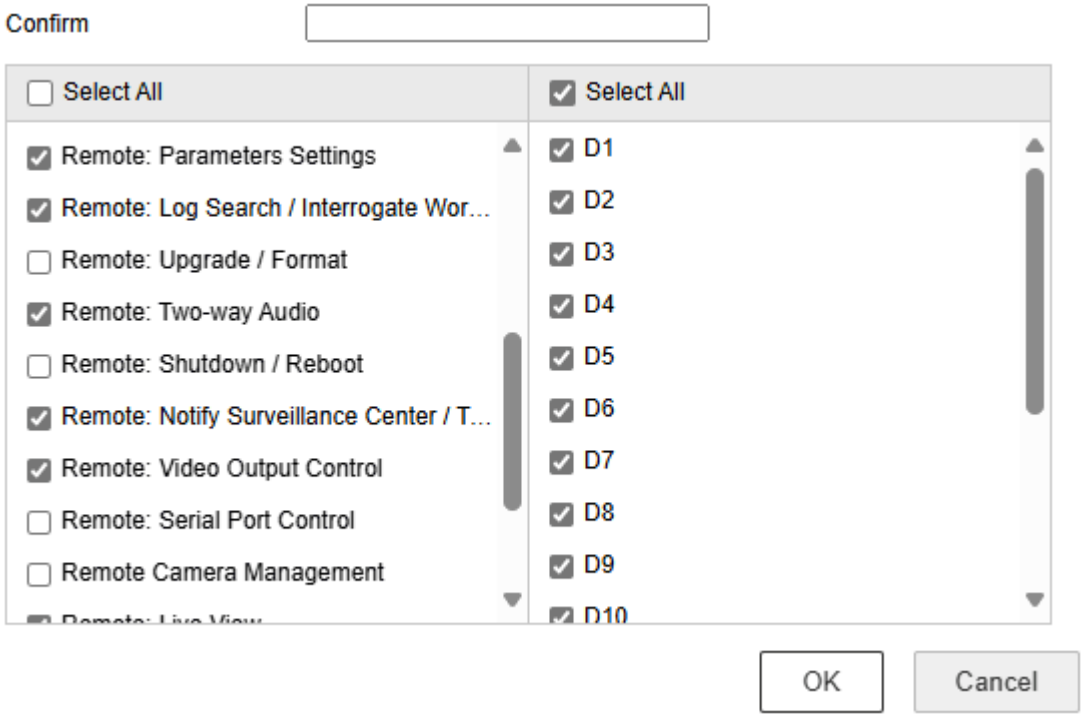

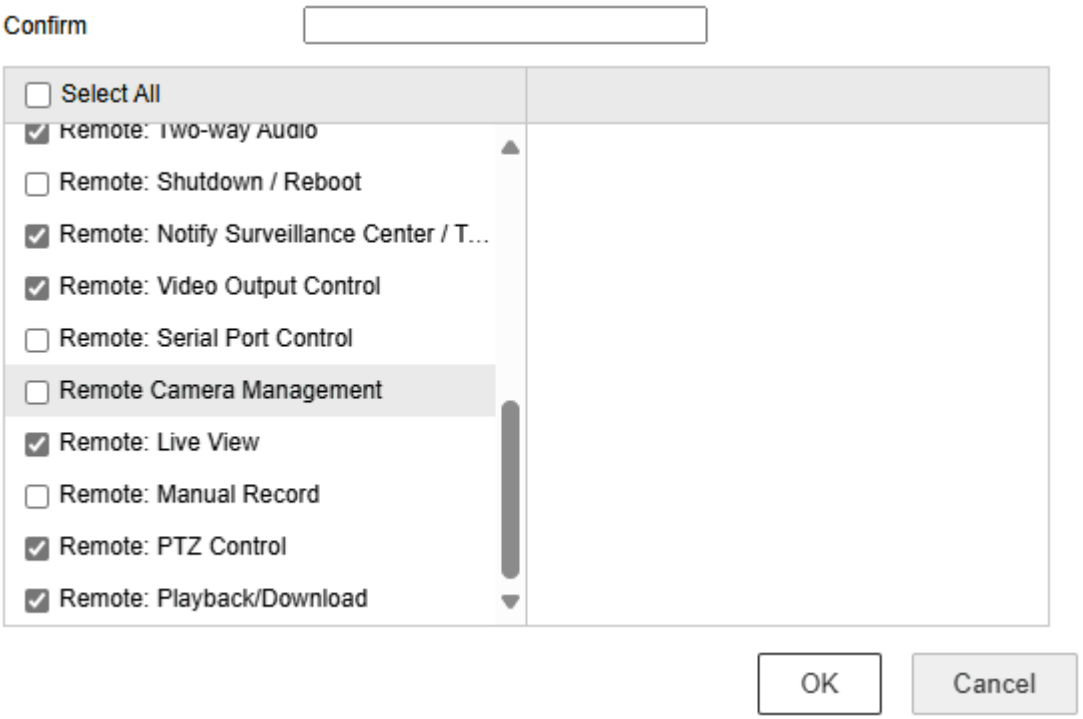

Don't forget to click the OK button to save the changes.

Security:

We highly recommend configuring both RTSP and WEB authentication as Digest. This enhances security by ensuring that your credentials are protected with stronger encryption, reducing the risk of unauthorized access.

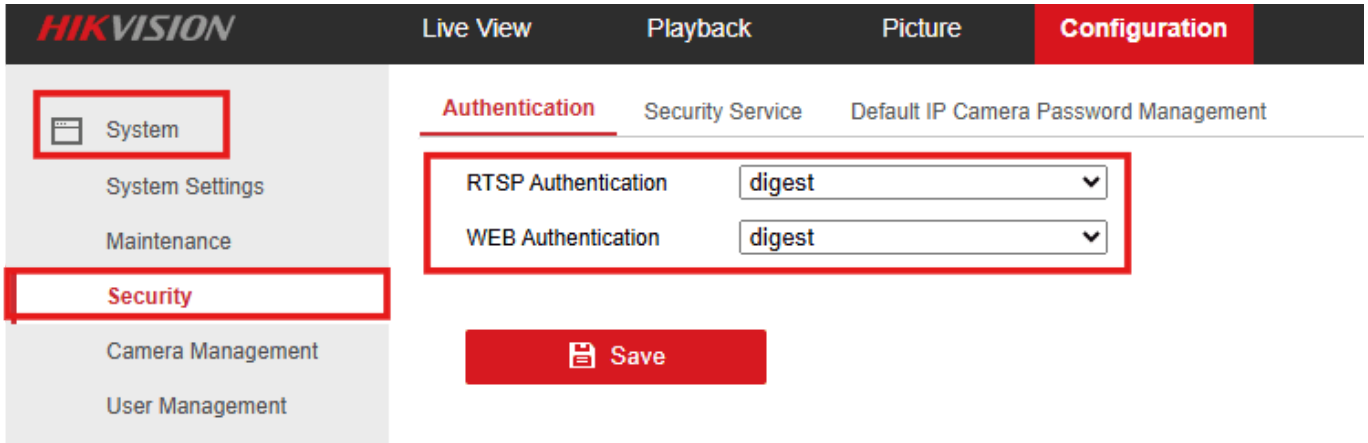

Chapter 2: Network

Under "Network," go to "Advanced Settings," and then select "Integration Protocol."

Enable the ISAPI by simply clicking on the check box.

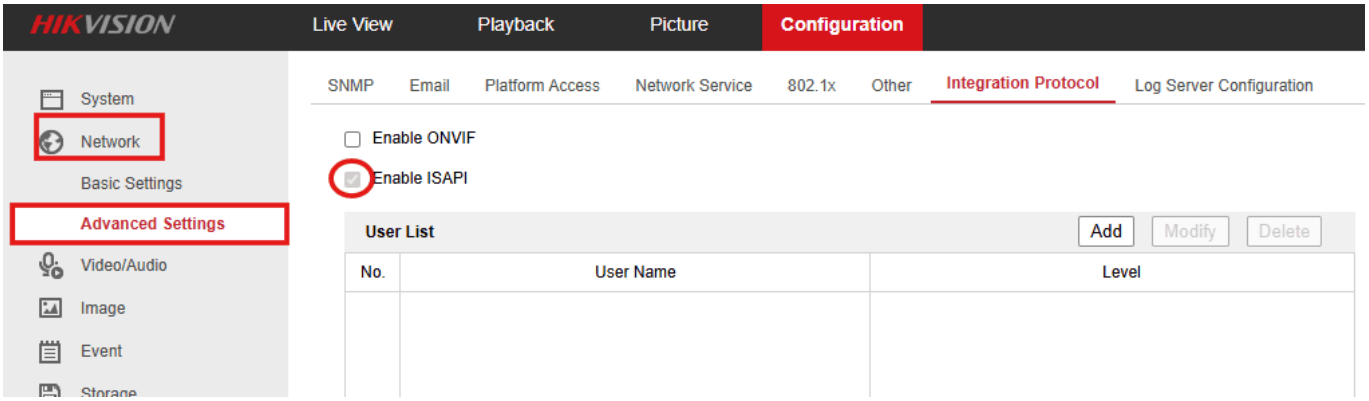

Chapter 3: Events

Camera configurations are managed at the individual camera level. There are two types of configurations: basic and smart. This chapter provides a brief explanation of each type.

Basic Events:

These steps apply to all basic events (Motion, Video Tampering, etc.).

Step 1: On the "Configuration" page, under the "Event" application, click on "Basic Event". The window below will appear:

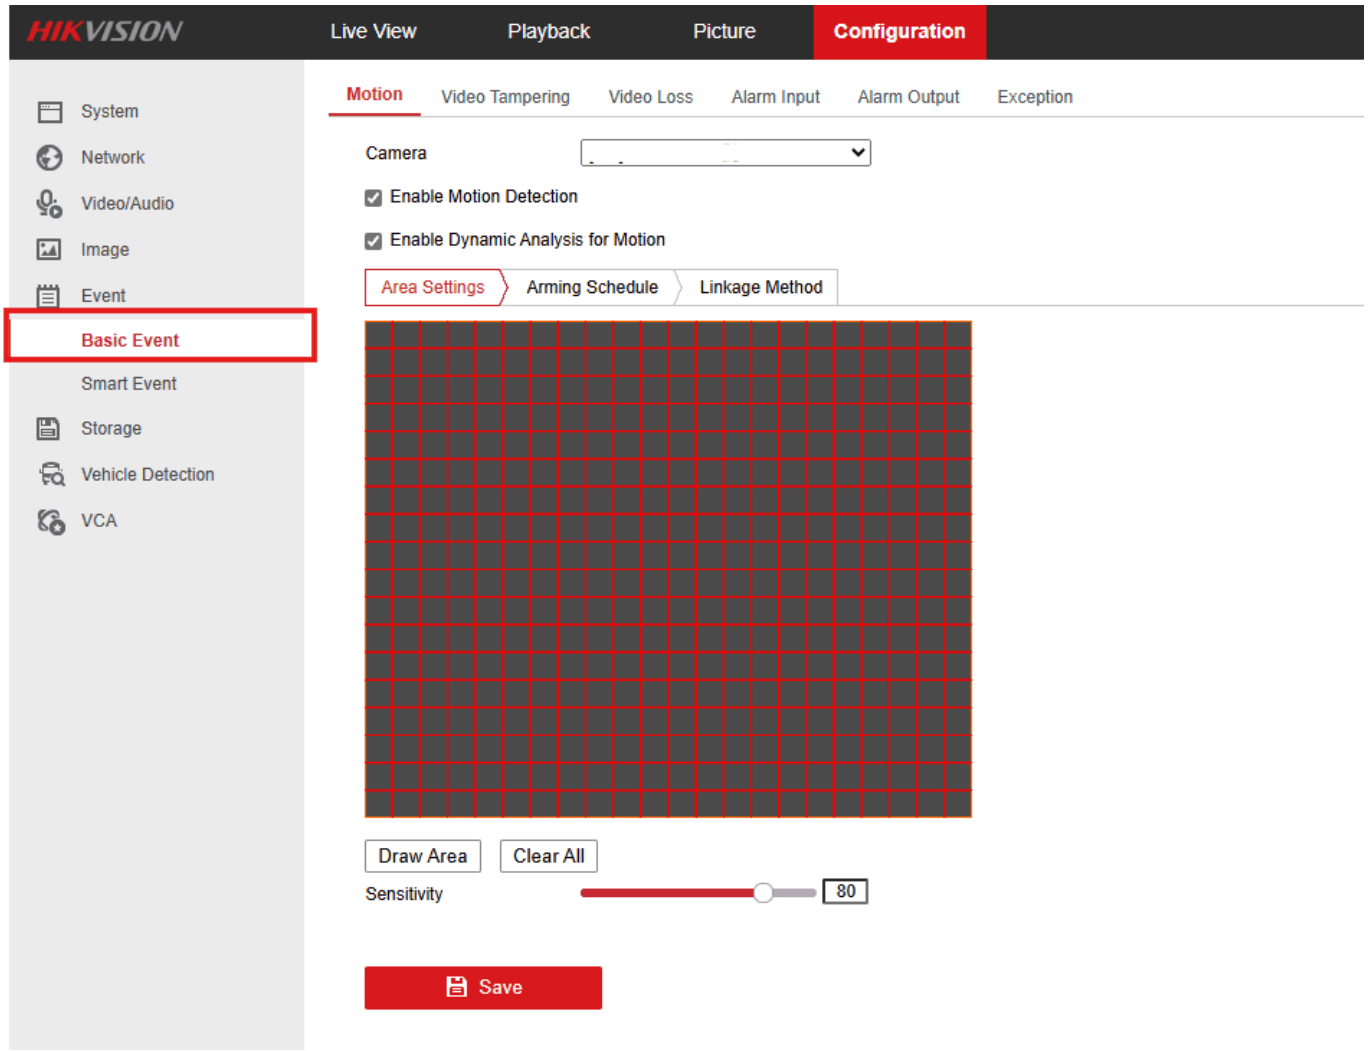

Note: Avoid setting up Motion events; they can trigger too many alarms and cause issues.

Step 2: Choose the camera you want to configure.

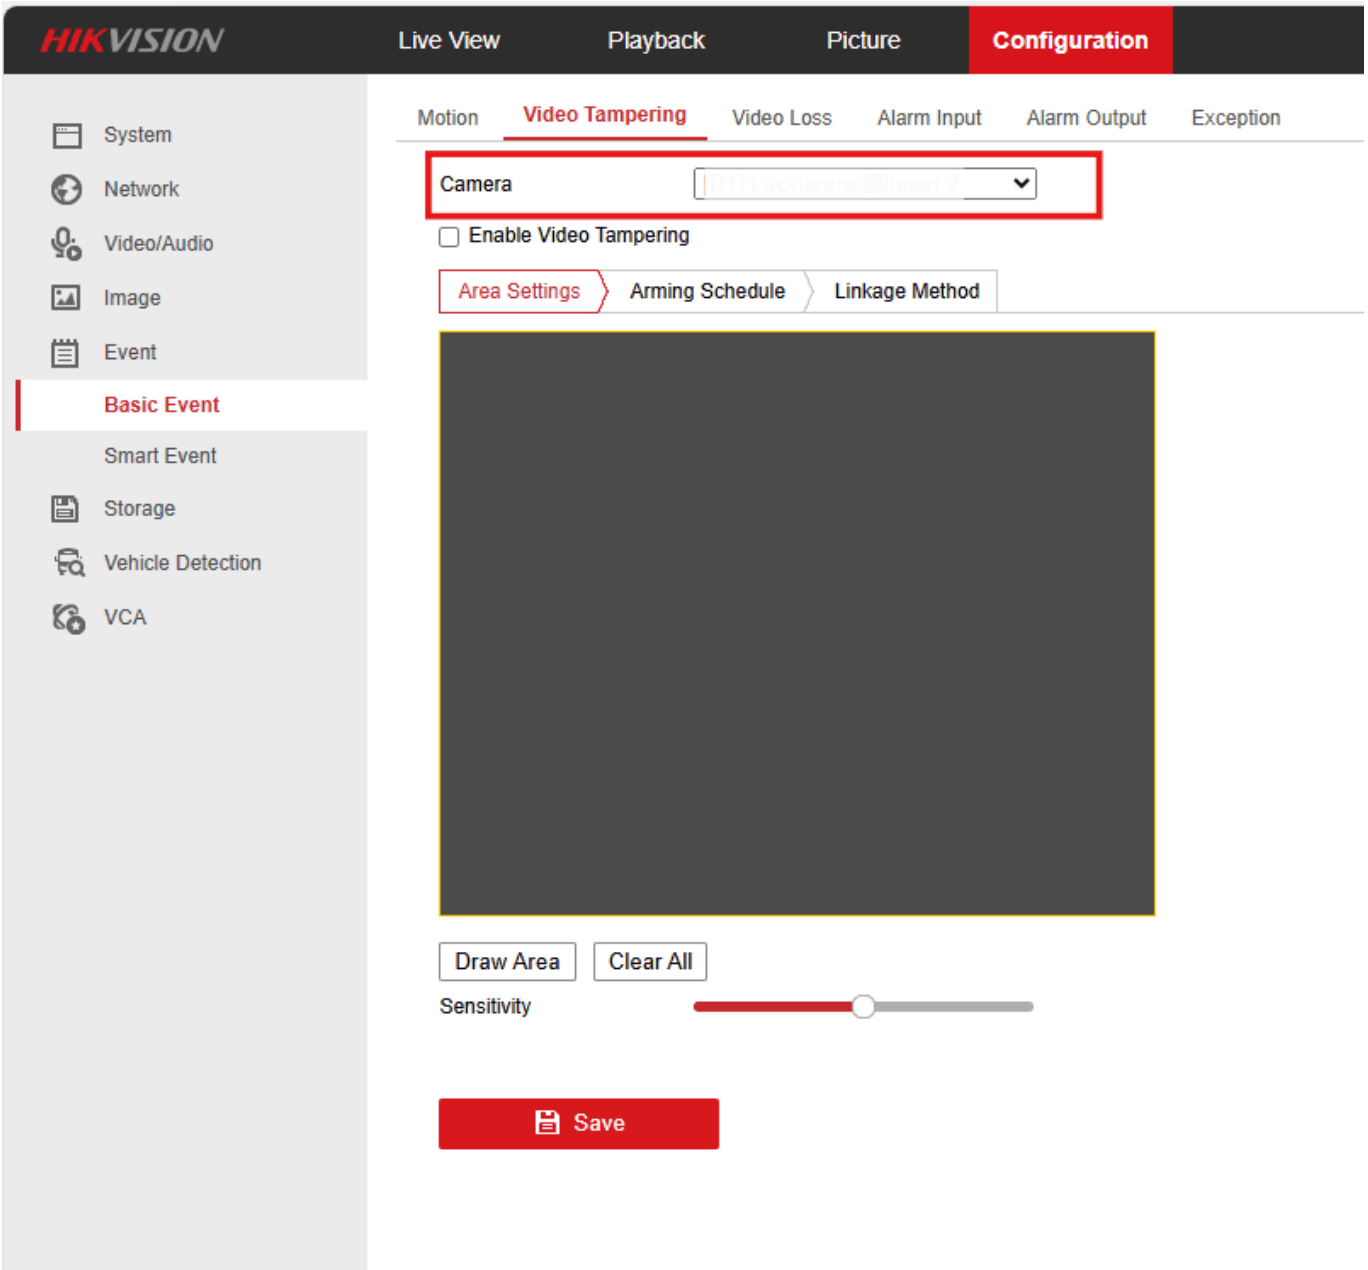

****Step 3: ****Draw your area of interest.

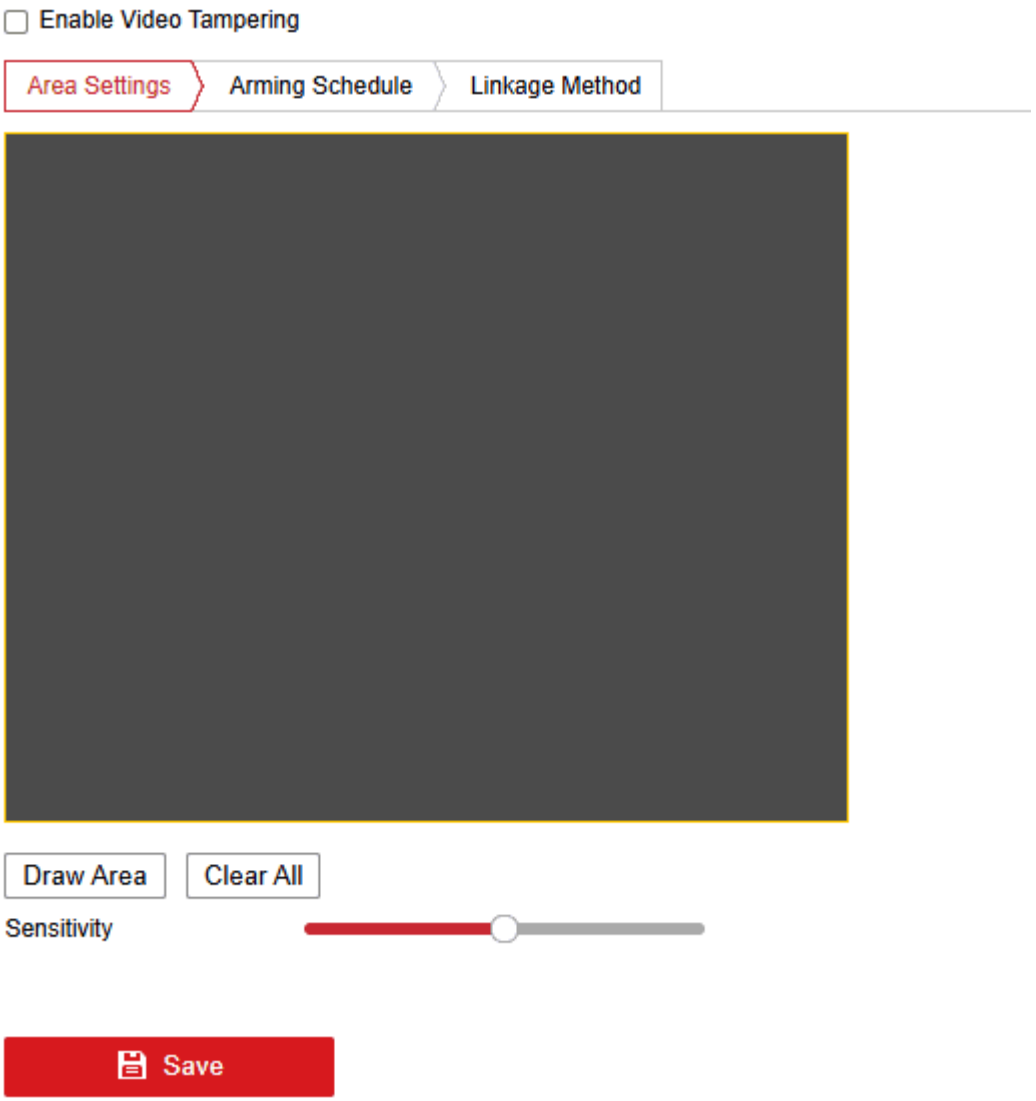

Step 4: Choose the Arming Schedule under the "Arming Schedule" tab.

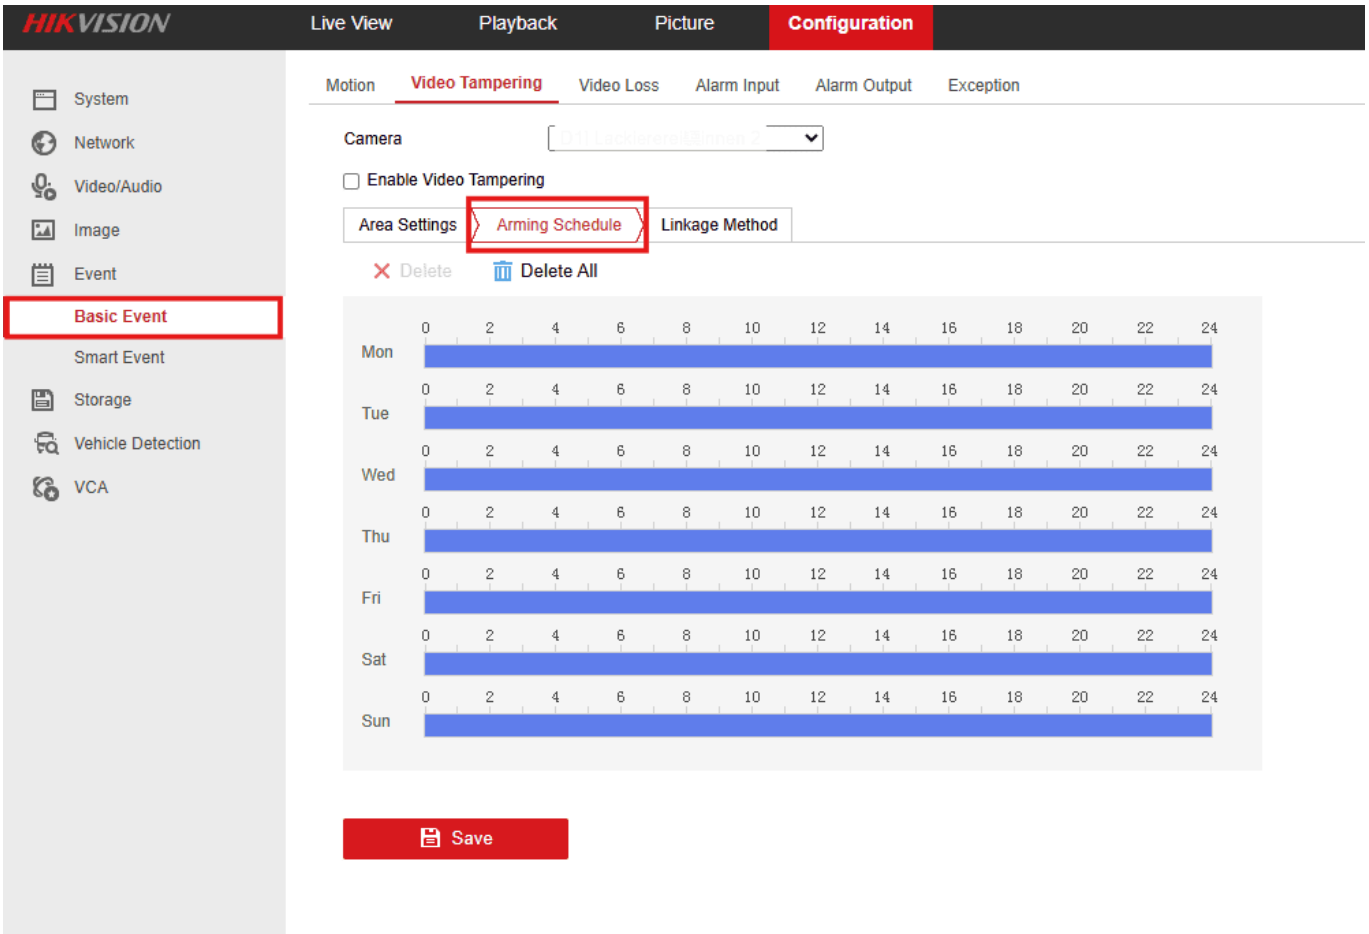

Step 5: In the "Linkage Method" tab, enable the checkbox under the camera and check "Notify Surveillance Center." To trigger alarms from other cameras, use the "Trigger Alarm Output" options in the "Normal Linkage" section.

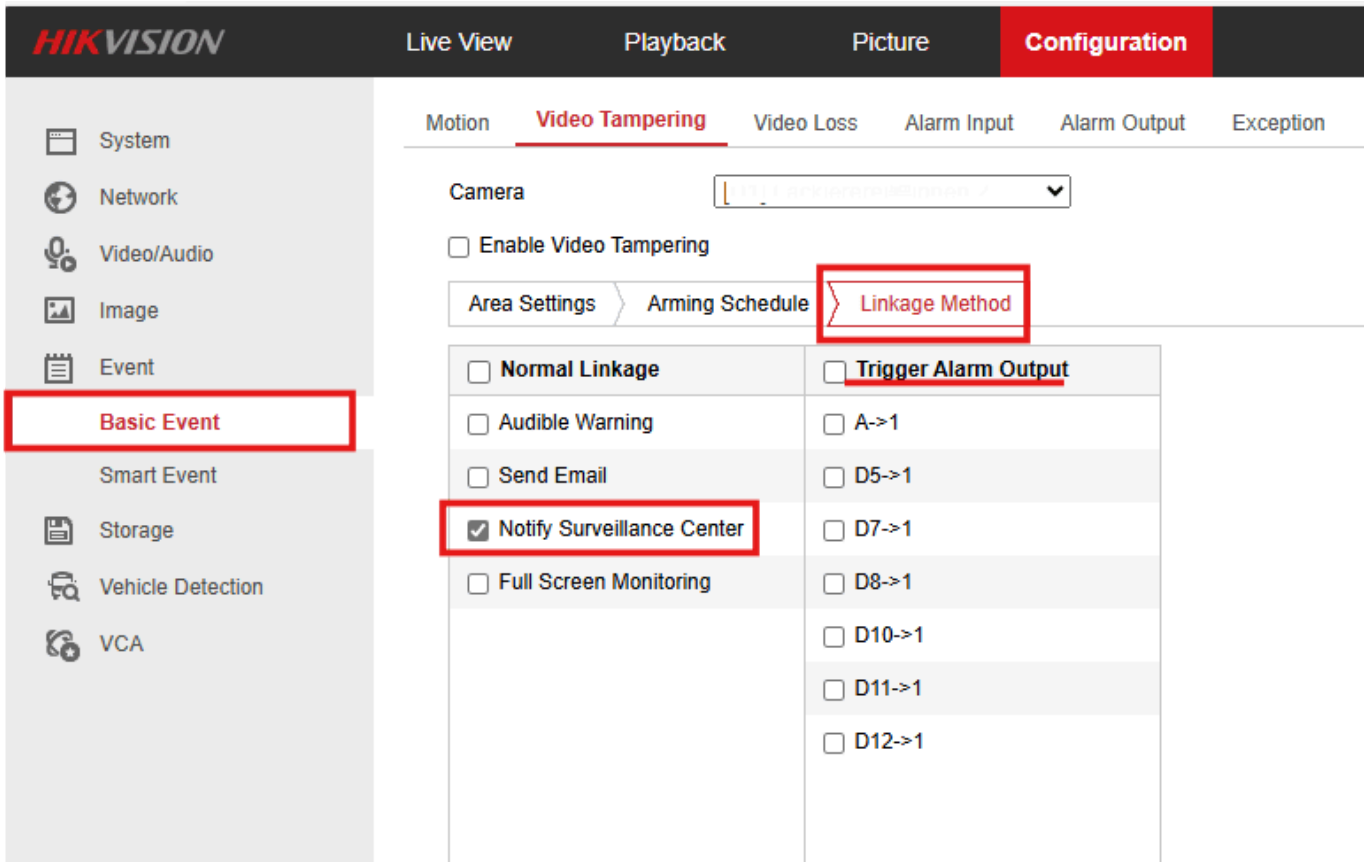

Smart Events:

Line Crossing Detection: This feature identifies when an object crosses a predefined virtual line, useful for monitoring entry and exit points.

Intrusion Detection: It detects when an object enters or moves within a designated area, ideal for securing restricted zones.

The Steps are applicable for both events:

Step 1: On the "Configuration" page, under the "Event" application, click on "Smart Event". The window below will appear:

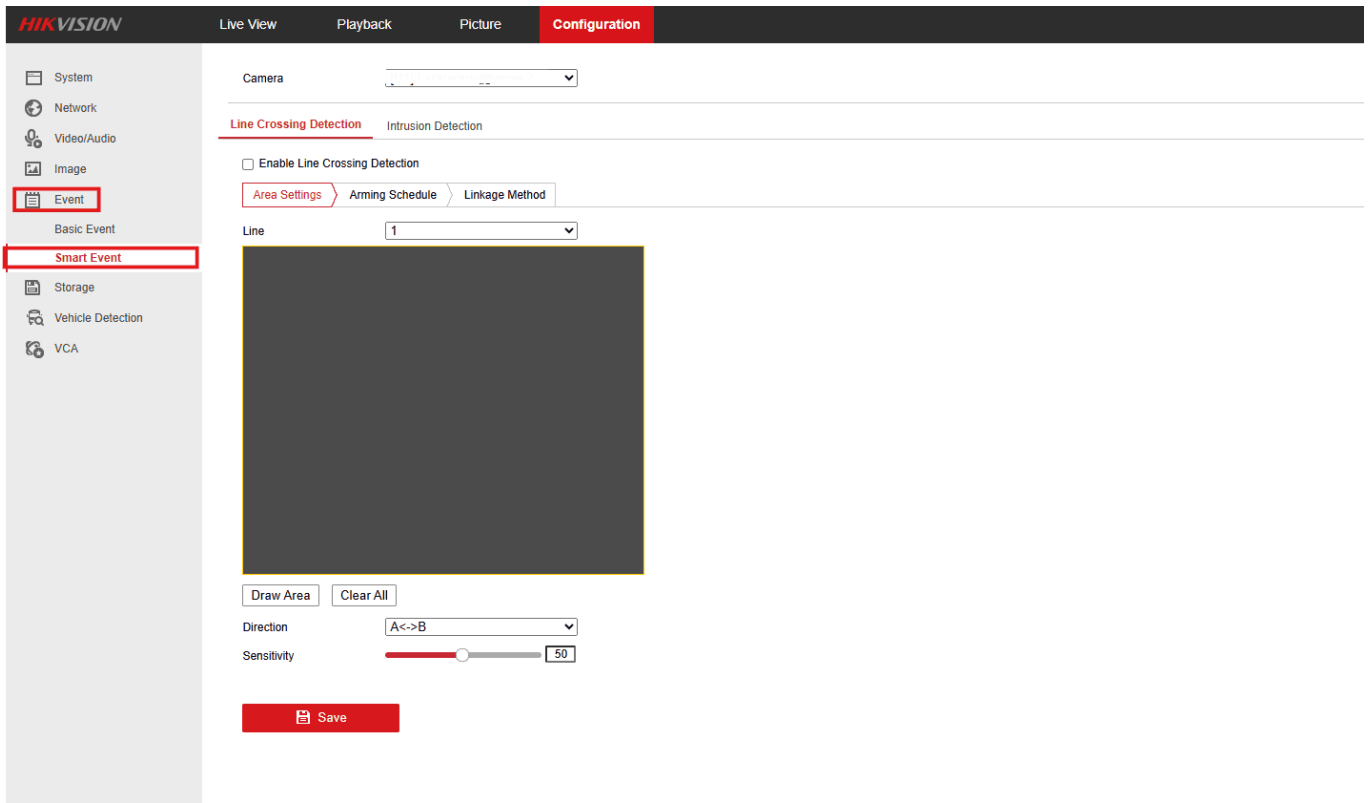

Step 2: Choose the camera you want to configure.

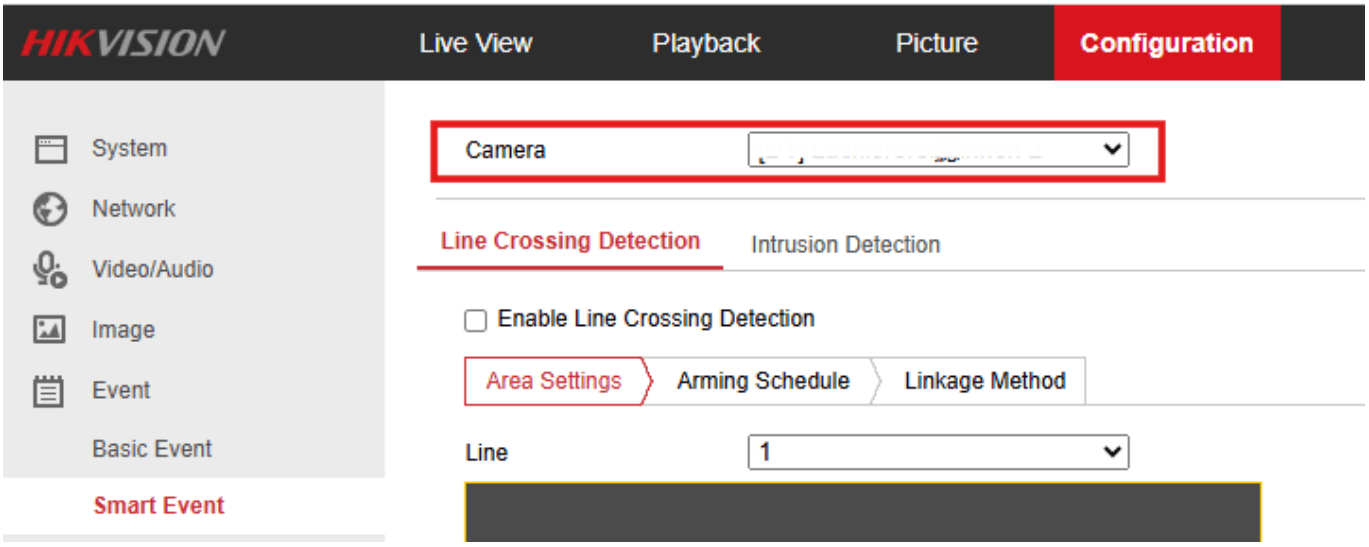

Step 3: Draw lines on the area of interest.

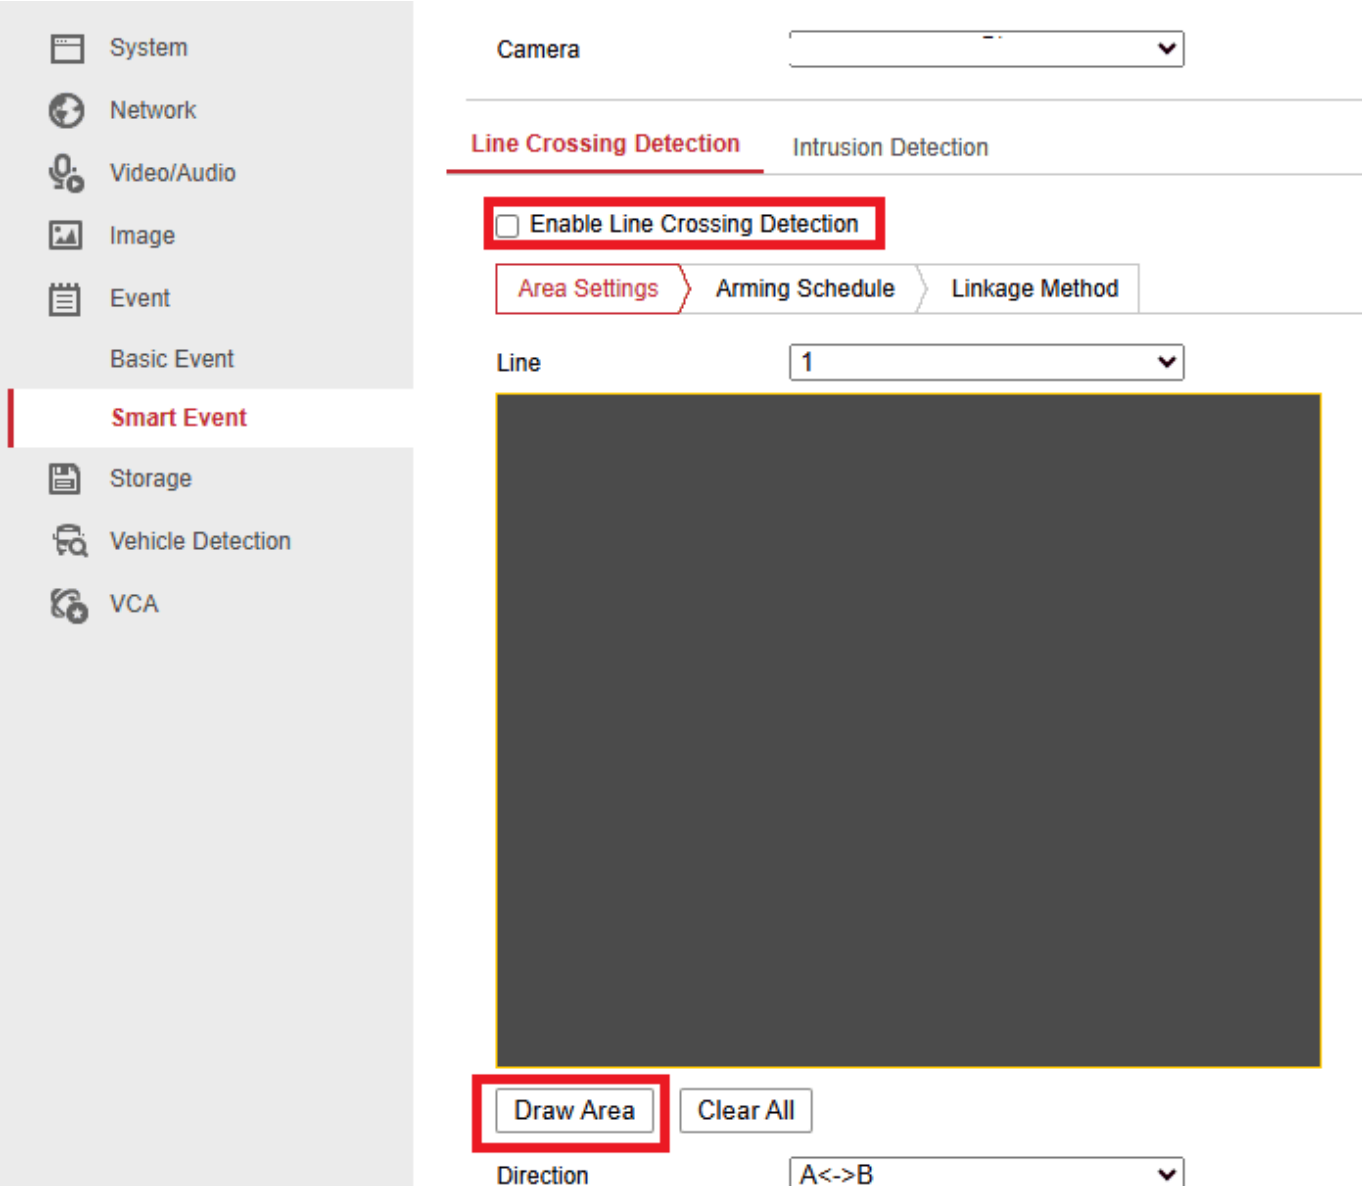

Step 4: Choose the Arming Schedule under the "Arming Schedule" tab.

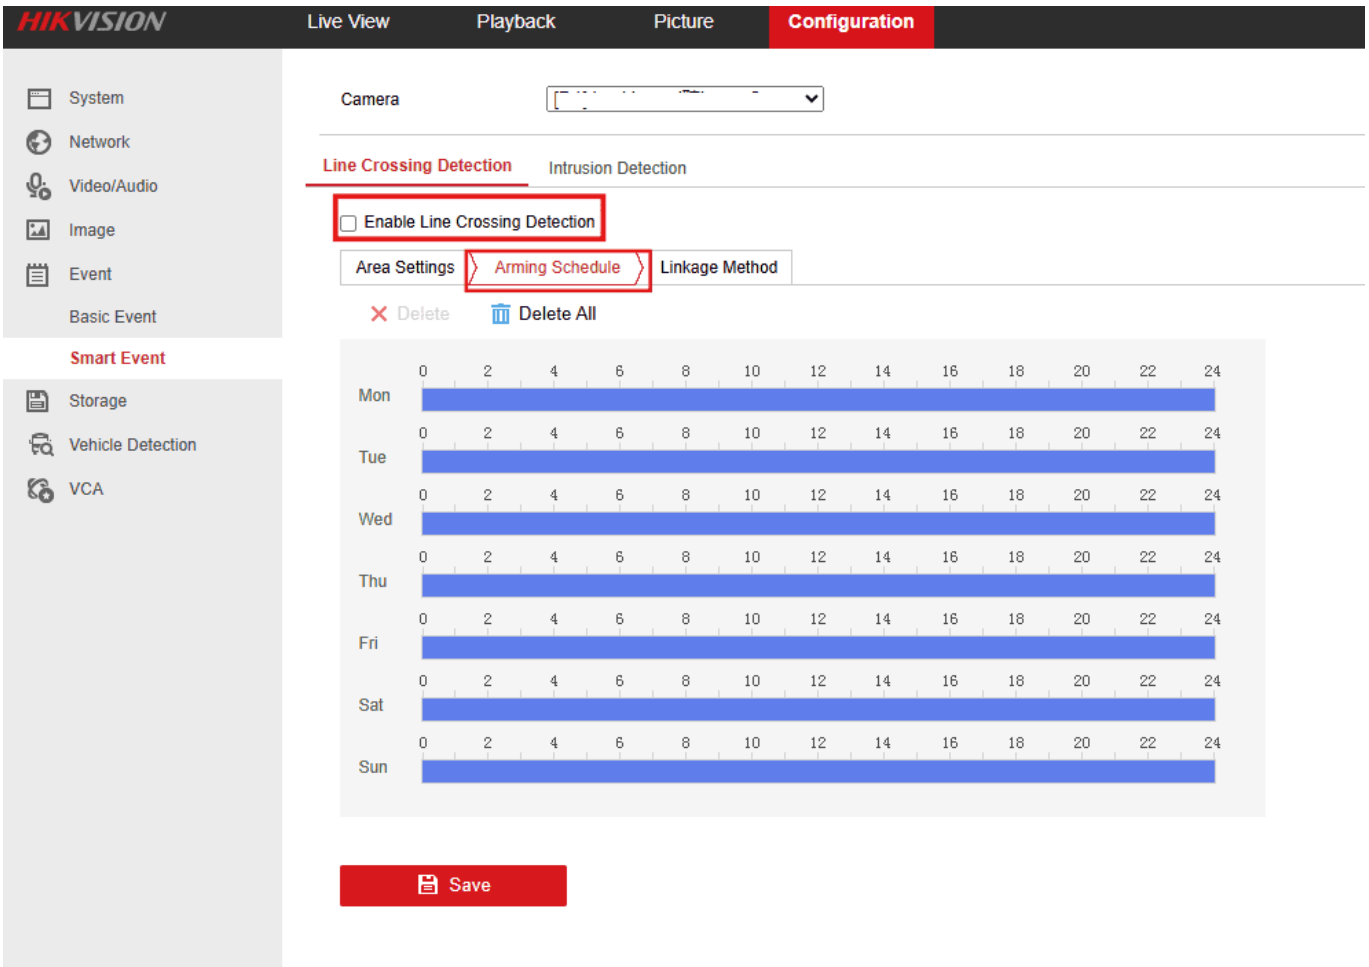

Step 5: In the "Linkage Method" tab, enable the checkbox under the camera and check "Notify Surveillance Center." To trigger alarms from other cameras, use the "Trigger Alarm Output" options in the "Normal Linkage" section.

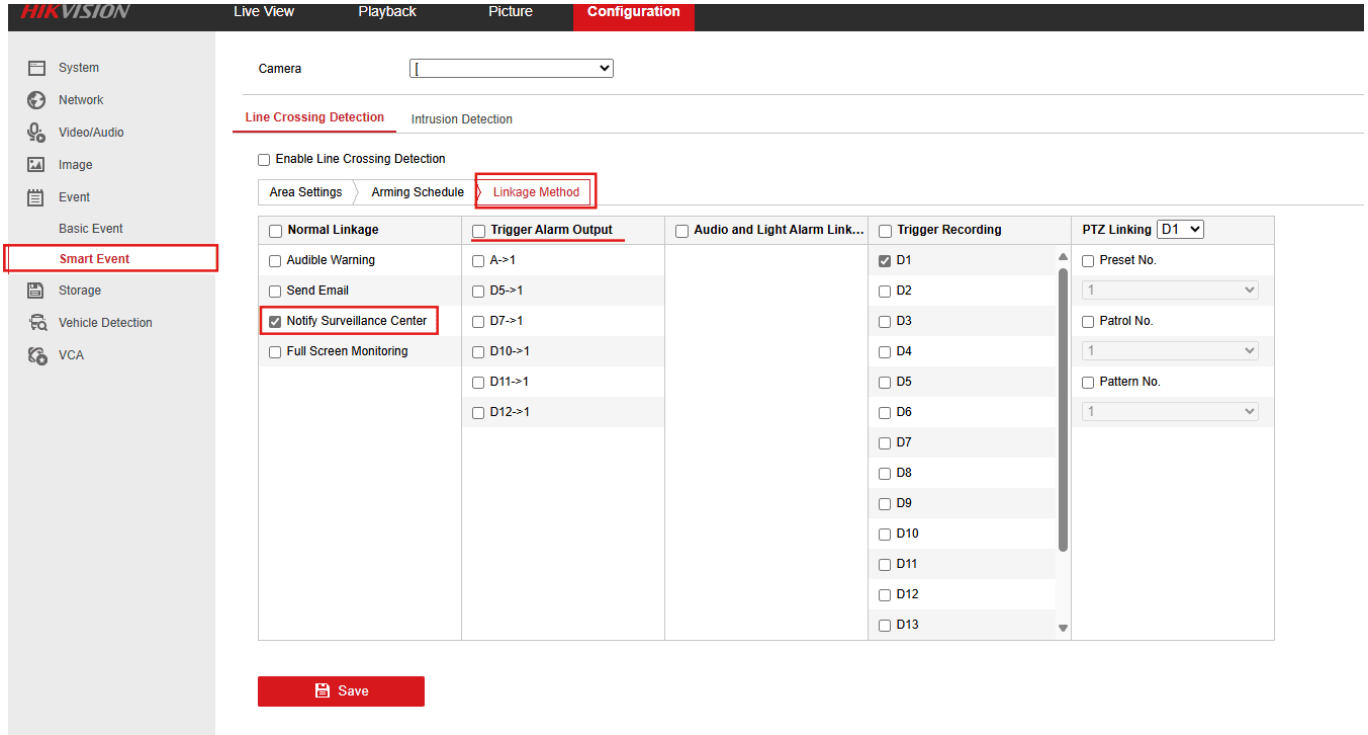

These steps and explanations will help you configure the appropriate analytics on your Hikvision Device to enhance your security system's effectiveness and responsiveness.

Hikvision Device Configuration Guide with GCX-ONE

This document describes the steps required to configure an Hikvision device in GCX-ONE.

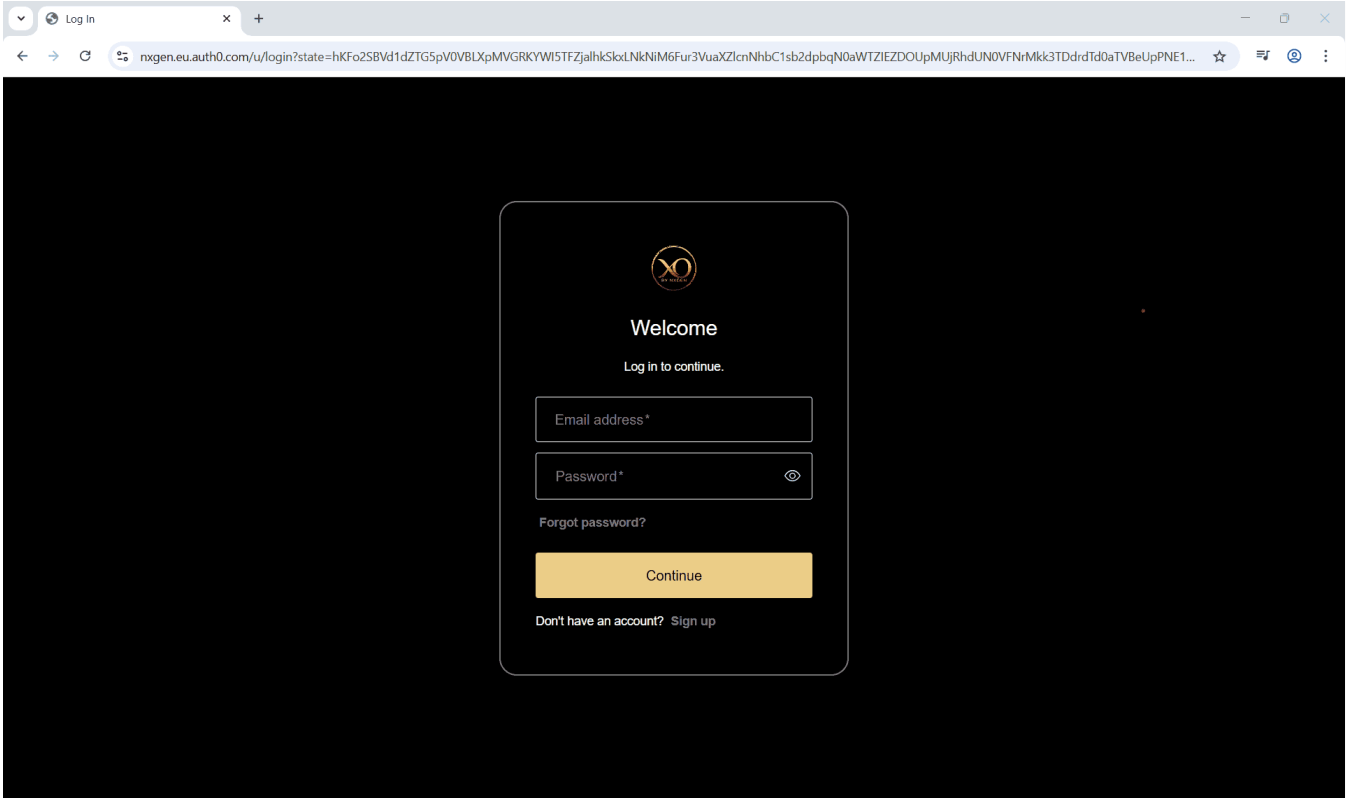

Step 1: Log in to **GCX-ONE**.

Step 2: Click on the **Configuration** menu.

Step 3: At the Service Provider level, click on **Customers**.

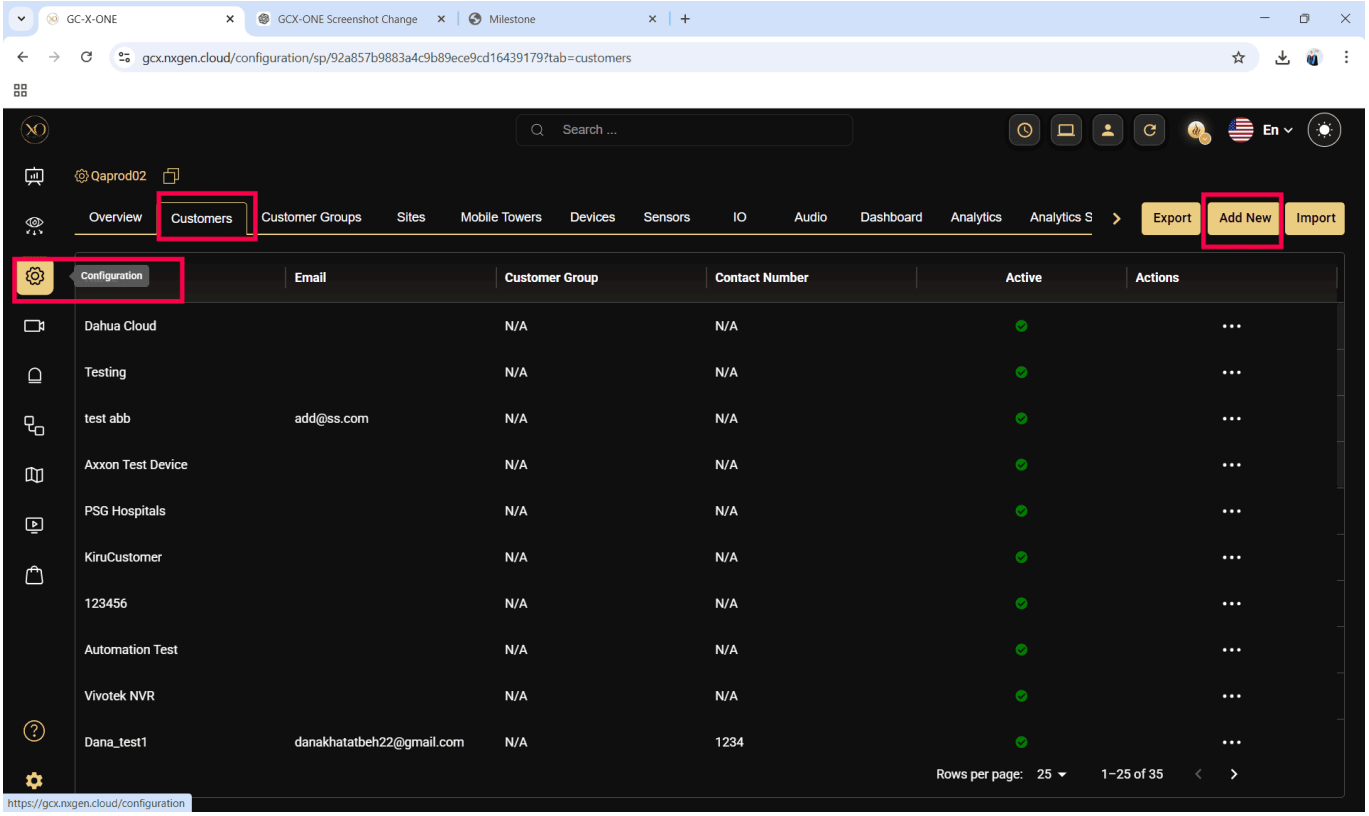

Step 4: Click the **Add** button.

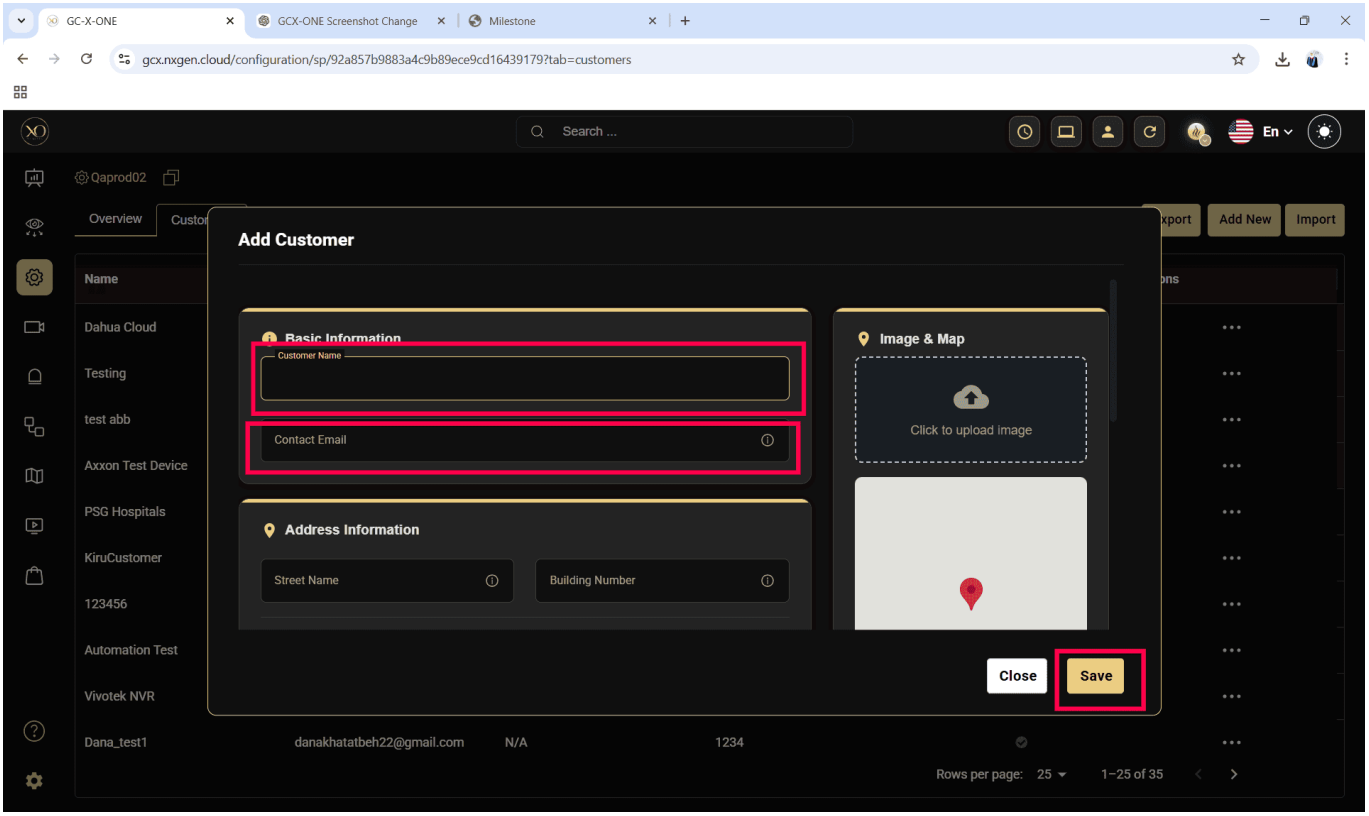

Step 5: Enter the required fields and click **Save**.

Step 6: Select the newly created customer.

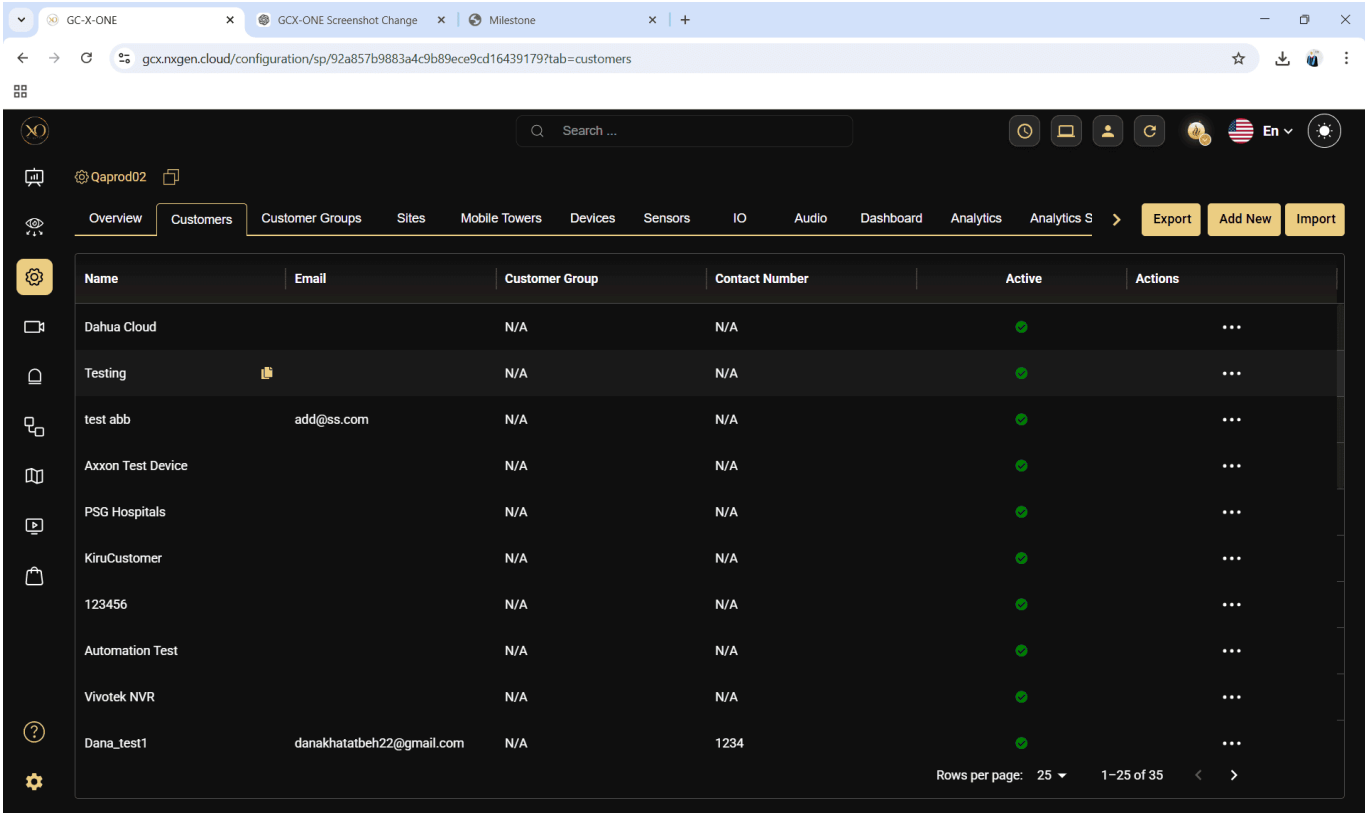

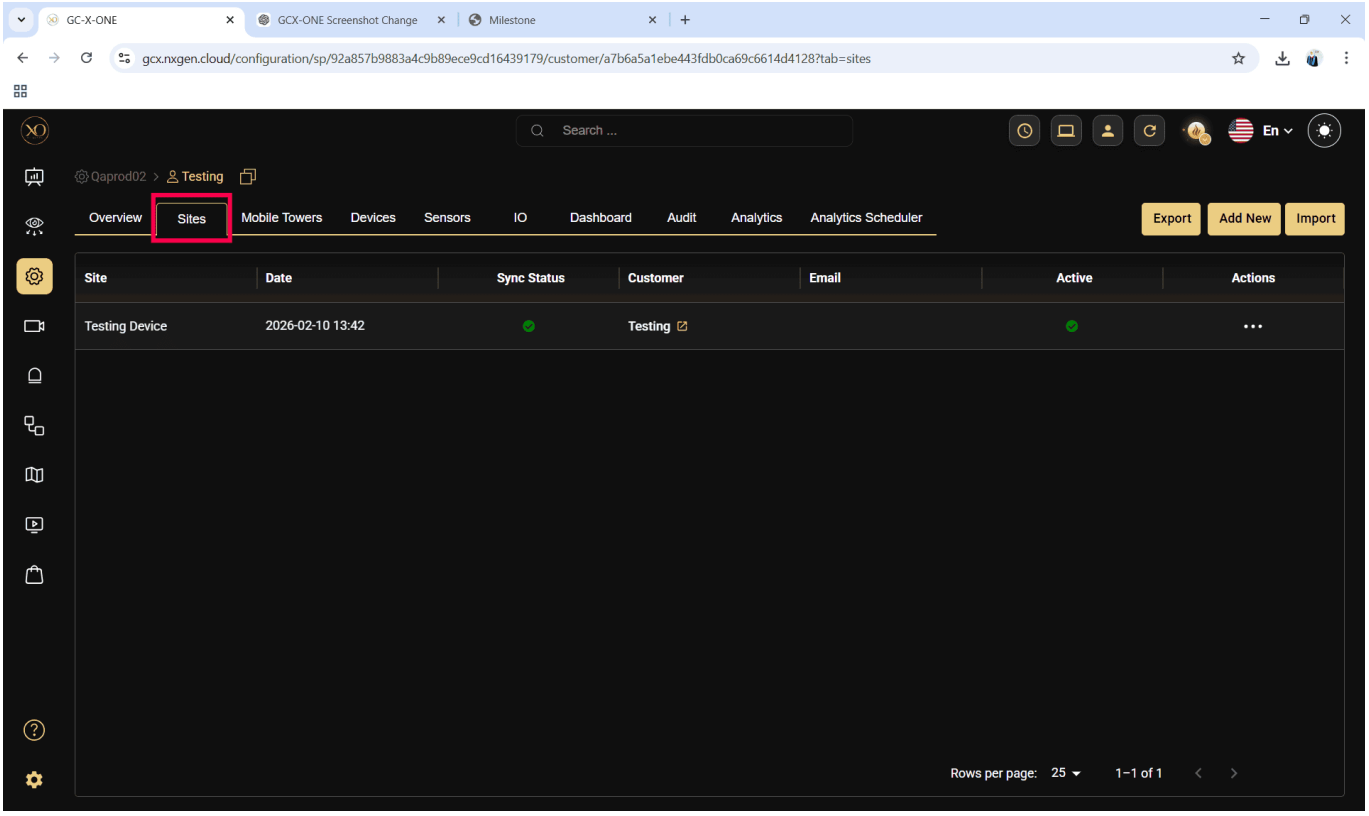

Step 7: Navigate to the **Sites** tab.

Step 8: Click the **Add** button.

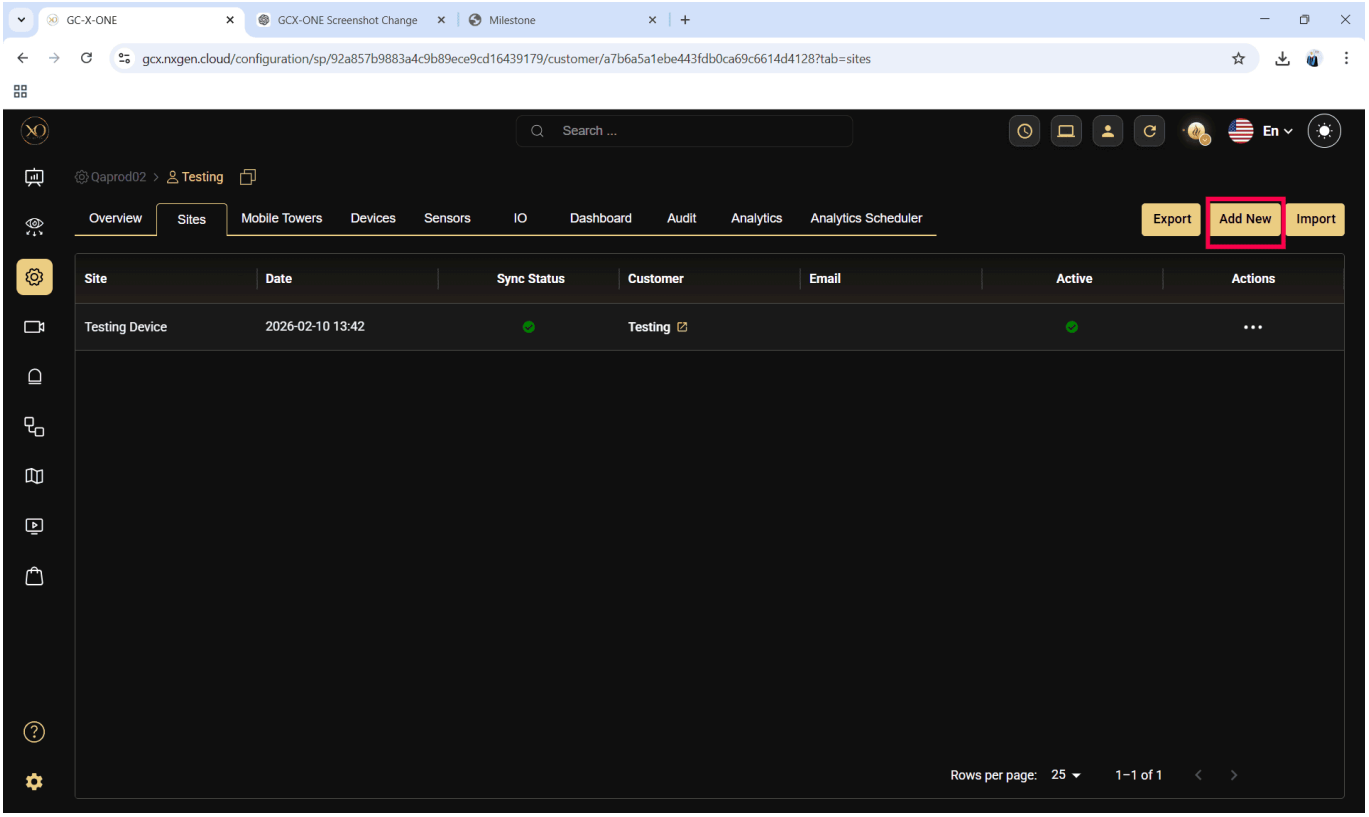

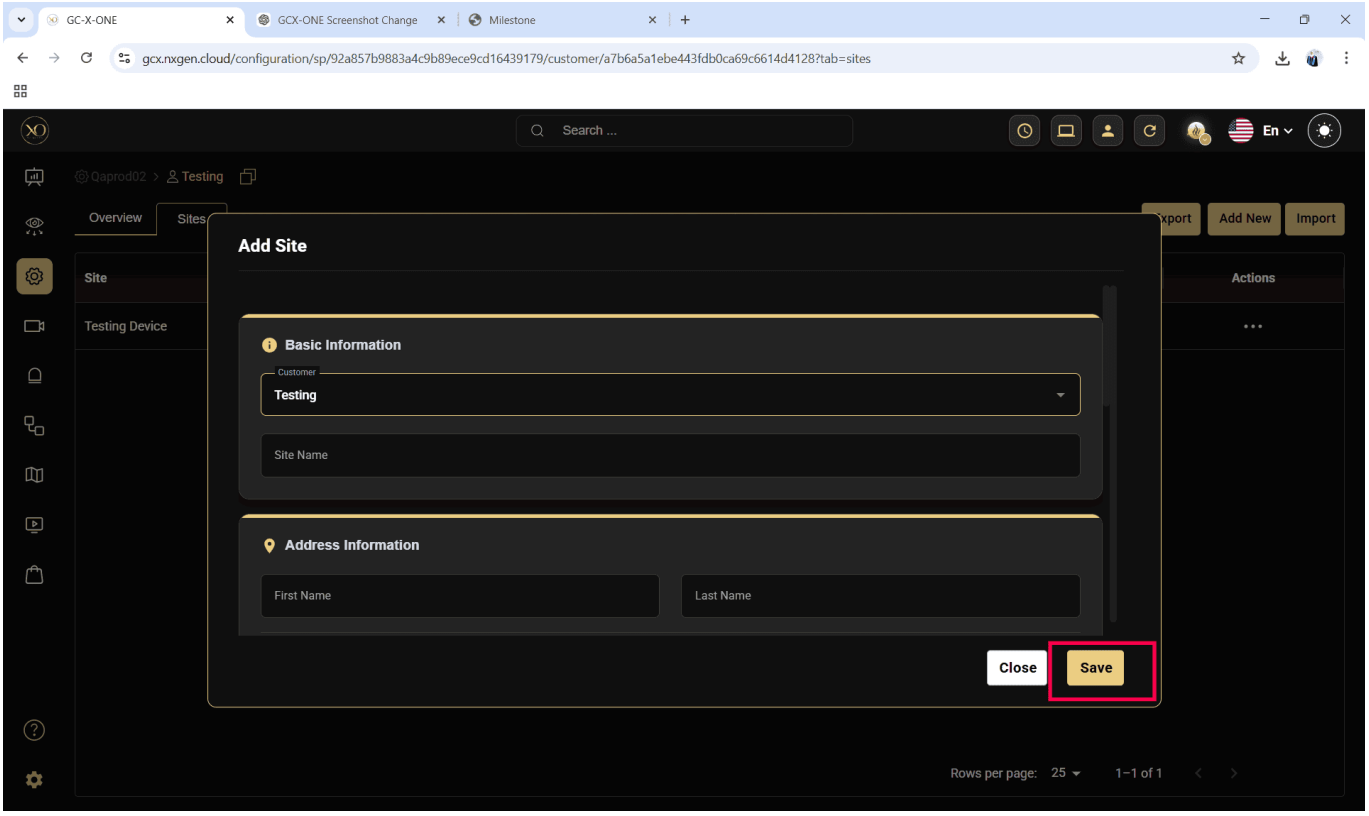

Step 9: Enter the required fields and click **Save**.

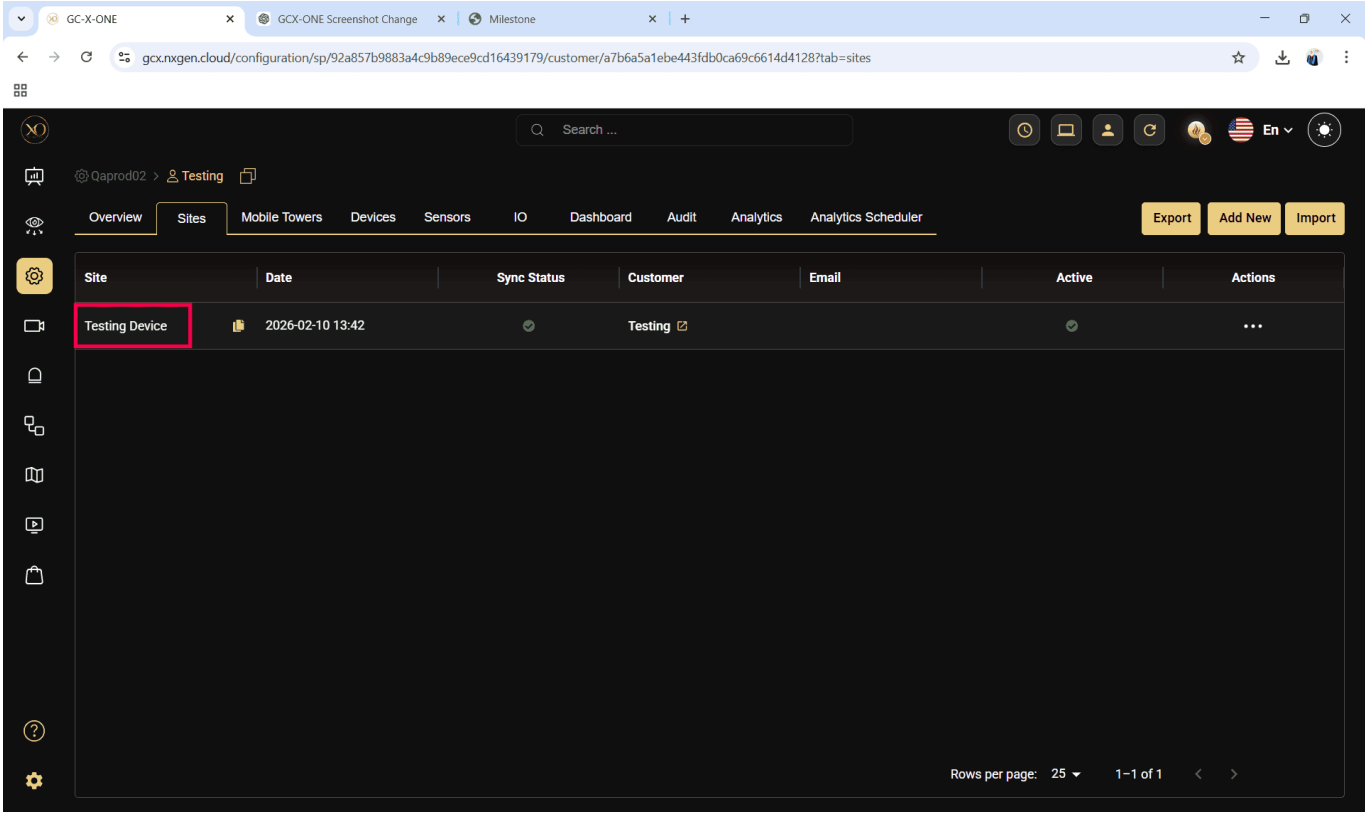

Step 10: Select the newly created site.

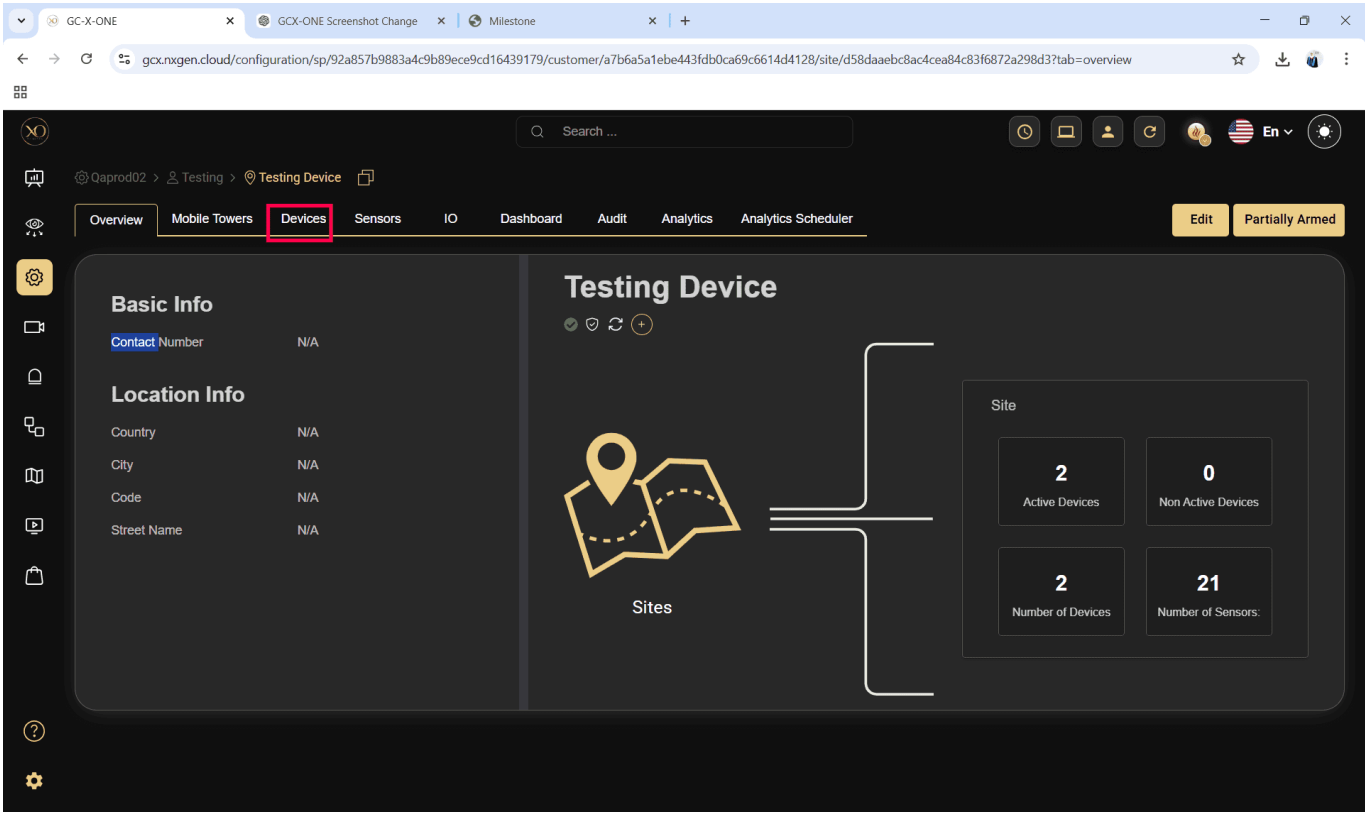

Step 11: Navigate to the **Devices** tab.

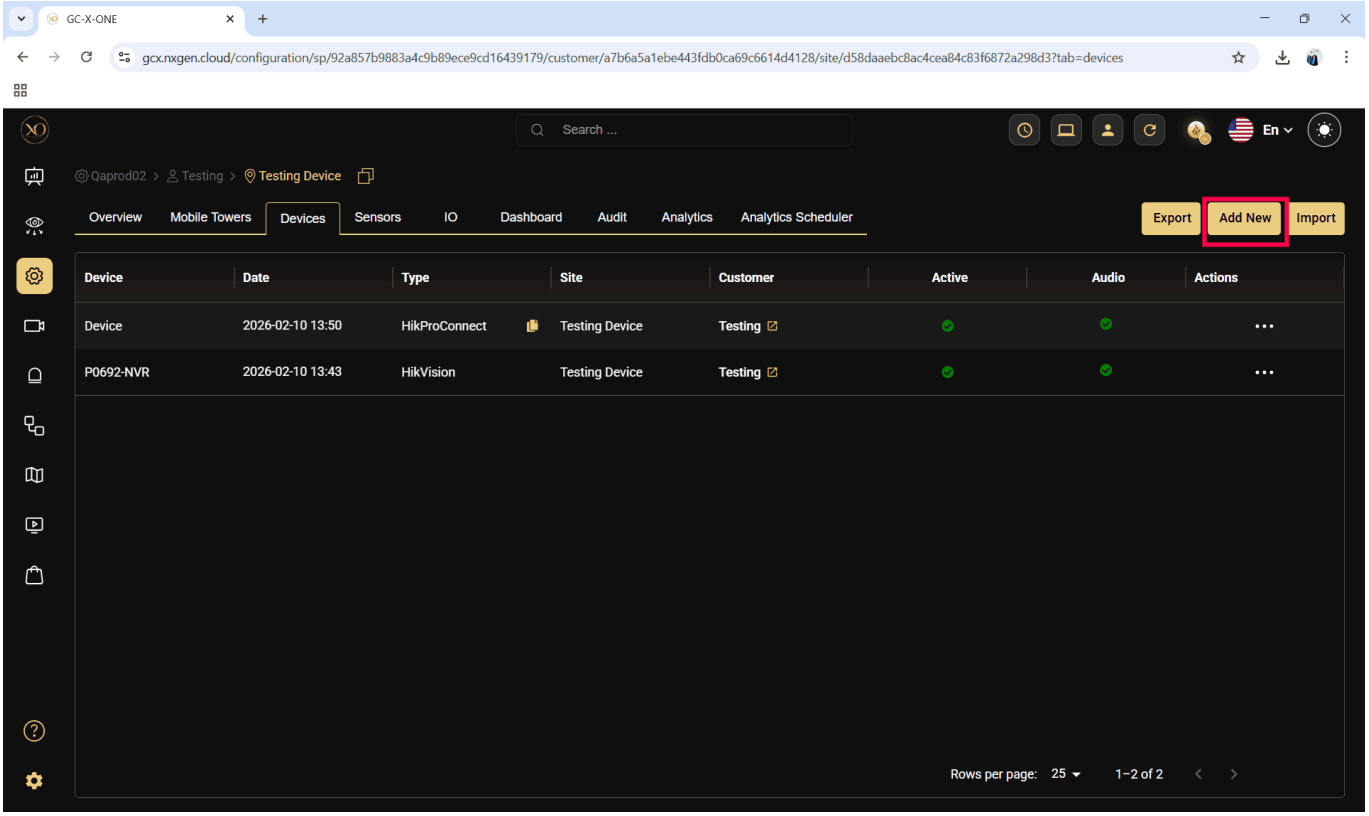

Step 12: Click the **Add** button.

Step 13: The **Add Device** dialog will be displayed.

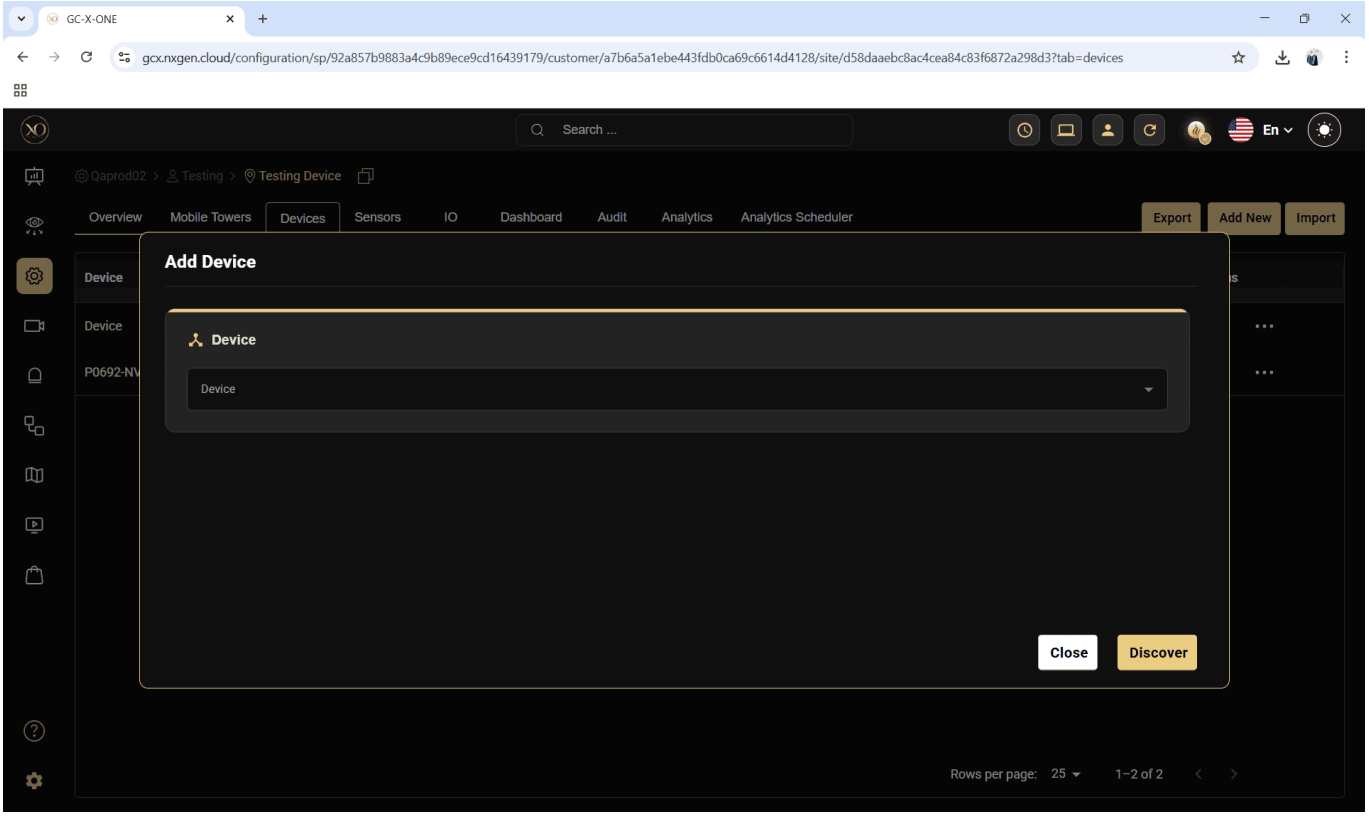

Step 14: In the dialog, open the **Device** dropdown and select **Hikvision**.

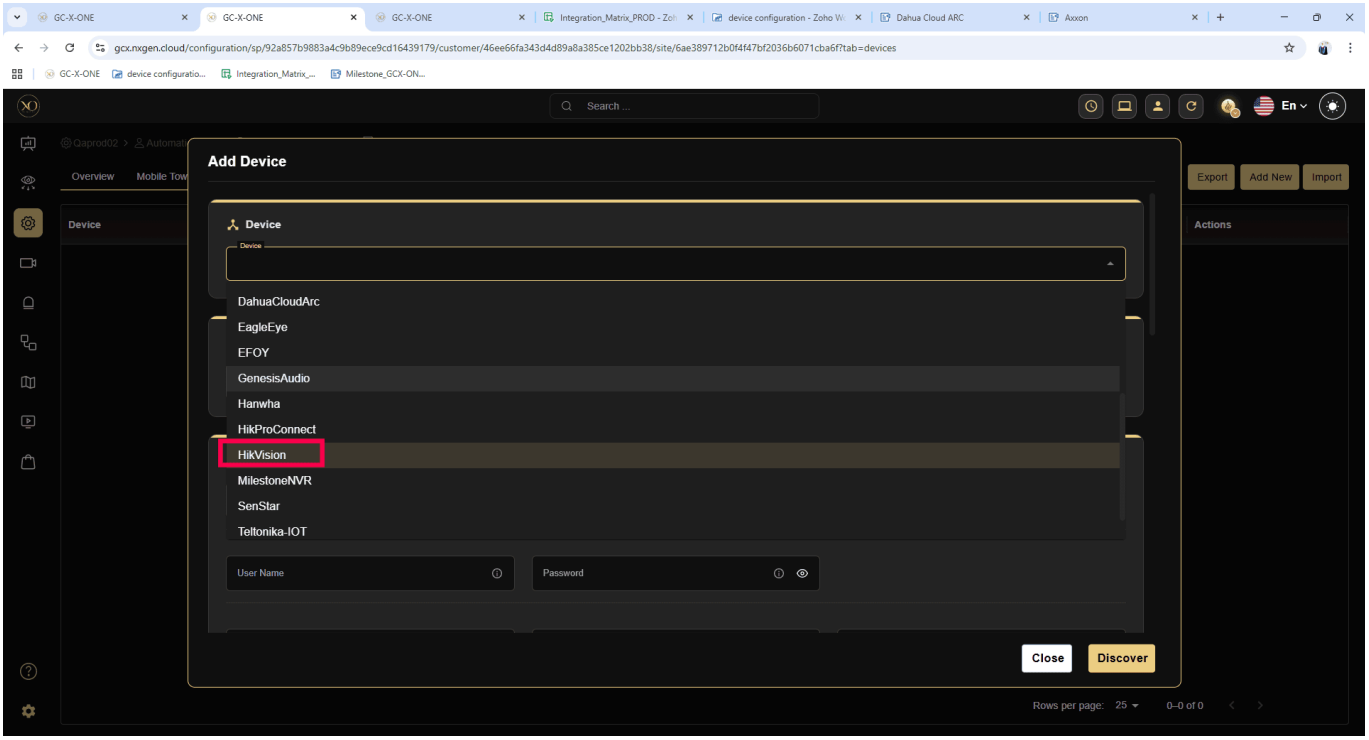

Step 15: Enter all required fields:

Name

IP Address or Host

Username

Password

Server Port

HTTPS Port

RTSP Port

Encryption Key

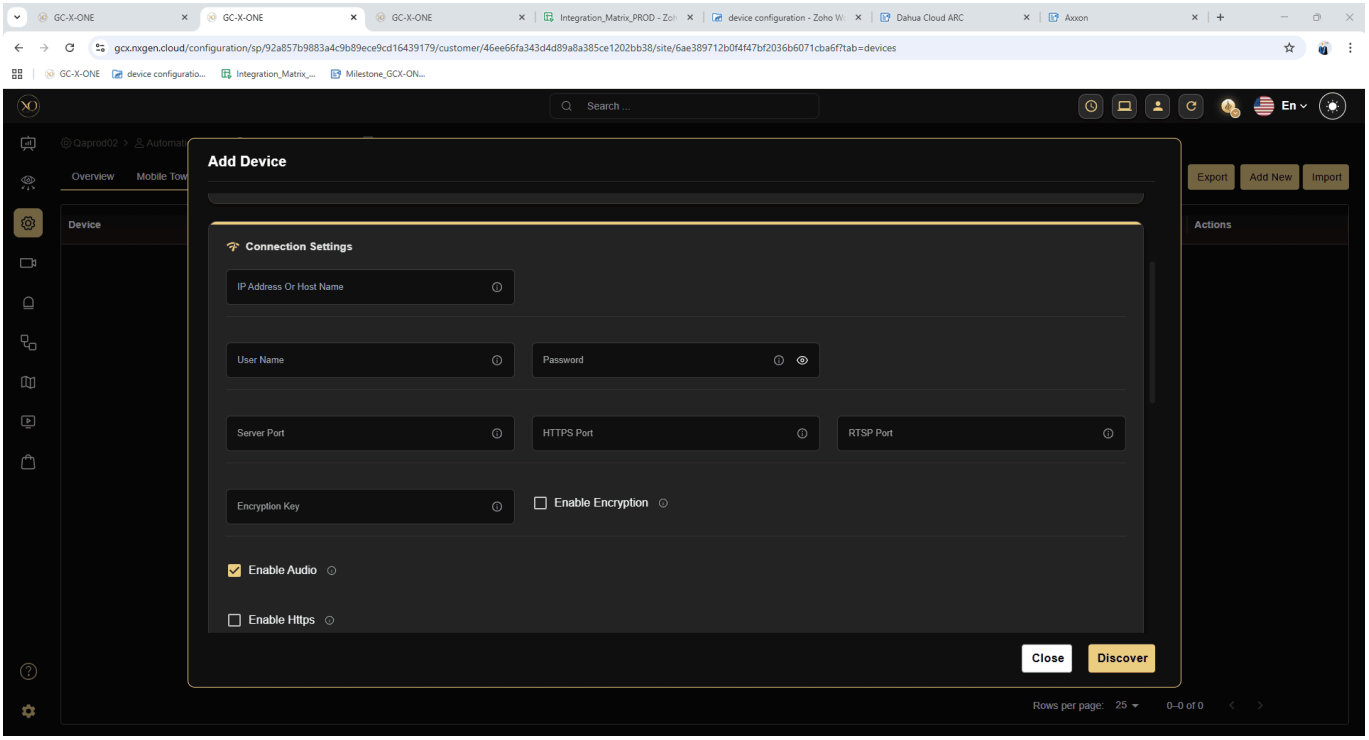

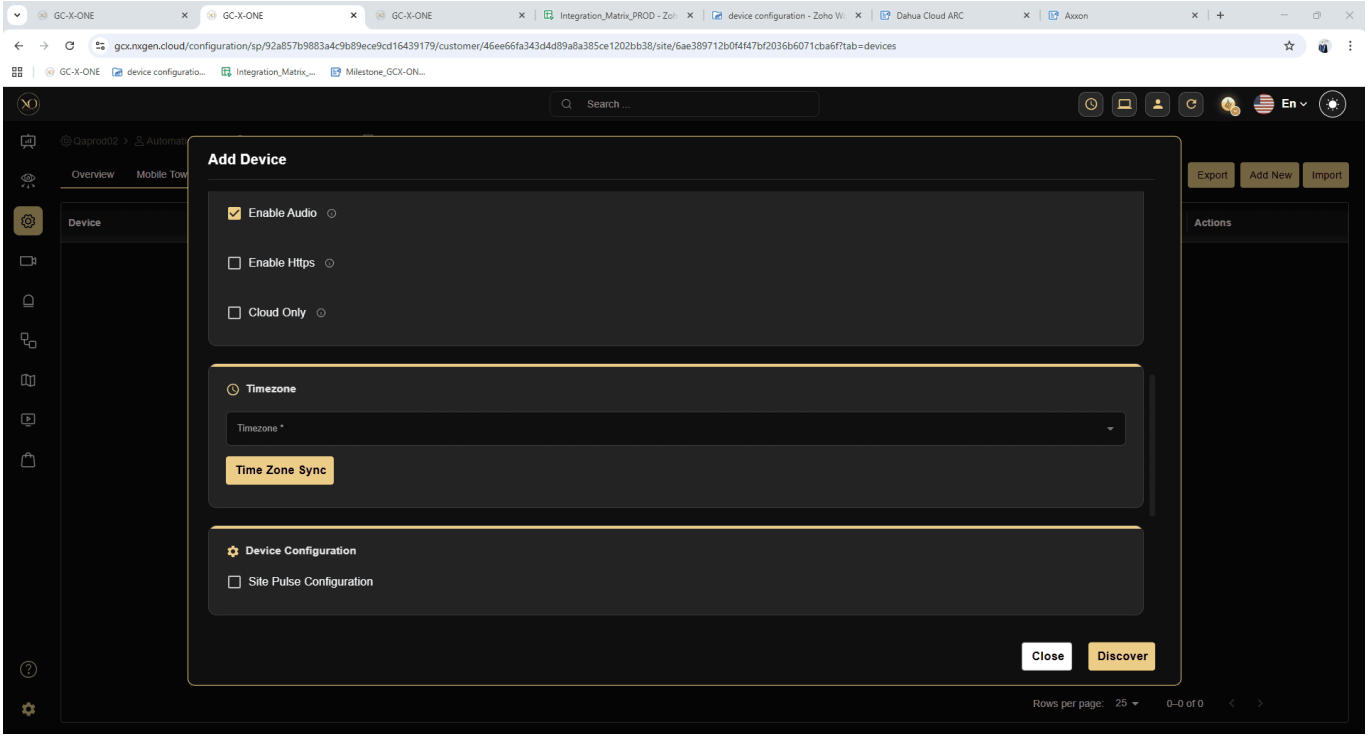
GC-X-ONE
GC-X-ONE
GC-X-ONE
Integration_Matrix_PROD - Zoh
device configuration - Zoho W
Dahua Cloud ARC
Axxon
gcx.nxgen.cloud/configuration/sp/92a857b9883a4c9b89ece9cd16439179/customer/46ee66fa343d4d89a8a385ce1202bb38/site/6ae389712b0f4f47bf2036b6071cba6f?tab=devices
Search ...
En
Overview
Mobile Tow
Export
Add New
Import
Device
Actions
Add Device
Enable Audio
Enable Https
Cloud Only
Timezone
Timezone *
Time Zone Sync
Device Configuration
Site Pulse Configuration
Close
Discover
Rows per page: 25
0–0 of 0

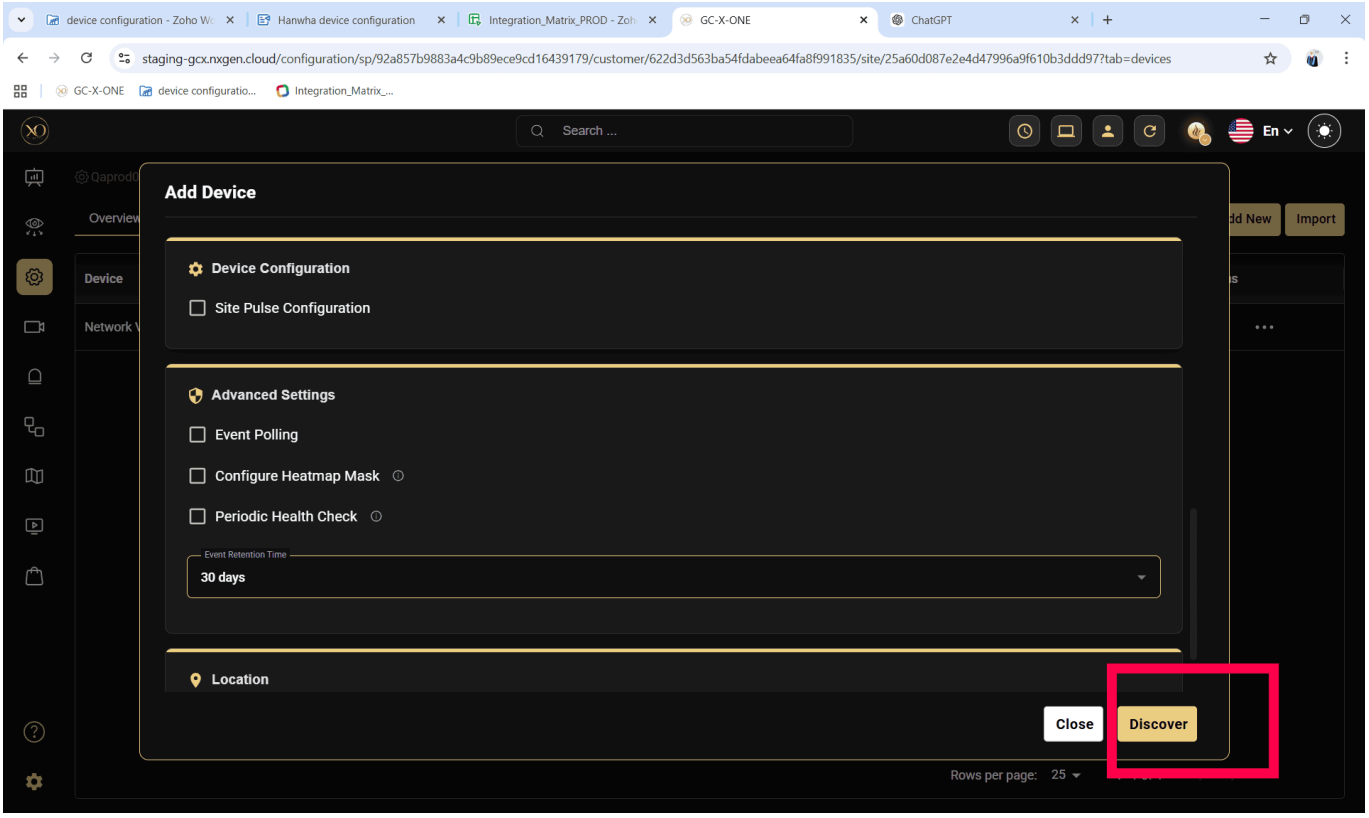
device configuration - Zoho W
Hanwha device configuration
Integration_Matrix_PROD - Zoh
GC-X-ONE
ChatGPT
staging-gcx.nxgen.cloud/configuration/sp/92a857b9883a4c9b89ece9cd16439179/customer/622d3d563ba54fdabeea64fa8f991835/site/25a60d087e2e4d47996a9f610b3ddd97?tab=devices
Search ...
En
Add Device
Device Configuration
Site Pulse Configuration
Advanced Settings
Event Polling
Configure Heatmap Mask
Periodic Health Check
Event Retention Time
30 days
Location
Close
Discover
Rows per page: 25

Step 16: Click Discover.

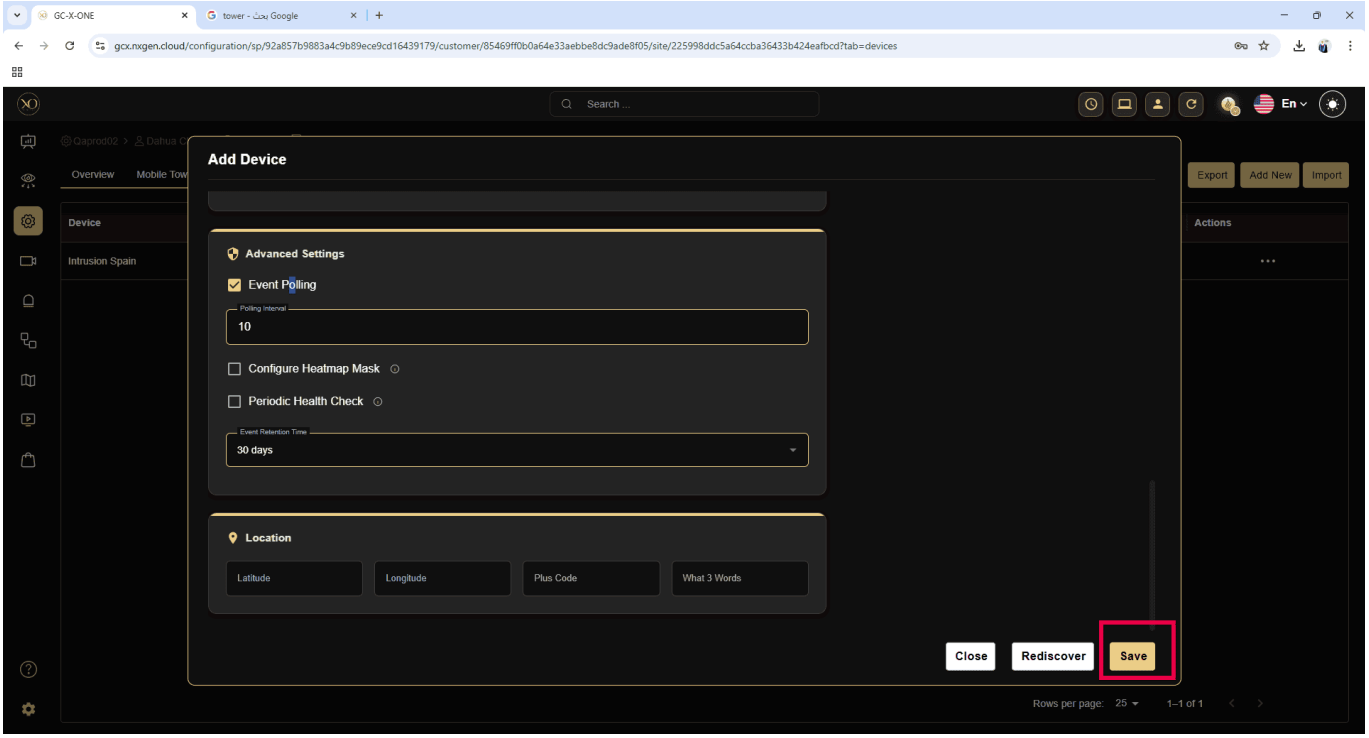

Step 17: Once the device is successfully discovered, click **Save**.