Axis Camera Station

NXGEN
Technology
AG

AXIS Camera Station Configuration

INSTALLATION DOCUMENT

Prepared by CSM team

Disclaimer:

This document is provided under NXGEN Technology Ltd's (NXGEN) General Terms & Conditions.

https://www.nxgen.io/en/gtc/

Intellectual Property and Copyright:

All content, including but not limited to text, graphics, logos, images, audio clips, and software, available on NXGEN's platforms and services is the intellectual property of NXGEN or its licensors and is protected by copyright laws. Unauthorized reproduction, distribution, or modification of any content without prior written consent from NXGEN is strictly prohibited. Users are granted limited, non-exclusive, and revocable permission to access and use the content for personal or internal business purposes only. Any misuse or infringement of NXGEN's intellectual property rights will be subject to legal action.

https://www.nxgen.io/

Table of Contents

Disclaimer: 2

Introduction: 4

Prerequisites: 4

Setting up a User Name and password for NXGEN team: 5

Axis IP Camera Configuration Guide with GCX-ONE 8

Introduction:

This document is designed to guide you through the process of configuring AXIS Camera Station with NXGEN to ensure optimal performance and security within your surveillance system. Whether you are a system administrator, security professional, or IT specialist, this guide will provide you with the necessary steps and information to integrate AXIS cameras effectively into your network.If any issues arise with the configuration, please raise a ticket on NXGEN's Help-desk portal to the NXGEN support team for swift issue resolution.

Alternatively, refer to Axis communications knowledgebase.

Prerequisites:

Before you begin the configuration process, ensure the following prerequisites are met:.

Setup a user: An admin user with the necessary permissions is configured.

Control Port: The control port is open (443) on your firewall.

Setting up a User Name and password for NXGEN team:

****Step 1:****Access User Permissions in AXIS Camera Station

Launch the AXIS Camera Station client application on your computer.

Enter your credentials to log in to the server using your current user account.

Go to the **Configuration** tab in the main menu.

Select **Security** from the dropdown options.

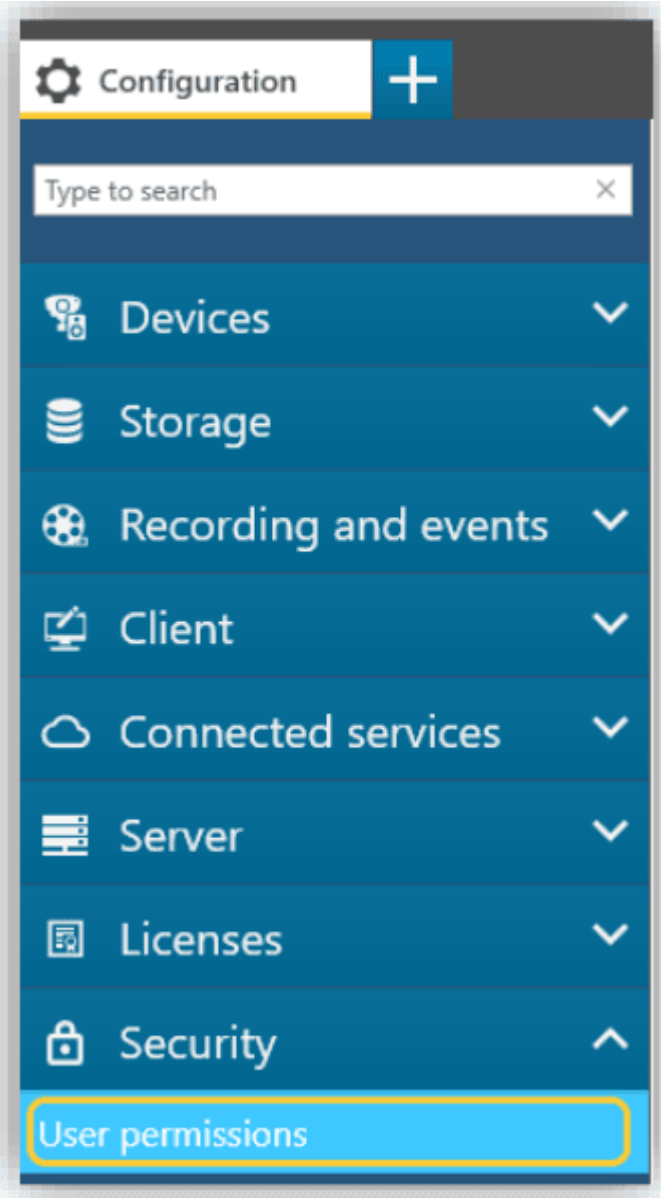

Click on **User Permissions** to access and manage user access settings.

Step 2: Add a New User Account or Group.

In the **User Permissions** window, locate and click the **Add** button at the bottom right corner.

Choose the Account Scope you want to add, **Server:** Select this option to retrieve and add local users and groups from the server. **Domain:** Choose this option to fetch and add users and groups from your domain directory.

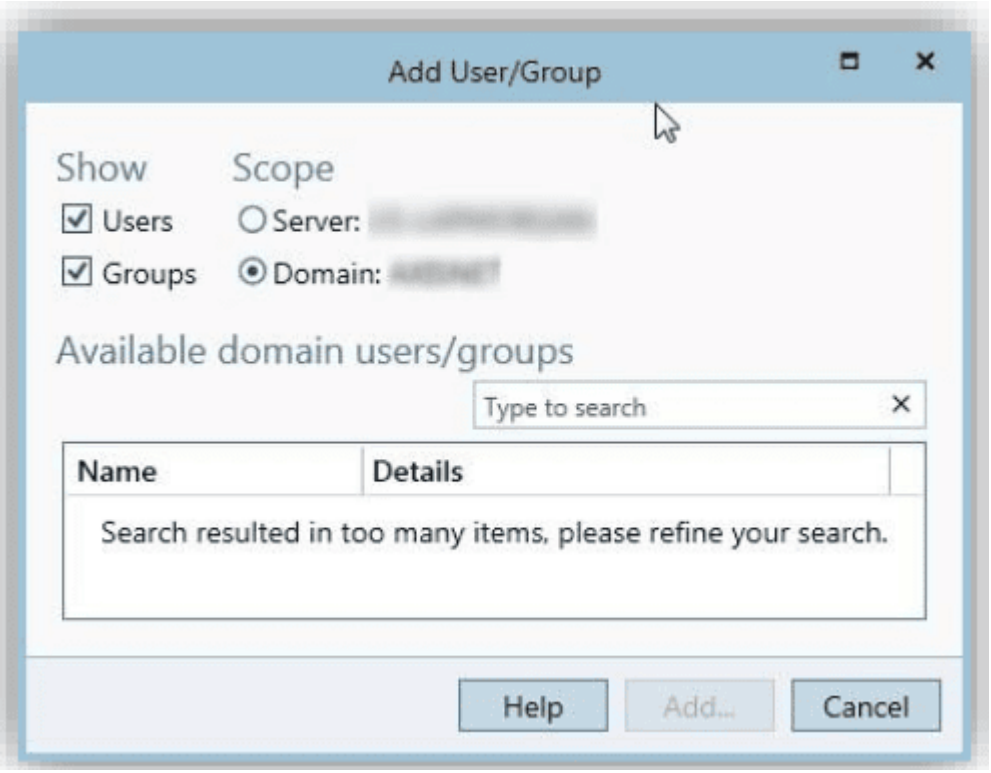

Step 3: Add NXGEN User Credentials.

****Go to "Add User": ****Within the **User Permissions** window, navigate to the **Add User** section.

Enter NXGEN Credentials: input the necessary credentials for the NXGEN user account.

Assign Permissions: Set the permissions for the NXGEN account to **Administrator** or **Operator** (Recommended) to ensure they have the required access level for managing or operating the software.

Referring to the AXIS document, the difference between each role is as mentioned below:

Administrator: The Administrator role grants full access to the entire system, including automatic access to all cameras, I/O ports and views. Therefore, you do not need to specify any camera, I/O or view privileges for a user with this role. This role is required to configure the system.

Operator: An Operator has access to live and recorded video of selected cameras and access to selected I/O ports and views. An operator has full access to all functionality of AXIS Camera Station except system configuration.

Viewer: A viewer has access to live video of selected cameras and access to selected I/O ports and views. A viewer does not have access to recorded video or system configuration.

These steps will help you have the Axis Camera Station integrated into the GCX-ONE system, allowing you to manage events, configure alerts, and ensure the camera is properly monitored within your security infrastructure. By following these instructions, you will ensure seamless operation and enhanced security through effective event management.

Axis IP Camera Configuration Guide with GCX-ONE

Step 1: Log in to **GCX-ONE**.

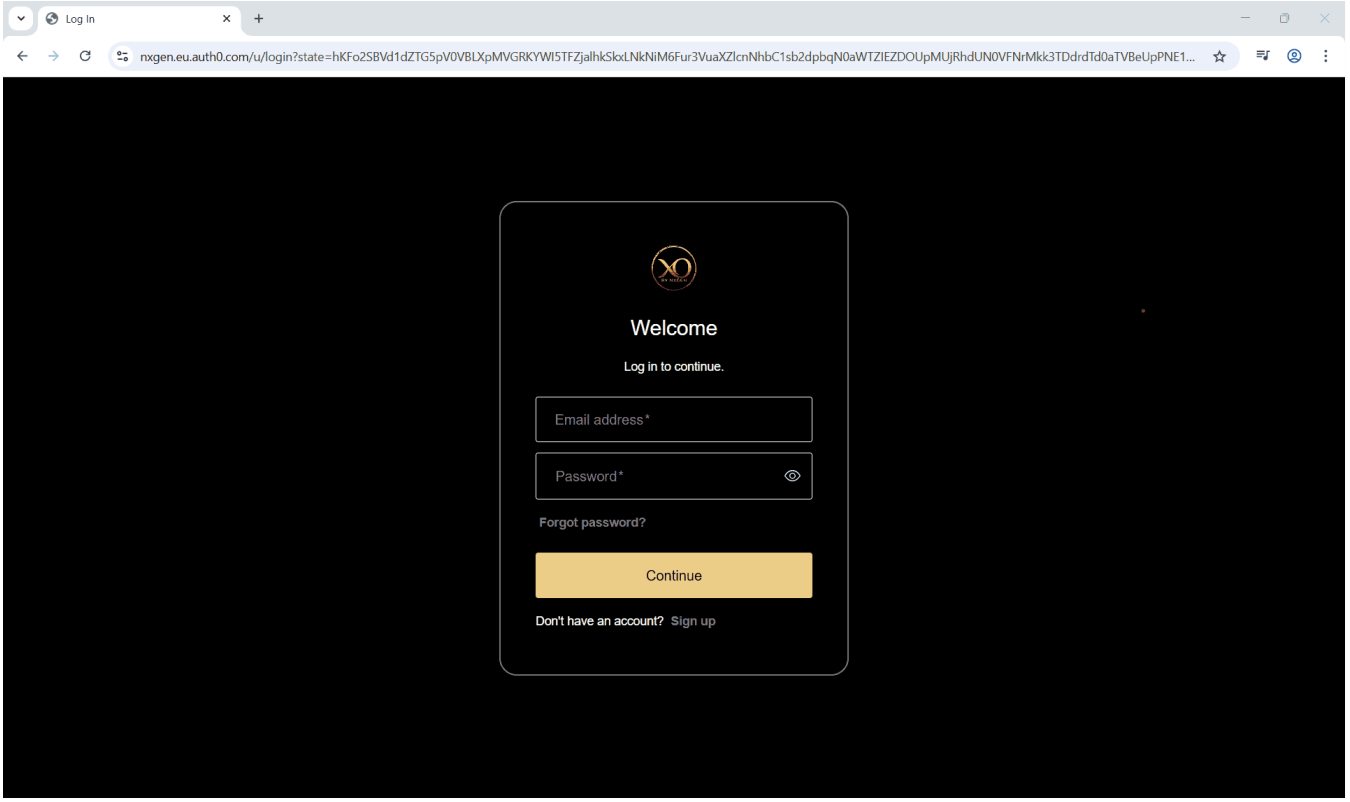

Step 2: Click on the **Configuration** menu.

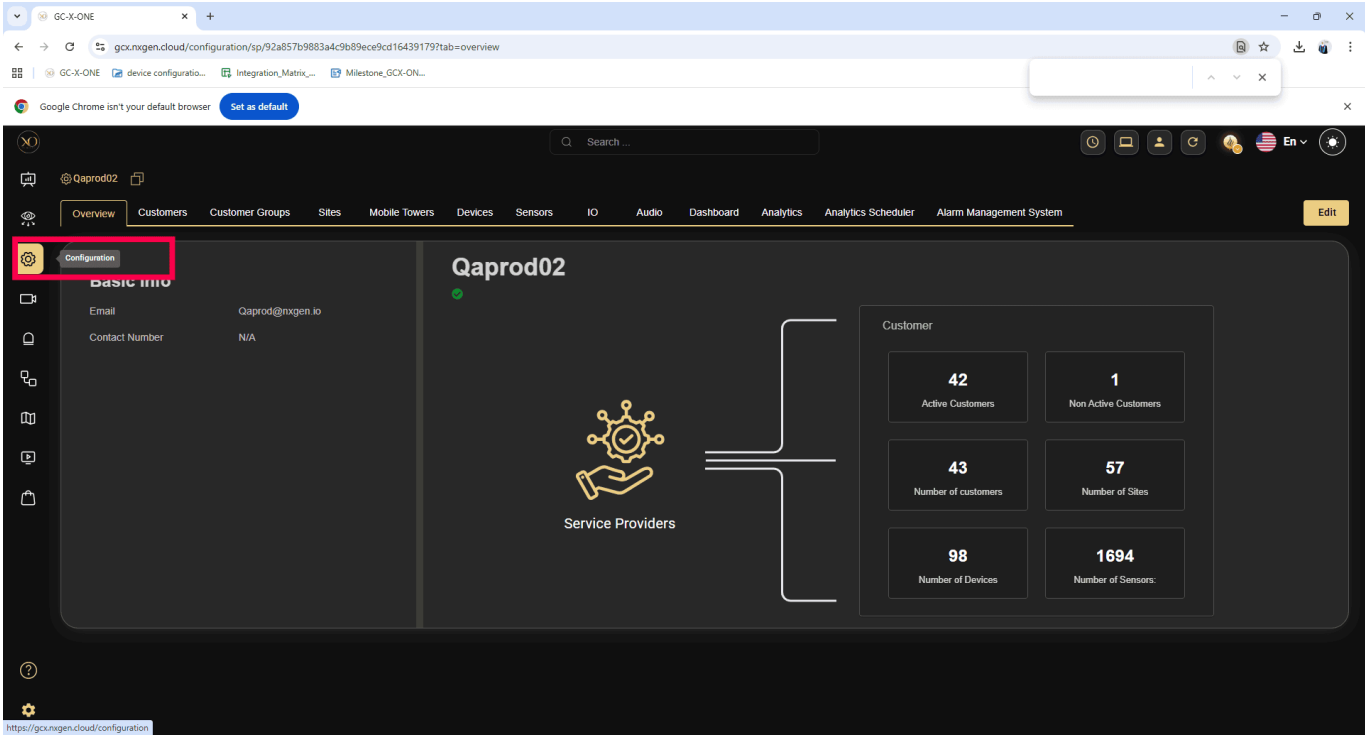

Proceed to add and configure your AXIS IP Camera.

****Step 3: ****Navigate to the **Sites** tab, where the Axis Camera is to be added.

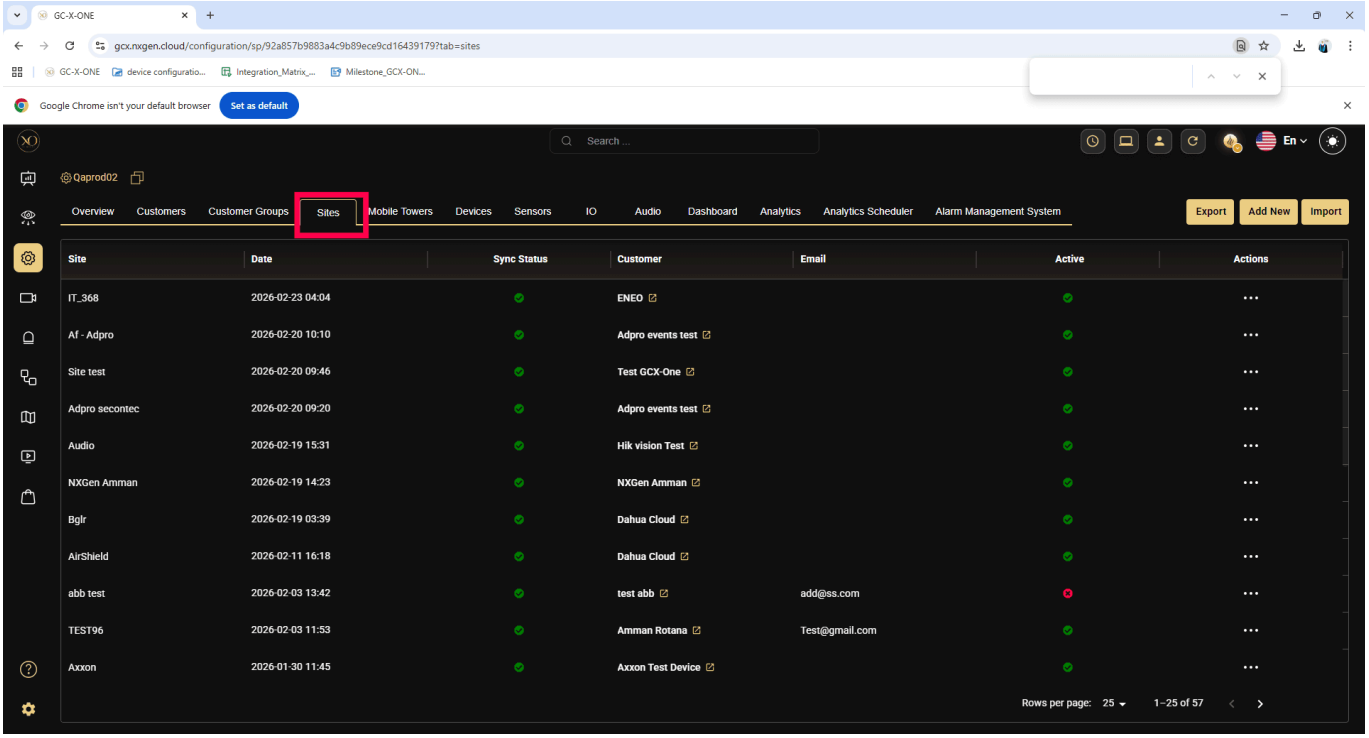

Step 4: Navigate to the **Devices** tab to view and manage the devices associated with the selected site.

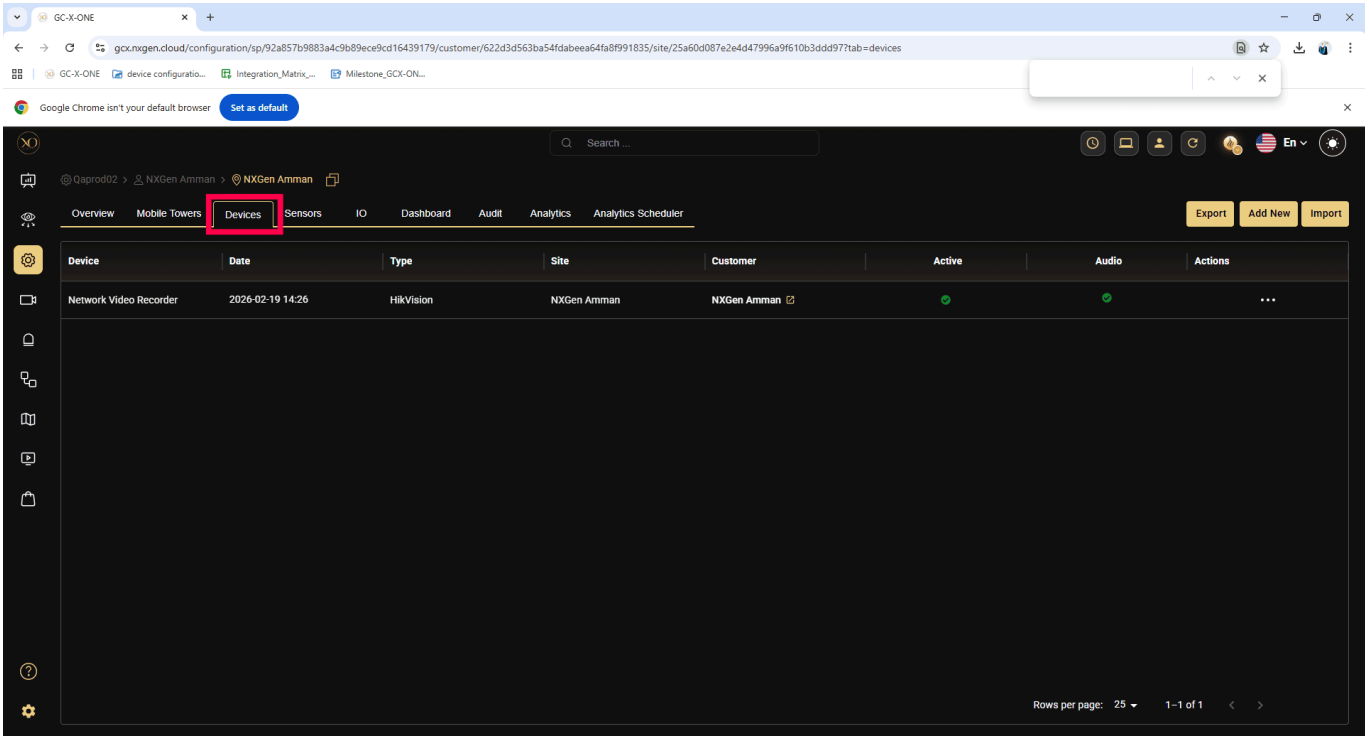

Step 5: Click the **Add** button.

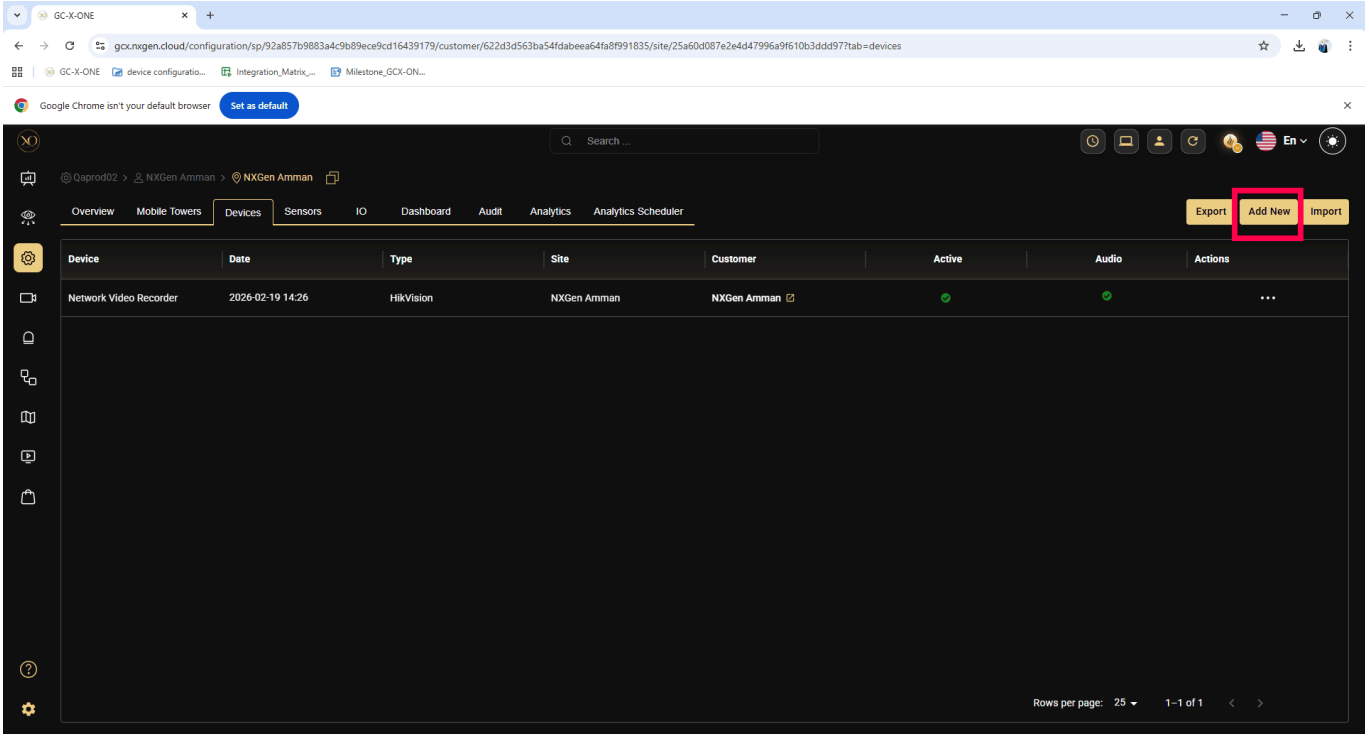

Step 6: In the dialog, open the **Device** dropdown and select Axis

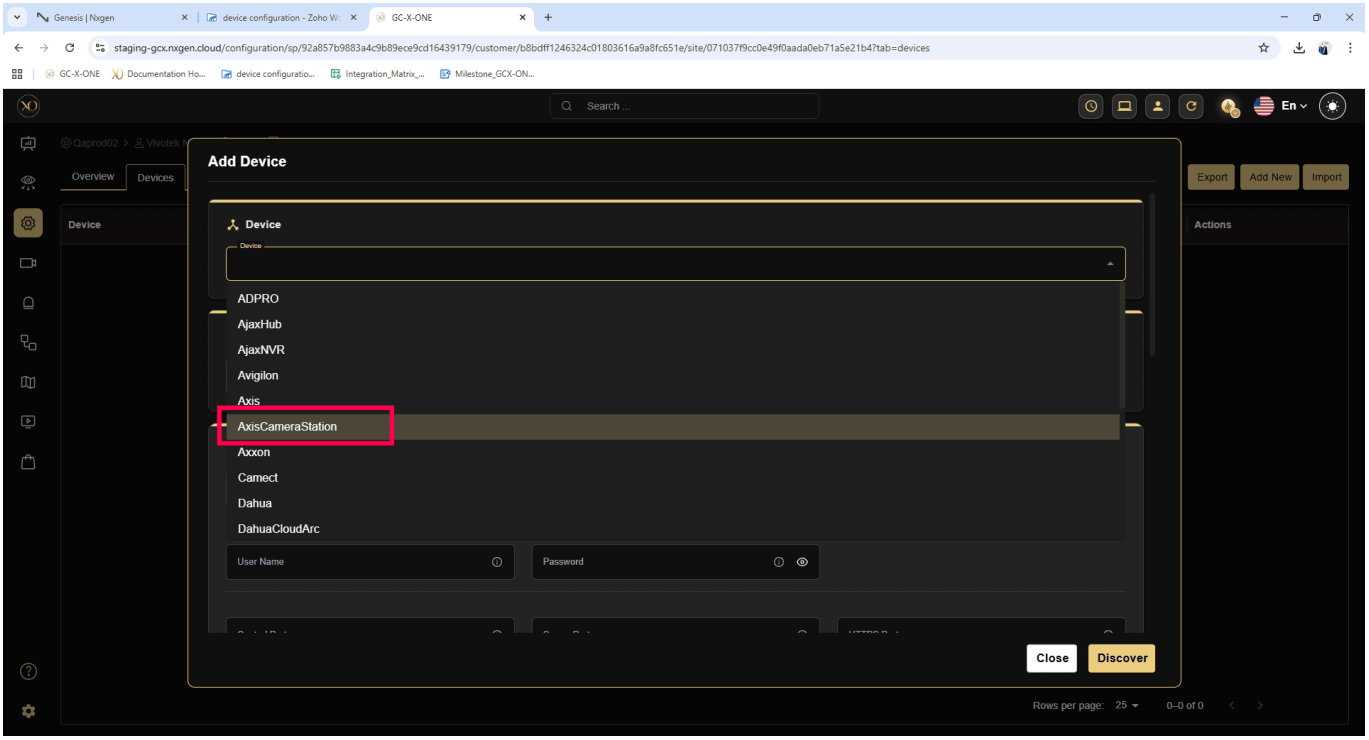

Step 7: Enter all required fields:

Name

IP Address or Host

Username

Password

Control port

Server port

Https Port

RTSP Port

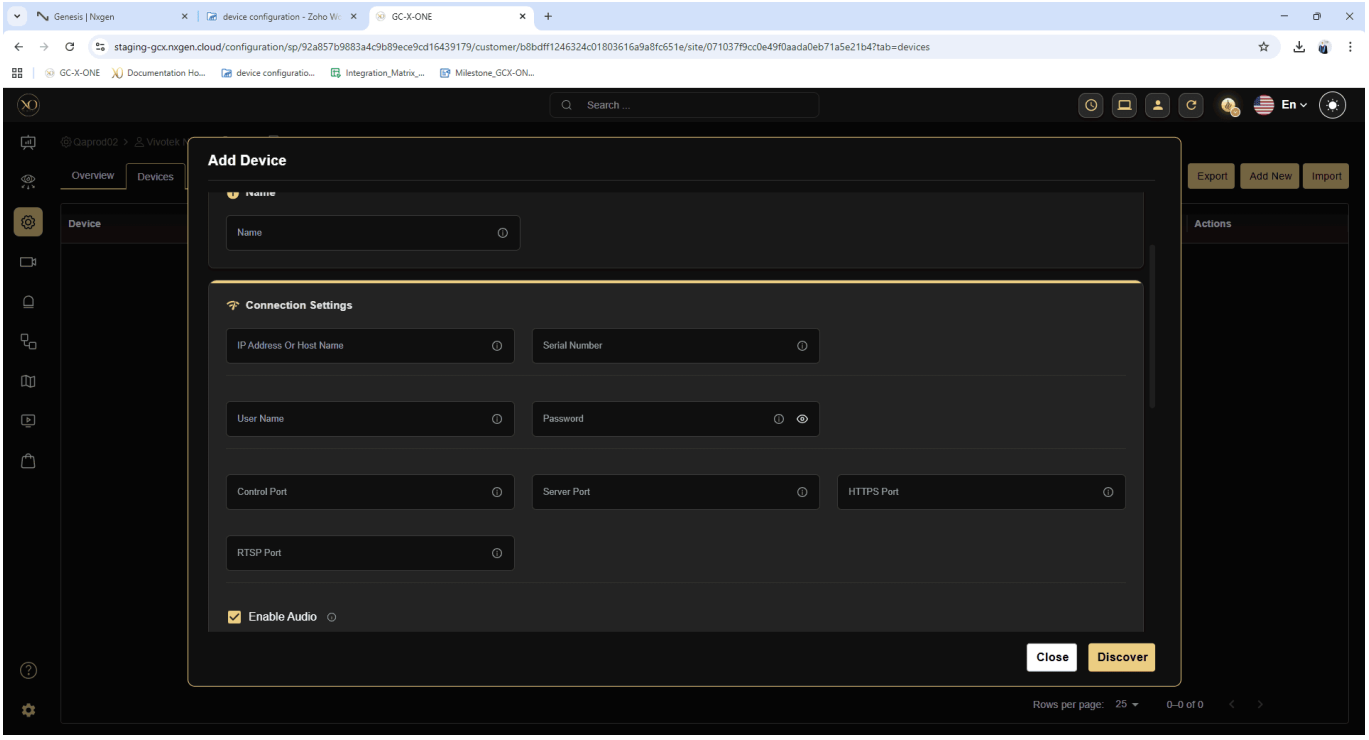

Step 8: Click **Discover**.

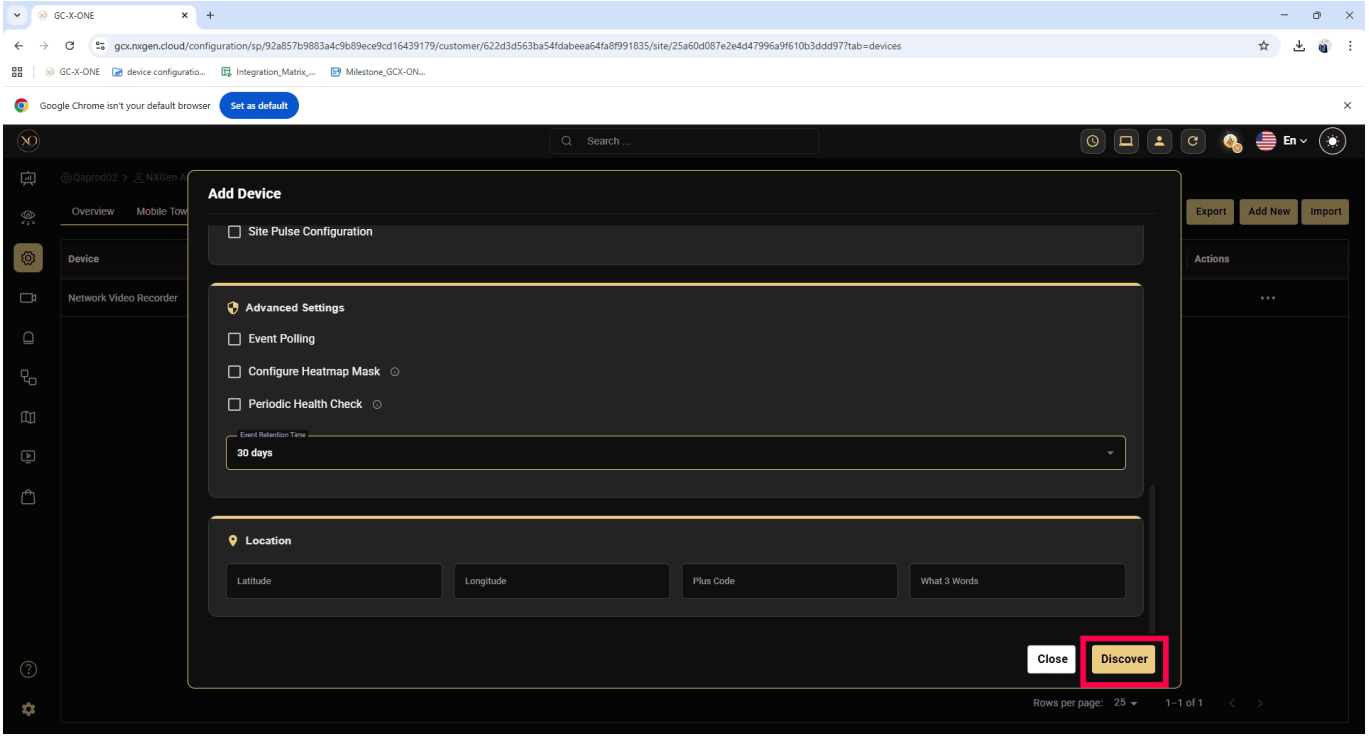
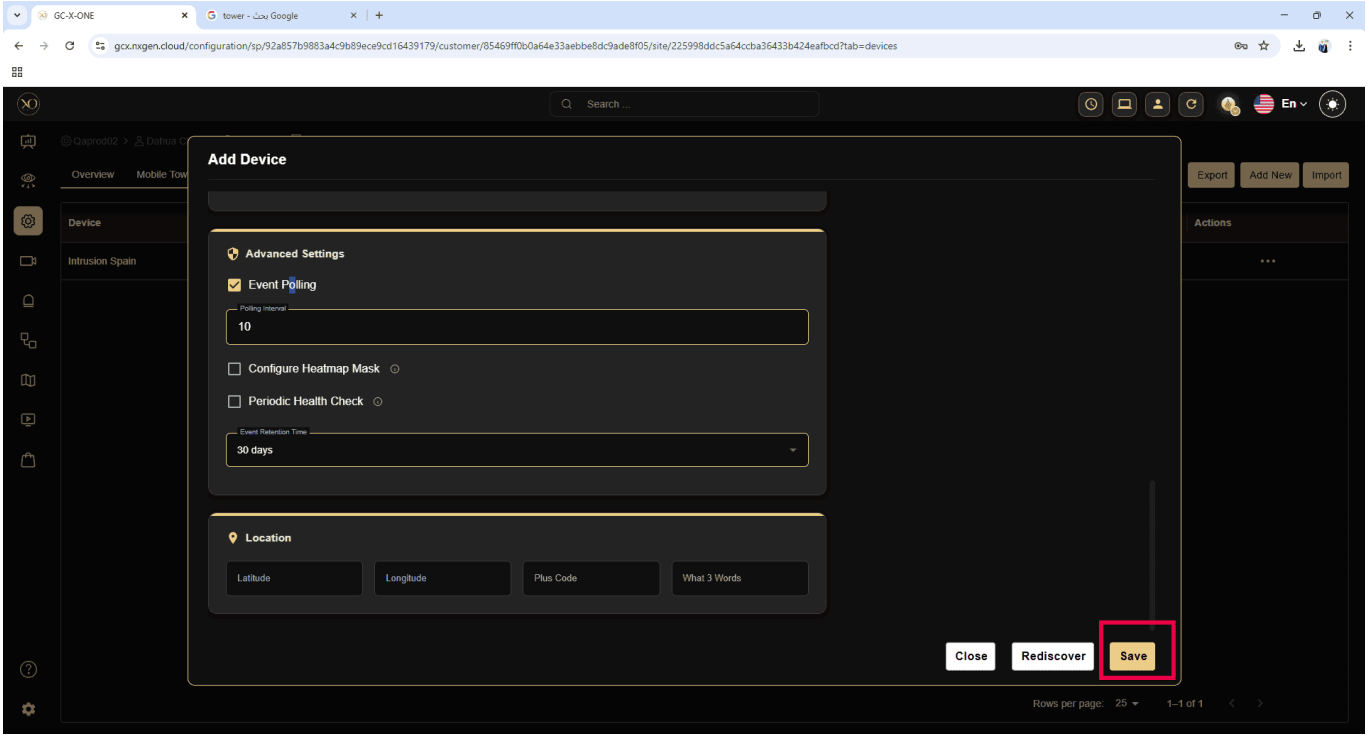
Step 9: Once the device is successfully discovered, click **Save**.