NXGEN
Technology
AG

AXIS IP camera Configuration

INSTALLATION DOCUMENT

Prepared by CSM team

Disclaimer:

This document is provided under NXGEN Technology Ltd's (NXGEN) General Terms & Conditions.

https://www.nxgen.io/en/gtc/

Intellectual Property and Copyright:

All content, including but not limited to text, graphics, logos, images, audio clips, and software, available on NXGEN's platforms and services is the intellectual property of NXGEN or its licensors and is protected by copyright laws. Unauthorized reproduction, distribution, or modification of any content without prior written consent from NXGEN is strictly prohibited. Users are granted limited, non-exclusive, and revocable permission to access and use the content for personal or internal business purposes only. Any misuse or infringement of NXGEN's intellectual property rights will be subject to legal action.

https://www.nxgen.io/

Table of Contents

Disclaimer: 1

Introduction: 3

Prerequisites: 3

Setting up a User Name and password for NXGEN team: 4

Steps to Configure an Axis IP Camera in Genesis: 6

Configurations on Axis IP Camera: 9

Introduction:

This document is designed to guide you through the process of configuring AXIS IP cameras to ensure optimal performance and security within your surveillance system. Whether you are a system administrator, security professional, or IT specialist, this guide will provide you with the necessary steps and information to integrate AXIS IP cameras effectively into your network.

If any issues arise with the configuration, please raise a ticket on NXGEN's Help-desk portal to the NXGEN support team for swift issue resolution.

Alternatively, refer to Axis communications knowledgebase.

Prerequisites:

Before you begin the configuration process, ensure the following prerequisites are met:

1. **Site Configuration**: The site where the device will be added is already configured in Genesis.
2. **Setup a user**: An admin user with the necessary permissions is configured.
3. **Control Port**: The control port is open (default is 80, unless changed).

Setting up a User Name and password for NXGEN team:

Step 1: Login Into Axis Camera.

- Open your web browser and enter the IP address of the Axis Camera into the URL bar.
- Press "Enter" to navigate to the camera's login page.
- Enter your username and password.
- Click "Login" to access the camera’s settings.

Step 2: Navigate to User Management.

- Once logged in, go to the main menu.
- Navigate to **System**.
- Select **Users** to manage the user settings for the Axis Camera.

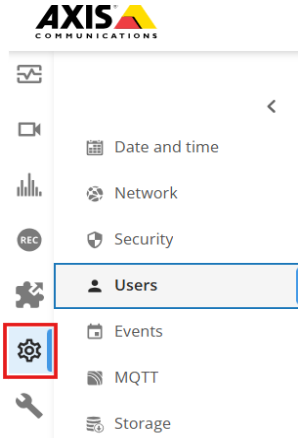

Step 3: Navigate to "Add User", and then add the credentials needed for NXGEN to login into the Software with Admin or Viewer permission.

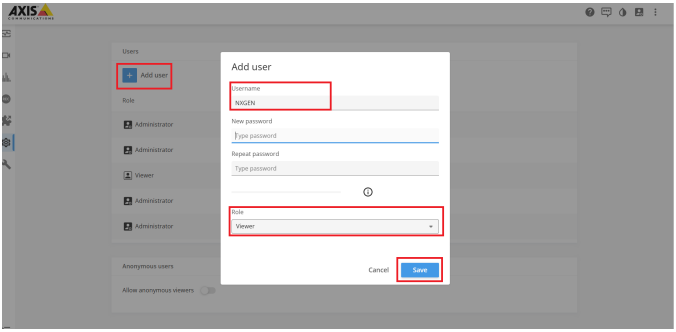

Referring to the AXIS IP camera document, the difference between each role is as mentioned below:

Administrator: The Administrator role grants full access to the entire system, including automatic access to all cameras, I/O ports and views. Therefore, you do not need to specify any camera, I/O or view privileges for a user with this role. This role is required to configure the system.

Operator: An Operator has access to live and recorded video of selected cameras and access to selected I/O ports and views. An operator has full access to all functionality of AXIS IP Camera except system configuration.

Viewer: A viewer has access to live video of selected cameras and access to selected I/O ports and views. A viewer does not have access to recorded video or system configuration.

Steps to Configure an Axis IP Camera in Genesis:

Step 1: Login to Genesis.

- Open your web browser and navigate to the Genesis login page..
- Enter your username and password.
- Click on the "Login" button to access the Genesis dashboard.

Step 2: Navigate to Configuration App.

- Once logged in, locate the configuration app from the dashboard or main menu.
- Click on the configuration app to open the configuration settings.
- Proceed to add and configure your AXIS IP Camera.

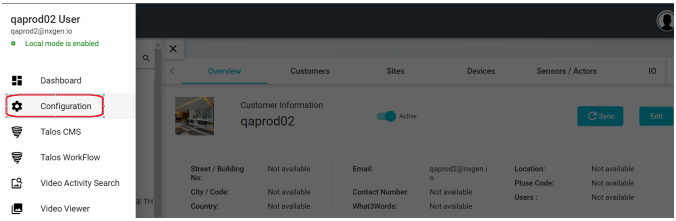

Step 3: Select the Site and Access Devices Tab.

- In the configuration app, navigate to the site where the Axis Camera is to be added using the tree-view on the left side of the screen.
- Click on the site to expand its options.
- Select the "Devices" tab to view and manage the devices associated with the selected site.

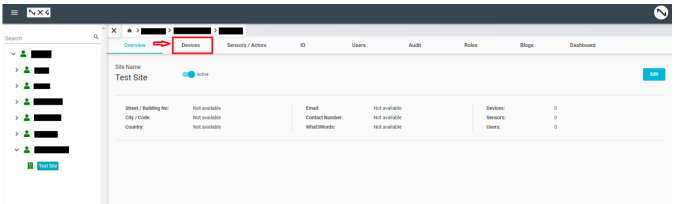

Step 4: Click on the "Add" button.

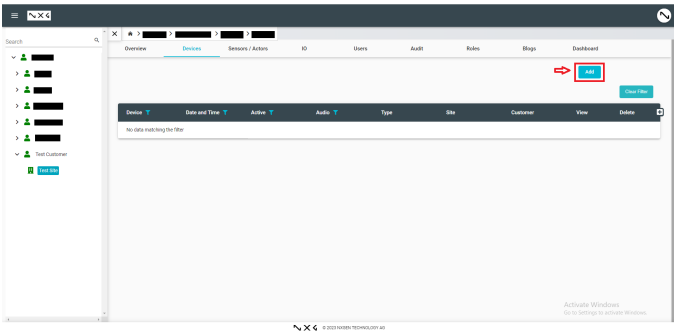

Step 6: Click on the "Type" drop in the dialog and select the device type as "Axis"

Enter all the Mandatory Details and click on the Discover Button.

*Control Port is defaulted to 80 if no value is entered and this port has to be open on your firewall.

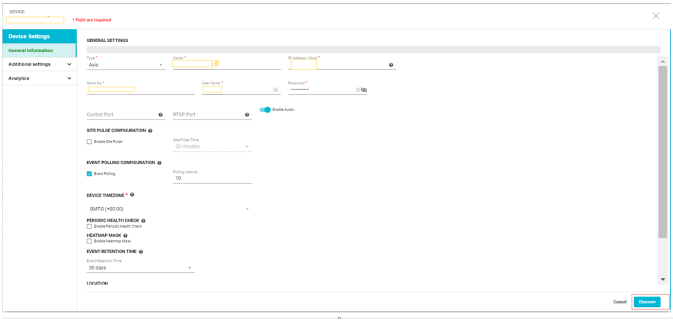

Step 7: Once the device is discovered successfully, click on the "save" button

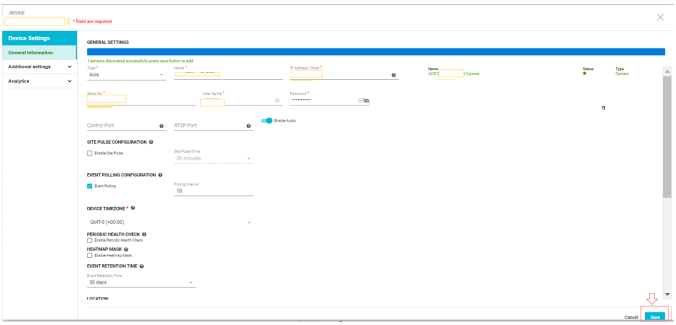

Step 8: Note the **NxgenDeviceId** from the Unique Reference Number:

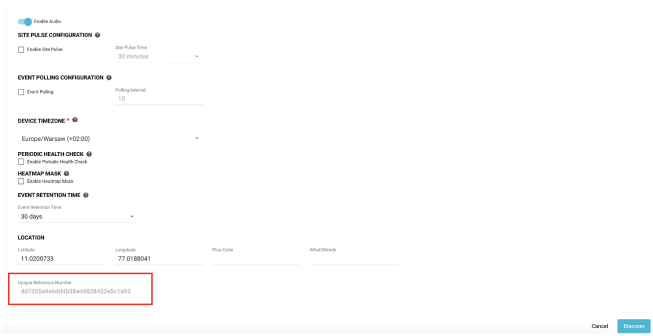

Configurations on Axis IP Camera:

Step 1: Login into AXIS camera.

- Open your web browser and enter the IP address of the Axis Camera into the URL bar.
- Press "Enter" to navigate to the camera's login page.
- Enter your username and password.
- Click "Login" to access the camera’s settings.

Step 2: Navigate to Event Management.

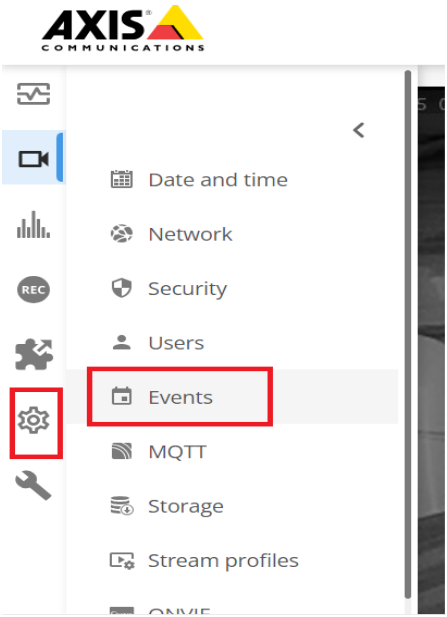

Step 3: Navigate to Recipients tab and Add recipient.

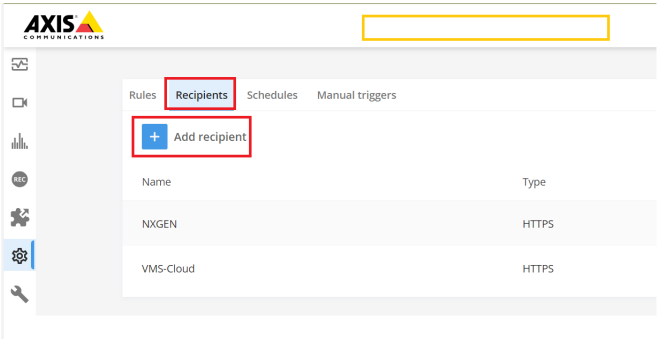

Step 4: Enter the details for the recipient as follows and Save. The recipient will be added to the list.

- **Name** : Any name you choose.
- **Type**: HTTPS.
- **URL**: https://axisproxy.nxgen.cloud/eventIngest/<nxgenDeviceId>
- **User Name**: < nxgenDeviceId >
- **Password**: < nxgenDeviceId >

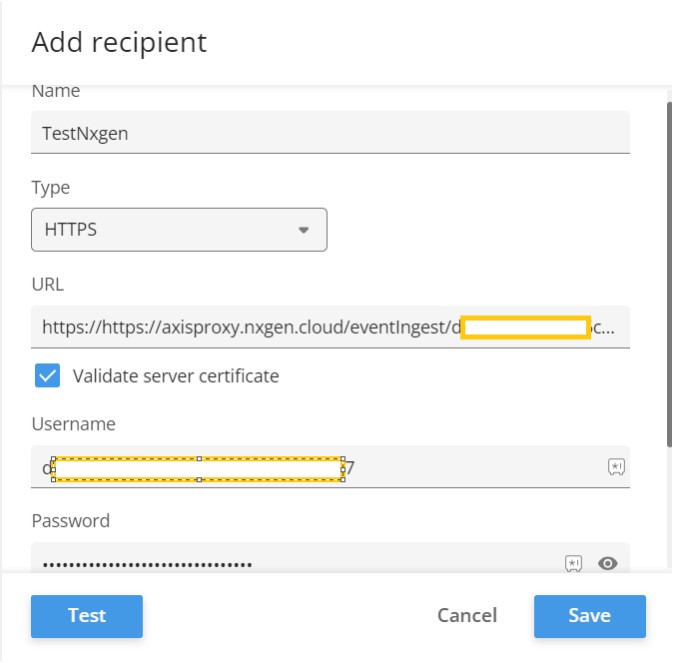

Step 5: Configure Rules: Navigate to **Rules** Tab and **Add a rule** for every event type that has to be notified to genesis.

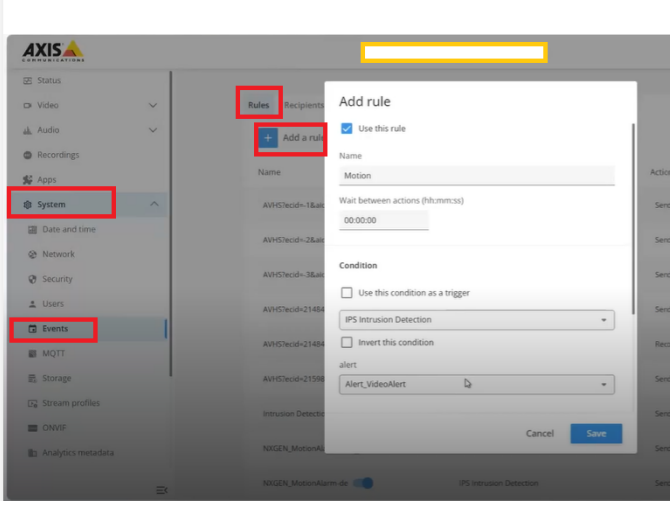

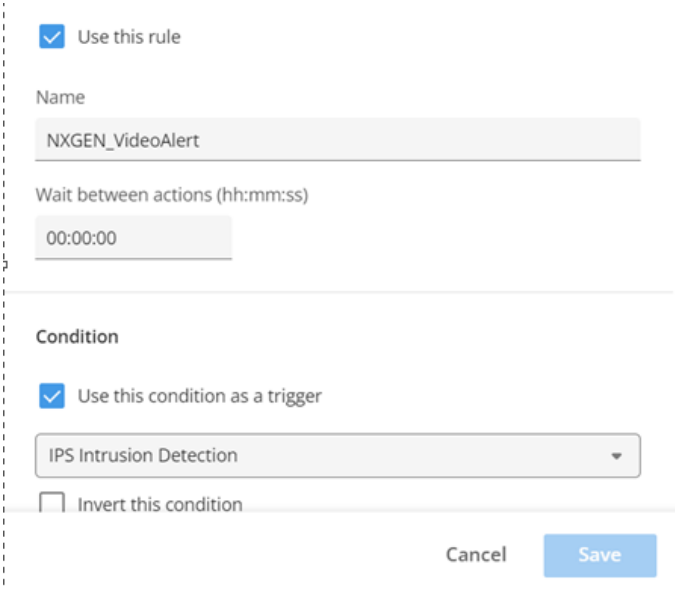

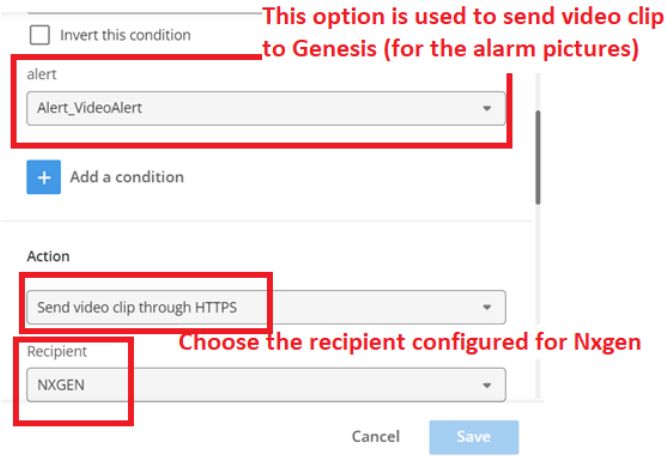
This option is used to send video clip to Genesis (for the alarm pictures)
Invert this condition
alert
Alert_VideoAlert
Add a condition
Action
Send video clip through HTTPS
Choose the recipient configured for Nxgen
Recipient
NXGEN
Cancel
Save

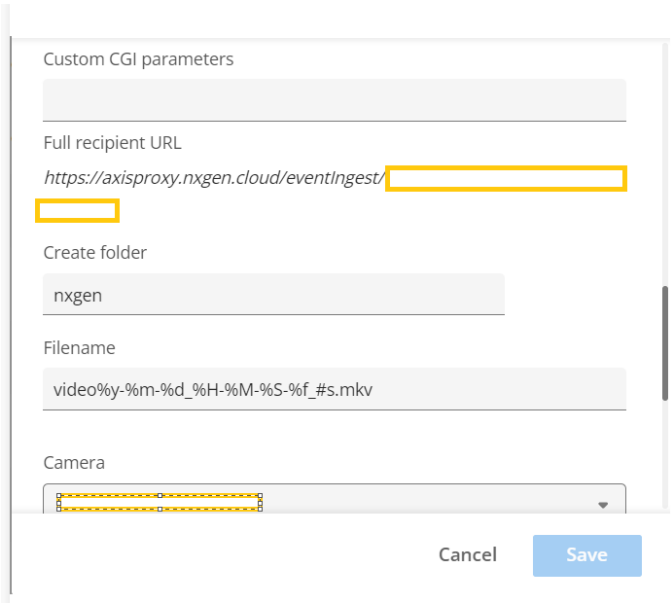
Custom CGI parameters
Full recipient URL
https://axisproxy.nxgen.cloud/eventIngest/
Create folder
nxgen
Filename
video%y-%m-%d_%H-%M-%S-%f_#s.mkv
Camera
Cancel
Save

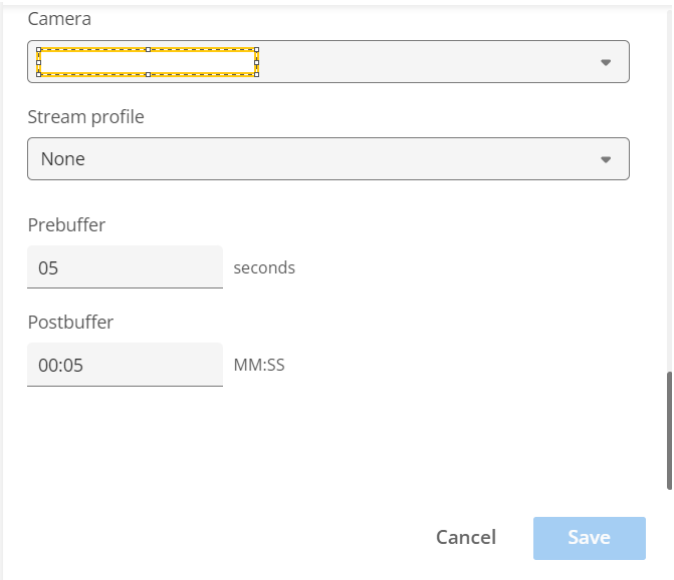

These steps will help you have the Axis IP camera integrated into the Genesis system, allowing you to manage events, configure alerts, and ensure the camera is properly monitored within your security infrastructure. By following these instructions, you will ensure seamless operation and enhanced security through effective event management.