


Always keep cartridge in case  
Do not open cartridge door



Do not drop  
Do not expose to a magnetic field

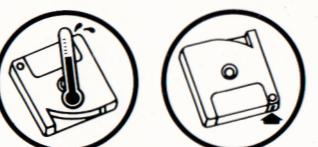

Nonoperating  
-10°C to +60°C  
Stay within  
temperature  
range  
  
"Red" means  
"Write  
Protected"



#### CORRECT USE OF DATA CARTRIDGES

This cartridge is used with the Atari MEGAFILE 44 removable hard disk drive. It is a precision magnetic disk assembly. Please observe the following instructions to insure satisfactory use.

Capacity: 55 Megabytes Unformatted; 44 Megabytes Formatted

#### PRECAUTIONS

- Do not shut off the computer's power to remove the cartridge. If the computer power is off, wait 30 seconds before removing the cartridge. This allows the disk to coast to a stop. Removing the cartridge while the disk is spinning may cause damage to the disk and heads.
- Do not move the unload lever immediately after pushing the stop button. Wait 10 seconds for the red LED to turn off. The red LED off indicates that the disk has stopped spinning.
- Do not drop the cartridge or expose it to hard shocks. Hard shocks can result in damage to the cartridge and subsequent damage to the disk drive.
- Store the data cartridge in its case to help keep it dust free and protected from shock.
- Remove the cartridge before moving the disk drive or computer system to prevent damage to the disk drive.
- Avoid writing on any labels attached to the cartridge with a lead (graphite) pencil.
- Avoid applying any lubricant or cleaner to the cartridge. Do not attempt to clean the disk. This will damage the disk.
- Do not open the cartridge door. This may introduce dust or other contaminants which may damage the disk.
- Remove cartridge from drive after use (Power Off) when operating in a high humidity environment.
- Moisture may condense on the disk when the cartridge is moved from a cold or hot place to room temperature. This will result in damage to the disk. Wait until the cartridge reaches room temperature (one hour minimum) in such cases.
- When changing the cartridge, be sure to update the computer memory with the new cartridge directory data to avoid loss of data.

#### ADDITIONAL INFORMATION

Refer to your Atari MEGAFILE 44 Removable Hard Disk Drive Owner's Manual for instructions on how to load and remove the cartridge.

Refer to your Atari MEGAFILE 44 Removable Hard Disk Drive Owner's Manual for disk drive installation and operating information. If you do not have an owner's manual, contact Atari Customer Support.

#### IMPORTANT NOTICE TO PURCHASERS:

The following is made in lieu of all warranties, expressed or implied: Seller's and Manufacturer's only obligation shall be to replace the product proved to be defective. Neither Seller nor Manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, User shall determine the suitability of the product for his/her intended use. User assumes all risk and liability whatsoever in connection therewith.

Atari, the Atari logo, and MEGAFILE 44 are trademarks or registered trademarks of Atari Corporation.

Copyright © 1989, Atari Corporation, Sunnyvale, CA 94086.  
All rights reserved. Printed in Taiwan. C300626-001 REV.1  
1989 8 CHENG SHEN

ATARI®

