
57. Harness Components Location

A: LOCATION

1. 4 DOOR MODEL

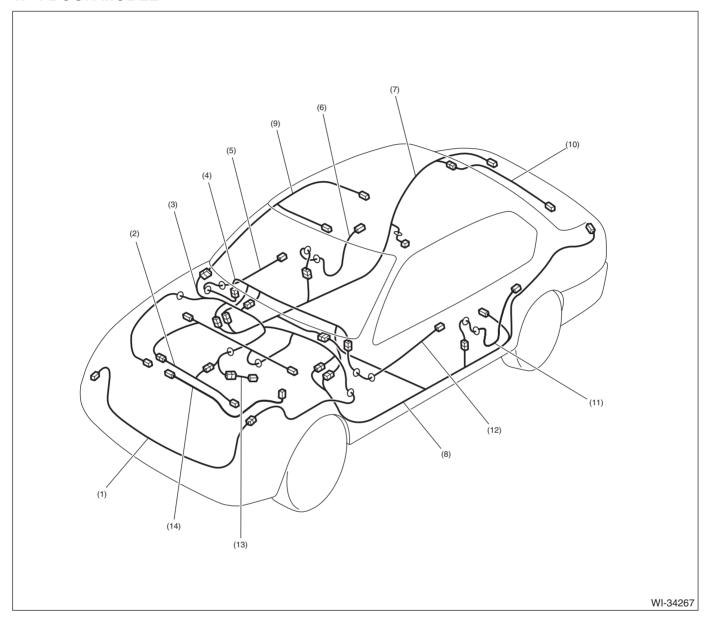


- (1) Front wiring harness
- (2) Engine wiring harness
- (3) Bulkhead wiring harness
- (4) Instrument panel wiring harness
- (5) Front door cord RH
- (6) Rear door cord RH

- (7) Rear wiring harness RH
- (8) Rear wiring harness LH
- (9) Roof cord
- (10) Trunk lid cord
- (11) Rear door cord LH

- (12) Front door cord LH
- (13) Transmission cord
- (14) Generator cord

2. 5 DOOR MODEL/XV MODEL

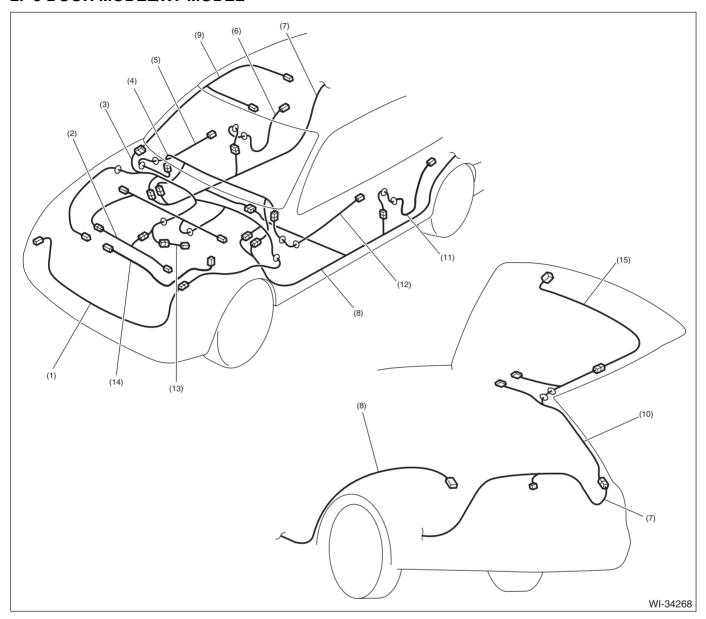

- (1) Front wiring harness
- (2) Engine wiring harness
- (3) Bulkhead wiring harness
- (4) Instrument panel wiring harness
- (5) Front door cord RH
- (6) Rear door cord RH

- (7) Rear wiring harness RH
- (8) Rear wiring harness LH
- (9) Roof cord
- (10) Rear gate cord
- (11) Rear door cord LH

- (12) Front door cord LH
- (13) Transmission cord
- (14) Generator cord
- (15) Rear gate cord