Two-player handheld: reference design (REF-A)

RP2354B, 3.5in 320x480 IPS (ILI9488, SPI), 16 membrane contacts under DS Lite silicone,
PWM audio into an FM8002A, one Li-ion cell on a TP4056 charger with load sharing, ME6211 3V3.

Every sheet is generated from board/design.py by tools/build_sch.py. Edit design.py, not the sheets.

USB_Charger

usb_charger.kicad_sch

USB-C sink, ESD, TP4056 charger, load sharing, battery connector

Power

power.kicad_sch

ME6211 3V3 LDO, power button latch, battery and button sensing

MCU

mcu.kicad_sch

RP2354B (2 MB flash inside), 12 MHz crystal, USB series resistors

MCU_Power

mcu_power.kicad_sch

RP2354B decoupling and its internal 1.1 V switcher

Debug

debug.kicad_sch

SWD and UART connectors, BOOTSEL and RESET buttons

Display

display.kicad_sch

50-pin ZIF connector for the 3.5in IPS panel, AP3156 backlight driver

Audio

audio.kicad_sch

PWM low-pass into an FM8002A bridge amplifier, speaker pads

Buttons

buttons.kicad_sch

16 membrane contacts, one GPIO each


Mechanical: locating holes at positions set by the case; fiducials for assembly.


H1	H2	H3	H4	H5	H6	FID1	FID2	FID3
M2	M2	M2	M2	M2	M2	Fiducial	Fiducial	Fiducial

Sheet: /
File: battler.kicad_sch

Title:

Size: A4 | Date: | **Rev:**
KiCad E.D.A. 10.0.6 | Id: 1/9

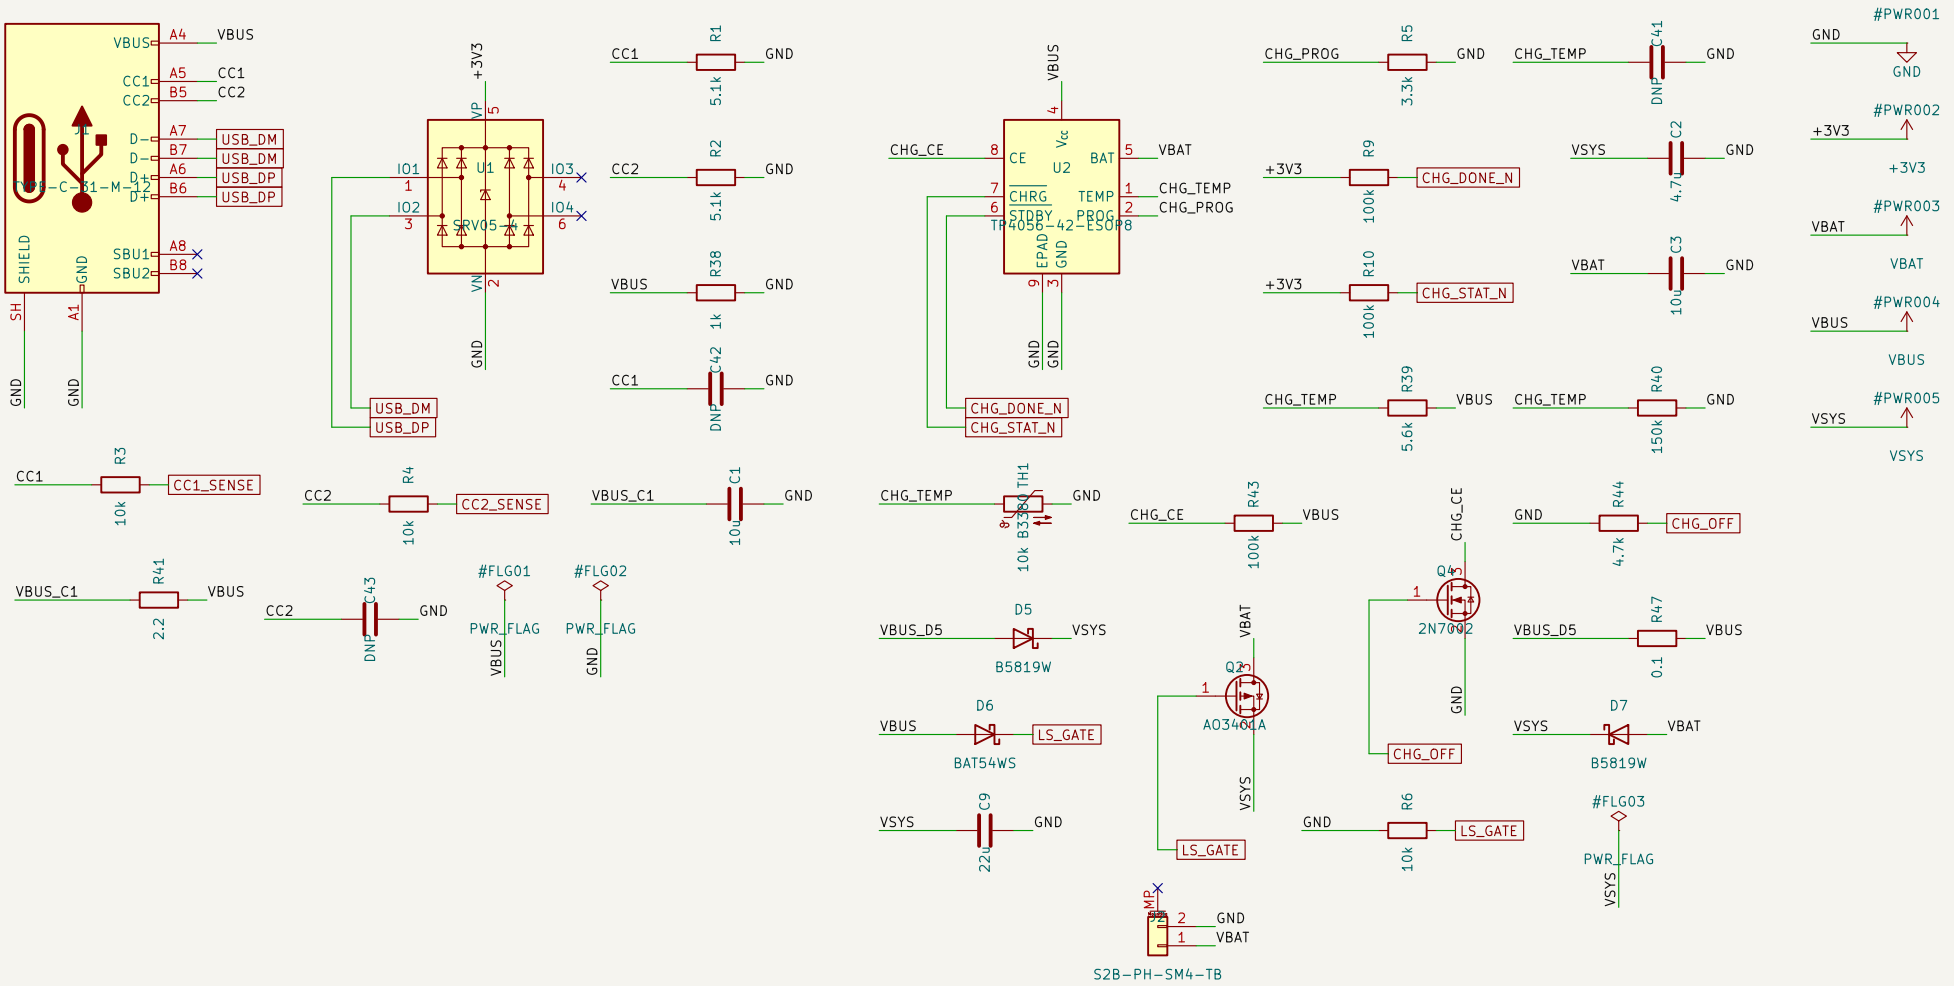

TP4056 charges at 500 mA (R5), from 1 to 46 C (TH1 over the cell). USB feeds the system through D5;
without USB the cell does, through Q2; on an unplug D7 carries VSYS until R38 has drained VBUS and Q2 is on.
CC1/CC2_SENSE let firmware read the source's current offer (dim the backlight on a 500 mA port).
Sheet: /USB_Charger/
File: usb_charger.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 10.0.6
Id: 2/9



J5 SWD and J6 UART follow the Raspberry Pi 3-pin debug connector pinout (Debug Probe cable).

SW18 BOOTSEL and SW19 RESET sit under pinholes in the lid.

Sheet: /Debug/	
File: debug.kicad_sch	
Title:	
Size: A4	Date:
KiCad E.D.A. 10.0.6	Id: 3/9

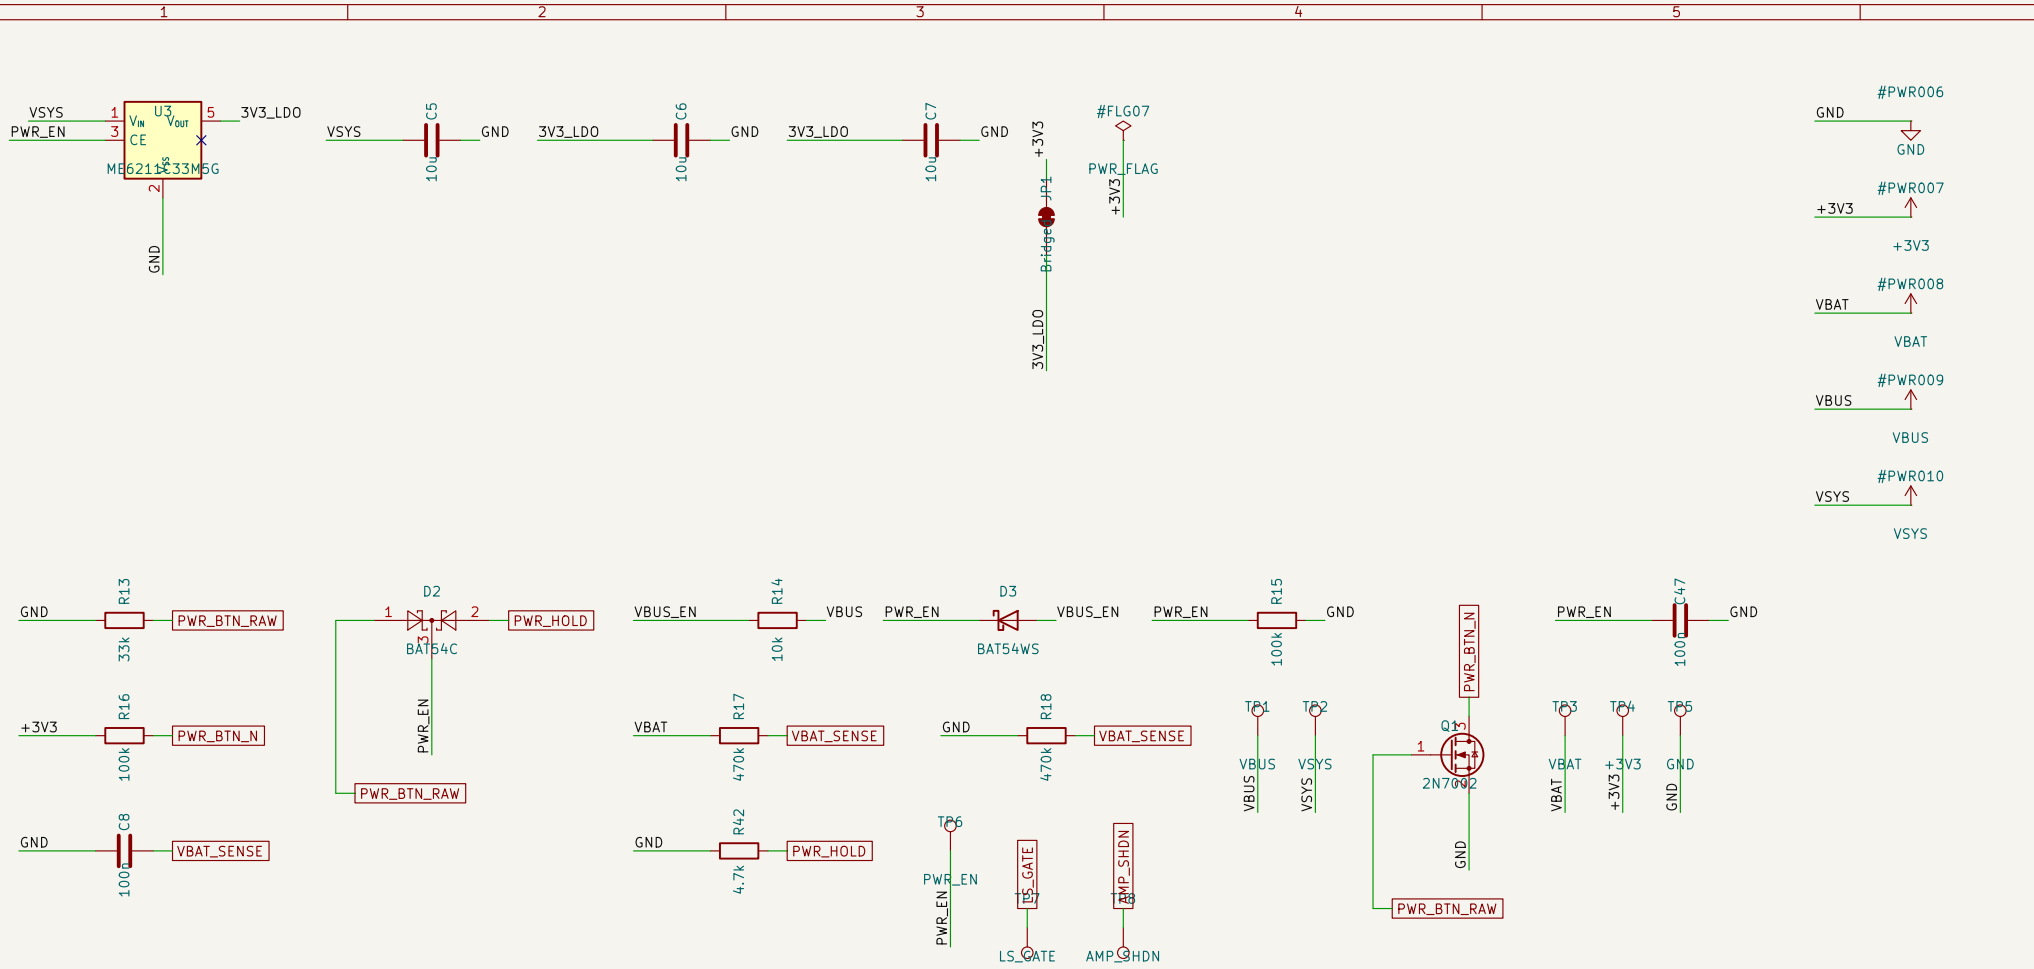

Power: the button (seat 1's Y contact), the MCU (PWR_HOLD) or USB raise PWR_EN. Releasing it with PWR_HOLD low turns the device off. A reset drops PWR_HOLD, so a crash turns it off.

Q1 lets the MCU see the button (PWR_BTN_N low = pressed) without exposing a pin to VSYS.

Sheet: /Power/
File: power.kicad_sch

Title:


Size: A4 | Date: | **Rev:**


KiCad E.D.A. 10.0.6 | Id: 4/9


EastRising ER-TFT035IPS-6 (ILI9488, 4-wire SPI). Its 50-pin FPC folds under the panel into J3 (ZIF).


J3 pin j is panel pin 51 − j. Unused bus pins as the datasheet says: DB0-17 and RGB low, RD and IM2-0 high.


U6 AP3156: three sinks per cathode pin (LED_K1, LED_K2), 20 mA per LED at most, set over SDI (1-wire).

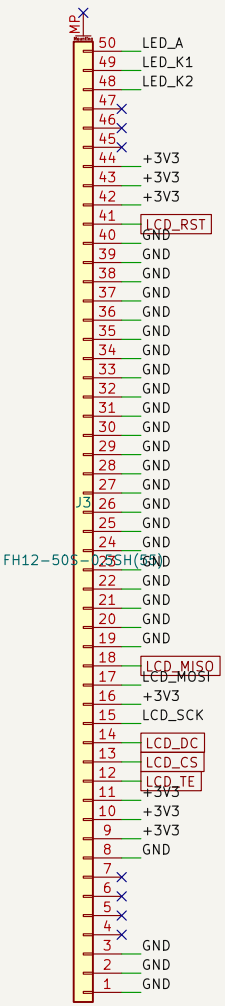

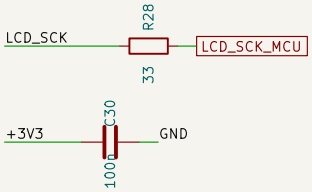

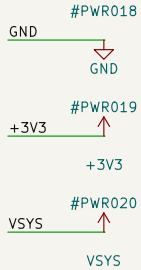


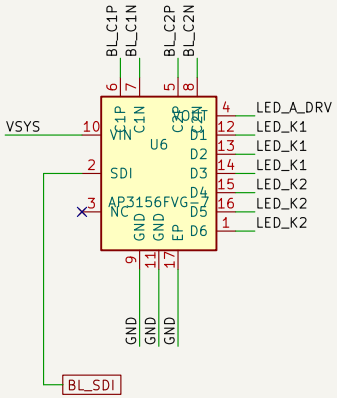


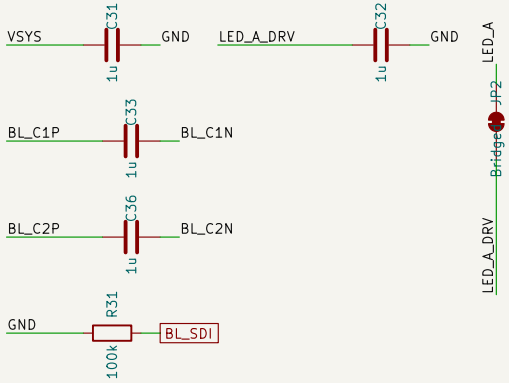

Sheet: /Display/		
File: display.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 5/9

Core from Raspberry Pi's RP2350B minimal design (MIT), fitted with an RP2354B: its 2 MB flash is inside the package, so only QSPI_SS (the BOOTSEL strap, R23 pull-up) is wired outside.

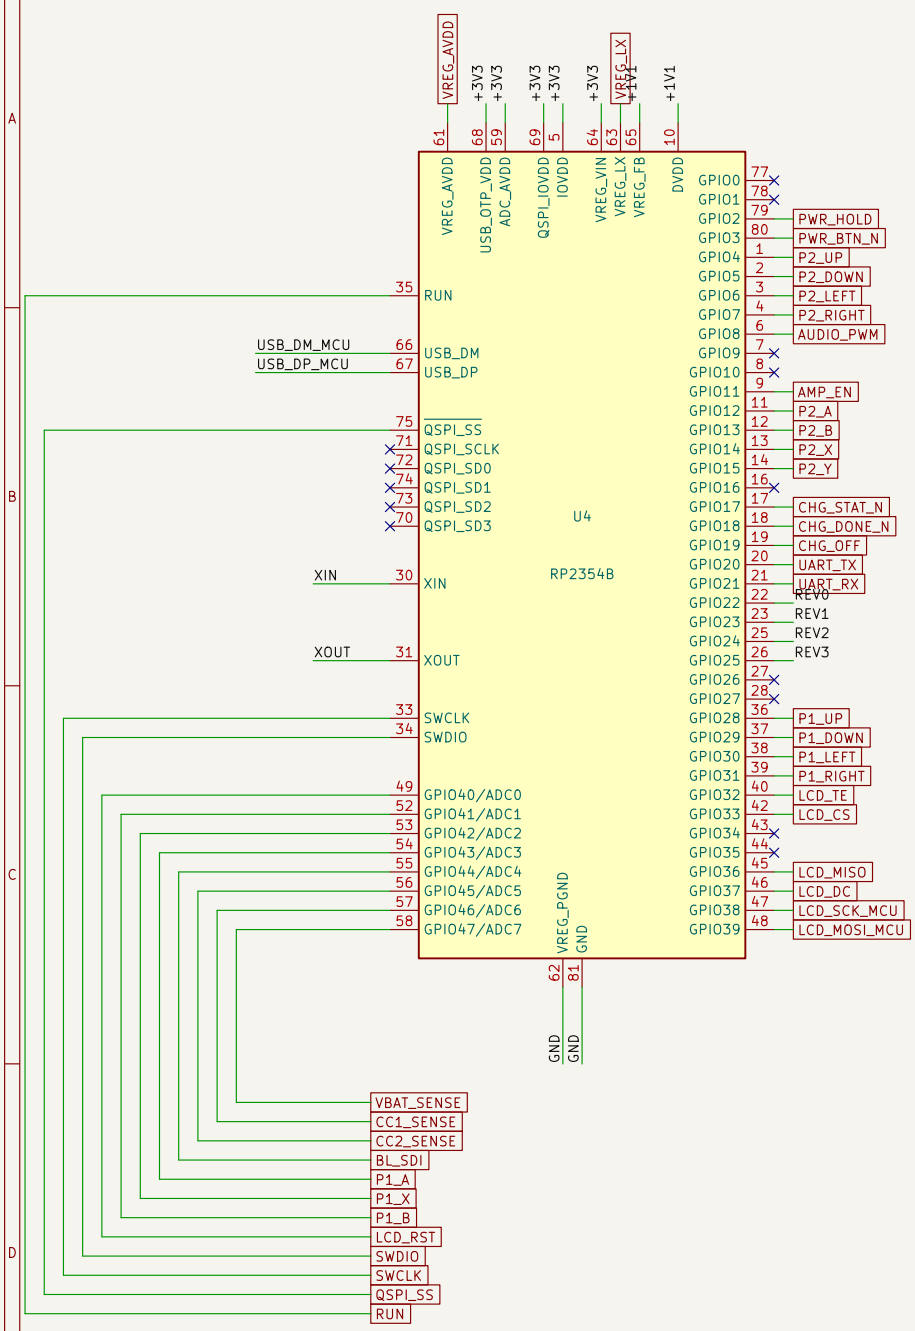


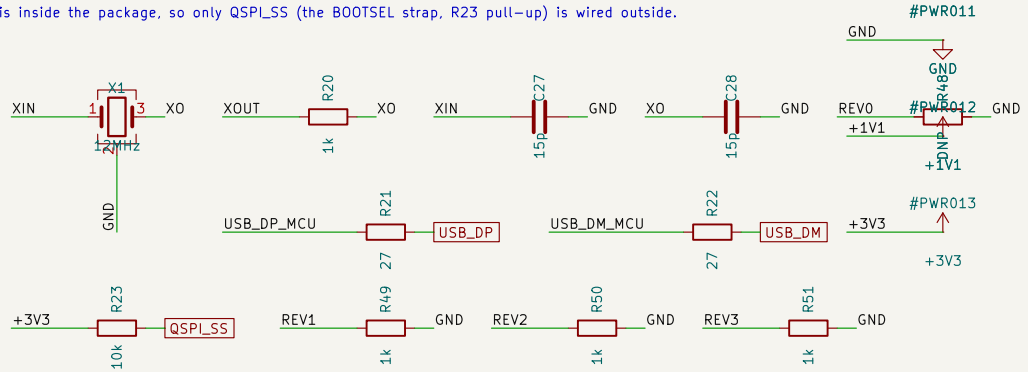

Sheet: /MCU/
File: mcu.kicad_sch


Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 6/9

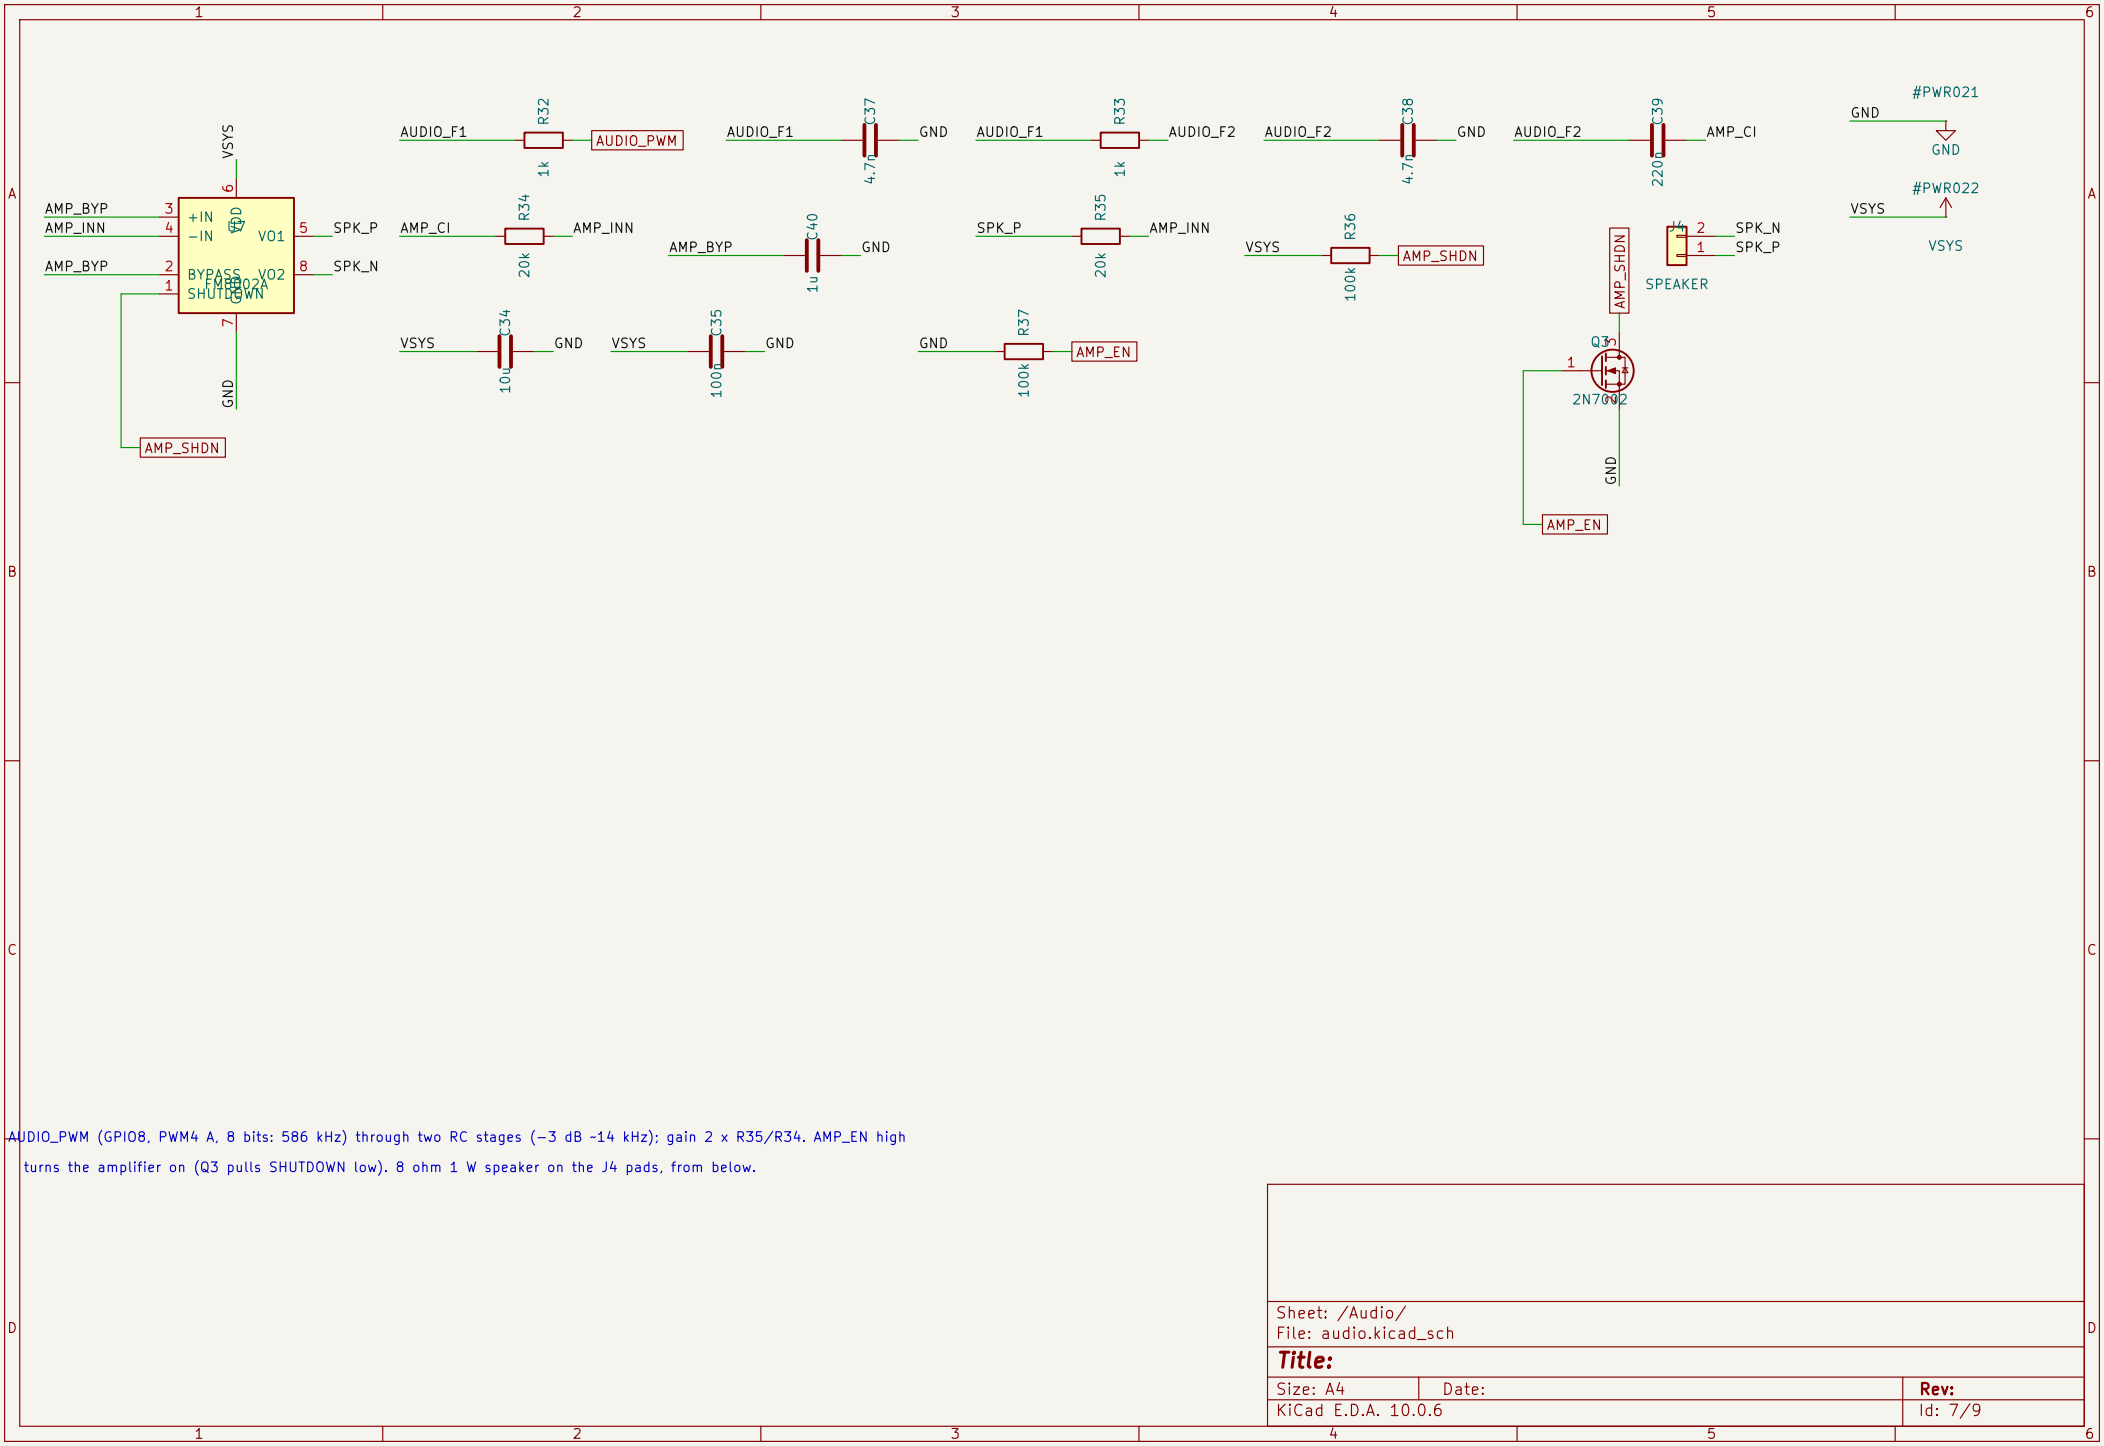


AUDIO_PWM (GPIO8, PWM4 A, 8 bits: 586 kHz) through two RC stages (−3 dB ~14 kHz): gain 2 x R35/R34. AMP_EN high turns the amplifier on (Q3 pulls SHUTDOWN low). 8 ohm 1 W speaker on the J4 pads, from below.


Sheet: /Audio/		
File: audio.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 7/9

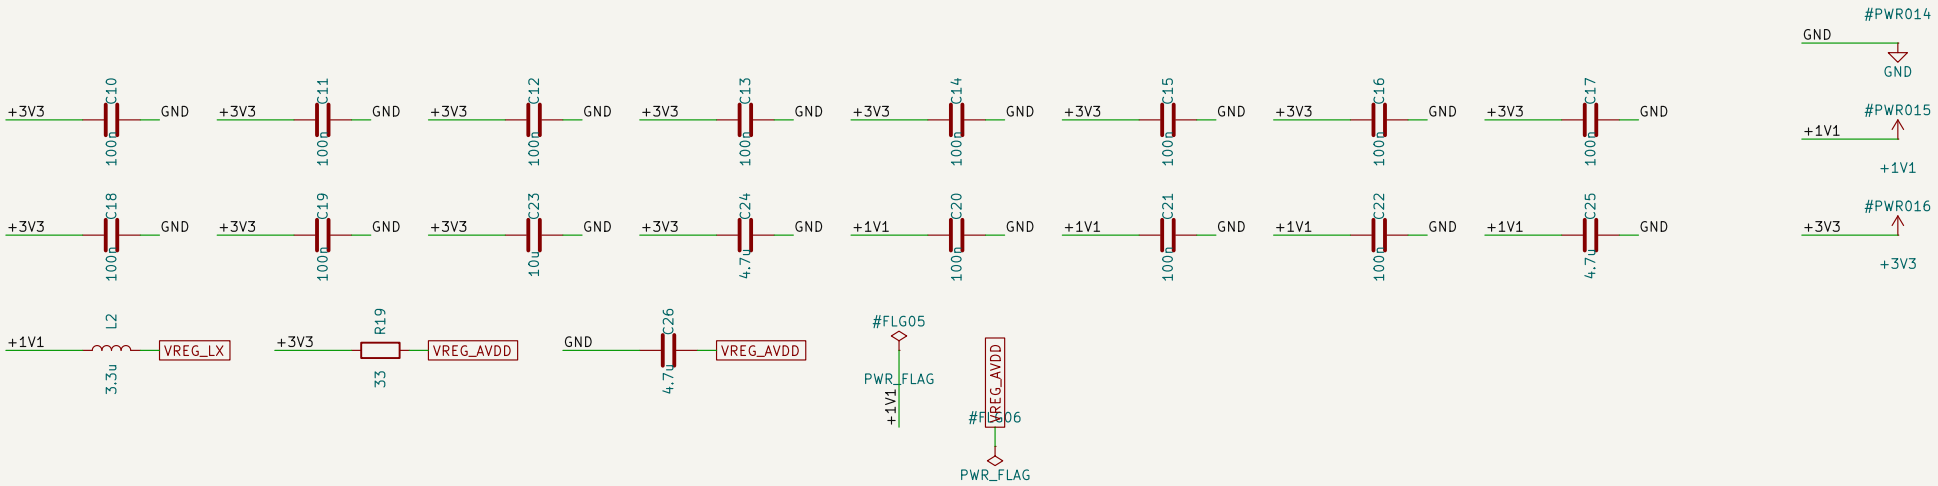

RP2354B supply, as in Raspberry Pi's minimal design: 100 nF at every IOVDD, DVDD, ADC, OTP and QSPI pin, 4.7 uF at the regulator's input and output, and L2 (a polarity-marked 3.3 uH inductor, fit as drawn).

Sheet: /MCU_Power/	
File: mcu_power.kicad_sch	
Title:	
Size: A4	Date:
KiCad E.D.A. 10.0.6	Id: 8/9

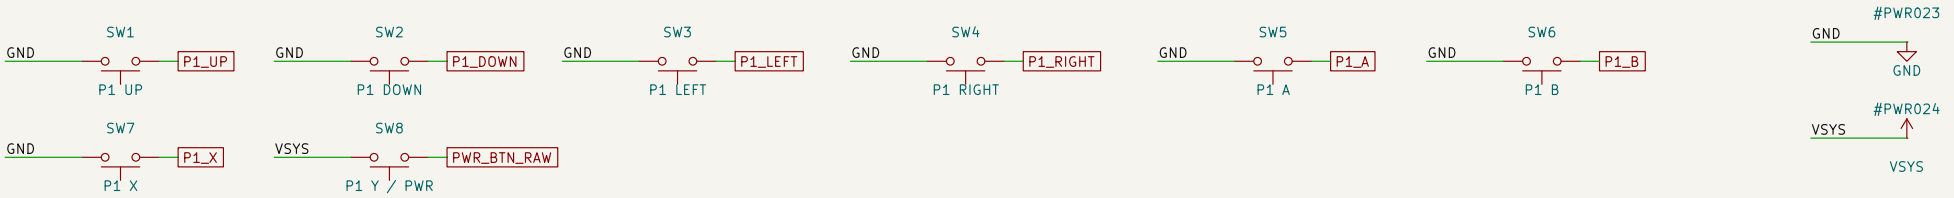

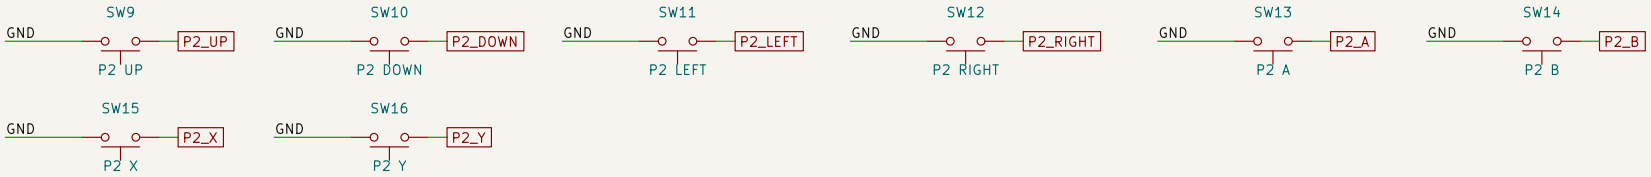

Bare ENIG contacts (DSL_button_4ring) under DS Lite silicone; the firmware enables pull-ups.

Sheet: /Buttons/		
File: buttons.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 9/9