



APsystems EZ1D Local API User Manual

Version List:

Version	Author	Date	Description
V1.0	APsystems	2024/03/22	First Document

Chapter

APsystems EZ1D Local API	1
User Manual	1
1. Overview	4
2. How to request Local API	4
3. API	8
3.1 Get EZ1D Device Information	8
3.2 Get Current Output Data of EZ1D Inverter Device	8
3.3 Get Max Power of EZ1D Inverter Device	9
3.4 Set Max Power of EZ1D Inverter Device	10
3.5 Get Alarm Information of EZ1D Inverter Device	11


1. Overview

Welcome to EZ1D Local API for developer portal.


EZ1D could switch to Local Mode, and user could request device data by Local API by http.

2. How to request Local API


- Use AP EasyPower APP to switch EZ1D Device to Local Mode.
 1. Connect to the EZ1D device by Bluetooth
 2. Into Setting Page

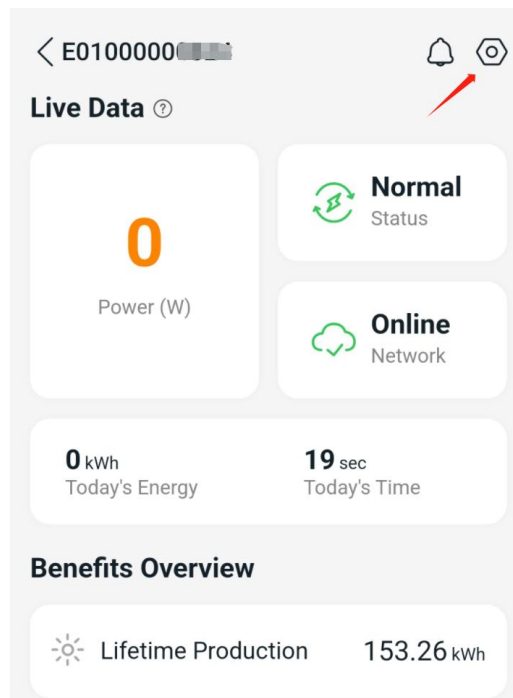


3. Into “Local Mode” Page

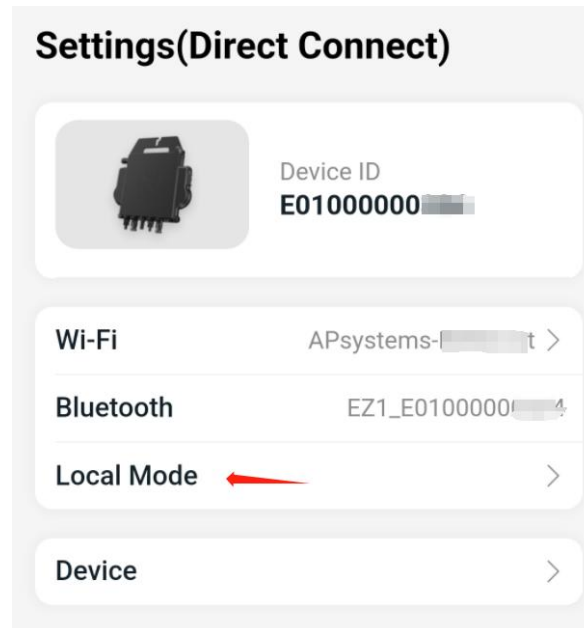

4. Enable “Local Mode”

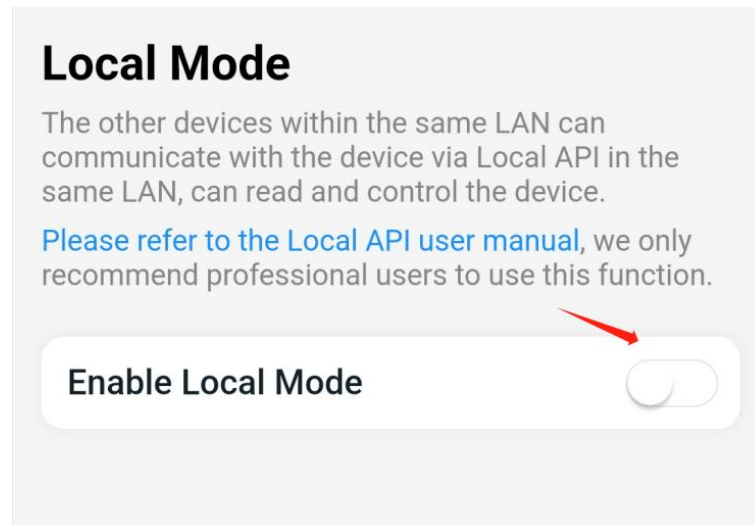

5. Select Enable Level of Local Mode

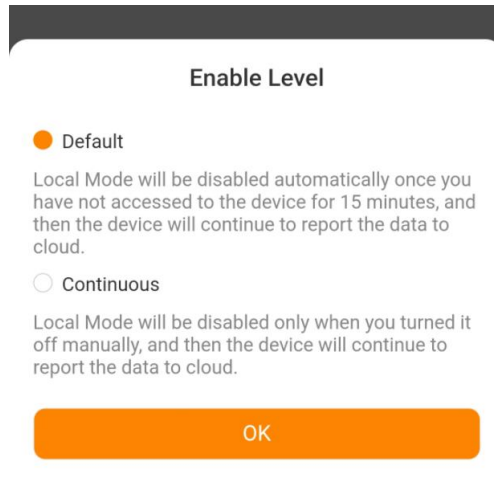

Enable Level

☒ **Default**


Local Mode will be disabled automatically once you have not accessed to the device for 15 minutes, and then the device will continue to report the data to cloud.

☐ **Continuous**

Local Mode will be disabled only when you turned it off manually, and then the device will continue to report the data to cloud.

OK

6. Get IP address of EZ1D device

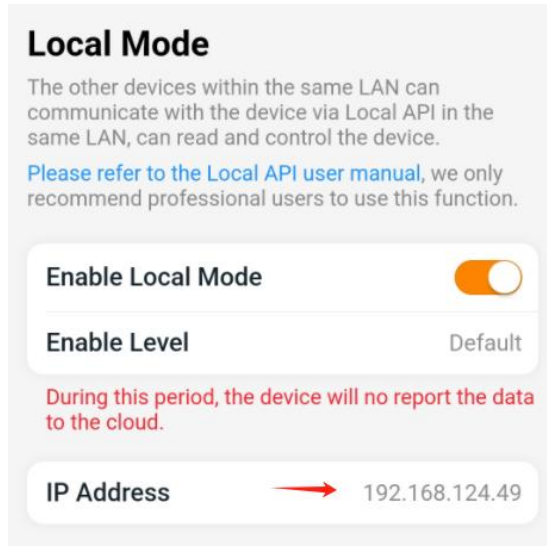

Local Mode

The other devices within the same LAN can communicate with the device via Local API in the same LAN, can read and control the device.

Please refer to the [Local API user manual](#), we only recommend professional users to use this function.

Enable Local Mode ☒

Enable Level Default

During this period, the device will no report the data to the cloud.

IP Address → 192.168.124.49

7. Disable Local Mode

Local Mode

The other devices within the same LAN can communicate with the device via Local API in the same LAN, can read and control the device.

Please refer to the [Local API user manual](#), we only recommend professional users to use this function.

Enable Local Mode



Enable Level


Default

During this period, the device will no report the data to the cloud.

IP Address

192.168.124.49

- After EZ1D device switch to Local Mode, EZ1D device will startup the internal Http Server, the PC, mobile phone or gateway which are in the same LAN could request device data by Local API .**When enable Local Mode , the EZ1D device will no report the data to the cloud.**
- The IP address of Http Server is the EZ1D device's IP, and the Port is 8050. Below is the example to request Local API by Postman:

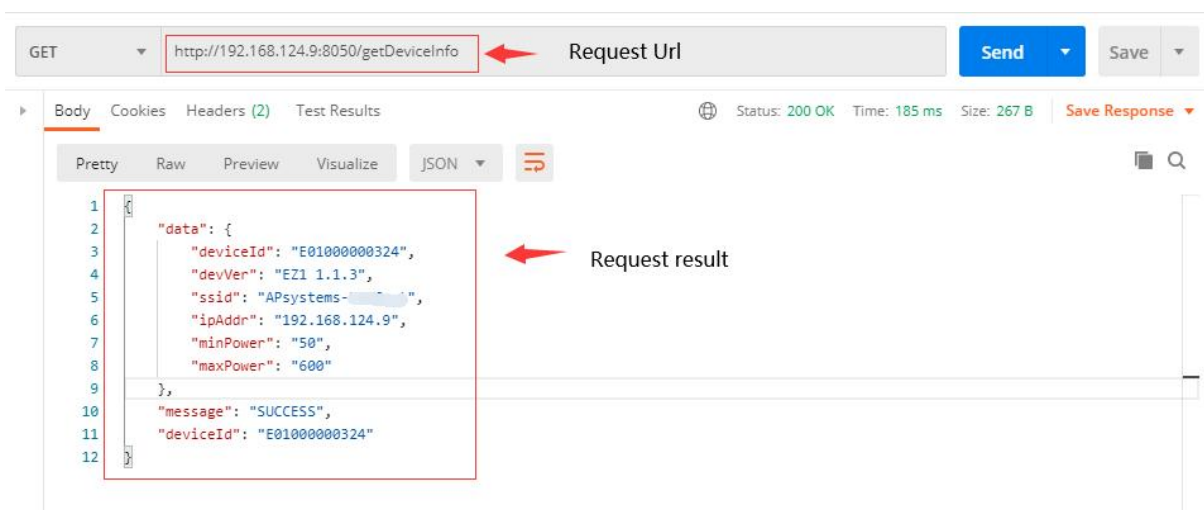

3. API

3.1 Get EZ1D Device Information

- **URL**

http://{ip}:8050/getDeviceInfo

- **Method**

GET

- **Description**

The request will return the EZ1D Device Information.

- **Response**

Code	Example	Model Description
0	<pre> { "data": { "deviceId": "F04000000001", "devVer": "EZ1D 1.0.0", "ssid": "ssidName", "ipAddr": "192.168.1.2", "minPower": "30", "maxPower": "800" }, "message": "SUCCESS", "deviceId": "F04000000001" } </pre>	- data(object) * deviceId(string) * devVer(string) Device Version * ssid(string) The SSID that device connected * ipAddr(string) The IP address of device * minPower(string) The minimum power that device could set.Unit W. * maxPower(String) The maximum power that device could set .Unit W. - message(string) SUCCESS or FAILED - deviceId(String)

3.2 Get Current Output Data of EZ1D Inverter Device

- **URL**

http://{ip}:8050/getOutputData

● Method

GET

● Description

The request will return the current real -time output data of an EZ1D device .Such as Power and Output Energy.

● Response

Code	Example	Model Description
0	<pre>{ "data": { "p1": 0, "e1": 0, "te1": 0, "p2": 0, "e2": 0, "te2": 0, }, "message": "SUCCESS", "deviceId": "F04000000001" }</pre>	- data (object) * p1(float) Power-Channel1. Unit W. * e1(float) Energy generation after startup - Channel1. Unit kWh. * te1(float) Energy generation lifetime-Channel1. Unit kWh. * p2(float) Power-Channel2. Unit W. * e2(float) Energy generation after startup-Channel2. Unit kWh. * te2(float) Energy generation lifetime-Channel2. Unit kWh. - message(string) SUCCESS or FAILED - deviceId(String)

3.3 Get Max Power of EZ1D Inverter Device

● URL

http://{ip}:8050/getDefaultMaxPower

● Method

GET

- **Description**

This request will return the device max power

- **Response**

Code	Example	Model Description
0	<pre>{ "data": { "maxPower": "1600" }, "message": "SUCCESS", "deviceId": "F04000000001" }</pre>	- data (<i>object</i>) * maxPower (<i>string</i>) The Max Power of the device .Unit W. - message(<i>string</i>) SUCCESS or FAILED - deviceId(<i>String</i>)

3.4 Set Max Power of EZ1D Inverter Device

- **URL**

http://{ip}:8050/getDefaultMaxPower?p=600

- **Method**

GET

- **Description**

This request will set the device max power

- **Parameters**

Parameter	Required	Type	Description
p	Y	string	The device max power to be set

- **Response**

Code	Example	Model Description
0	<pre>{ "data": {</pre>	- data(<i>object</i>) * MaxPower (<i>string</i>)

```

    "maxPower": "1600"
  },
  "message": "SUCCESS",
  "deviceId": "F04000000001"
}

```

The Max Power of the device to be set .Unit W.

- message(*string*)
SUCCESS or FAILED
- deviceId(*String*)

3.5 Get Alarm Information of EZ1D Inverter Device

- **URL**

http://{ip}:8050/getAlarm

- **Method**

GET

- **Description**

The request will return Alarm Information of EZ1D device.

- **Response**

Code	Example	Model Description
0	<pre> { "data": { "og": "0", "isce1": "0", "isce2": "0", "oe": "0", }, "message": "SUCCESS", "deviceId": "F04000000001" } </pre>	- data(<i>object</i>) * og(<i>string</i>) Off grid. 0: normal 1: alarm * oe(<i>string</i>) Output fault. 0: normal 1: alarm * isce1(<i>string</i>) DC 1 Short Circuit Error 0: normal 1: alarm * isce2(<i>string</i>) DC 2 Short Circuit Error 0: normal 1: alarm - message(<i>string</i>) SUCCESS or FAILED

		- deviceId(<i>String</i>)
--	--	-----------------------------

- **Alarm processing suggestions**

Off grid : Check whether the AC connection of the inverter is normal.

Output fault : Check whether the AC connection is normal.

Isce1 :Check whether DC 1 connection is properly connected,especially that using extension line or swap with the normal channel to confirm the working status.

Isce2 :Check whether DC 2 connection is properly connected,especially that using extension line or swap with the normal channel to confirm the working status.