UHPPOTE Desk

User manual

Web application to manage UHPPOTE UT0311-L0x access controllers: doors, cards, permissions, time profiles, real-time monitoring, event history and attendance.

Access control · Live monitor · Time profiles · Attendance · Multi-operator

EN · IT · ES · FR · DE

Version 1.0.0 · October 2026

github.com/alexbn71/UHPPOTE-Desk

Contents

Part 1 — Understanding UHPPOTE Desk

1 What UHPPOTE Desk is
2 How the system works
3 Basic concepts
4 Operators and roles
5 The user interface
6 Getting started

Part 2 — Operations

7 Dashboard
8 Monitor
9 Event history
10 Attendance

Part 3 — Registry

11 People
12 Cards
13 Permissions
14 Departments and zones

Part 4 — Configuration

15 Controllers
16 Doors
17 Time profiles
18 Scheduled tasks
19 Synchronisation

Part 5 — Administration

20 Operators
21 Audit log
22 System
23 Change password

Part 6 — Reference

24 Event reasons
25 Door modes and access rules
26 Troubleshooting
27 Glossary

> **About this manual**
>
> The screenshots were taken from a demonstration installation with one simulated 4-door controller and invented people. Your names, numbers and dates will differ. Installation (Docker, network, environment variables) is covered in a separate guide, `docs/DOCKER.md` in the project repository.

> **Acknowledgements**
>
> UHPPOTE Desk is built on the protocol knowledge published by the open-source **uhppoted** project (codeberg.org/uhppoted). UHPPOTE Desk is an independent project, not affiliated with uhppoted or with the controller manufacturer.

PART 1

Understanding UHPPOTE Desk

What the application does, how it talks to the access controllers and the few ideas you need before using it.


1 · What UHPPOTE Desk is

UHPPOTE Desk is a **web application** to manage UHPPOTE **UT0311-L0x** access controllers (1, 2 or 4 doors; this manual uses the 4-door UT0311-L04). It replaces the Windows program supplied with the controllers ("Access Control", N3000) with a modern application that:

- runs on a server or NAS (normally as a Docker container) and is used from any **browser** — PC, tablet or phone — without installing anything;
- is used by **several operators at the same time**, each with a role (administrator, operator, read-only) and, if needed, restricted to some areas of the building;
- keeps people, cards and permissions in its own **database** and automatically sends every change to the controllers;
- receives the swipes and alarms **in real time**, keeps the full **event history** and computes **attendance** (hours worked, late arrivals, absences);
- is available in **English, Italian, Spanish, French and German**; each user chooses the language.

2 · How the system works

An access control installation is made of three parts: the **controllers** mounted near the doors, the **server** running UHPPOTE Desk and the **browsers** of the operators.

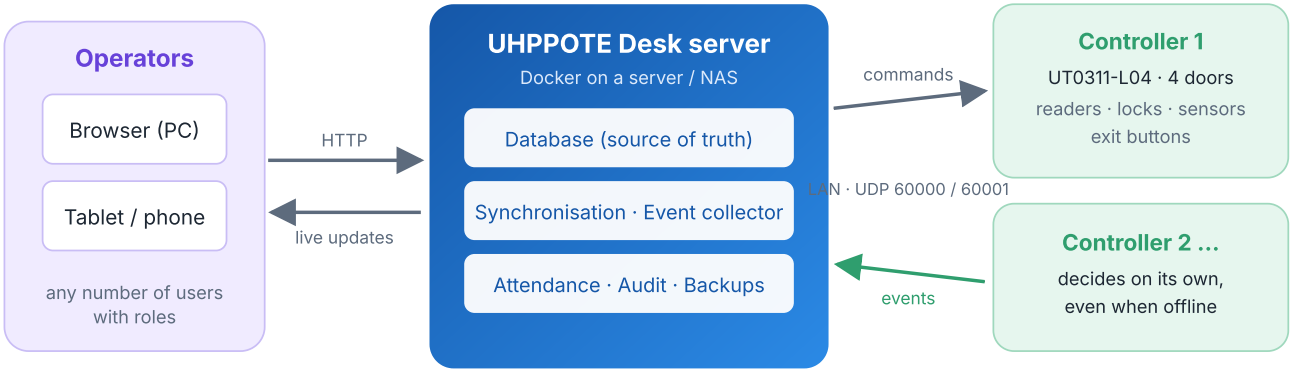

- **The controllers decide.** When a card is swiped, the controller itself checks whether that card may open that door at that time, and opens the lock. It does not ask the server, so doors keep working even if the server or the network is down.

- **The server is the reference.** People, cards, permissions, time profiles and settings are kept in the UHPPOTE Desk database. Every change made in the application is sent straight away to the controllers that are online. A controller that was offline is brought up to date with a Synchronisation.
- **Events flow back.** Every swipe, door opening or alarm is recorded in the controller's memory and sent to the server. The server stores it in the event history and shows it live. If the network was down, the missing events are downloaded from the controller as soon as it is back: none is lost.

> **Why this matters**
> Do not change the controllers with other programs (the original Windows software or the controller's web page) while UHPPOTE Desk manages them: the application would undo those changes at the next synchronisation, because its database is the reference.

3 · Basic concepts

Controller

The electronic board that manages 1, 2 or 4 doors. It is identified by its **serial number** (9 digits on the S/N label) and reached over the LAN by its IP address. It stores up to tens of thousands of cards and events.

Door

Each controller output: a card **reader**, an electric **lock** (relay), optionally a **door sensor** (open/closed) and an **exit button**. In the application a door has a name, an operating mode and an opening time.

Person

Someone who passes through the doors: employee code, name, department, validity period, optional keypad PIN, photo and attendance shift.

Card

A proximity card or key fob. Its **number** has 8 digits in Wiegand-26 format: facility code × 100000 + card code, for example `10058400` = facility 100, code 58400. A card can be assigned to a person, or registered as free.

Permission

The right of a person to open a door: **always**, or only within a **time profile**. Permissions belong to the person and apply to all of their cards.

Time profile

A time window (days of the week, up to 3 time intervals, validity dates) numbered 2–254. It can be linked to another profile to extend it, e.g. weekdays + Saturday morning.

Event

Anything the controller records: card swipes (granted or denied, with the reason), door opened/closed, exit button, alarms, power on, remote opening.

Synchronisation

Aligning a controller with the database. It happens automatically for every change; the Synchronisation page checks and repairs differences (e.g. after a long offline period).

Zone and department

Zones group controllers (buildings, floors) and can restrict what an operator may command. **Departments** organise people and filter attendance reports.

Attendance

Swipes on readers flagged for attendance are used as clock-in/clock-out punches. With shifts, holidays and leave the application computes hours worked, overtime and late arrivals.

How an access is decided

When a card is swiped on a door, the controller grants access only if **all** of these are true; otherwise it denies access and records the reason (see Event reasons):

1. the card is stored on the controller (a card of an inactive person, or a lost or disabled card, is removed from the controllers);
2. today is within the validity period of the card holder;
3. the person has a permission on that door — always, or with a time profile that includes the current day and time;
4. the door rules allow it: door mode, interlock, anti-passback, first card, and the PIN when the reader has a keypad.

4 · Operators and roles

Everybody who uses the application logs in with their own **operator** account. Each operator has one of three roles. Administrators can also restrict an operator to some **zones**: remote door opening and synchronisation are then allowed only on the controllers of those zones.

What the operator can do	Read-only	Operator	Administrator
See dashboard, monitor, event history, attendance reports, people, cards, permissions, controllers, doors, time profiles, tasks, system information	✓	✓	✓
Export events and attendance to CSV	✓	✓	✓
Create and edit people, cards, photos, permissions; import people from CSV; departments	—	✓	✓
Open doors remotely	—	✓	✓
Attendance: shifts, holidays, leave, manual punches	—	✓	✓
Compare and align cards, synchronise the time, download events	—	✓	✓
Controllers (add, network, advanced settings, reset), doors, time profiles, scheduled tasks, zones, full synchronisation	—	—	✓
Operators, audit log, backups	—	—	✓

Pages and buttons that a role cannot use are hidden or disabled. Every change and every command sent to a controller is recorded in the Audit log with the name of the operator.

5 · The user interface

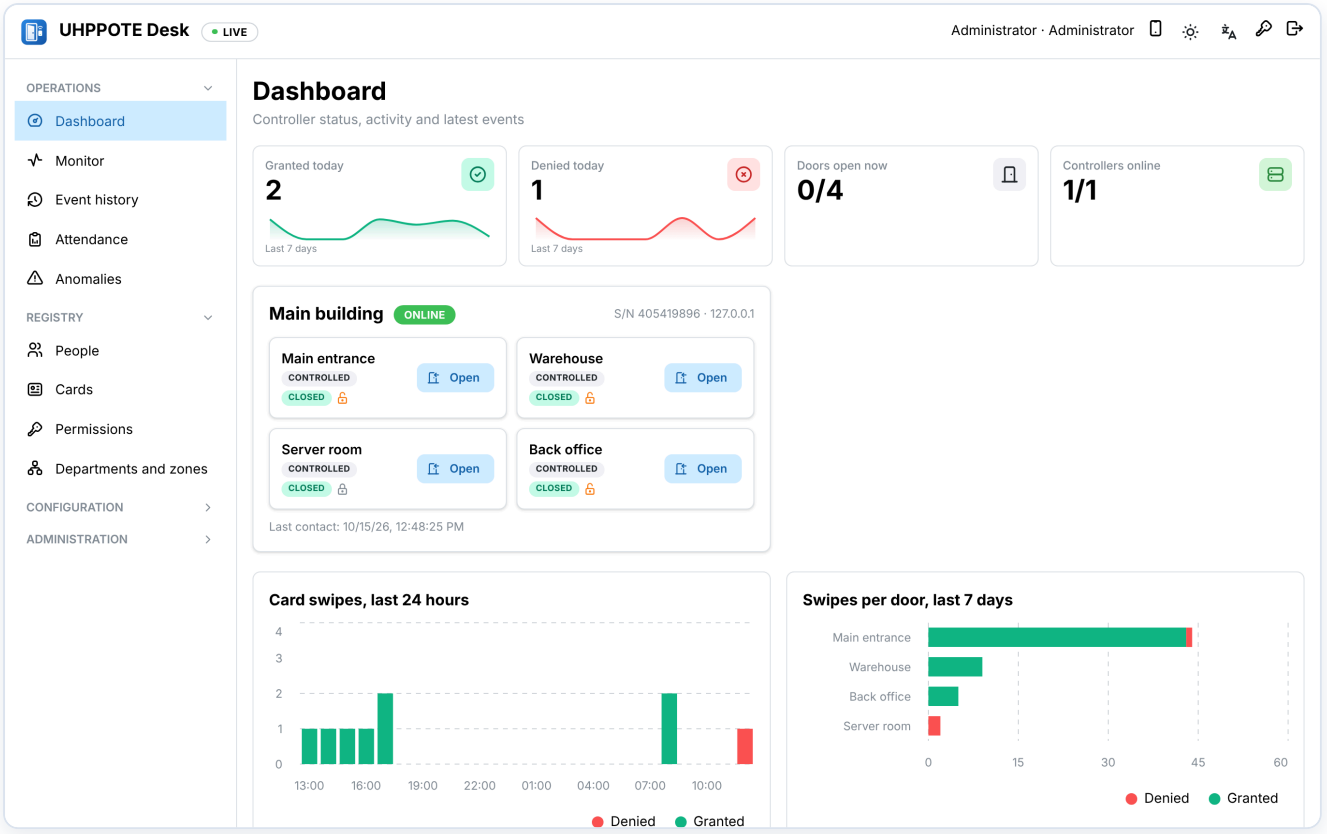


Figure 1 — The main window: header at the top, navigation on the left, the selected page on the right.

Header

- **LIVE badge** — green when the browser receives real-time updates from the server (events, door states, synchronisation progress). It turns red, **Offline**, if the connection to the server is lost; it reconnects by itself. It refers to the connection between your browser and the server, not to the controllers.
- **User name and role** of the logged-in operator.
- **Language** (文A icon) — English, Italiano, Español, Français, Deutsch. The choice is remembered by the browser; on the first visit the browser language is used.
- **Change password** (key icon) and **Log out**.

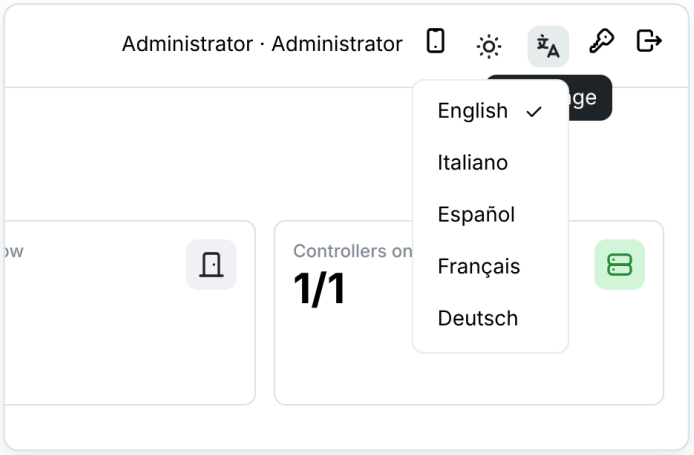


Figure 2 — The language menu.

Navigation

The menu on the left is divided into four groups, which are also the parts of this manual:

Group	Pages	Used for
OPERATIONS	Dashboard, Monitor, Event history, Attendance	day-to-day supervision
REGISTRY	People, Cards, Permissions, Departments and zones	who can go where
CONFIGURATION	Controllers, Doors, Time profiles, Scheduled tasks, Synchronisation	hardware and rules
ADMINISTRATION	Operators, Audit log, System	users and maintenance

Messages appear in the top-right corner: green for completed operations, red for errors. A yellow message **Saved, but not sent to every controller** means the change is in the database but some controller was unreachable; it will be aligned at the next synchronisation.

6 · Getting started

Logging in

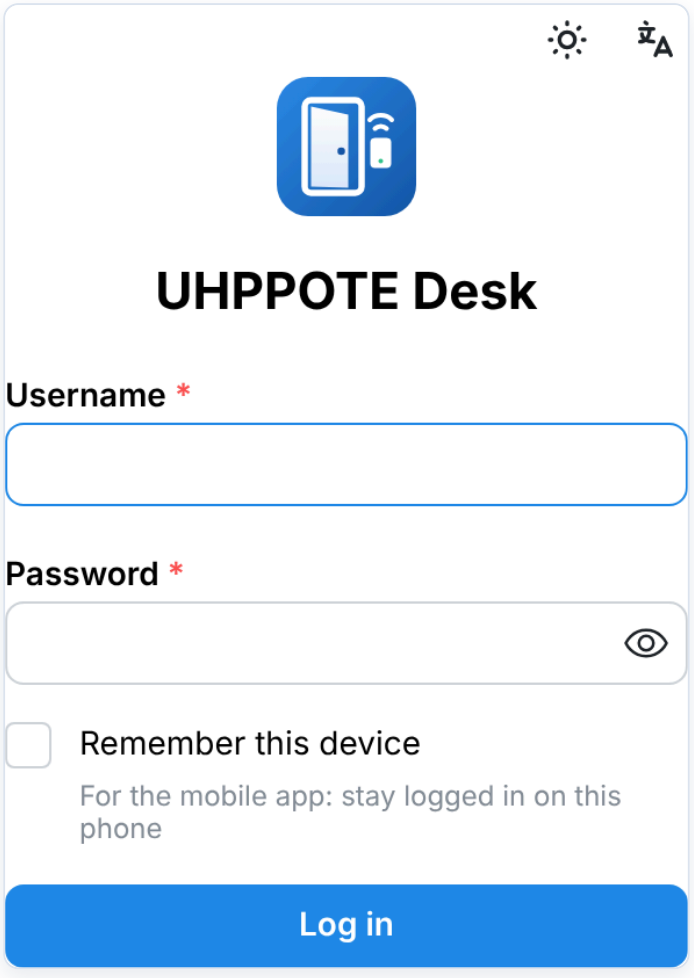


Figure 3 — The login page.

Open the address of the server in the browser (for example `http://192.168.1.10:8080`) and log in. The first administrator is `admin`:

- if the server was installed with the `ADMIN_PASSWORD` variable, use that password. It can be changed only by changing the variable and restarting the server;
- otherwise a temporary password was generated on the first start and written in the server log. You are asked to choose a new password immediately.

After several wrong passwords the account is blocked for a few minutes. Sessions expire after some hours of use (12 by default).

First configuration — checklist

1. **Controllers** → **Search network**: find the controllers, add them and give them a name (chapter 15). If a controller has a factory IP address outside your network, change it from its page.
2. **Doors**: give each door a meaningful name, check mode and opening time, and flag the readers to be used for attendance (chapter 16).
3. **Time profiles**: create the time windows you need, e.g. "Office hours" (chapter 17). Permissions valid "always" do not need one.
4. **Departments and zones**: create the organisation of the company and, optionally, the zones of the building (chapter 14).
5. **People**: create them one by one or import a CSV file; assign cards and permissions (chapter 11). You can read the number of a new card simply by swiping it on any reader.
6. **Operators**: create an account for every user of the application with the right role (chapter 20).
7. Check on the **Monitor** that swipes appear in real time. If they do not, see Troubleshooting.

> **Tip**
> Before the hardware arrives you can try everything with the controller simulator included in the Docker image (see `docs/DOCKER.md`, "Trying the app without a controller").

PART 2

Operations

Day-to-day supervision: controller status, live swipes, event history and attendance.

OPERATIONS

7 · Dashboard

The first page after logging in. For every controller it shows a panel with:

- the name, the **Online**/**Offline** state, serial number and IP address, and the time of the last contact. If the controller's clock is wrong by more than a few seconds the drift is shown (the time is corrected automatically);
- a tile for every active door with its **mode** (Controlled, Normally open, Normally closed), the **door sensor** state (Open/Closed) and the **lock** icon, orange when the relay is active (lock released);
- the **Open** button to open the door remotely (operators and administrators): after the confirmation the lock is released for the opening time of the door, and a "Remote opening" event is recorded;
- red badges for **Fire alarm** or **Forced lock** when those inputs of the controller are active.

Below, **Latest events** lists the most recent events of all controllers; denied accesses are highlighted in red. **Open monitor** goes to the live monitor.

The dashboard of Figure 1 shows a typical day: a remote opening, a door opened and closed, an exit button and a card that is not registered (*Card 10065001 — No access rights*).

OPERATIONS

8 · Monitor

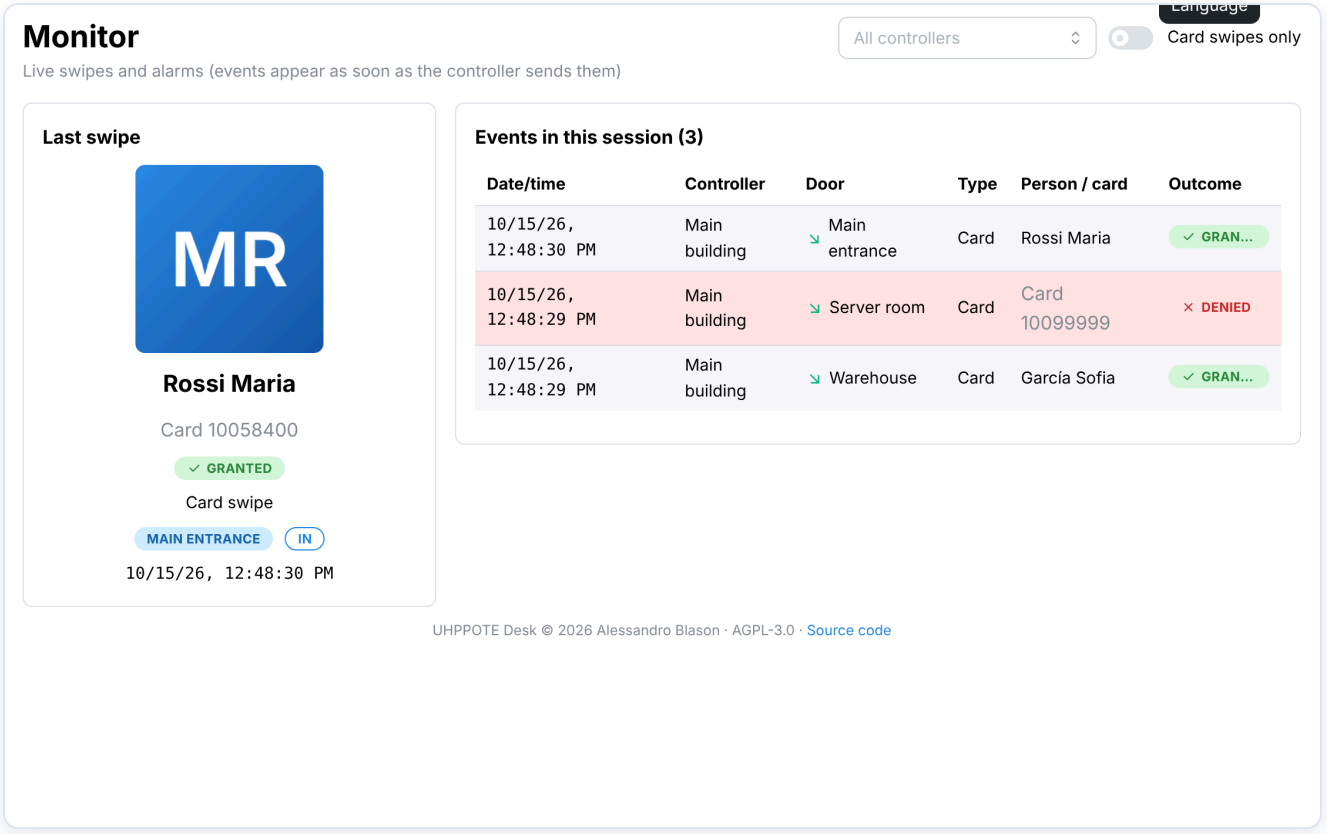


Figure 4 — Live monitor: the last swipe with the photo of the person, and the events of the session.

The monitor shows swipes and alarms the moment the controller sends them — the equivalent of the "Monitor" of the original software, for example for a reception desk.

- **Last swipe**: photo (or initials), name and card of the person, outcome (**GRANTED** / **DENIED**), reason, door and direction (In/Out), time. An unregistered card is shown as *Unregistered card*.
- **Events in this session**: every event received since the page was opened (up to the most recent 300), newest first.
- Filters at the top: a single controller, and **Card swipes only** to hide door and alarm events.

> **Note**
> The monitor shows only what arrives while it is open. Everything is stored in any case: older events are in the Event history. If swipes do not appear here but do appear later in the history, the server is not receiving events in real time — see Troubleshooting.

OPERATIONS

9 · Event history

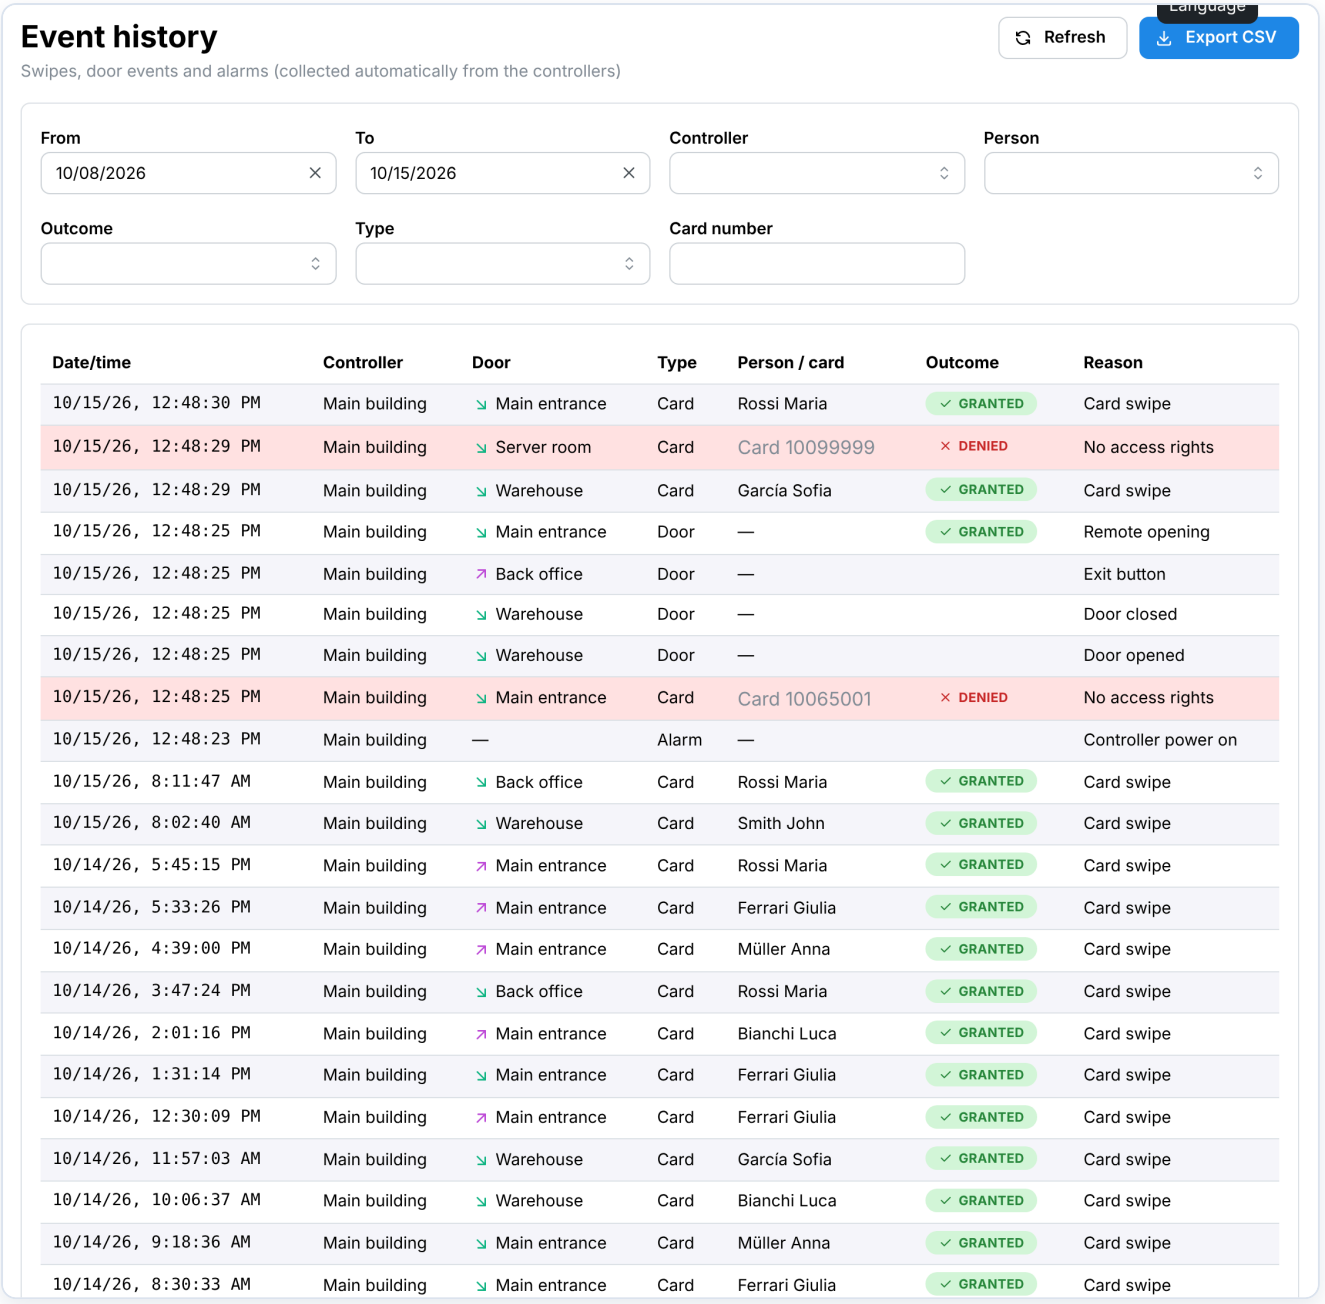


Figure 5 — Event history with filters.

All the events collected from the controllers, newest first. Use the filters to find what you need:

- **From / To** — period;
- **Controller** and **Door**;
- **Person** or **Card number**;
- **Outcome** — granted or denied only.

Each row shows date and time (controller time), controller, door with direction arrow (↘ in, ↗ out), type (Card, Door, Alarm), person or card, outcome, reason and the index of the event in the controller memory. **Export CSV** downloads the filtered events in the current language, ready for Excel.

Where events come from

Events arrive in real time from the controllers and are also downloaded automatically every few minutes and whenever a controller comes back online, so the history is complete even after network or server outages. The controller memory is circular: if a controller stays disconnected so long that its memory fills up, the oldest events are overwritten.

OPERATIONS

10 · Attendance

UHPPOTE Desk computes working hours from the swipes on the readers flagged as **attendance readers** (on the Doors page) — typically the main entrance. Only **granted** swipes count. The page has five tabs.

Report

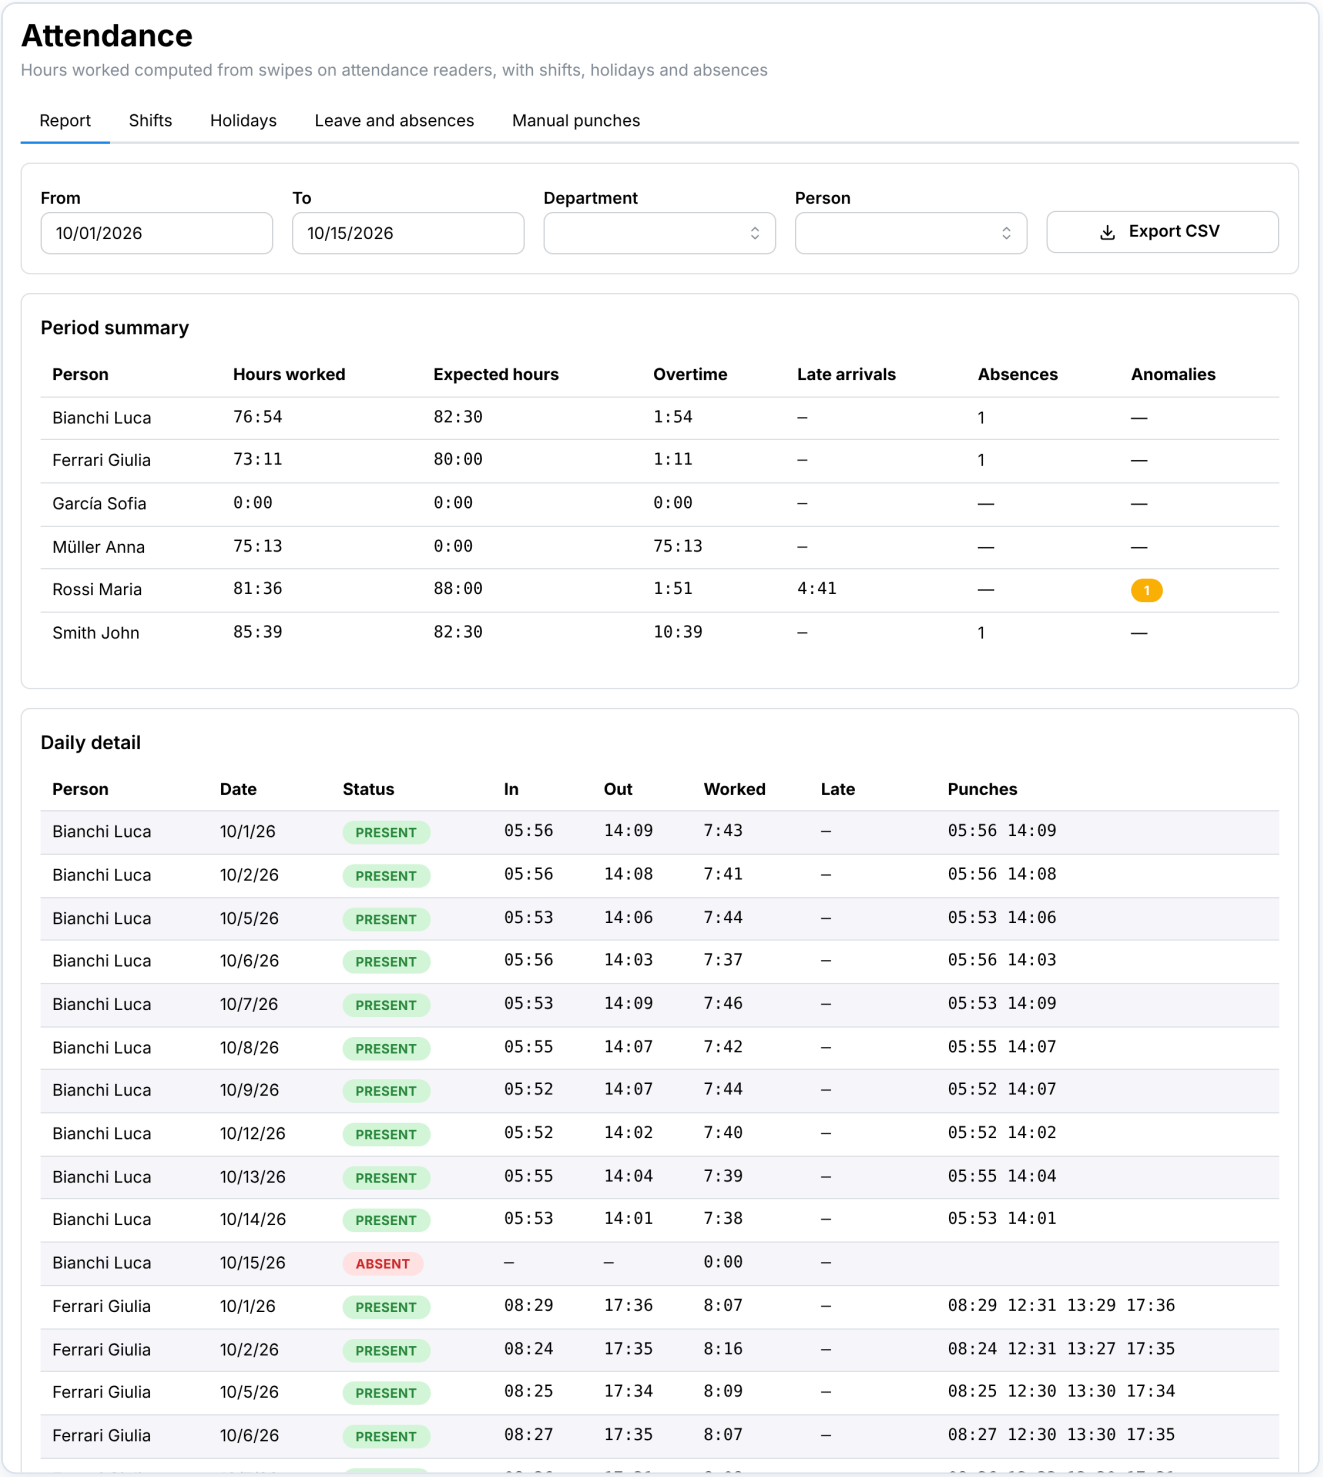


Figure 6 — Attendance report: period summary and daily detail.

Choose the period (from the first of the current month to today by default), and optionally a department or a person. The **Period summary** shows, per person: hours worked, expected hours, overtime, total late arrivals, days of absence and days with anomalies. The **Daily detail** shows every day with its status (Present, Absent, Public holiday, Day off, Holiday, Permit, Sick leave, Business trip, Anomaly), first in, last out, hours worked, lateness and all the punches; punches entered manually are marked with *. Export CSV downloads the detail.

How hours are computed

- Punches are paired in chronological order: in, out, in, out… The direction of the reader is not needed.
- With only one pair of punches in a day, the **break** of the shift is deducted automatically; with two or more pairs the actual break is used.
- An odd number of punches (e.g. a forgotten exit swipe) is an **anomaly**: the last punch is ignored until it is corrected with a manual punch.
- Lateness and early exit take into account the **tolerance** of the shift. Time beyond the expected hours is overtime; on days off and holidays all the time worked is overtime.
- Night shifts (ending after midnight) are attributed to the day on which they started.
- A person without a shift has no expected hours: only the hours worked are computed.

Shifts

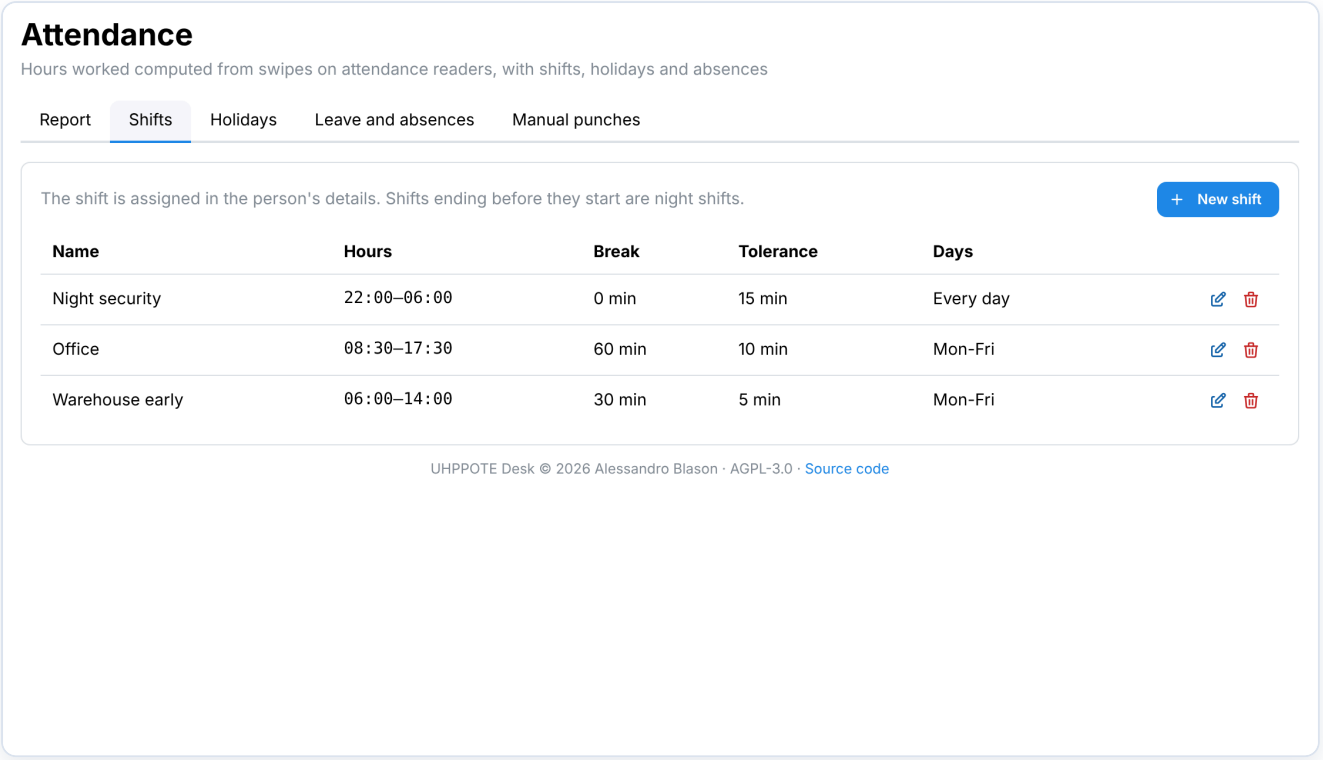


Figure 7 — Work shifts.

A shift defines start and end time, break (minutes), tolerance (minutes) and working days. A shift that ends before it starts (e.g. 22:00–06:00) is a night shift. Assign the shift in the details of each person (People).

Holidays

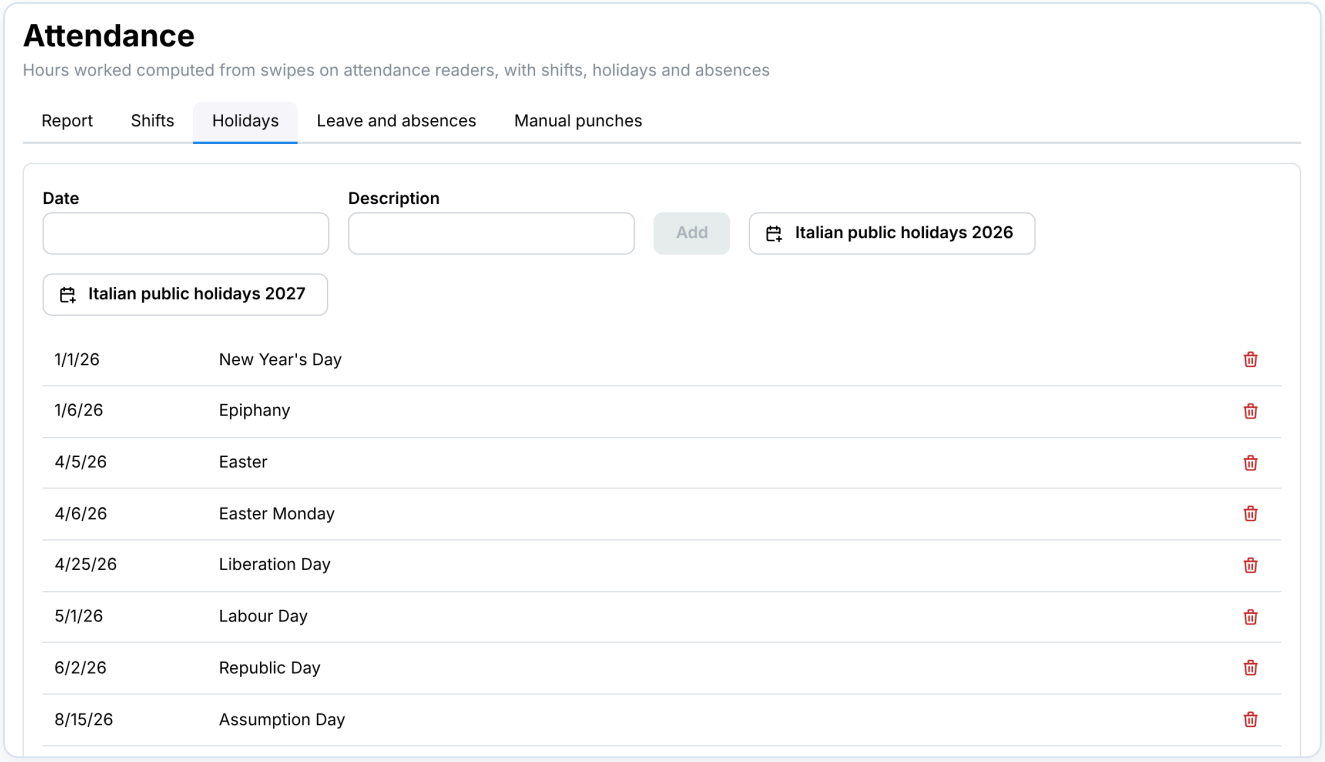


Figure 8 — Public holidays.

Days on which nobody is expected to work. Add them one by one (date and description) or import the Italian public holidays of a year with one click, Easter included. Add your local holidays, company closures and bridges as needed.

Leave and absences

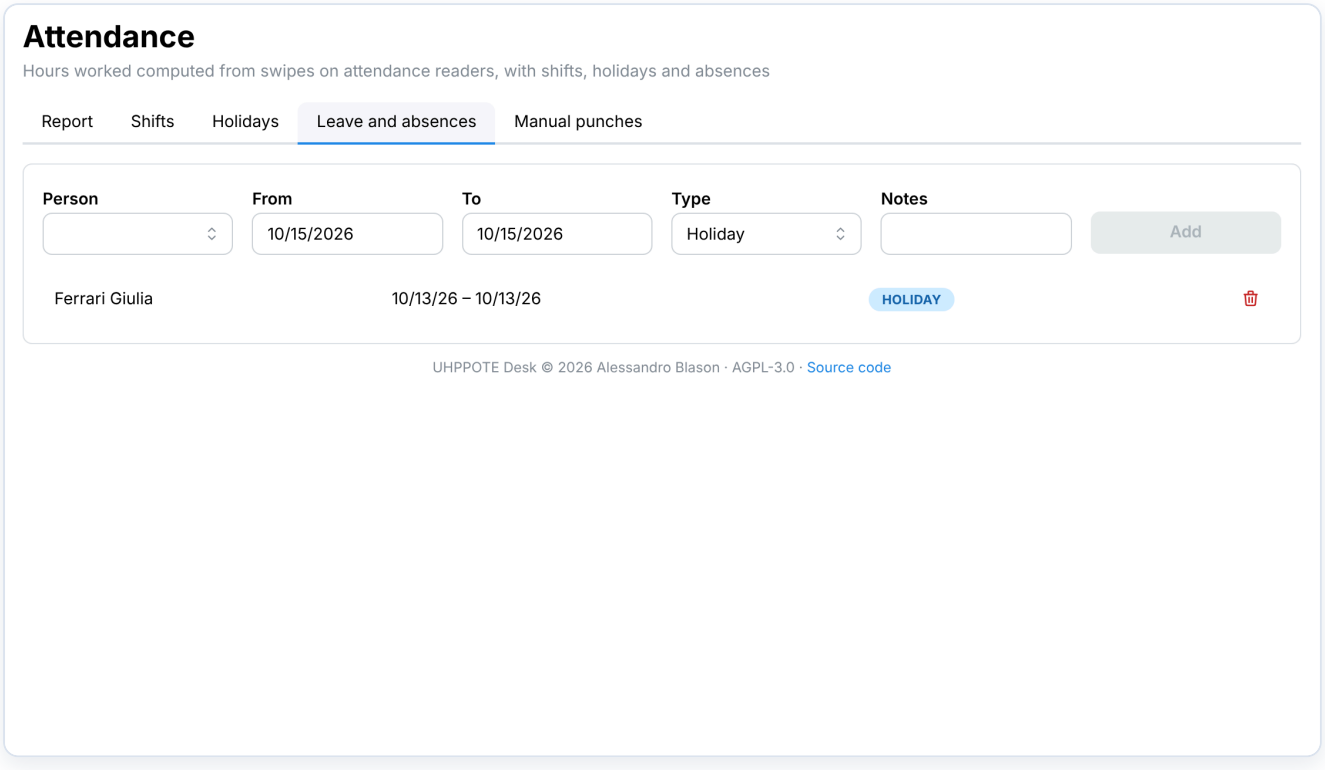


Figure 9 — Leave and absences.

Record holidays, permits, sick leave, business trips and other absences for a person and a range of dates. Those days are no longer counted as absences in the report.

Manual punches

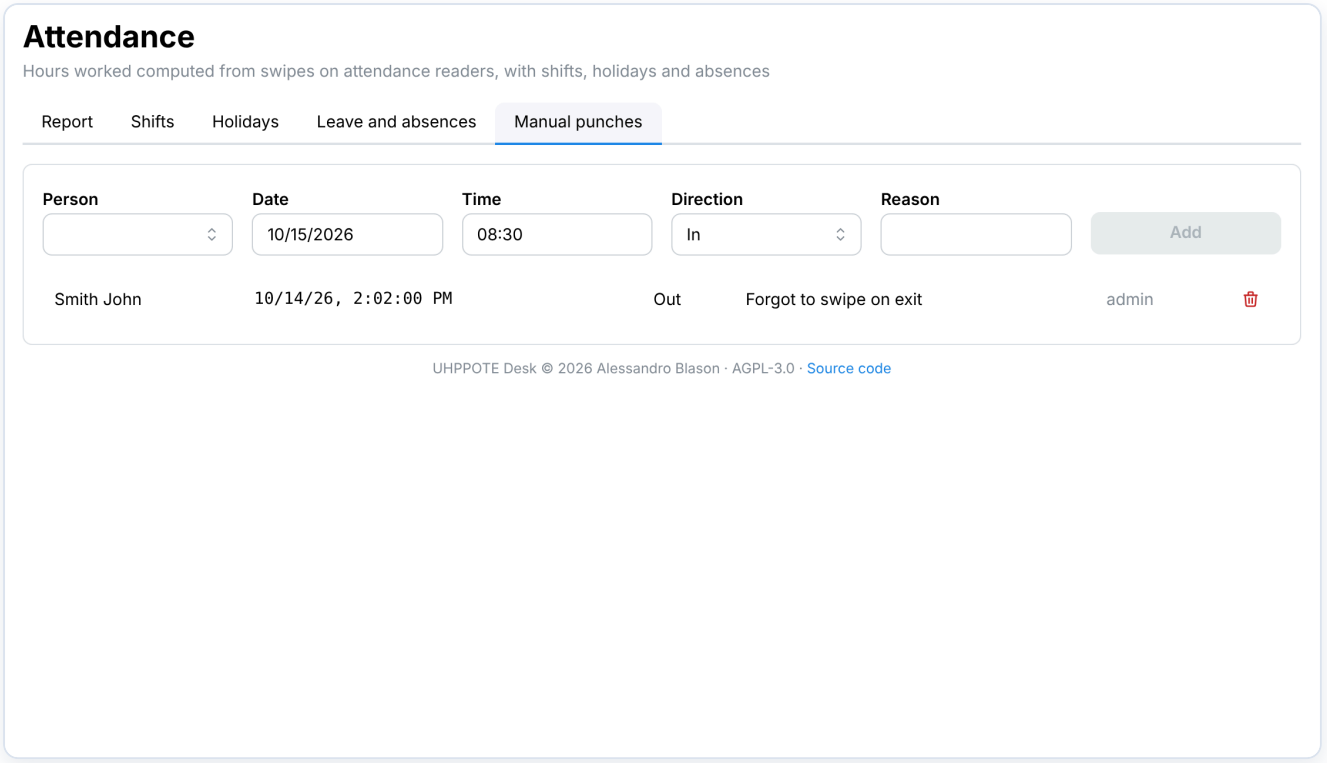


Figure 10 — Manual punches.

Add a punch that the reader did not record — for example a forgotten exit swipe — with person, date and time, direction and a reason. Manual punches are marked with * in the report and recorded in the audit log.

PART 3

Registry

People, cards and access permissions: who can go where, and when.

REGISTRY

11 · People

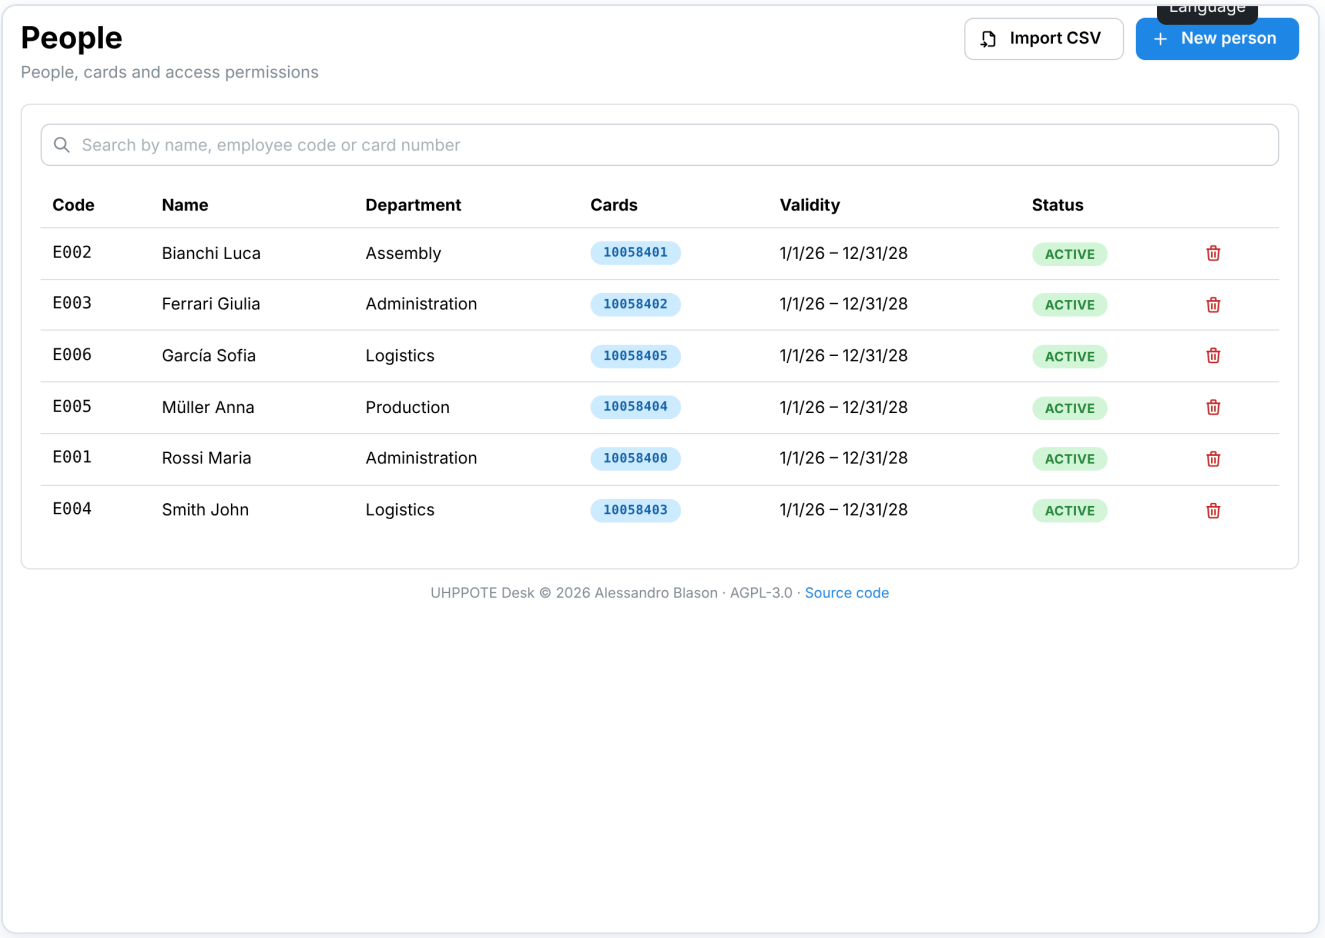


Figure 11 — The list of people.

The list shows employee code, name, department, cards, validity and status. Search by name, employee code or card number. Click a row to open the details; **New person** creates one.

Details

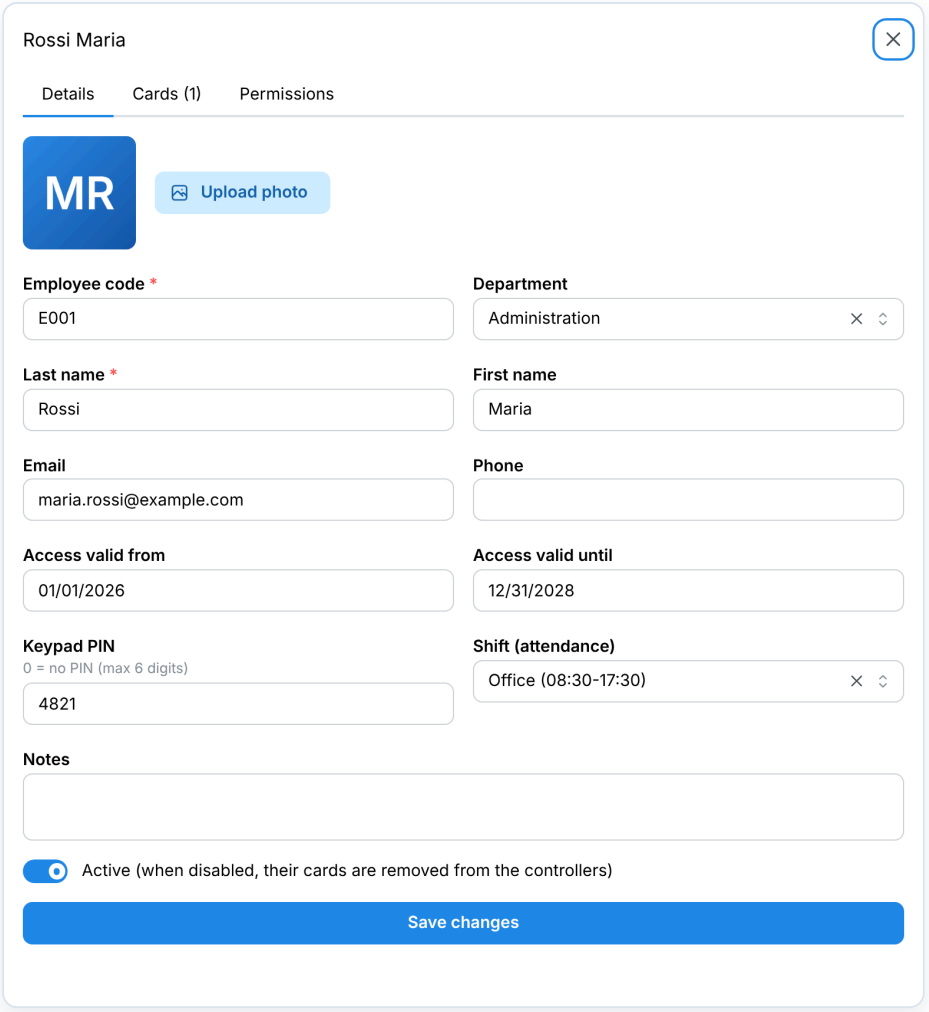


Figure 12 — Person details.

- **Employee code** (unique) and **last/first name**; department, e-mail, phone, notes.
- **Access valid from / until** — outside this period all the person's cards are refused by the controllers.
- **Keypad PIN** (up to 6 digits, 0 = none) — requested by readers with a keypad when the door works in "card + PIN" mode.
- **Shift** — for attendance.
- **Photo** — JPEG, PNG or WebP; it is shown on the monitor.
- **Active** — when disabled, the person's cards are removed from all controllers (the history is kept). Use it for people who leave temporarily or permanently.

Cards of a person

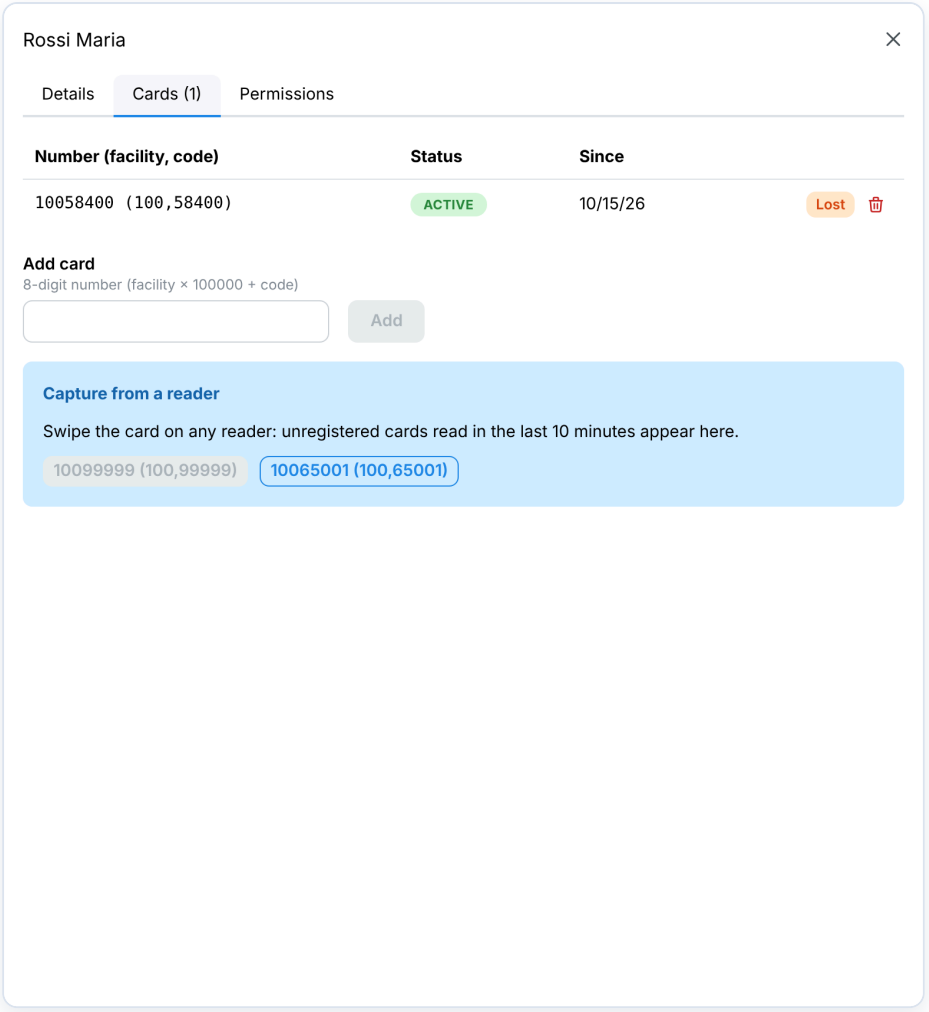


Figure 13 — Cards tab.

Type the 8-digit card number and **Add**, or use **Capture from a reader**: swipe the new card on any reader and it appears among the unknown cards read in the last 10 minutes; click it to assign it. A person can have several cards.

- **Lost** — replaces a lost card: the old one is marked as lost and removed from the controllers, the new number gets the same permissions immediately.
- **Delete** — removes the card from the database and from every controller.

Permissions of a person

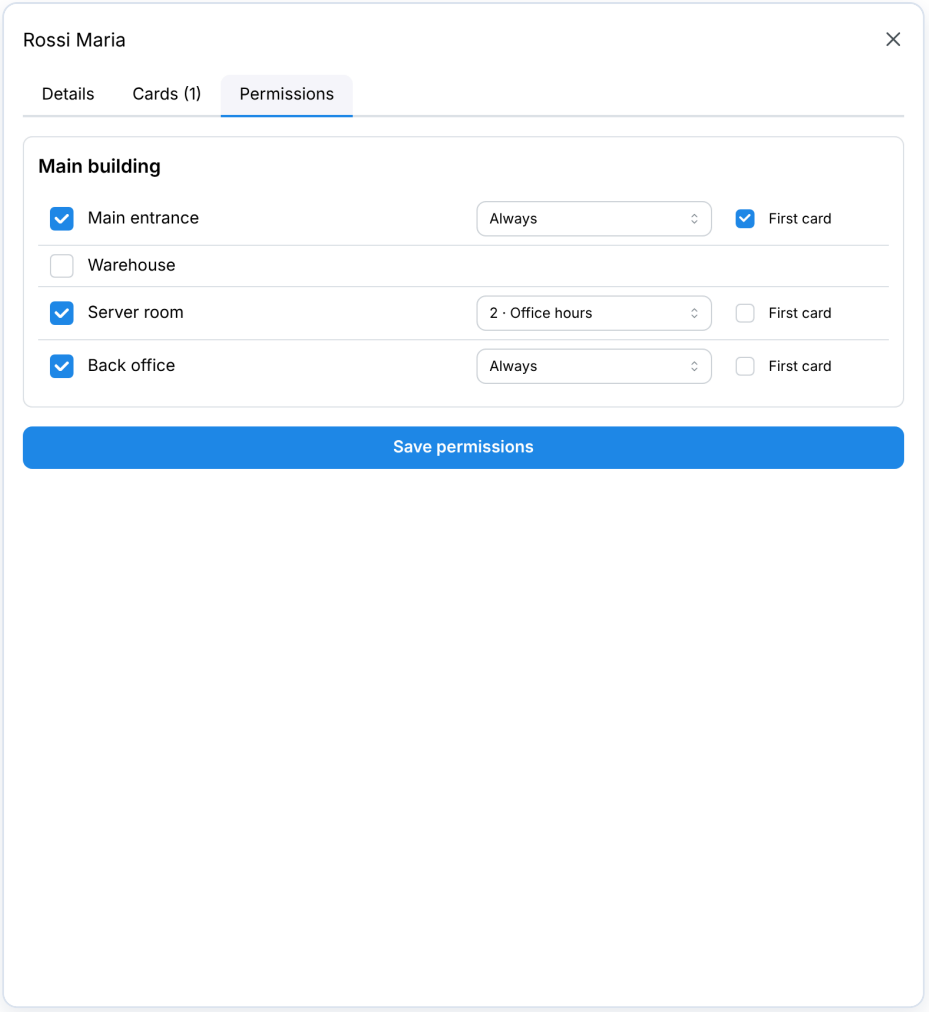


Figure 14 — Permissions tab.

One row per door of every controller. Tick the doors the person may open and choose, for each, **Always** or a **time profile**. **First card** marks the person as able to "open" a door that uses the first-card function (see Controllers → Advanced settings). **Save permissions** sends them to the controllers immediately.

Importing people from a CSV file

Import CSV reads a file with a header row; the separator (semicolon, comma or tab) is detected automatically. Recognised columns:

Column	Accepted header names	Notes
Employee code	`code`, `user no`, `consumer no`, `matricola`	required; an existing code updates that person
Last name	`last name`, `lastname`, `name`, `cognome`	required
First name	`first name`, `firstname`, `nome`	
Card	`card`, `card id`, `card number`, `tessera`	8-digit Wiegand-26 number

Column	Accepted header names	Notes
Department	`department`, `reparto`	created if missing; sub-departments with `\`, e.g. `Production\Assembly`

The result shows how many people and cards were created or updated, and the rows with errors. Imported people have no permissions: assign them afterwards, for example with the bulk assignment of the Permissions page. An export of the original Windows software can usually be imported directly.

REGISTRY

12 · Cards

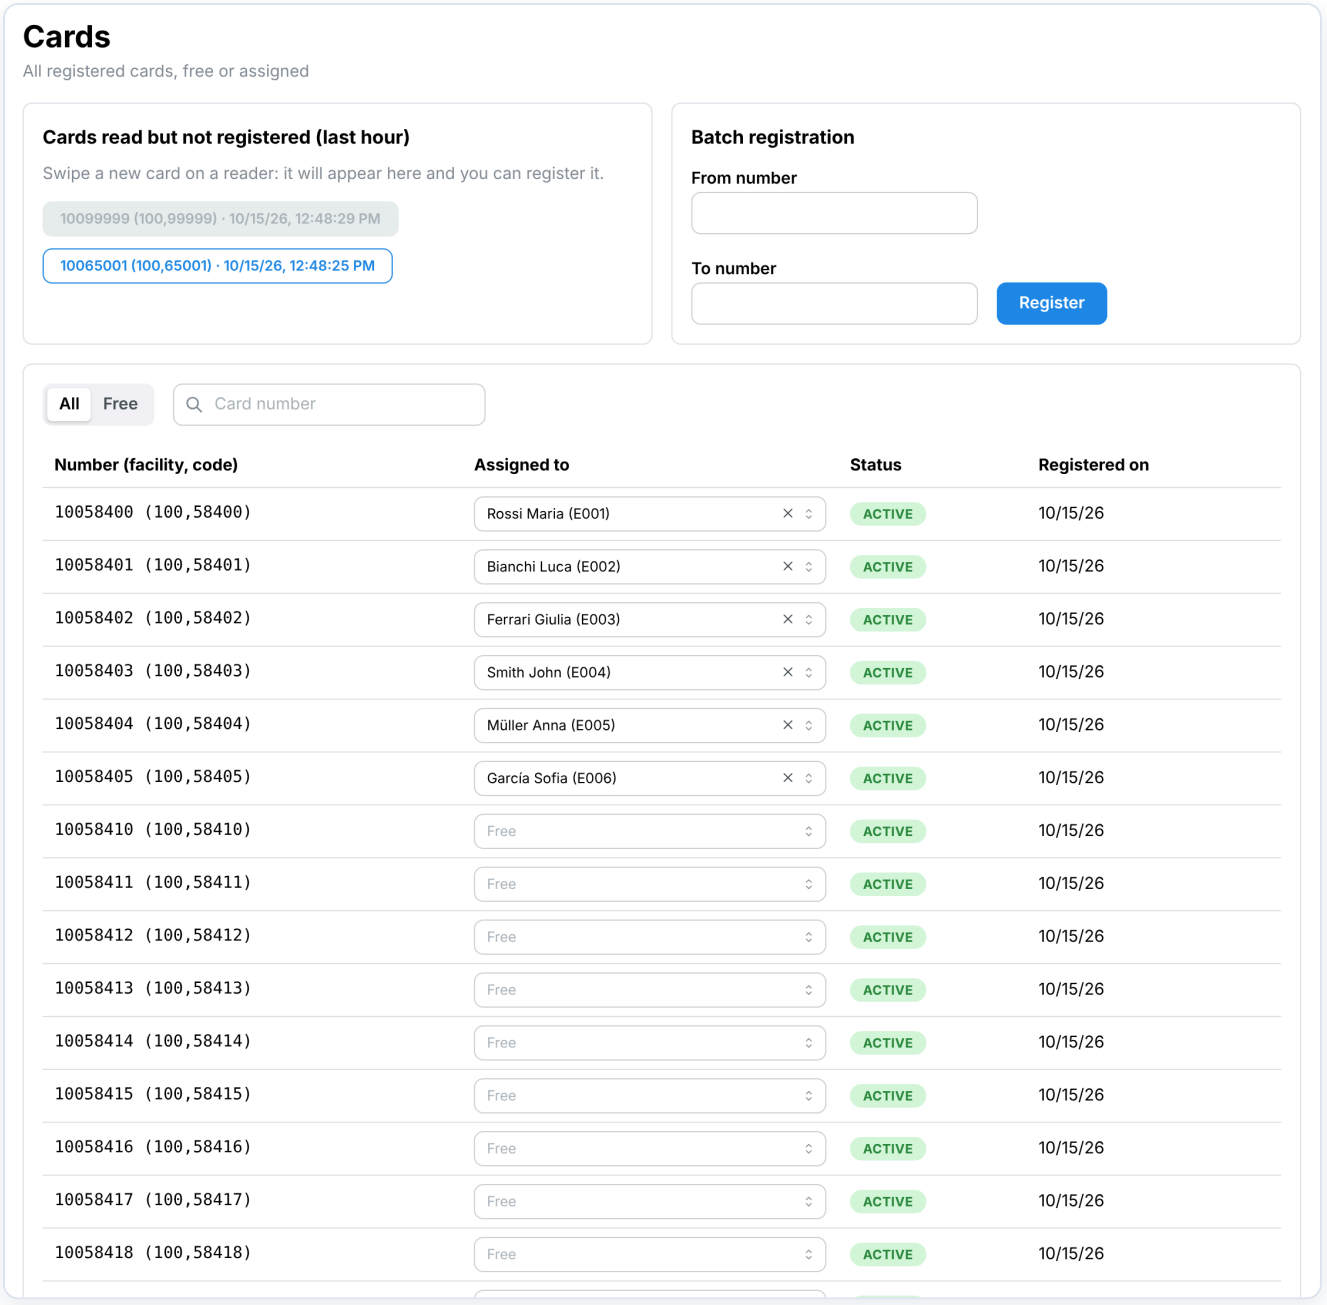


Figure 15 — All registered cards.

All the cards known to the application, assigned or free, with status (Active, Lost, Disabled) and registration date. Filter **Free** to see the cards not yet given to anybody; a free card can be assigned from the list.

- **Cards read but not registered (last hour)** — every unknown card swiped on any reader appears here: click it to register it, as a free card or directly assigned to a person. Numbers that are not valid Wiegand-26 cards are shown greyed out and cannot be registered.
- **Batch registration** — registers a whole range of numbers as free cards (up to 1000), e.g. a new box of cards with consecutive numbers.

> **Card numbers**
> The controllers accept Wiegand-26 numbers only: facility code 0–255 and card code 0–65535, written as facility × 100000 + code. The number printed on many cards (e.g. `100,58400` or `0006612288`) corresponds to this format; if in doubt, swipe the card and read its number in the unknown cards list.

REGISTRY

13 · Permissions

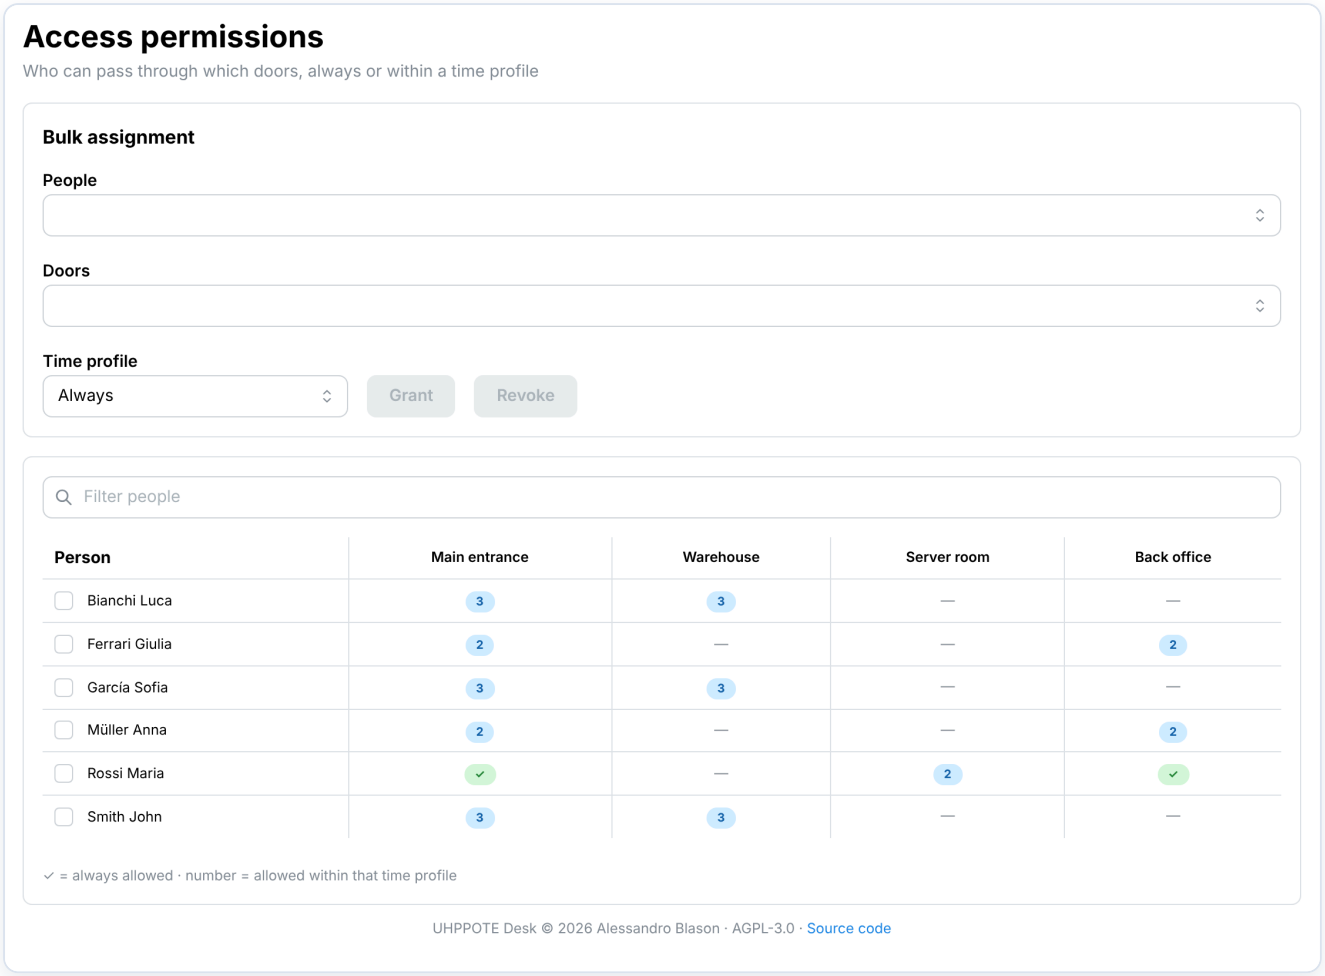


Figure 16 — Matrix of people and doors, and bulk assignment.

The equivalent of "Access Privilege" in the original software: a matrix with one row per person and one column per door. ✓ means always allowed, a number means allowed within that time profile. Filter the people to find someone quickly.

With **Bulk assignment** you select several people and several doors, optionally a time profile, and **Grant** or **Revoke** all those permissions in one go — for example to give a whole new department access to the entrance.

REGISTRY

14 · Departments and zones

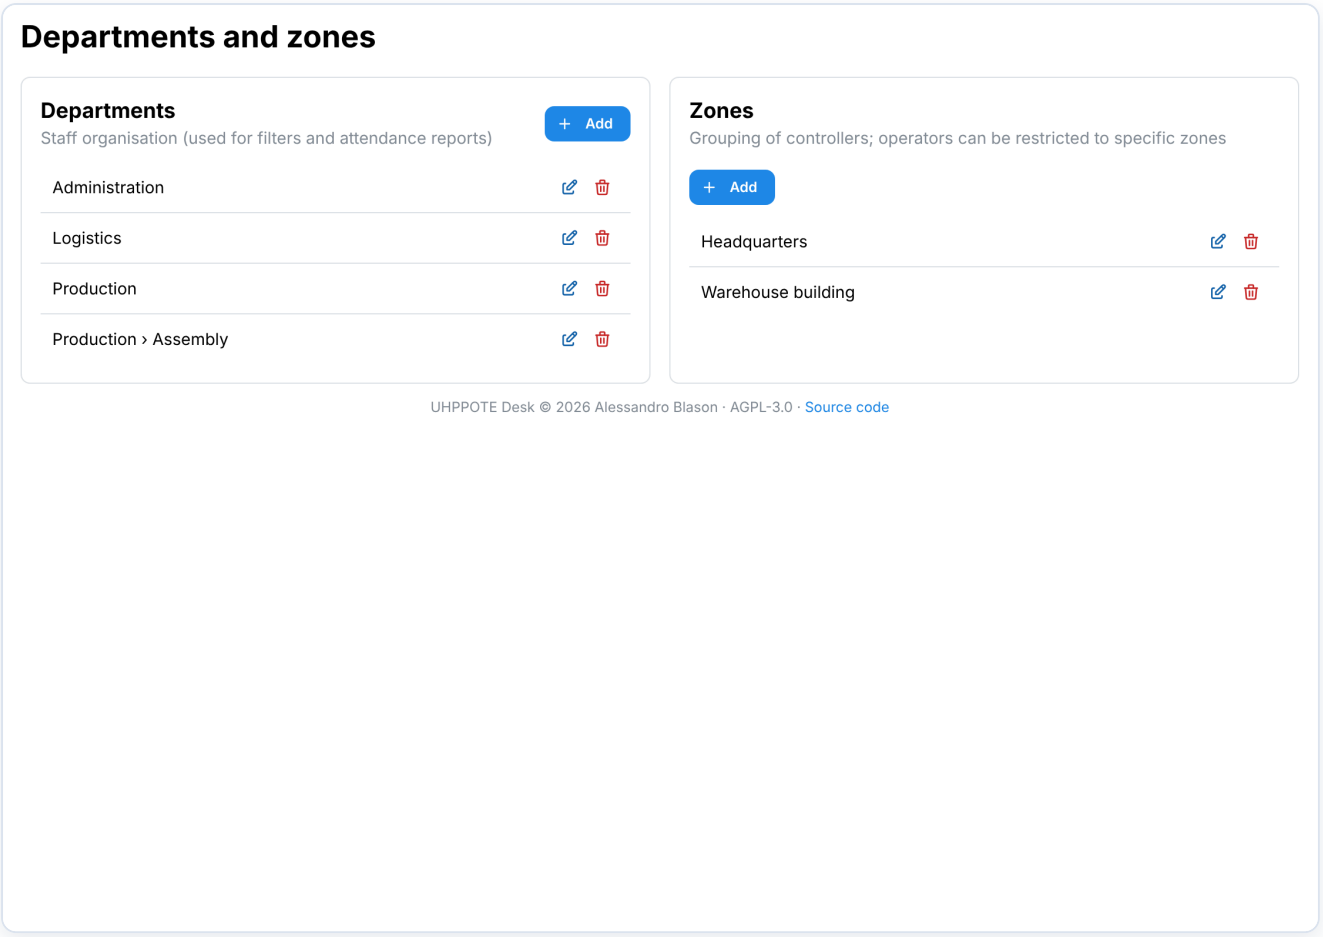


Figure 17 — Departments and zones are trees.

- **Departments** organise the staff: they are used to filter the list of people and the attendance reports. A department can belong to another one (e.g. Production → Assembly).
- **Zones** group controllers, e.g. by building or floor. They are used to restrict operators: an operator restricted to a zone (and its sub-zones) can open doors and synchronise only the controllers of that zone.

Use **New**, edit and delete; deleting an item also deletes its sub-items. People and controllers of a deleted department or zone are kept, without department or zone.

PART 4

Configuration

Controllers, doors and the rules they apply. Most of these pages are for administrators.

CONFIGURATION

15 · Controllers

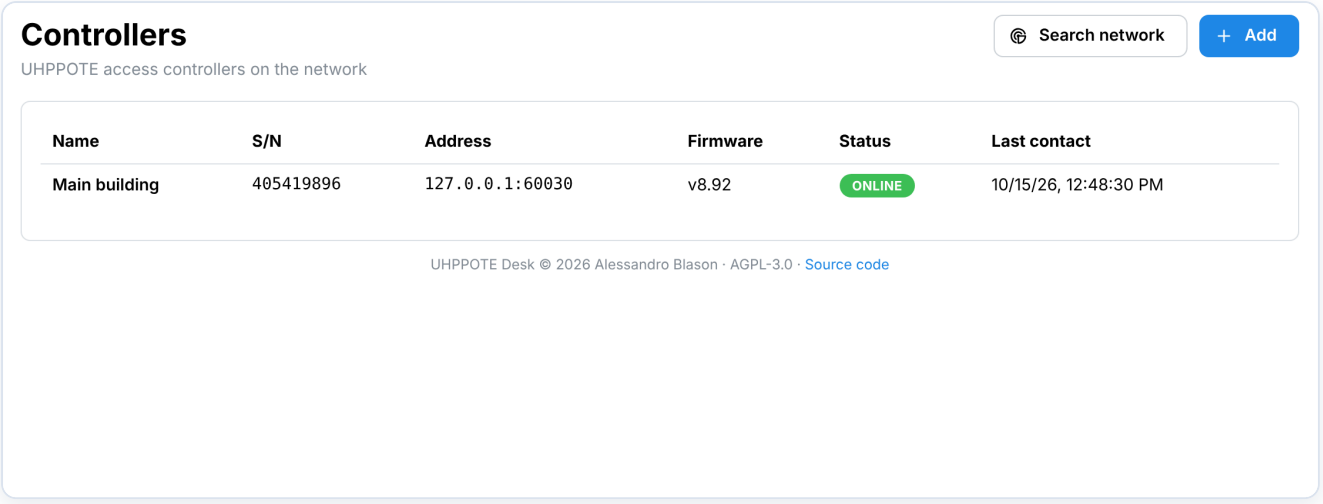


Figure 18 — The controllers configured in the application.

The list of controllers with name, serial number, address, firmware, status and last contact. Click a row to open its page.

Finding and adding a controller

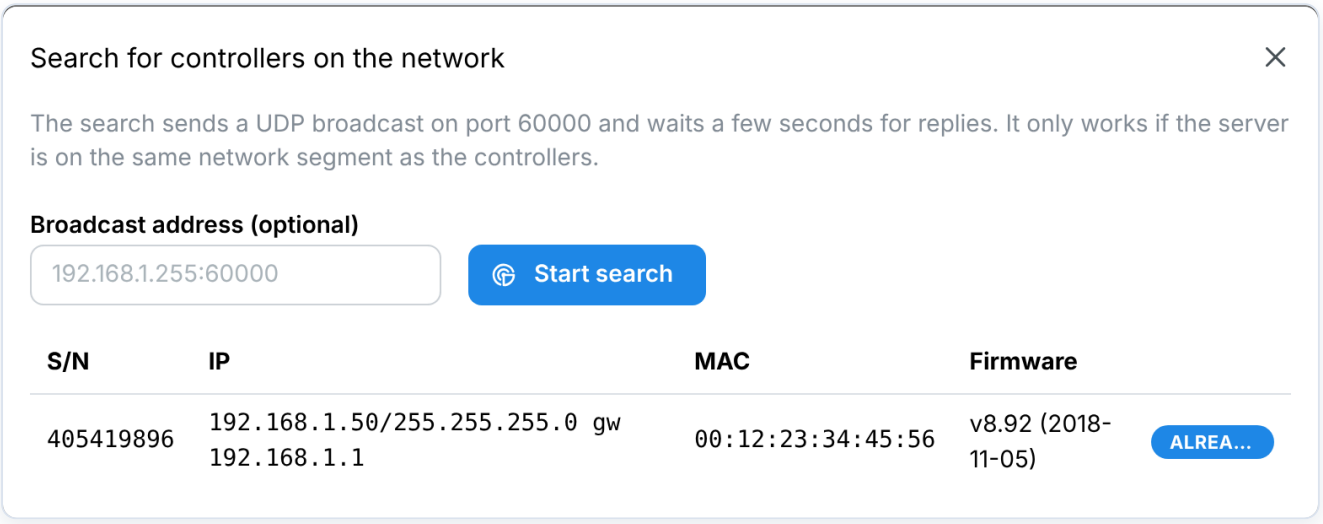


Figure 19 — Network search.

1. Click **Search network**, then **Start search**. The server sends a broadcast on the local network and lists every controller that answers within a few seconds, with serial number, IP, MAC and

firmware.

2. Click **Add** next to a controller. Give it a name, check IP address and port (60000), transport (UDP; TCP only for recent firmware) and optionally a zone.
3. Save: the controller appears online within a few seconds. The application programs it to send its events to the server, synchronises its clock and downloads its stored events.

A controller can also be added manually with its serial number. The search works only if the server is on the same network segment as the controllers; with Docker, the container must use the "host" network.

> **Controller already in use?**
> If the controller already contains cards (for example from the original software) and the application database has none, nothing is deleted when you add it. Import the people first, then use Synchronisation → Compare to see the differences before aligning.

Controller page — Diagnostics

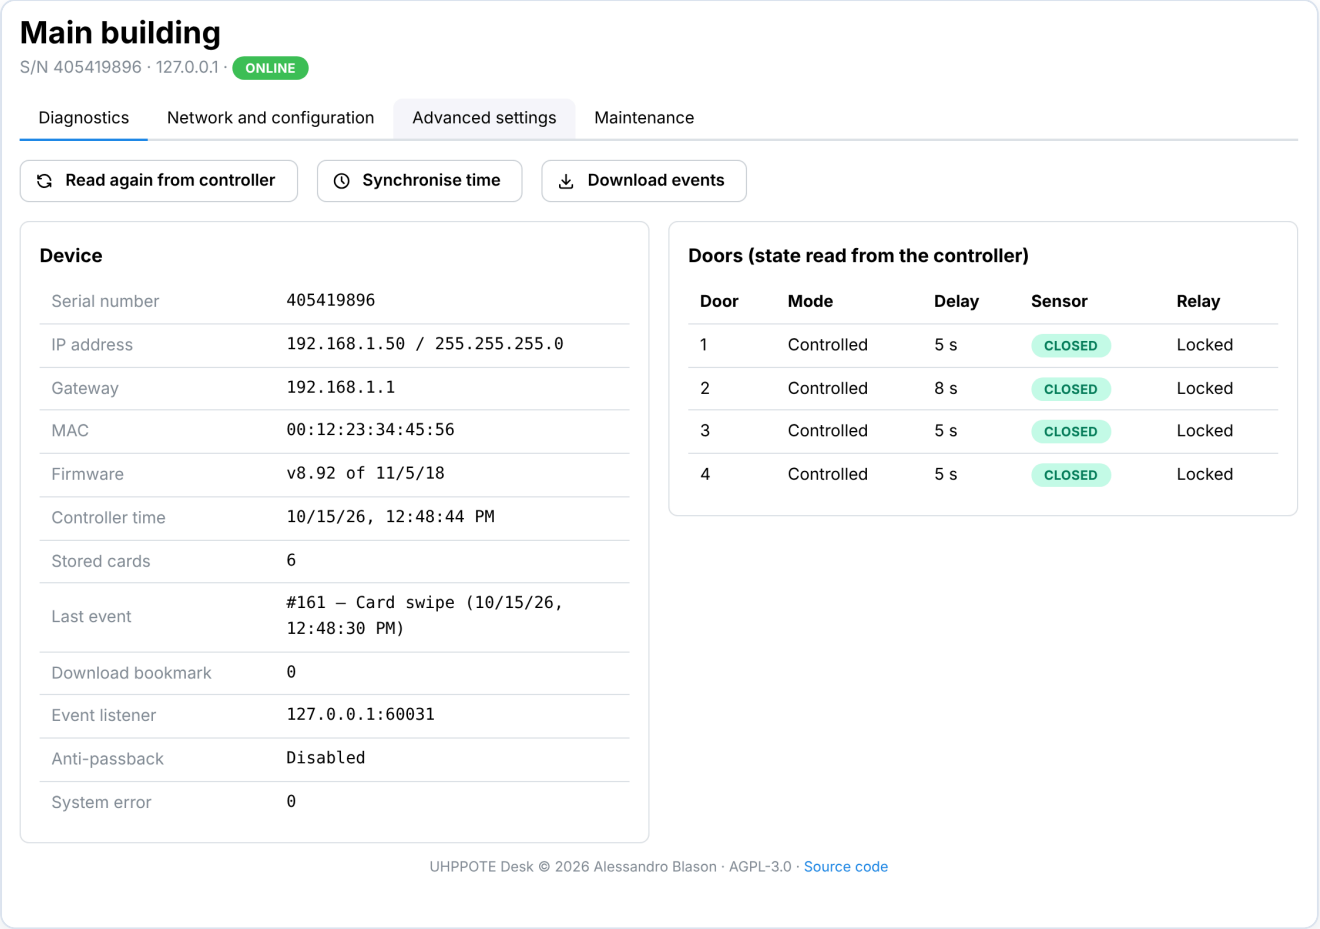


Figure 20 — Diagnostics: everything read live from the controller.

Read directly from the controller: serial number, IP, gateway, MAC, firmware version and date, controller time, number of stored cards, last event, download bookmark, event listener (where the controller sends its events), anti-passback and system error. The **Doors** table shows mode, opening delay, sensor and relay of each door, as stored in the controller.

- **Read again from controller** refreshes the data.

- **Synchronise time** sets the controller clock to the server time. This also happens automatically when the drift exceeds 30 seconds.
- **Download events** downloads at once the events not yet collected.

Network and configuration

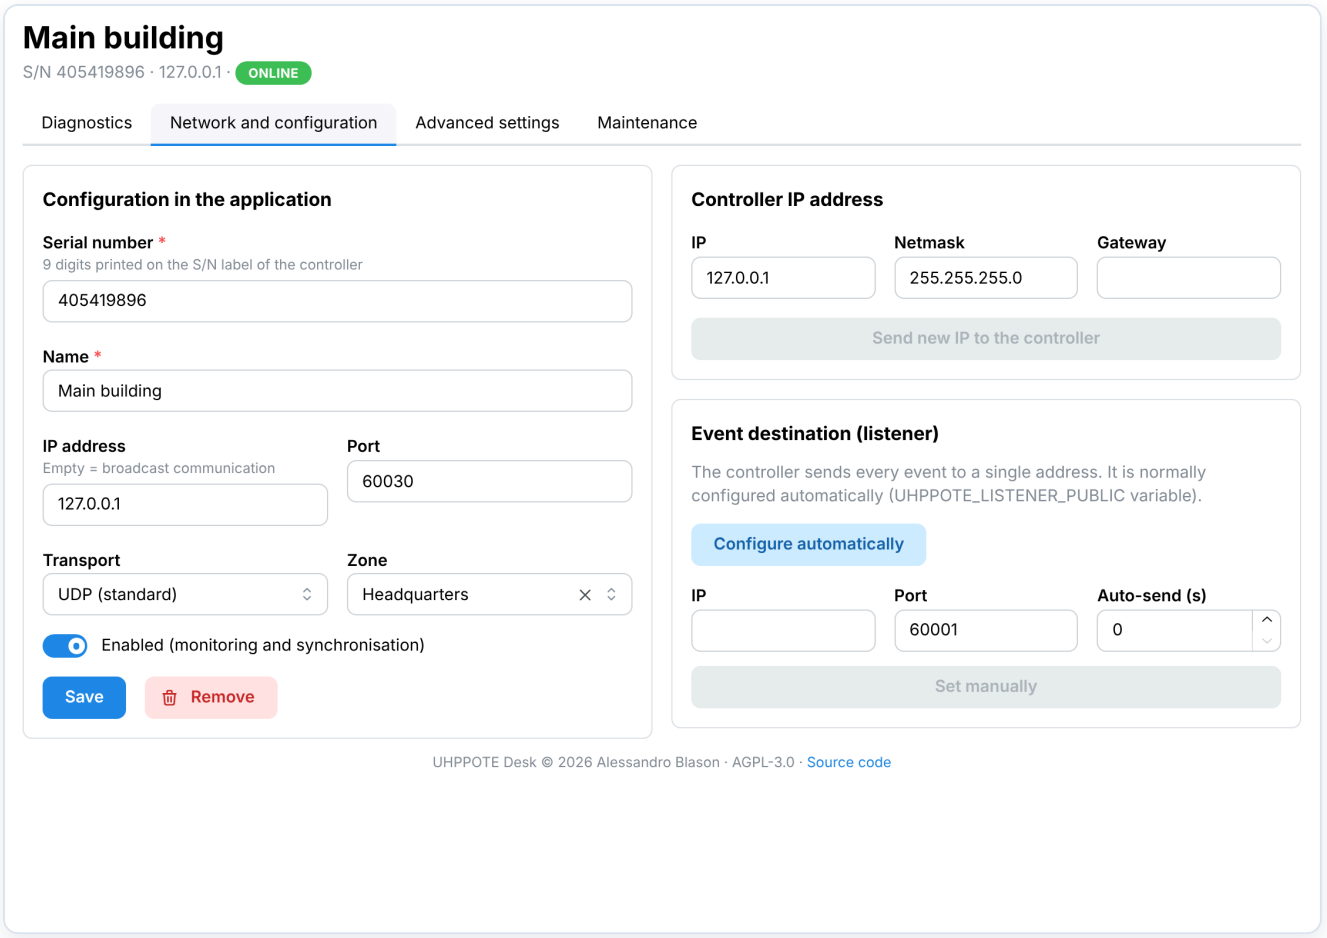


Figure 21 — Configuration in the application, controller IP and event destination.

- **Configuration in the application** — how the application reaches the controller: serial number, name, IP and port (empty IP = broadcast), transport, zone and **Enabled** (a disabled controller is neither monitored nor synchronised). **Remove** deletes the controller and its event history from the database, without changing the controller.
- **Controller IP address** — changes the IP, netmask and gateway stored **in the controller**. Use it to move a new controller from its factory address to your network. The command is sent by broadcast, so it works even if the current address is not reachable; afterwards the application checks the new address.
- **Event destination (listener)** — the address to which the controller sends every event: the server. It is set automatically when the server is configured with `UHPPOTE_LISTENER_PUBLIC`; **Configure automatically** applies it now, **Set manually** sets a different address and the status auto-send interval.

> **Careful**
> A wrong IP address, netmask or gateway makes the controller unreachable. It can then be reconfigured only from a computer on the same network segment, with a network search.

Advanced settings

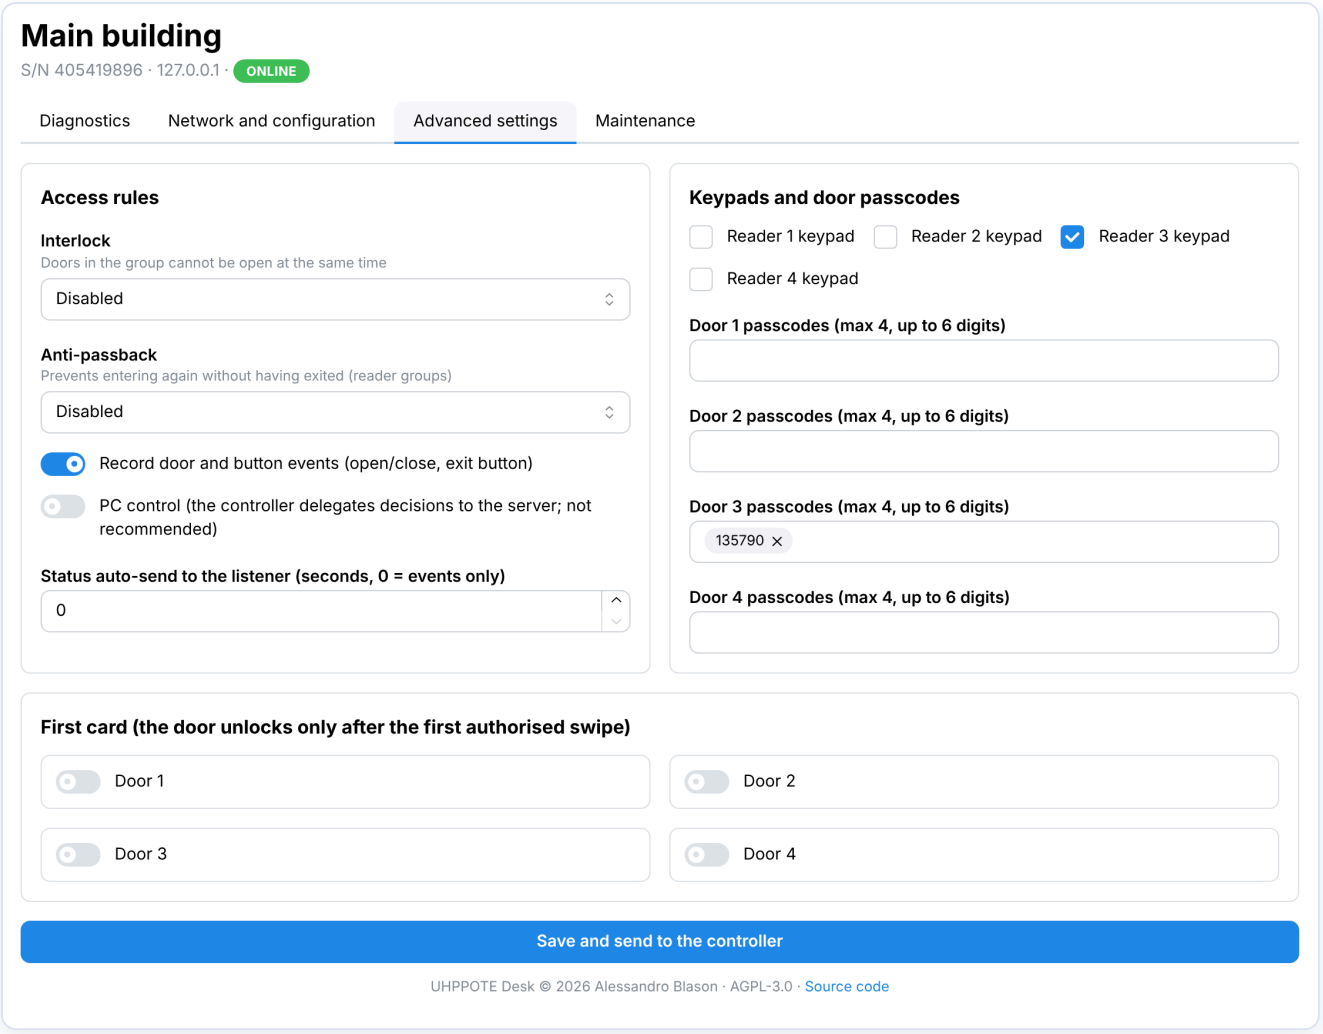


Figure 22 — Access rules, keypads and first card.

Settings that apply to the whole controller. They are stored in the database and sent to the controller with **Save and send to the controller**.

- **Interlock** — doors of a group cannot be open at the same time (airlocks, e.g. doors 1 and 2): a door opens only when the others of its group are closed. Requires door sensors.
- **Anti-passback** — prevents passing a card back to someone else: after entering through a reader of one group, the card must exit through a reader of the other group before it can enter again. See chapter 25 for the groupings.
- **Record door and button events** — also records door opened/closed and exit button events (recommended).
- **PC control** — the controller asks the server before granting access. Not recommended: doors stop working when the server is unreachable.
- **Status auto-send** — the controller sends its status to the server every N seconds besides the events (0 = events only).
- **Keypads** — tick the readers that have a keypad. **Door passcodes**: up to 4 codes per door (up to 6 digits) that open the door when typed on the keypad, without a card.
- **First card** — in the chosen hours and days the door stays locked until the first authorised person with the "First card" permission swipes in; then the door switches to the chosen mode (e.g.

normally open) until the end of the period. Typical use: a shop entrance that opens to the public only after the manager has arrived.

Maintenance

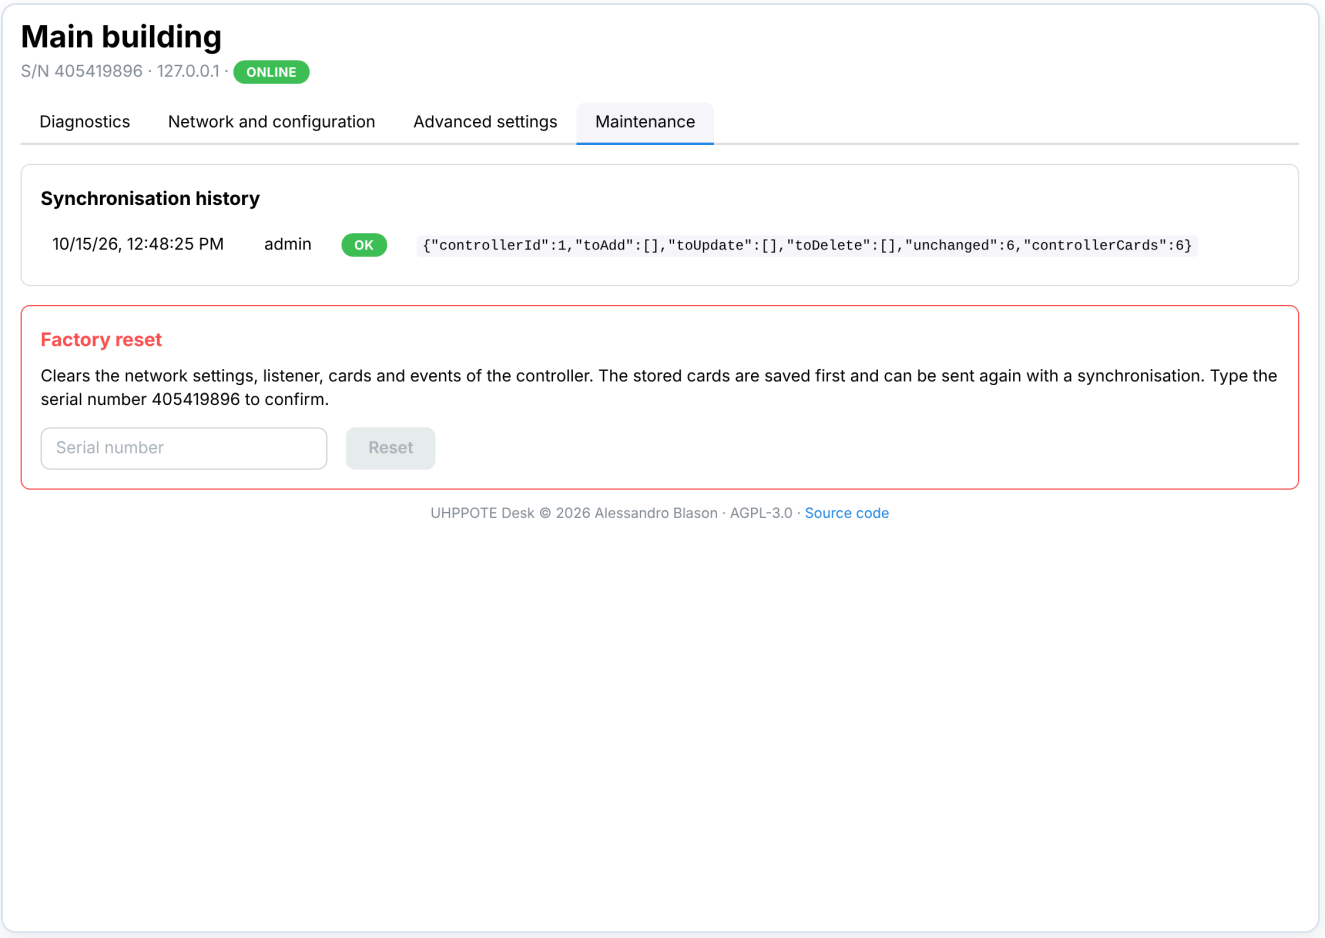


Figure 23 — Synchronisation history and factory reset.

Synchronisation history lists the synchronisations of this controller, with operator, outcome and summary. **Factory reset** clears the network settings, listener, cards and events of the controller. The stored cards are first saved to a file in the server backup folder; to confirm, type the serial number. After a reset the controller must be configured again (IP, then synchronisation).

CONFIGURATION

16 · Doors

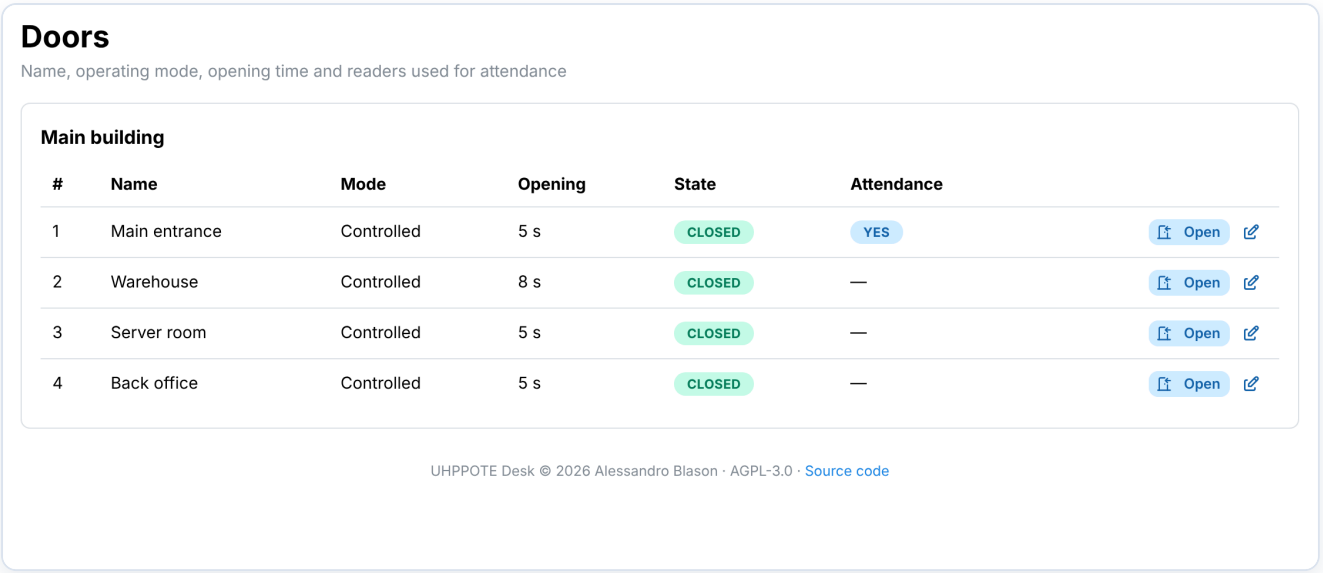


Figure 24 — The doors of all the controllers.

Every door of every controller with its name, mode, opening time, live state and attendance flag. **Open** opens it remotely. Edit a door to change:

- **Name** — used everywhere in the application (dashboard, events, permissions).
- **Mode** — *Controlled* (normal: opens with an authorised card), *Normally open* (always unlocked) or *Normally closed* (always locked, even for valid cards).
- **Opening time** — seconds the lock stays released after a granted swipe, the exit button or a remote opening.
- **Active** — inactive doors (e.g. unused outputs) are hidden from the dashboard and from permissions.
- **Reader used for attendance** — swipes on this reader become attendance punches.

Mode and opening time are sent to the controller immediately.

CONFIGURATION

17 · Time profiles

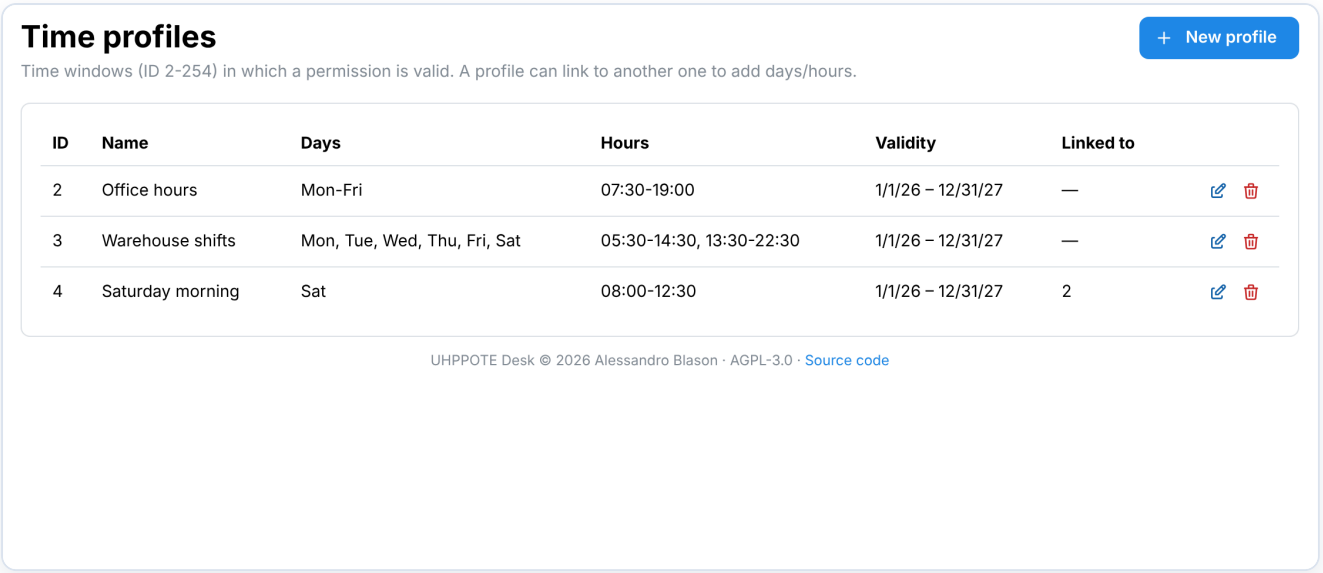


Figure 25 — Time profiles.

A time profile tells **when** a permission is valid. Each profile has:

- an **ID** from 2 to 254 (the number stored in the controller) and a name;
- a validity period (**Valid from / until**);
- the **days** of the week;
- up to three **time intervals**, e.g. 08:00–12:30 and 13:30–18:00;
- optionally a **linked profile**: if a swipe does not fall within this profile, the linked one is checked too. Linking is the way to combine different hours on different days.

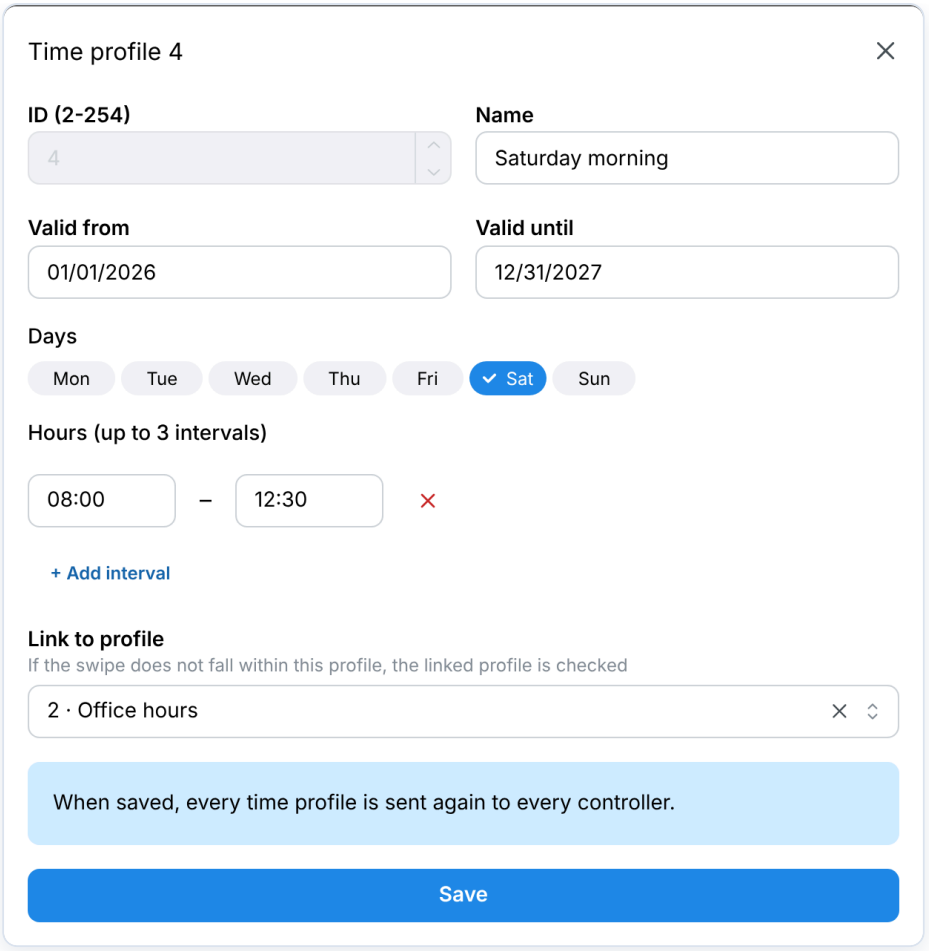


Figure 26 — Editing a profile: "Saturday morning" is linked to "Office hours".

When a profile is saved, all the profiles are sent again to every controller. A profile used by some permission cannot be deleted.

> **Example**
> "Office hours" (2) = Mon–Fri 07:30–19:00; "Saturday morning" (4) = Sat 08:00–12:30, linked to 2. A permission with profile 4 allows access on weekdays during office hours *and* on Saturday morning.

CONFIGURATION

18 · Scheduled tasks

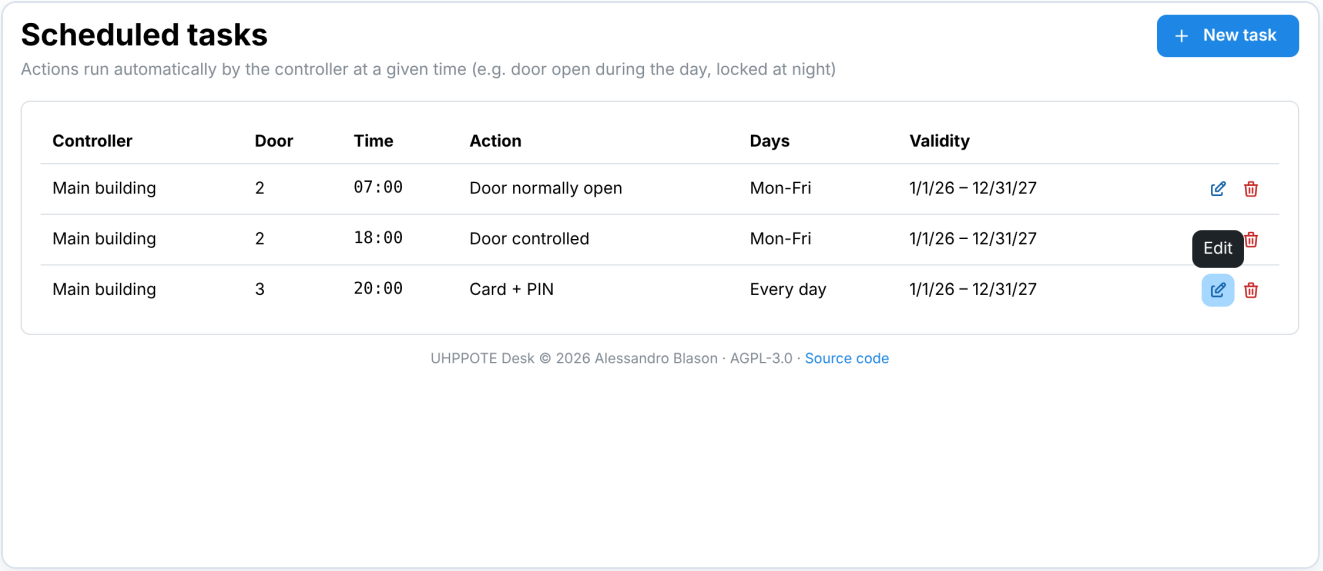


Figure 27 — Scheduled tasks run by the controllers.

Actions that a controller runs **by itself** at a given time, on the chosen days and within a validity period — for example the warehouse door *normally open* at 07:00 and back to *controlled* at 18:00. Each task has controller, door, action, start time, days, validity and an Active switch. Available actions:

Action	Effect from the start time
Door controlled / normally open / normally closed	changes the mode of the door
Disable / enable time profiles	time profiles are ignored (cards valid at any time) or applied again
Card only (no PIN) · Card + PIN on entry · Card + PIN	how readers with a keypad ask for the PIN
Enable / disable multi-card	access requires several different authorised cards in sequence (number of cards set in the task)
Single opening	opens the door once
Disable / enable exit button	ignores or re-enables the exit button

CONFIGURATION

19 · Synchronisation

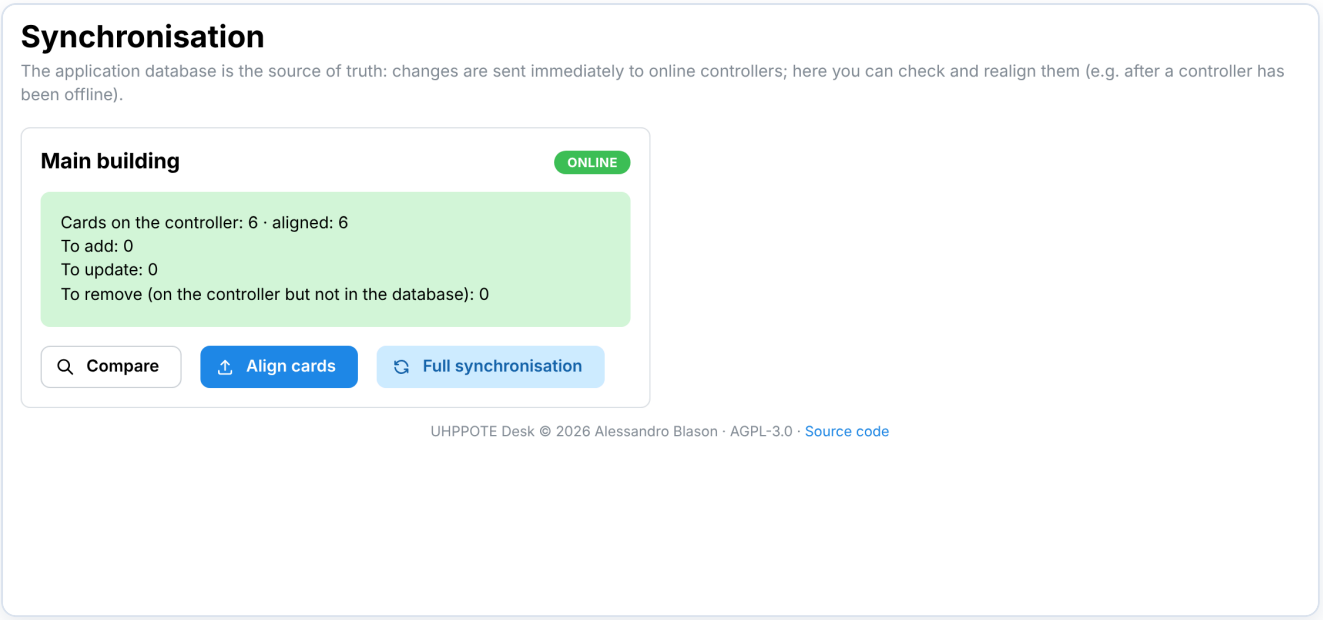


Figure 28 — Comparing the database with a controller.

Every change is sent to the controllers when it is made. If a controller was unreachable at that moment (switched off, network fault), it is aligned here. The page lists the controllers with their state and these commands:

- **Compare** — reads all the cards from the controller and shows the differences: cards to add, cards to update (permissions, validity, PIN) and cards to remove (present on the controller but not in the database). Nothing is changed.
- **Align cards** — applies those differences to the cards.
- **Full synchronisation** (administrators) — sends again door configuration, time profiles, tasks, advanced settings and all the cards. It may take a few minutes with many cards; progress is shown live.

Automatic recovery

When a controller comes back online **without any card** while the database expects some (factory reset, replaced controller), the application runs a full synchronisation by itself. Any other difference is only reported in the server log, so that cards are never deleted without an operator deciding it.

PART 5

Administration

Users of the application, traceability and server maintenance. Administrators only, except the System page.

ADMINISTRATION

20 · Operators

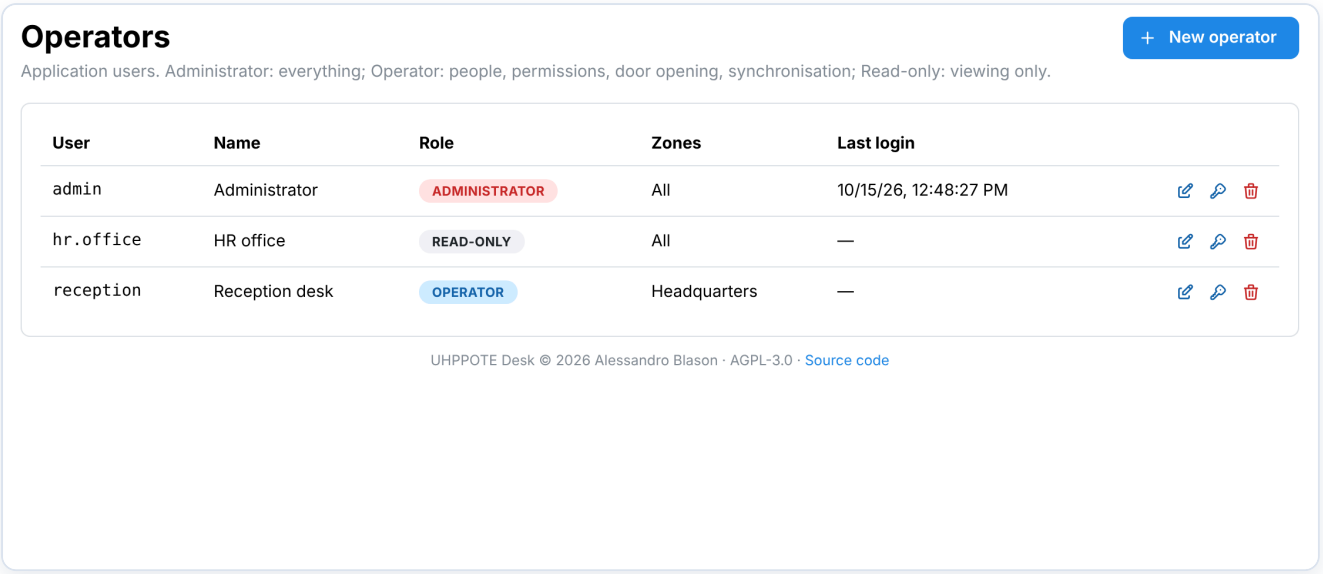


Figure 29 — Operators of the application.

The accounts that can log in to the application. For each operator: username, display name, role (see chapter 4), zones and last login.

- **New operator** — choose username, name, role and optionally zones. If you leave the password empty, a temporary password is generated and shown once: give it to the person, who must change it at first login.
- **Reset password** — generates a new temporary password.
- **Active** — a disabled operator cannot log in; their operations remain in the audit log, as they do when an operator is deleted.

You cannot lower your own role, disable or delete yourself, so there is always at least one administrator.

ADMINISTRATION

21 · Audit log

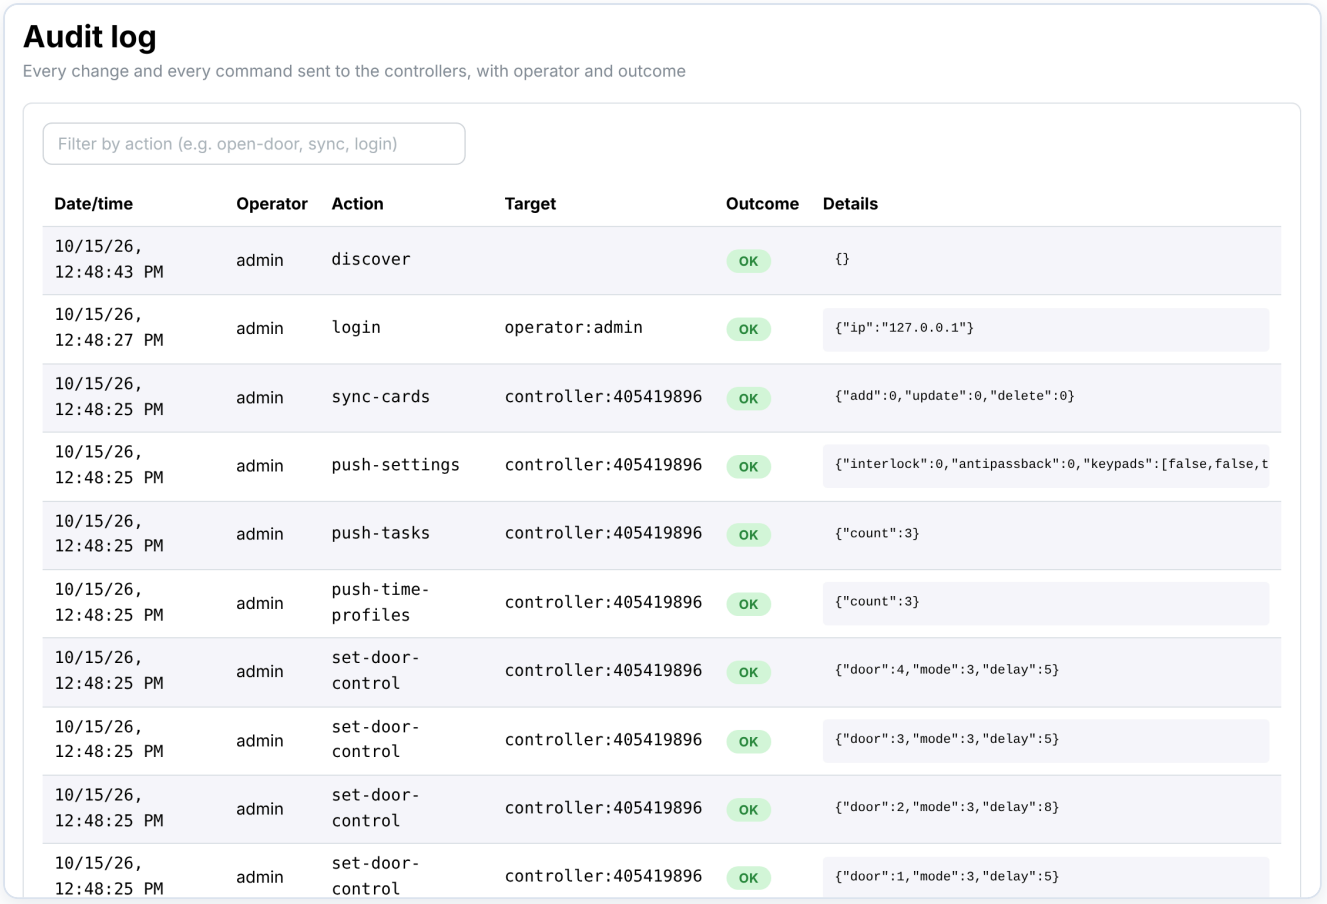


Figure 30 — Every change and every command, with operator and outcome.

The log of every change made in the application and every command sent to the controllers: date and time, operator (or *system* for automatic operations), action (e.g. `open-door`, `put-card`, `sync-cards`, `login`), target, outcome and details. Filter by action to answer questions like "who opened the back office door yesterday?".

ADMINISTRATION

22 · System

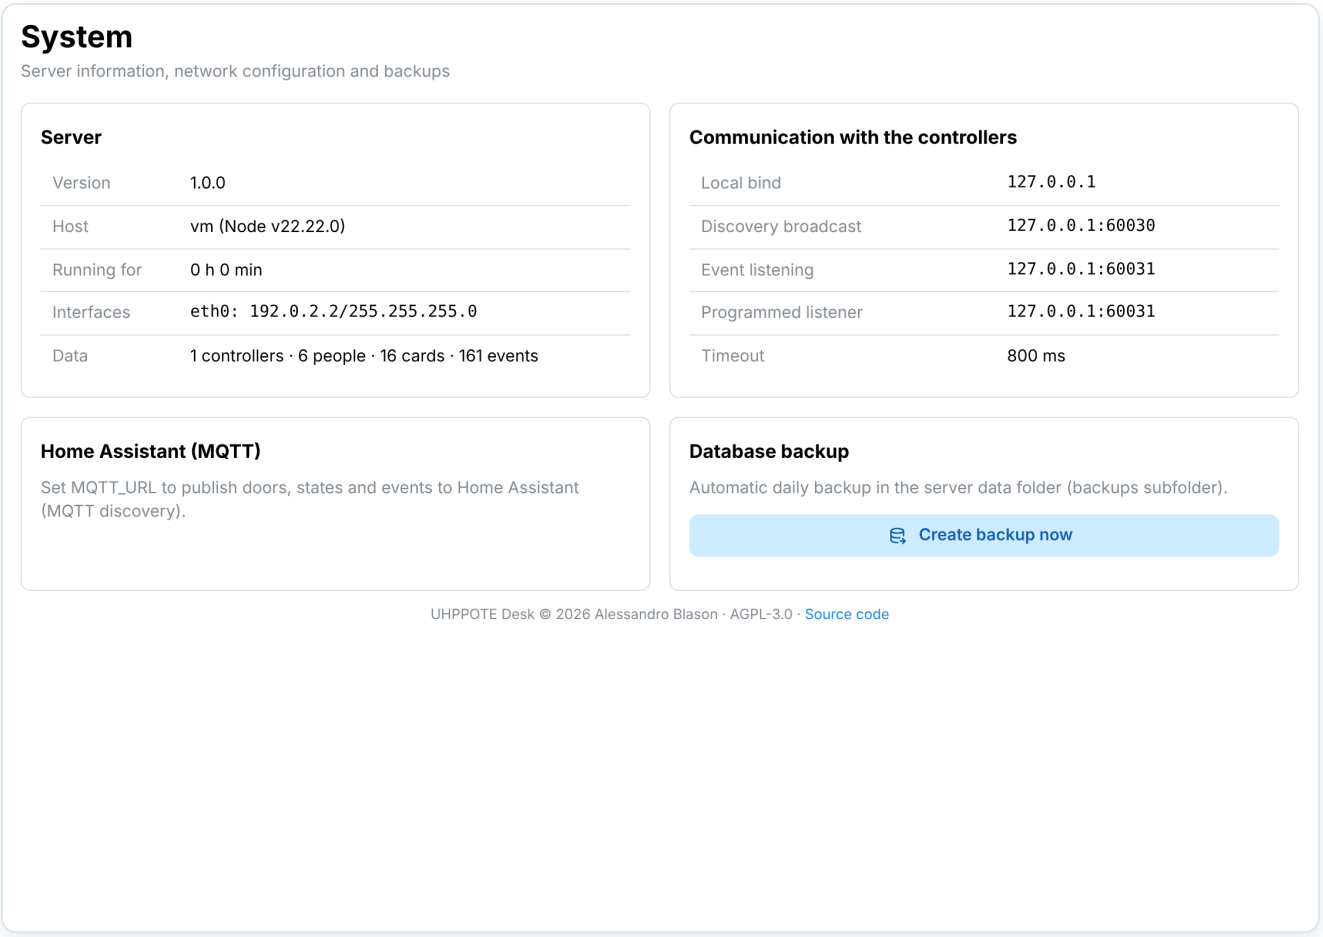


Figure 31 — Server information.

- **Server** — version, host name, uptime, network interfaces, and the amount of data (controllers, people, cards, events).
- **Communication with the controllers** — the network settings of the server: local address, discovery broadcast, event listening port and the **programmed listener**, i.e. the address the controllers send their events to. A warning appears if it is not set: events then arrive only with the periodic download, not in real time.
- **Database backup** — a copy of the database is made every night (at 02:00 by default, the last 14 are kept) in the `backups` folder of the server data. **Create backup now** makes one immediately, e.g. before a large import. Administrators only.

23 · Change password

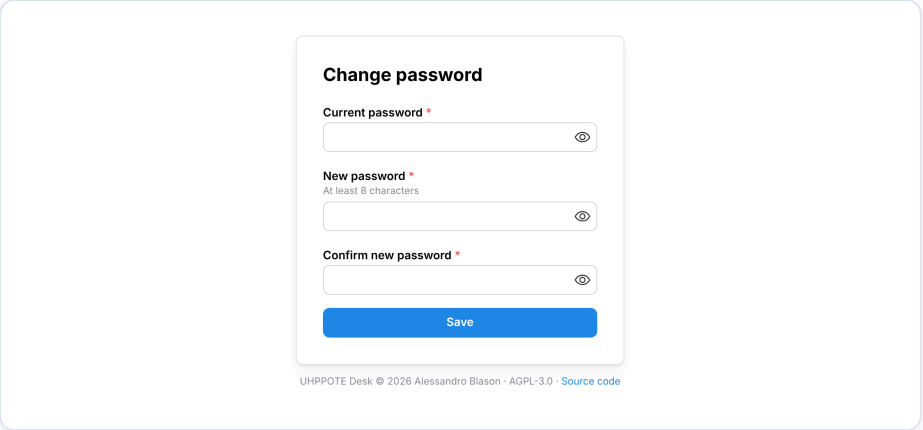


Figure 32 — Changing your password.

From the key icon in the header. Enter the current password and the new one twice (at least 8 characters). Your other open sessions are closed. If the `admin` password is set by the server's `ADMIN_PASSWORD` variable, the page explains that it can be changed only there.

PART 6

Reference

Event reasons, door modes and rules, troubleshooting and glossary.

24 · Event reasons

Every event carries a reason code, shown as text in the monitor and the history.

Code	Reason	Meaning
1	Card swipe	access granted with a card
6	No access rights	card unknown to the controller, or no permission on that door
7	Incorrect password	wrong PIN on the keypad
8	Anti-passback	the card must first pass through a reader of the other group
9	Multi-card	more cards are required to open
10	First card	door waiting for the first authorised card
11	Door normally closed	the door is set to normally closed
12	Interlock	another door of the interlock group is open
13	Outside time profile	the permission is not valid at this day/time
15	Invalid time zone	the time profile is not defined on the controller
18	Access denied	access refused by the controller for a reason not covered by the other codes
20	Exit button	door opened with the exit button
23 / 24	Door opened / Door closed	door sensor (with "Record door and button events")
25	Door opened (supervisor password)	opened with a door passcode
28 / 29	Controller power on / reset	the controller was switched on or reset
31–34	Button invalid	exit button refused (door locked, offline, interlock, threat)
37	Door open too long	the door was left open
38	Forced open	door opened without a valid access
39	Fire	fire alarm input active
40	Forced closed	forced lock input active

Code	Reason	Meaning
41–43	Theft prevention · 24×7 zone · Emergency	alarm inputs
44 / 45	Remote opening	opened from the application (or a USB reader)

Rows of denied accesses and alarms are highlighted in red in the dashboard, monitor and history.

25 · Door modes and access rules

Door modes

Mode	Behaviour
Controlled	normal operation: the lock opens for an authorised card, the exit button or a remote opening
Normally open	the lock is always released (e.g. during opening hours, with a scheduled task)
Normally closed	the lock is always locked; cards are refused (reason 11)

Interlock

Option	Doors that cannot be open at the same time
Doors 1 and 2	1 with 2
Doors 3 and 4	3 with 4
Doors 1-2 and 3-4	1 with 2, and 3 with 4 (two independent airlocks)
Doors 1, 2 and 3	any two of 1, 2 and 3
Doors 1, 2, 3 and 4	any two of the four doors

Anti-passback

Option	Reader groups (entry : exit)
(1:2);(3:4)	reader 1 alternates with reader 2, and reader 3 with reader 4
(1,3):(2,4)	readers 1 and 3 alternate with readers 2 and 4
1:(2,3)	reader 1 alternates with readers 2 and 3
1:(2,3,4)	reader 1 alternates with readers 2, 3 and 4

On a 4-door controller with one reader per door, "reader N" is the reader of door N. On 1- and 2-door controllers with in and out readers, check the controller documentation for the numbering.

26 · Troubleshooting

Problem	What to check
The network search finds nothing	Server and controllers on the same network segment; cable and power; firewall allowing UDP port 60000; with Docker, "host" networking. Try adding the controller manually with its IP address.
Controller shown Offline	IP address and port in *Network and configuration*; ping the controller; another program using the controller at the same time.
Swipes do not appear in the Monitor, but appear later in the history	Real-time events are not reaching the server: set `UHPPOTE_LISTENER_PUBLIC` on the server (see the warning on the System page), allow inbound UDP port 60001, then *Configure automatically* the listener on the controller page.
A card is refused although it has permissions	Look at the reason in the history: 13 means outside the time profile; 6 means the card is not on the controller or has no permission on that door — run *Compare* on the Synchronisation page. Check that the person and the card are active and that today is within the person's validity period.
"Saved, but not sent to every controller"	Some controller was offline. When it is back, use *Align cards* or *Full synchronisation*.
"Card number not valid for Wiegand-26"	The number must have facility ≤ 255 and code ≤ 65535. Swipe the card and use the number shown among the unknown cards.
Wrong time in events or reports	Server time zone (`TZ` variable); the controller clock is corrected automatically, or use *Synchronise time*.
Forgotten administrator password	Set `ADMIN_PASSWORD` on the server and restart it; then log in as `admin` .

27 · Glossary

Term	Meaning
Broadcast	a network message sent to all the devices of the local network; used to find controllers
Controller	the access control board (UHPPOTE UT0311-L01/L02/L04)
Event index	progressive number of an event in the controller memory
Facility code	the first part (0–255) of a Wiegand-26 card number
First card	function that keeps a door locked until an authorised person arrives
Interlock	doors that cannot be open at the same time (airlock)
Anti-passback	prevents a card from entering twice without exiting
Listener	the server address to which a controller sends its events
Punch	a swipe used for attendance (clock in / clock out)
Relay	the output of the controller that releases the electric lock
Synchronisation	aligning a controller with the application database

Term	Meaning
Time profile	days and hours in which a permission is valid (ID 2–254)
Wiegand-26	the card format accepted by the controllers: facility × 100000 + code
Zone	group of controllers, used to restrict operators