SILVERCREST®

PDF ONLINE
www.lidl-service.com



MONSIEUR CUISINE SMART SKMS 1200 C1


GB Operating instructions

MONSIEUR CUISINE SMART

IAN 503201_2407

IE

Overview

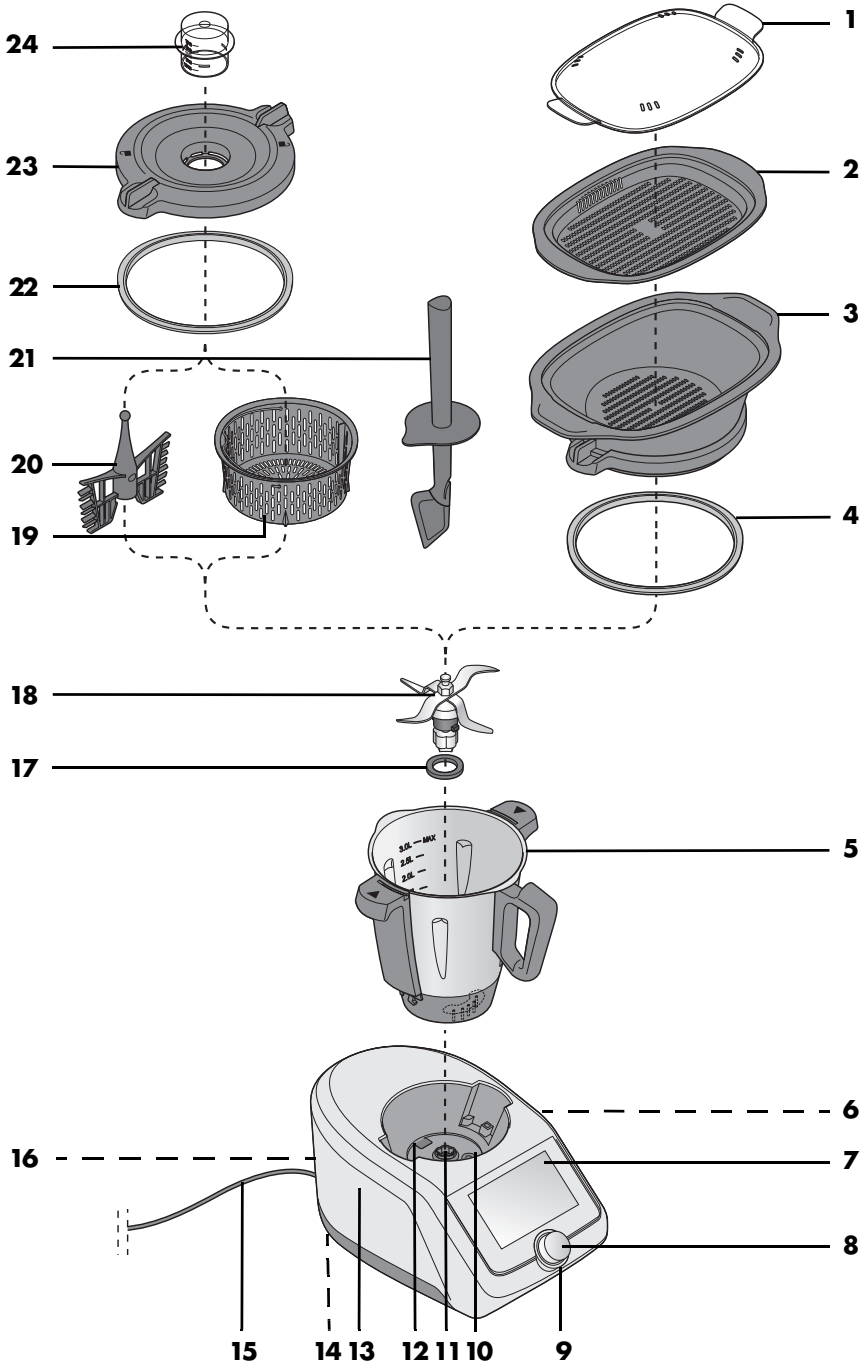

Contents

1. Overview 5
2. Intended purpose 7
3. Safety information 8
4. Items supplied 13
5. Unpacking and setting up 14
6. Use for the first time and connecting to the Internet 15
7. Connecting to an APP 21
8. Software - Basic functions 22
8.1 Calling up the basic function menu 22
8.2 Change menu language 23
8.3 Change country 23
8.4 Brightness and volume 24
8.5 Connect to the Internet (wifi) 25
8.6 Switching off the wifi connection 26
8.7 User account - log in to the Lidl account 27
8.8 User account - register new Lidl account 28
8.9 User account - changes 29
8.10 View storage 30
8.11 Select standby time 30
8.12 Change interface 31
8.13 Privacy consent 32
8.14 Information and search for updates 33
8.15 Factory settings 34
8.16 Changing the device name 35
8.17 Log out 35
9. Quick Check 36
9.1 The programs at a glance 36
9.2 Overview of functions 38
9.3 The Start menu 39
9.4 Automatic programs 40
9.5 Recipes 41
10. Using the blender jug 42
10.1 Markings inside the blender jug 42
10.2 Inserting and removing the blade assembly 43
10.3 Insert blender jug 44
10.4 Insert and remove the mixer attachment 45
10.5 Put on the lid of the blender jug 46
10.6 Measuring beaker as lid for the filling opening 47

10.7 Cooking and steaming with the cooking pot 48
10.8 Using the spatula 49
10.9 Removing the blender jug 50
11. Operating the device 52
11.1 Power supply 52
11.2 Switching the device on and off 52
11.3 Screen 53
11.4 Basic operation 54
11.5 Classic display 55
11.6 Setting the time 56
11.7 Setting the temperature 57
11.8 Pause and end 58
11.9 Set the speed 58
11.10 Anti-clockwise rotation 60
11.11 Turbo function 61
11.12 Scale 62
11.13 Overflow hole 63
12. Cooking modes 64
12.1 Kneading 64
12.2 Adapted cooking 66
12.3 Roasting 67
12.4 Steaming 68
12.5 Cook eggs 76
12.6 Sous-Vide 77
12.7 Slow-Cook 80
12.8 Fermenting 83
12.9 Puréeing 85
12.10 Smoothie 86
12.11 Cook rice 88
12.12 Heat water 89
12.13 Cutting and grating 90
13. Recipes 91
13.1 The most important buttons 91
13.2 General information about CookingPilot 92
13.3 Recipes: important buttons 94
13.4 Search for recipes 95
13.5 Choose a recipe and cook 96
13.6 Save favourite recipes 97
13.7 New recipes: how, when, where? 98
13.8 Filter recipes 100
13.9 Sort recipes 101
13.10 The weekly planner for recipes 102

14. The Shopping List 104
15. Voice control with Google Assistant 107
16. Information menu 109
16.1 My recipes 109
16.2 Cooking history 110
16.3 Favourite Recipes 110
16.4 Tutorials 110
17. Cleaning and servicing the device 111
17.1 Storage 112
17.2 Prerinsing 112
17.3 Cleaning the base unit 113
17.4 Cleaning in the dishwasher 113
17.5 Cleaning the accessories 114
17.6 Cleaning, checking and replacing seals 114
17.7 Cleaning, checking and replacing the spatula 115
17.8 Descaling 116
17.9 Replacing the blade socket 117
18. Malfunctions, Cause, Remedy 118
18.1 Spare parts 118
18.2 Motor runs irregularly 118
18.3 Other malfunctions 119
19. Disposal 121
20. Technical specifications 121
21. How to order accessories 123
22. Website 123
23. Warranty of the HOYER Handel GmbH 123

1. Overview

1 Lid for the steamer attachments
2 Steamer attachment, shallow
3 Steamer attachment, deep
4 Seal for the deep steamer attachment (ensure the correct position)
5 Blender jug
6 **0/I** On/off switch
7 Touchscreen
8 Control dial
9 LED ring
10 Socket for the blender jug
11 Blade socket
12 Overflow
13 Base unit
14 Suction feet
15 Power cable with mains plug
16 Cable compartment
17 Seal for blade assembly (ensure the correct position)
18 Blade assembly
19 Cooking pot
20 Mixer attachment
21 Spatula
22 Seal for the lid of the blender jug (ensure the correct position)
23 Lid for the blender jug
24 Measuring beaker

no image:
25 Silicone cover
26 Unlocking lever

Thank you for your trust!

Congratulations on your new food processor with cooking function *Monsieur Cuisine smart*.

For safe handling of the product and in order to get to know the entire range of features:

- **Read these user instructions thoroughly prior to initial use.**
- **Above all, observe the safety information!**
- **The device should only be used as described in this copy of the user instructions.**
- **Keep this copy of the user instructions for reference.**
- **If you pass the device on to someone else, please include this copy of the user instructions. The user instructions are a part of the product.**

We hope you enjoy your new food processor with cooking function *Monsieur Cuisine smart*!

To keep your product up to date with the state of the art, it is essential that you always keep the Monsieur Cuisine App on your smartphone and/or tablet updated to the latest version.

Symbols on the device


The food-safe material of devices with this symbol will not change the taste or smell of food.

This symbol warns you against touching the hot surface.


This symbol warns you against touching hot steam.

Depiction in these instructions

- The screen has two different types of display: one classic and one modern. We assume in these instructions that you have chosen the modern display. For a description of the classic version and how to change to it see (see „Classic display“ on page 55).

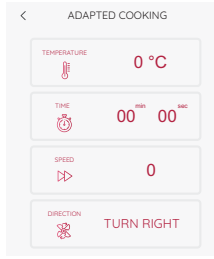

modern display

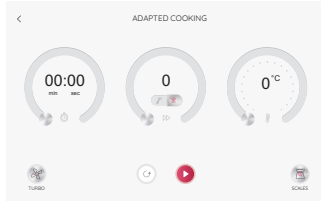

classic display

2. Intended purpose

The *Monsieur Cuisine smart* is used to mix, whisk, beat, stir, chop, purée, emulsify, steam, stew, knead, roast, cook, perform guided cooking via stored recipes, and weigh food.
It can be connected to the Internet and has access to a wide range of recipes.
The device is designed for private, domestic use. The device must only be used indoors.
This device must not be used for commercial purposes.

Foreseeable misuse

WARNING! Risk of material damage!

- ⊙ Do not use the device to chop particularly hard food such as bones or nutmegs.

Third-party products and their risks:

- ⊙ The notice in the copy of the user instructions that only original accessories must be used must be complied with at all times.
- ⊙ Third-party accessories, particularly any that block the safety functions of the *Monsieur Cuisine smart*, are a hazard to your health and automatically **invalidate the operating licence**. Any resultant damage (material damage, financial losses or personal injury) are then the responsibility of the operator or owner. As manufacturer, we accept no liability whatsoever under such circumstances.

Data protection information

Protecting your data is very important to Lidl. That's why you can specify which data you want to share when you register.
You can view the privacy policy at any time in the *Privacy Policy* menu.

1. Press the symbol ≡ at the top right. A window with various menu items will open.



2. Tap on *Privacy Policy* to view it.

Outside the device

- **in the app:** in the app menu under *Privacy Policy.*
- **on the website:** at the bottom of the start page under *Data protection.*

About these instructions

In these instructions, the *Monsieur Cuisine smart* is also called *MC smart* or simply *the device*. We do this for readability and to keep sentences shorter.

Screen buttons are written in *italics*.

Parts of the device are often, but not always, given a number (e.g. base unit **13**). If a word occurs more than once in a sentence or paragraph, it does not always get a number. This would reduce readability, but does not provide any additional information.

The product is constantly being improved.

Therefore, there may be small deviations in the illustrations, especially for the software.

3. Safety information

Warnings

If necessary, the following warnings are used in this copy of the user instructions:

DANGER! High risk: failure to observe this warning may result in injury to life and limb.

WARNING! Moderate risk: failure to observe this warning may result in injury or serious material damage.

CAUTION! low risk: failure to observe this warning may result in minor injury or material damage.

NOTE: circumstances and specifics that must be observed when handling the device.

Instructions for safe operation

- ⊙ Children must not use this device.
- ⊙ This device with its power cable must be stored out of the reach of children.
- ⊙ Cleaning and user maintenance must not be performed by children.
- ⊙ Children must not play with the device.
- ⊙ This device can be used by people with restricted physical, sensory or intellectual abilities or people without adequate experience and/or understanding if they are supervised or instructed on how to use this device safely and if they are aware of the resulting dangers.
- ⊙ The surfaces of the device become very hot during operation. During operation, always use potholders or oven gloves when touching the steamer attachment or the lid for the steamer attachments.
- ⊙ The device must be disconnected from the mains if left unattended and prior to assembly, disassembly or cleaning.
- ⊙ Please remember that the blades of the blade assembly are very sharp:
  - Never touch the blades with your bare hands to avoid cuts.
  - To avoid hurting yourself on the very sharp blades, use clear water when rinsing by hand so that you can easily see the blade assembly.

- When emptying the blender jug, take care not to touch the blades of the blade assembly.
- When removing and inserting the blade assembly ensure not to touch the blades.

⊙ During the turbo function, ensure that no hot ingredients are in the blender jug. These could be ejected and may cause scalding.

⊙ After being switched off, the blade assembly and the mixer attachment will continue to rotate for a while. Please wait until all parts have come to a standstill before unlocking the blender jug and opening the lid.

⊙ This device is not intended to be operated using an external timer or a separate remote control system.

⊙ If the power cable of this device should become damaged, it must be replaced by the manufacturer, the manufacturer's customer service department or a similarly qualified specialist in order to avoid any hazards.

⊙ Prior to the replacement of accessories or attachments which move when in operation, the device must be switched off and disconnected from the mains.

⊙ Make sure that no liquid overflows onto the device plug connection.

⊙ Remember that the surface of the heating element remains hot after use.

⊙ Misuse of the device may result in injuries.

⊙ Caution is advised when pouring hot liquid into the blender jug. The sudden formation of steam could force the liquid out.

⊙ Only use the device when all lids are correctly fitted and/or the safety lock is in the position described.

⊙ Always use a suitable utensil, such as a spatula, to push food down.

⊙ Never put your hand into the blender jug while it is attached to the blender.

- This device is equally intended for use in the home and in applications similar to the home, such as for example...
  ... in kitchens for staff in shops, offices and other commercial settings;
  ... on agricultural properties;
  ... by customers in hotels, motels and other residential facilities;
  ... in bed-and-breakfast establishments.
- Please take note of the chapter on cleaning (see „Cleaning and servicing the device“ on page 111).

⚠ *DANGER for children*

- Packing materials are not children's toys. Children should not be allowed to play with the plastic bags. There is a danger of suffocation.

⚠ *DANGER to and from pets and livestock*

- Electrical devices can represent a danger to pets and livestock. In addition, animals can also cause damage to the device. For this reason you should keep animals away from electrical devices at all times.

⚠ *DANGER! Risk of electric shock due to moisture*

- The device must never be operated in the vicinity of a bathtub, a shower, a filled washbasin or similar items.
- The base unit, the power cable and the mains plug must not be immersed in water or other liquids.
- Protect the base unit against moisture, water drips and splashes.
- If liquid should enter the base unit, pull out the mains plug immediately. Have the device checked before reusing.
- Never touch the device with wet hands.
- If the device falls into water, disconnect the mains plug immediately. Only then is it safe to remove the device.

⚠ *DANGER! Risk of electric shock*

- Only plug the mains plug into the wall socket after the device has been completely assembled.
- Only connect the mains plug to a properly installed and easily accessible wall socket with earthing contact whose voltage corresponds to the specifications on the rating plate. The wall socket must still be easily accessible after the device is plugged in.
- Make sure that the power cable cannot be damaged by sharp edges or hot spots. Do not wrap the power cable around the device.
- Even after it has been switched off, the device is not completely disconnected from the mains. In order to fully disconnect it, pull out the mains plug.
- Make sure that the power cable never becomes a trip hazard, and that nobody can get caught up in or step on it.

- Keep the power cable away from hot surfaces (e.g. hot plates).
- When using the device, ensure that the power cable cannot be trapped or crushed.
- When removing the mains plug from the wall socket, always pull on the plug and never the cable.
- Disconnect the mains plug from the wall socket …
  … if there is a fault,
  … when you are not using the *Monsieur Cuisine smart*,
  … before you assemble or disassemble the *Monsieur Cuisine smart*,
  … before you clean the *Monsieur Cuisine smart* and
  … during thunderstorms.
- Do not use the device if there is visible damage to the device or the power cable.
- In order to avoid any hazards, do not make modifications to the device.
- Never insert objects or fingers into any opening of the device; neither from the outside into the ventilation slots nor into the small openings in the interior.



DANGER! Risk of injury from cutting

- The device must never be operated without the jug.
- Never reach into the rotating blades. Do not touch rotating parts with spoons or similar utensils. Keep long hair and loose clothing away from the rotating parts.
  Single exception: the spatula included in the delivery is designed so that when stirring clockwise it does not come into contact with the blade assembly. The spatula must not be used with the mixer attachment.



FIRE HAZARD

- Before switching the device on, place it on a level, stable, dry and heat-resistant surface.
- It is not necessary to constantly supervise during operation, but just to check regularly. This applies in particular when very long cooking times are set.



DANGER! Risk of injury from burning

- If the contents of the blender jug are hot, the lid must be opened slowly and carefully.
- The mass in the blender jug is still in motion immediately after puréeing and could spill out if the lid is opened too quickly. Therefore, wait approx. 10 seconds after puréeing before opening the lid.
- Only transport the device when it has cooled down.
- Wait for the device to cool down before cleaning.

DANGER! Risk of injury through scalding

- Avoid opening the lid for the steamer attachments during the cooking process, since hot steam will escape.
- Make sure that hot steam escapes through the steam vents of the lid for the steamer attachments. Never cover these openings, since otherwise steam might have backed up in the device escaping abruptly when the lid is opened.
- If you want to open the lid for the steamer attachments, carefully lift the lid first on the back rear so that the escaping surge of steam is guided away from you.

WARNING! Risk of material damage

- Place the device exclusively on a level, dry, non-slip and waterproof surface, so that it can neither fall nor slip off.
- Never place the device on a hot surface, e.g. a hot plate.
- The mixer attachment must only be used with speed settings 1 to 4.
- The turbo function must not be used when using the mixer attachment.
- Use the blender jug exclusively with the lid in place, otherwise liquid might be ejected.
- Do not change the position of the device, as long as there is still food or dough in the device.
- Never overfill the blender jug, since otherwise the contents might be ejected. Overflowing liquid would flow onto the surface. You should therefore place the device on a waterproof surface.
- Ensure that during steaming, there is never too much or too little water in the device.
- Never place the device directly under a wall-mounted cupboard, as steam escapes from the top and could damage the furniture.
- Only ever use clean drinking water for producing steam.
- Do not operate the device when it is empty, as this causes the motor to overheat and may result in it becoming damaged.
- Only use the original accessories.
- Do not use any astringent or abrasive cleaning agents.
- The device is equipped with non-slip plastic suction feet. As furniture is coated with a wide array of varnishes and plastics and is also treated with different care products, it cannot be fully ruled out that some of these materials contain ingredients that could attack and soften the non-slip plastic suction feet. If necessary, place a non-slip mat under the device.

4. Items supplied

1 food processor with cooking function *Monsieur Cuisine smart*, base unit **13**
1 blender jug **5** with:
- -blade assembly **18**
- -lid **23** for the blender jug
- -measuring beaker **24**

1 cooking pot **19**
1 mixer attachment **20**
1 spatula **21**
1 silicone cover **25**
1 steamer attachment, comprising:
- -steamer attachment, deep **3**
- -steamer attachment, shallow **2**
- -lid for the steamer attachments **1**

1 complete copy of the user instructions (on the Internet)
1 copy of the short manual (enclosed with the device)

How to reorder accessories

If you want to reorder parts, simply scan the QR code. You can learn more and reorder parts on the website.



5. Unpacking and setting up

During production, a thin film of oil is applied to protect many components. Prior to the first use, operate the device only with water so that any residues can evaporate.

NOTE: when the device is used the first few times, some odour may be generated by the device due to the heating of the motor. This is harmless. Please ensure adequate ventilation.

1. Remove all packing material. Do not forget the transport lock of the overflow **12**. It is located at the bottom of the device. Tilt the device slightly and simply pull it out of the opening.
2. Check to ensure that all parts are present and undamaged.
3. **Clean the device prior to the first use!** (see „Cleaning and servicing the device" on page 111).
4. Use the blender jug **5** to bring 3 litres of water to a boil once, pouring it away afterwards (see „Setting the temperature" on page 57).
5. Place the base unit **13** on a level, dry, non-slip and waterproof surface, so that it can neither fall nor slip off.

CAUTION!

⊙ Overflowing liquid would flow onto the work surface. You should therefore place the device on a waterproof surface.

6. Use for the first time and connecting to the Internet

You can use your *Monsieur Cuisine smart* at any time without an Internet connection. Connecting to the internet, however, opens up a multitude of possibilities, for example:

- Expand the number of recipes on your device,
- Use smart functions by connecting the device with the app „Monsieur Cuisine" on your smartphone or tablet,
- Voice control of the device via the app „Google home",
- Log in to your customer account.

How to find information about your wifi network!

If you are not sure what your wifi network or password is, here are some tips on where to find the information.

- Look at the back or underside of your router. There you will usually find all the information you need.
- Check the documentation you received from your network provider.
- Name of the wifi network:
  This is usually mentioned under "Wifi name" or "SSID Name" or a combination of both "Wifi name (SSID)". After this comes the name. If you see this in the list of the *Monsieur Cuisine smart*, tap on it.
- Name of the password:
  This is usually to be found under "Name wifi password" or "Wifi key". It is mostly followed by WPA, WPA2 or similar in brackets, which is the encryption type. This is followed by the password, usually as a combination of numbers and letters or just numbers.

General information about the wifi connection

- Signing in to your wifi network is only necessary when connecting for the first time or after you have made changes to your wifi network.
- Your *Monsieur Cuisine smart* will remember a network to which it was connected once and will automatically reconnect.
- As a rule, a password must be entered when first connecting. In the unusual case that your network is unsecured, no password needs to be entered.
- Your *MC smart* only works with a Wi-Fi network with a frequency of 2.4 GHz. If the Wi-Fi is not displayed, activate the 2.4 GHz Wi-Fi in addition to the 5 GHz Wi-Fi in the settings menu of your router and connect the *MC smart* to it. Most routers automatically assign this frequency to the *MC smart*.
  If this is not the case and the device cannot be connected to the Wi-Fi, assign a new name to the 2.4 GHz Wi-Fi in the settings of your router that is different from the 5 GHz Wi-Fi and connect the *MC* to that Wi-Fi. Other devices that operate on the 2.4 GHz Wi-Fi and were previously connected to it must be reconnected to it.


Switching on for the first time




1. Connect the mains plug **15** to a suitable wall socket. The wall socket must still be easily accessible after connection. Pull only as much cable as necessary out of the cable compartment **16**.
2. Set the on/off switch **6** at the rear on the right to **I**: the touchscreen **7** begins to light up.
3. After a few seconds, the screen appears for you to select the language. Tap the desired language and then tap on the save button *NEXT*.
4. Tap the desired country and then tap on the *NEXT* button.



5. A list with all visible WLAN networks appears.
   - When first selected, WLAN networks will be searched for automatically.
   - All WLAN networks found are displayed in a list.
   - Tap *Skip* with your finger if you do not want to connect to the Internet, and confirm your choice. The following is a brief introduction to the software. Tap on the screen for the next step.
   - After the end of the introduction, the start menu appears on the screen.
6. Swipe your finger on the screen to scroll up and down the list.
7. Tap your WLAN network with one finger.

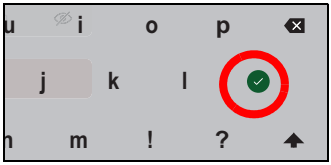

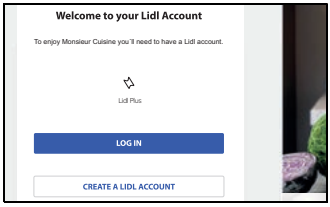


8. If the network is unprotected, the connection will now be established. However, a small window will probably pop up, in which you will need to enter the WLAN password (WLAN key).
   If necessary, tap on the password field and a keyboard will appear for you to enter the password.
9. After entering, press the button with the tick. The connection will be established.
10. In the new window you can create a Lidl account, log in to your existing Lidl account or skip both.
    - Tap *Skip* if you do not want to do either.
    - Tap *LOG IN* to log in to your existing Lidl account. Just follow the instructions on the screen. Your *MC smart* is automatically registered when you log in to your Lidl account.
    - Read the next section to create a new Lidl account.

NOTES:


- **Existing account:** you can register your *MC smart* with your Lidl online account or with your Lidl Plus account.
- **New account:** when you register a new *MC smart*, a new account is automatically created. This is always done according to the current Lidl specifications.

Create your first Lidl account

If you don't have a Lidl account yet, but want to enjoy all the benefits of your new *MC smart*, create an account now.

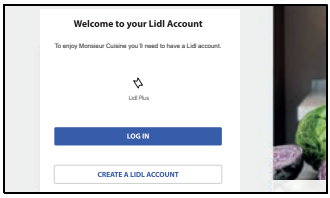

1. Tap on *CREATE A LIDL ACCOUNT*.

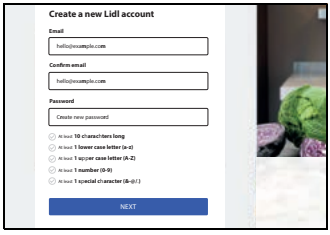

2. Enter your email address twice and then the password.
3. Press the arrow key to confirm.
   A new window appears on the screen. An email with a code will be sent to the email address you entered.
4. Enter the code from the email into the field.
5. Tap the green arrow on the right side of the keyboard.
6. Tick the box to agree to the Terms & Conditions of Use. No account will be created without consent.
   If you like, you can also subscribe to the newsletter. To do this, simply tick the box.
7. Tap the bottom button to create your Lidl account. When this is done, a short message appears on the screen. A new window will open automatically.
8. In the privacy window, you can specify whether and, if so, which data you would like to share.
   - If you do not want to share any data, tap on *DECLINE ALL*.
   - To share all data, tap on *CONSENT TO ALL*.
   - If you only want to share some data, tap the respective boxes and then tap *ACCEPT SETTINGS*.



9. The following is a brief introduction to the software. Tap on the screen for the next step. After the end of the introduction, the start menu appears on the screen.


Once the connection is established and you are logged in to your member account, new recipes from our website will automatically be loaded and saved in the *Monsieur Cuisine smart*.

Clean the device and all parts which come into contact with food prior to their first use!

7. Connecting to an APP

For even more freedom and fun when cooking, you can connect your *Monsieur Cuisine smart* to an app.

These are the advantages
- Create your own recipes on your smartphone
- Create shopping lists
- Work with a weekly planner
- Rate recipes on your smartphone
- Personalised recipe suggestions
- Monitoring of the current cooking process
- Select recipe in the smartphone app and open directly on the device

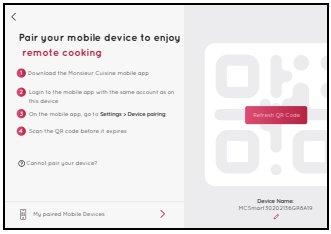


1. Download the *Monsieur Cuisine Mobile* app to your smartphone. To do this, go to the AppStore or Google Play Store. From there you can download them to your smartphone for free.
2. After opening the app, log in with the Lidl account that you also use for the *Monsieur Cuisine smart* smart.
3. Your *Monsieur Cuisine smart* must also be logged in and connected to the internet. If this is not yet the case, please do so now.
4. In the device menu *Settings*, open the *DEVICE PAIRING* item and in the app, open the *Device Pairing* menu.
5. Follow the instructions on the devices' screens. If the QR code on the device has expired, you can request a new one. Simply tap on *Refresh QR Code*.

Disconnecting from another device

Tap *My Paired Mobile Devices* in the bottom left-hand corner. In the window that opens, press *Unpair* and then *UNPAIR* again.

8. Software - Basic functions

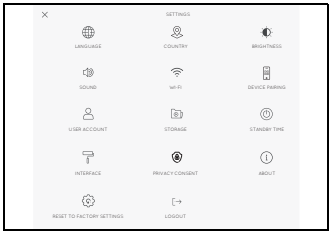



In this chapter we describe the basic settings such as changing the language, calling up the unit information or editing the wifi function.

8.1 Calling up the basic function menu



1. You will see the ☰ symbol in different menus. Among others in the
   - home screen,
   - in the main menu of *MODES*,
   - in the main menu of *RECIPES*.
2. Tap the ☰ symbol.
   The information menu appears.

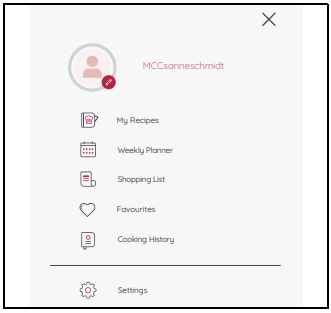

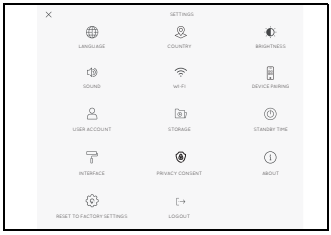

3. Tap on *Settings*. The menu of basic functions appears.
4. To open the menu of a basic function, press the corresponding symbol.


8.2 Change menu language



If desired, you can change the language used.

1. The menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Tap on one of the languages.
3. Tap the *CHANGE LANGUAGE* button at the bottom of the screen to save.
4. In the next window confirm the change of language.
   Your device restarts automatically and can then be operated with the new menu language.

8.3 Change country

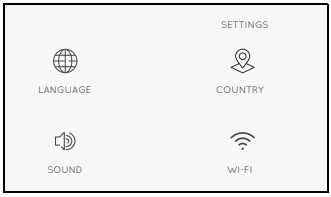


You can change the country if you have moved or are travelling. The language will not be change. This is useful if you have moved abroad and want to connect via the local server. You will then receive emails or recipes from these servers while continuing to use your *MC smart* in a different language.

1. The menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Tap on one of the countries.
3. Tap the *CHANGE COUNTRY* button at the bottom of the screen to save.
4. Confirm the change of country in the next window.
   Your device will reboot automatically.

8.4 Brightness and volume



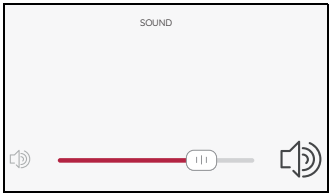

In these menus you can set the brightness and the volume.

1. The menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Move the control dial to the desired position.
   - The change in brightness is immediately visible.
   - The speaker plays a test tone after the setting has been made.
3. Tap the arrow key < at the top left to exit the menu. The setting is saved.

Repeat audio signal

When a process is finished, *Done* is displayed and an acoustic signal sounds. If you want the acoustic signal to be heard more than once, switch on this function.

1. Tap *ON*.
2. Select one of the 4 possible times.
3. Exit the menu.

When now you hear the acoustic signal, you can cancel it by moving the control dial or by going to the next step.

To switch off the function completely, tap *OFF* once in the sound menu.

8.5 Connect to the Internet (wifi)

Quick access



Simply click on the wifi symbol at the top of the *RECIPES* or *MODES* menu to open the menu.

If you did not establish a wifi connection when you first switched on, you can do so here.


Access through the menu





1. The menu has been opened as described in chapter **8.1** or above and is displayed on the screen.
2. Tap *ON* if necessary.

   A list of all visible wifi networks appears.
   - When first selected, wifi networks will be searched for automatically.
   - Detected wifi networks are displayed in a list.
   - All visible wifi networks are displayed.
   - If the device has already been connected to a wifi network, this connection is automatically re-established after switching on. To do this, simply switch on the wifi network and make sure that the password has not changed.
3. Swipe your finger on the screen to scroll up and down the list.
4. Tap your wifi network with one finger.
5. If the network is unprotected, the connection will now be established. However, a small window will probably pop up, in which you will need to enter the wifi password (wifi key).
   There will also be a keyboard on which you can enter the password.

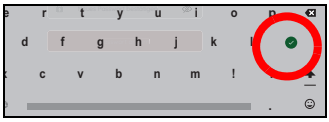


6. After entering, press the button with the tick.
   The connection is being established.
   When the connection is established, this is briefly displayed at the top of the window.
   You will now see the menu of basic functions.

   In the wifi menu, the active wifi is at the top of the list. The name is written in colour. Under the name it says *Connected*.

8.6 Switching off the wifi connection



Wifi is switched on:
Wifi connection possible




Wifi is switched off:
Wifi connection is impossible

- To cancel the connection to the Internet, tap *OFF*.
  The window with the wifi list disappears. In the new window you will be asked to switch on the wifi again.

8.7 User account - log in to the Lidl account


Quick access



Simply click on the symbol at the top of the *RECIPES* or *MODES* menu to open the menu.

NOTE: MC connect accounts can no longer be used.

If you have logged in to your user account, new recipes are automatically downloaded to your device. You can also manage and rate recipes and read the latest information at any time.

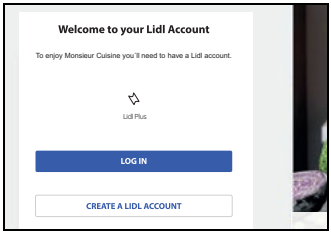


1. The *USER ACCOUNT* menu has been opened as described in chapter **8.1** or above and is displayed on the screen.
2. Tap on *LOGIN*.
3. Tap in the upper field and enter the desired data.
4. Tap on the round field with the arrow.
5. Type in the password.
6. Tap on the round field with the arrow. The connection is established.

NOTE: under *SETTINGS* you can now also see the new *LOGOUT* menu.


8.8 User account - register new Lidl account

Quick access




Simply click on the symbol at the top of the *RECIPES* or *MODES* menu to open the menu.

If you don't have a Lidl account yet, but want to enjoy all the benefits of your new *MC smart*, create an account now.

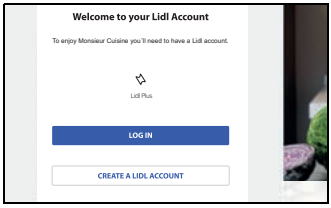

1. The *USER ACCOUNT* menu has been opened as described in chapter **8.1** or above and is displayed on the screen.

NOTE: if you are already registered, your user name will appear here.

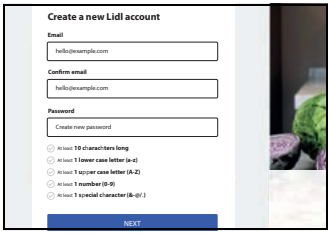

2. Tap on *CREATE A LIDL ACCOUNT*.
3. Enter your email address twice and then the password.
4. Press the arrow key to confirm.
   A new window appears on the screen. An email with a code will be sent to the email address you entered.

5. Enter the code from the email into the field.
6. Tap the green arrow on the right side of the keyboard.
7. Tick the box to agree to the Terms & Conditions of Use. No account will be created without consent.
   If you like, you can also subscribe to the newsletter. To do this, simply tick the box.
8. Tap the bottom button to create your Lidl account. When this is done, a short message appears on the screen.

9. In the privacy window, you can specify whether and, if so, which data you would like to share.
   - If you do not want to share any data, tap on *DECLINE ALL*.
   - To share all data, tap on *CONSENT TO ALL*.
   - If you only want to share some data, tap the respective boxes and then tap *ACCEPT SETTINGS*.



The following is a brief introduction to the software. Tap on the screen for the next step. After the end of the introduction, the start menu appears on the screen. Once the connection is established and you are logged in to your member account, new recipes from our website will automatically be loaded and saved in the *Monsieur Cuisine smart*.

Clean the device and all parts which come into contact with food prior to their first use!

8.9 User account - changes

Edit user name

1. Tap on *USER ACCOUNT*.
2. Tap on your user name.
3. Tap in the field and enter the new user name.
4. Confirm the name by tapping the tick.

8.10 View storage



The menu has been opened as described in chapter **8.1** and is displayed on the screen.
You can see how much storage space is still free and how much is already occupied.

- Tap the arrow key < at the top left to exit the menu.

8.11 Select standby time




Here you select how long the screen should remain on after the last setting. When the selected time has elapsed, you will receive a message for approx. 25 seconds. Make some kind of setting to prevent it from switching off. If you do not make any setting, the device switches to standby.

1. The menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Move the control dial to the desired position. You can select the switch-off time in steps of one minute between 5 and 20 minutes. The selected time is displayed.
3. Tap the arrow key < at the top left to exit the menu. The setting is saved.


8.12 Change interface

In this menu you can choose between a classic and a modern display of the cooking programmes.


1. The *INTERFACE* menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Tap either on *MODERN* or *CLASSIC*.



3. Tap the arrow key < at the top left to exit the menu. The setting is saved.

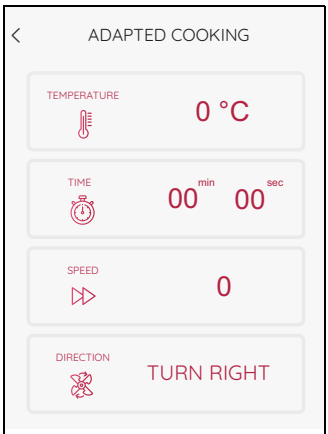

modern display

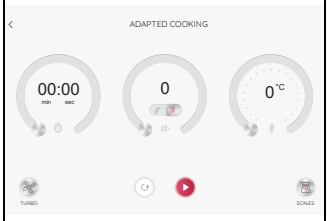


classic display

8.13 Privacy consent

Your MC smart can share data. You can change your settings here. Determine if and what data may be passed on.

NOTE: you must be logged in to your Lidl account to change your setting.

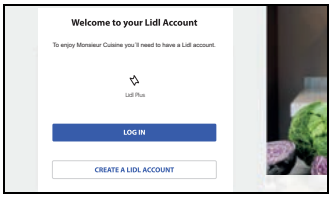


1. Tap on *PRIVACY CONSENT*.
2. If you see the screen shown on the left, you either don't have a Lidl account or you're not logged in. In both cases, no data is transmitted from the device.
3. In the privacy window, you can specify whether and, if so, which data you would like to share.
   - If you do not want to share any data, tap on *DECLINE ALL*.
   - To share all data, tap on *CONSENT TO ALL*.
   - If you only want to share some data, tap the respective boxes and then tap *ACCEPT SETTINGS*.

NOTE: a tick appears in the box when it is activated.
Tap the box again to deactivate. If the tick has disappeared, no data will be transmitted.

8.14 Information and search for updates

A software update may, for example, contain improvements for the existing software.
After opening the *ABOUT* menu, the system automatically searches for an update. If one is found, you will receive a corresponding message.

On the left of the screen you will see the information about the search.

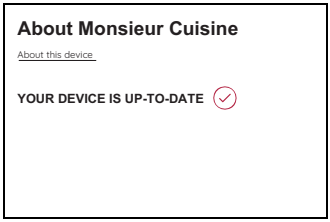


- The menu *ABOUT* has been opened as described in chapter **8.1** and is displayed on the screen.
  A search for a new update starts immediately after it has been opened.
- It shows that your software is up to date if no new update is needed.
- If an error is displayed after the search, you can start a new search.
- If new software is found, it will be displayed. Follow the instructions on the screen. The installation begins. Do not switch off the device during installation. After the installation, the device restarts.


NOTE: there are also updates you need to make. These will automatically be displayed when the device is connected to the internet. Start the update on the screen. Do not switch off the device while this process is running. You will see this on the screen.

Open information

- Tap on *About this device*.
  In the new window you will see different serial numbers. Press *Done* to close the window.

8.15 Factory settings

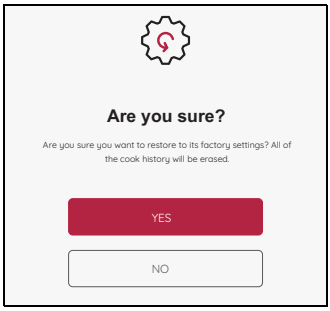

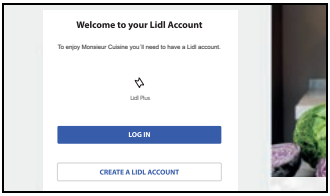

Resetting to factory settings deletes all settings and your cooking history.

1. The menu has been opened as described in chapter **8.1** and is displayed on the screen.
2. Tap the *YES* button to start the function. The home screen appears briefly and then the language menu.
3. Tap the desired language and then tap on the save button.
4. Tap the desired country and then tap on the save button.
5. Now select your wifi and enter the wifi key/ password. Tap the tick to save the entry.
6. In the new window you can create a Lidl account or log in to your existing Lidl account. Press *Skip* if you do not want to do either now. Tap on *Skip* again.
7. Tap on the corresponding field to create a new Lidl account or if you want to log in to your existing Lidl account. Follow the instructions on the screen.
8. In the privacy window, you can define which data you want to share.
   - To activate, tap the small boxes or tap *CONSENT TO ALL*.
   - If you do not want to activate any service or only one, tap *ACCEPT SETTINGS*.
9. The following is a brief introduction to the software. Tap on the screen for the next step. After the end of the introduction, the start menu appears on the screen.

8.16 Changing the device name

You can easily change the preset device name.


1. Go to the device's *Settings* menu and open the *DEVICE PAIRING* item.
2. Tap *Device Name* in the bottom right-hand corner.
3. In the next window, tap on the top line, delete the old name and enter your desired name. A message appears briefly stating that the device name has been updated.
4. Press < in the top left-hand corner to close the window.

8.17 Log out

This menu will only be visible if you have created a Lidl account and are currently logged in.

1. On the screen you will see the menu for the basic settings.
2. Tap on *LOGOUT*.



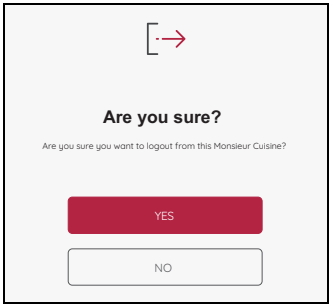

3. Tap on *YES* to start the logout process. You will again see the menu for the settings. However, the *LOGOUT* submenu is now no longer visible. This menu will only be visible if you have created a Lidl account and are currently logged in (see „User account - log in to the Lidl account“ on page 27).

9. Quick Check

9.1 The programs at a glance

Symbol in the touch display	Programme	preset temperature (adjustable range)	preset speed (adjustable range)	preset time (adjustable range)
	**SCALE**	–	–	–
	**KNEAD**	0 °C (–)	4 (–)	2 min. (1 sec. – 4 or. 6 min.)
	**ADAPTED COOKING**	0 °C (0 – 130 °C)	0 (0 – 10)	0 min. (0 sec. – 99 min.)
	**ROAST**	130 °C (0 – 130 °C)	1 (–)	7 min. (0 sec. – 14 min.)
	**STEAM**	120 °C (–)	1 (–)	20 min. (0 sec. – 60 min.)
	**COOK EGGS**	130 °C (–)	1 (–)	8 min. (1 – 20 min.)
	**SOUS-VIDE**	60 °C (40 – 85 °C)	1 (–)	6 hrs. (1 min. – 12 Std.)
	**SLOW-COOK**	90 °C (37 – 95 °C)	1 (–)	4 hrs. (1 min. – 8 hrs)
	**FERMENT**	40 °C (37 – 65 °C)	1 (–)	8 hrs. (1 min. – 12 hrs)
	**TURBO**	–	–	– (20 sec.)
	**PURÈE**	0 °C (–)	8 (–)	30 sec. (1 sec. – 2 min.)
	**SMOOTHIE**	0 °C (–)	10 (–)	1 min. (1 sec. – 2 min.)
	**COOK RICE**	100 °C (–)	1 (–)	30 min. (1 sec. – 40 min.)

Symbol in the touch display	Programme	preset temperature (adjustable range)	preset speed (adjustable range)	preset time (adjustable range)
	**HEAT WATER**	(–) (–)	(–) (–)	(–) (–)
	**PRE-RINSE**	controlled by the programme	–	Short: 90 sec. Long:105 sec.
	**FOOD PROCESSOR**	(–) (–)	(5) (–)	(30 sec.) (1 sec. – 5 min.)

9.2 Overview of functions

Button/ Working tool	Function	Notes
TARE / Weighing	Weighing accurately to 1 gram with the tare function (set to *0* to weigh additional ingredients)	- Up to 5,000 g - Works only in idle state, not during operation
TURN LEFT	Gentle stirring of food that is not to be chopped	- Speed 1 - 3
TURBO	- Press the button to switch to the highest speed for 20 seconds, e.g. to chop nuts, small amounts of herbs or onions - Keep the button pressed for as long as you want the function to be active	- Function is blocked if the food temperature in the blender jug exceeds 60 °C - For liquids: up to max. 2.5 litres - Do not use with a mixer attachment **20**
Blade assembly **18**	- For mincing, chopping, puréeing - For the program *KNEAD* - With the function *TURN LEFT* for gentle stirring	- Must always be used to seal the blender jug **5** - If necessary, cut food first in pieces with an edge length of approx. 3 - 4 cm
Mixer attachment **20**	For fluid food - To whip cream (at least 200 g) - To whip egg white (at least 4 eggs) - To emulsify (e.g. mayonnaise)	- Must only be used with speed settings 1 to 4 - Must not be used with function *TURBO*
Cooking pot **19**	To cook and steam	Fill the blender jug **5** with at least 500 ml of water
Recipes for guided cooking	The individual steps of a recipe are displayed on the screen step by step.	The function is possible for the recipes in the device as well as for the recipes you have downloaded to the device.

9.3 The Start menu

This menu appears after switching on the *Monsieur Cuisine smart*. Here you can open, for example, the two main menus *RECIPES* and *MODES*. The information menu or the network information can also be opened here.

You can open the information menu here. There you will find the basic settings and recipe information.

The bell indicates new recipes with a dot.

Here you can access the settings for your user account.

Open an overview of the wifi networks.



Opens the preset cooking programs


Here you can find the recipes.

9.4 Automatic programs

Lots of practical automatic programs can be found here. You can implement your own ideas in manual cooking. In addition, the scale, the Turbo and the program for prerinsing can be selected here.

A quick tap is all it takes to get to the recipe menu.

Here you can switch to a different representation of the programme view.

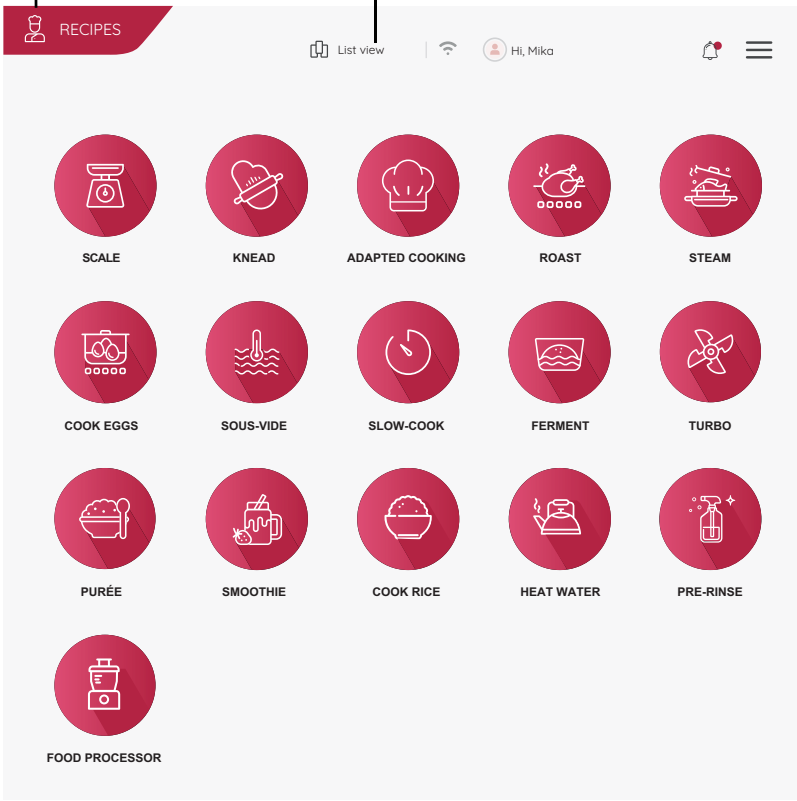

Tap on one of the buttons to open the function. You can find more information in the corresponding chapters.

9.5 Recipes


This menu takes you to many recipes. On the screen you will automatically be guided through all steps of the selected recipe. Just read and follow the instructions on the screen: cooking has never been easier.

Tap X once and the active filters will be deleted. You can access all of the recipes again.

Open the menu for the filters. They help you narrow down your search.

Choose from the different settings.

Open the search menu.

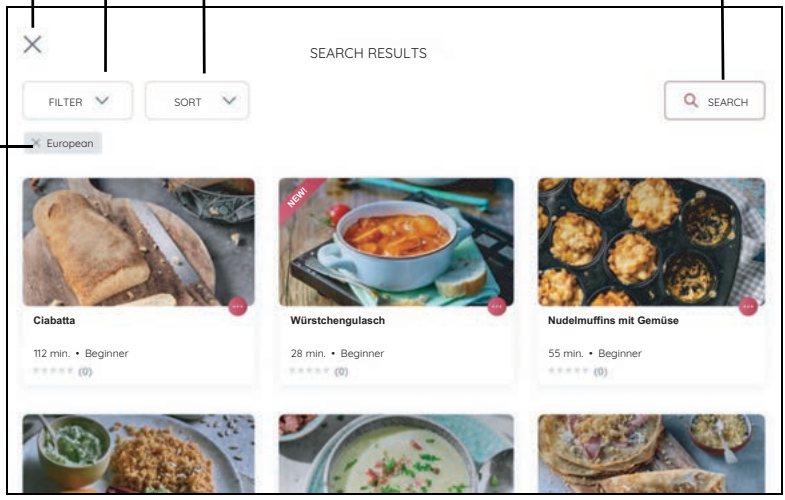

Here you can see the active filters. Only the recipes that match the filters are displayed.

Tap on a recipe to start editing. Then simply follow the instructions on the screen.

10. Using the blender jug


Application area

The blender jug **5** is suitable, for example, for mixing liquids, making smoothies, chopping ice cubes and nuts, puréeing cooked or soft vegetables and fruit.

NOTES:

- These user instructions describe the basic functions such as mixing, chopping and steaming.
- The quantities of food indicated in the recipes are the quantities of unpeeled food.

10.1 Markings inside the blender jug

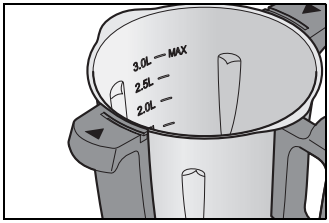

On the inside, the blender jug **5** is provided with markings regarding the filling volume. There are 6 markings from 0.5 litres (0.5L) to 3.0 litres MAX (3.0L MAX).

- 3.0L marking: approx. 3 litres, corresponds to the maximum permissible filling volume.


CAUTION!

⊙ When mixing liquids at speed 10 or with the *TURBO* button, the blender jug **5** must not contain more than 2.5 litres, since otherwise liquid might be ejected. For speed settings of less than 10, the blender jug **5** may only be filled up to a maximum of 3 litres.

NOTE: for some applications, the blender jug **5** should not contain an insufficient amount of liquid, so that the device can function properly. Thus, for whipping cream, for instance, you should use at least 200 ml and when beating egg white use at least 4 eggs.

10.2 Inserting and removing the blade assembly

The blade assembly **18** is used to chop food. The blender jug **5** must never be used without the blade assembly **18**, since the blade assembly **18** seals the blender jug **5** on the bottom.

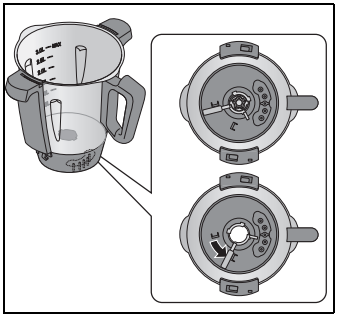

DANGER! Risk of injury from cutting!

⊙ Please remember that the blades of the blade assembly **18** are very sharp. Never touch the blades with your bare hands to avoid cuts.


In order to remove the blade assembly **18**, proceed as follows:

1. Position the blender jug **5** horizontally.
2. Press the unlocking lever **26** on the underside of the blender jug **5** so that it points to the open lock symbol.
3. Pull out the blade assembly **18** carefully towards the top.



In order to insert the blade assembly **18**, proceed as follows:

1. Position the blender jug **5** horizontally.
2. Insert the blade assembly **18** from the top. Please take note that the two cams at the bottom of the blade assembly **18** must be pushed through the two recesses in the underside of the blender jug **5**.

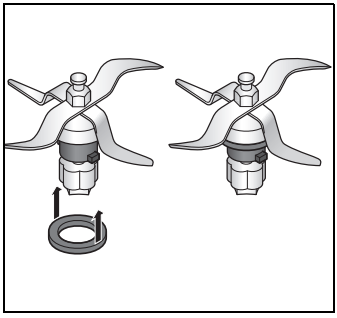

CAUTION!

⊙ Ensure that the seal **17** is properly positioned on the blade assembly **18**, since otherwise the contents might escape.

3. In order to lock the blade assembly **18**, move the unlocking lever **26** on the underside of the blender jug **5** so that it points to the closed lock symbol.



NOTE: chop large pieces into smaller ones with an edge length of approx. 3 - 4 cm before putting them into the blender jug. Otherwise larger pieces might get stuck in the blades.

10.3 Insert blender jug

1. Place the blender jug **5** into the socket **10**. The front with the handle faces you.
2. Press the blender jug **5** down slightly until it is properly seated.

NOTES:

- If the blender jug **5** cannot be pressed downwards, you need to "wobble" it slightly so that the flower-shaped hub of the blade assembly **18** in the blender jug **5** engages with the blade socket **11**.
- Should the blender jug **5** not be positioned correctly, a safety mechanism prevents the functioning of the device.

10.4 Insert and remove the mixer attachment

The mixer attachment **20** serves to combine liquid foods, e.g. to whip cream, beat egg white, emulsify (e.g. mayonnaise).
The mixer attachment **20** is put onto the blade assembly **18**:

- The wings of the mixer attachment **20** are located in the spaces between the blades.
- For further notes: see „Overview of functions“ on page 38.


CAUTION!

⊙ The mixer attachment **20** must only be used with speed settings 1 to 4.
⊙ The *TURBO* button must not be pressed if the mixer attachment **20** is used.
⊙ When using the mixer attachment **20**, the spatula **21** must not be used, since it might get into the mixer attachment **20**.
⊙ When adding food, ensure that it will not block the mixer attachment **20**.


- In order to remove the mixer attachment **20**, pull it out upwards. If you feel resistance, turn it slightly.

10.5 Put on the lid of the blender jug

NOTE: the lid **23** for the blender jug may only be put on when the blender jug **5** has been correctly inserted into the base unit **13**. If you attach the lid first, the blender jug can no longer be inserted into the base unit.

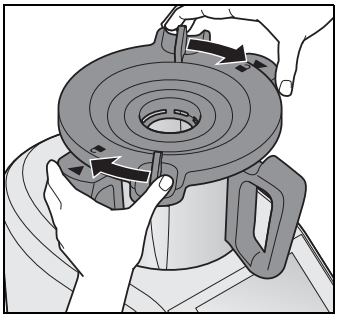

1. Place the lid **23** for the blender jug so that the lock symbols are opposite the arrows on the blender jug **5**.
2. Turn the lid **23** clockwise with both hands.

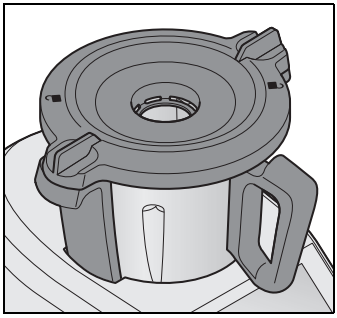

Only when the lid **23** is correctly closed, the device can start.
When you are in a programme, an audio signal indicates that the device is ready to be used.

10.6 Measuring beaker as lid for the filling opening

Simultaneously, the measuring beaker **24** is used to close the lid of the blender jug **5** and to measure ingredients (20 ml to 100 ml).

- To close the blender jug **5**, place the measuring beaker **24** in the lid **23** with the opening facing downwards. Lock it by turning it clockwise. It clicks audibly.

CAUTION!

⊙ Prior to removing the measuring beaker **24**, you must reduce the speed to setting 1, 2 or 3, so that no food can be ejected.

- In order to fill in ingredients, the measuring beaker **24** can be removed briefly.
- To measure ingredients, turn the measuring beaker **24** upside down and fill in the food. The values can be read in ml.

10.7 Cooking and steaming with the cooking pot

1. Fill the blender jug **5** with at least 500 ml of water. Only fill so much water into the blender jug **5** that the maximum filling volume of 3 litres will not be exceeded when the food is added.
   - If the entire food is covered by water, it will be cooked.
   - If the food is not completely covered by water, it will be steamed.
2. Fill food into the cooking pot **19**.

NOTE: always make sure that the filling level does not exceed the marking **MAX**.

---


3. Put the cooking pot **19** into the blender jug **5**.
4. Close the blender jug **5** with the lid **23** and the measuring beaker **24**.
5. Use the on/off switch **6** to switch the device on.
6. Select *ADAPTED COOKING*.
7. Tap on *TEMPERATURE* and set the desired temperature on the control dial **8**, e.g. 100 °C for cooking.
8. Tap on *TIME* and set the desired time on the control dial **8**.
   The set time and the selected temperature are displayed on the touchscreen **7**.
9. Select the speed setting *1* for an even distribution of the heat in the water.
10. Press the *START* button. The device starts to operate.
11. After the set time has elapsed, a signal sounds.
12. Press the on/off switch **6** to switch the device off.

10.8 Using the spatula


The spatula **21** is used to stir the ingredients and to remove the cooking pot **19**.

CAUTION!


- ⊙ The spatula **21** must not be used with the mixer attachment **20** in place. Otherwise, the spatula **21** might be caught in the mixer attachment **20**.
- ⊙ Do not use any other kitchen utensil to stir the ingredients. The utensil might get into the blades and cause damage.

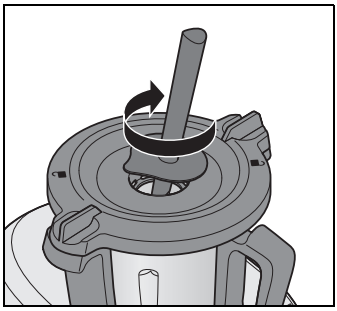

- Always stir **clockwise**. The spatula **21** is designed so that it cannot come into contact with the rotating blade assembly **18** when stirring in a clockwise direction.

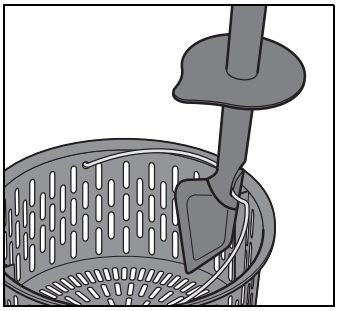

- The hook on the rear of the spatula **21** can be used to remove the hot cooking pot **19** without having to touch it directly. Simply hook on the metal bracket of the cooking pot **19** and pull it out upwards.

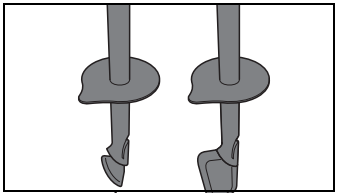

Tips for changing the tip and for cleaning: (see „Cleaning, checking and replacing the spatula“ on page 115).

10.9 Removing the blender jug



DANGER! Risk of injury from burning!

⊙ When the contents of the blender jug **5** are hot, open the lid **23** slowly and carefully. Immediately after puréeing, the mass in the blender jug is still moving and could gush out if the lid is opened too quickly. Therefore, wait approx. 10 seconds after puréeing before opening the lid.

1. Turn the lid **23** with both hands anticlockwise and then remove it.
2. Remove the blender jug **5** upwards.

Stirring, puréeing and beating

Food	Quantity	Setting	Time
Whip the chilled whipped cream until firm	200 g	3	2 - 2 minutes 30 seconds, checking constantly
Fruit, uncooked, purée	250 g	9	1 minute
Vegetables, cooked, purée	250 g	9	45 seconds
Vegetables, uncooked, purée	250 g	9	1 minute

Chopping and grinding

Food	Quantity	Setting	Time
Almonds	200 g	10	10 seconds
Apples (in pieces)	600 g	5	6 seconds
Bread rolls	1	8	20 seconds
Buckwheat	250 g	10	1 minute
Cabbage (red/white)	500 g	6	8 seconds
Carrots (sliced, approx. 5 cm)	500 g	6	8 seconds
Chocolate/chocolate coating	200 g	8	15 seconds
Coffee beans	100 g	10	45 seconds
Garlic	1 clove	8	5 seconds
Herbs	20 g	6	8 seconds
Ice cubes	250 g	Turbo	3 x 1 second
Linseed	100 g	10	15 seconds
Meat (frozen)	100 g	8	16 seconds
Nuts	200 g	10	10 seconds
Oats	250 g	10	1 minute 30 seconds
Onions	1	6	8 seconds
Peppercorns	20 g	10	20 seconds
Poppy seeds	250 g	9	35 seconds
Potatoes (in pieces)	1 kg	5	10 seconds
Rye	250 g	10	1 minute 30 seconds
Sesame seeds	50 g	10	10 seconds
Spelt	250 g	10	1 minute 30 seconds
Spices	20 g	10	20 seconds
Sugar	100 g	10	20 seconds
Wheatberries	250 g	10	1 minute 30 seconds
Wheatberries	500 g	10	2 minutes

11. Operating the device

For safety reasons, the settings described in this chapter, can only be selected when the device has been assembled completely.

11.1 Power supply

- Connect the mains plug **15** to a suitable wall socket. The wall socket must still be easily accessible after connection.
- Pull only as much cable as necessary out of the cable compartment **16**.

11.2 Switching the device on and off

NOTE: switching on for the first time is described in chapter "Use for the first time and connecting to the Internet" on page 15.




- Set the on/off switch **6** at the rear on the right to **I**:
  - The touchscreen **7** lights up.
  - The start menu appears on the screen.

Set the on/off switch **6** on the back to **0** to switch the device off.

11.3 Screen

The touchscreen ***7*** shows all settings and operating values.
In sleep mode, the screen is dark and uses less energy. The device is switched on with the on/off switch **6**.

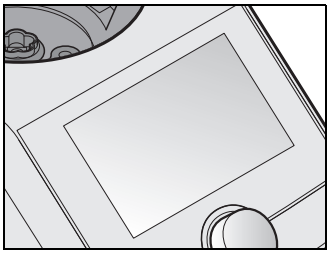

If no function is active and no operation takes place for approx. 5 minutes, a dialogue box appears on the touchscreen ***7*** which counts down the time until the device is switched to standby.

- Press the dialogue box button or the control dial **8** to keep the device active.


If the device is in standby, simply press or turn the control dial **8** to wake up the device.

11.4 Basic operation

This section explains general operation. The exact description is then given where it matters: in the individual chapters.

The control and setting of values is carried out via the touchscreen ***7*** and the control dial **8**. In many cases, both types of operation are possible.


The screen

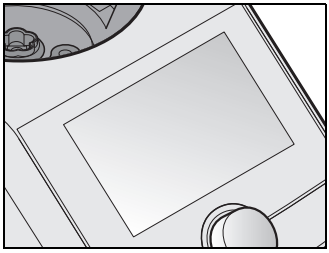

The touchscreen ***7*** responds just like a smartphone, simply by touching the surface. It is not possible to use the touchscreen when wearing gloves.
In order to operate properly the screen must be kept clean. Therefore, do not touch the screen with wet or sticky fingers.


- You can make settings by touching buttons or by swiping and rotating.

The control dial

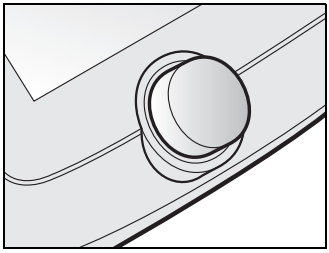

- Use the control dial **8** to adjust settings. The settings are usually displayed immediately on the touchscreen ***7***. For example, you can scroll through lists or select menu items by turning the control dial.
- Settings are always only made for the activated function (for example, time, temperature or speed of the program).


11.5 Classic display



In these instructions, the three circles shown in the figure are called display dials.


This type of display only appears if *CLASSIC* has been selected in the menu via *SETTINGS* -> *INTERFACE*.
This type of display will be explained here once. This manual describes the operation with the *MODERN* display.

These include buttons as well as display surfaces and control dials - hence the name display dial. The display dials are speed-dependent; turning the control dial quickly causes a faster - disproportionate - change in the displayed values.

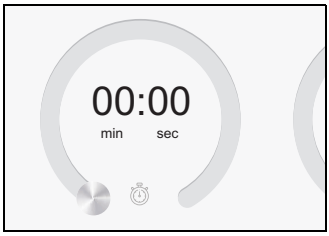

The display dials each consist of three different parts:


- *00:00*: these and other displays indicate the current or the adjusted value.
- Status display: the status display around the display dial shows the relative size of a setting.
- Symbols: the symbols (e.g.) indicate which basic function the display dial has.

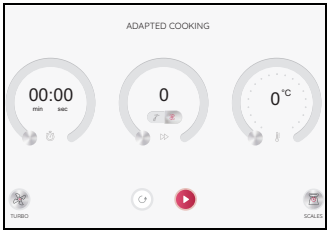

The display dials have different functions:

- Press and turn: draw a circle around the outer edge with your finger. The values are changed and displayed.
- Display of the respective values: in the figure on the left the values displayed are the time, the speed and the temperature.

11.6 Setting the time



Here you set the desired time for the cooking process by scrolling through the time display.

Simply swipe your finger across the screen.
- The adjustable time varies depending on which programme you have selected (see „Quick Check“ on page 36).
- The time set is shown on the screen **7**.
- Once the time set has elapsed,
  - the device stops,
  - an acoustic signal is issued,
  - the LED ring flashes green briefly and then is lit white.
  - After the function is started, the time is counted down on the left of the screen and the set time is displayed below it.
  - If no time is specified, the time display will show the time from 0 seconds *(00:00)* up to 99 minutes *(99:00)* and cannot be changed during operation. Then, the device will be stopped automatically.

You can also use the control dial **8** to adjust the setting:
- Turn clockwise: increase time
- Turn anticlockwise: reduce time

When using the control dial, the setting is made using the following steps:
- up to 1 min. in 1-second increments,
- from 1 min. to 5 min. in 10-second increments,
- from 5 min. to 20 min. in 30-second increments,
- from 20 min. to 99 min. in 1-minute increments.

- If a time was set at the beginning, it can be changed during operation.
  Tap on the *TIME* field and make the change.
  Confirm the change by tapping on *CONFIRM*.

11.7 Setting the temperature



Here you can set the cooking temperature by swiping over the display dial or by turning the control dial **8**:

- Turn clockwise: raise temperature
- Turn anticlockwise: reduce temperature
- During operation, the temperature can be changed.
  - Press the *TEMPERATURE* field and make the changes.
  - Confirm your changes by tapping on *CONFIRM* or discard them by tapping on *Cancel*.

General information

- The adjustable temperature varies depending on which programme you have selected (see „Quick Check“ on page 36).
- The maximum temperature is 130 °C.
- The set temperature is displayed on the left of the screen.
  The actual temperature is displayed below it.
- In order to start the heat-up process, a speed setting should be selected and a time setting should be entered.
- During the heating process, the display for the food temperature may vary substantially.

NOTES:

- As soon as you set a temperature, the speed may be reset to speed 3.
- If you want to purée immediately after cooking (e.g. soup), first turn the temperature to *0* and then set the speed.

11.8 Pause and end

- To stop a programme which is running, press:
  - *PAUSE*: the time is no longer counted down.
  - You can end the pause by pressing *RESUME*.
- To end a programme which is running, press:
  - *PAUSE* and then the *STOP* button.

11.9 Set the speed



Here you set the speed *(SPEED)* by turning the control dial **8**.

The speed can be adjusted in 10 increments:
- Speed 1 - 4: for the mixer attachment **20**
- Speed 1 - 10: for the blade assembly **18**

There are 2 time ranges for the speed:
- Speed 1 - 6: for these speeds a time between 1 second and 99 minutes can be chosen.
- Speed 7 - 10: for these speeds a time between 1 second and 10 minutes can be chosen.

CAUTION!
- ⊙ The mixer attachment **20** must only be used with speed settings 1 to 4. On the screen **7**, a respective indication appears.
- ⊙ When mixing liquids at speed 10, the blender jug **5** must not contain more than 2.5 litre, otherwise liquid might be ejected.
- ⊙ For speed settings of less than 10, the blender jug **5** may only be filled up to a maximum of 3 litres.

- The set speed setting is displayed on the left of the screen **7**.
- During operation, the speed setting can be changed.
- The speed cannot be selected in some programmes, e.g. steam cooking.
- If during operation you change the speed to *0*, the device will stop. To continue, make all the settings again and press *START*.
- If a temperature has been selected, only the speed settings 1 - 3 are available.

Soft start

To prevent liquid from hot food from being ejected out of the blender jug **5** or the device from wobbling during sudden acceleration, there is an automatic soft start for all settings except the turbo function:


- Soft start activates with food temperatures exceeding 60 °C.

11.10 Anti-clockwise rotation



The anti-clockwise rotation is used for gentle stirring of food not to be chopped.

- By pressing the *DIRECTION* button the direction of rotation of the blade assembly **18** can be changed in standard operation at any time.
- The anti-clockwise rotation can only be used at low speed - speed 1 to 3.
- For the *KNEAD* and *ROAST* programmes, the anti-clockwise rotation is controlled by the programme.

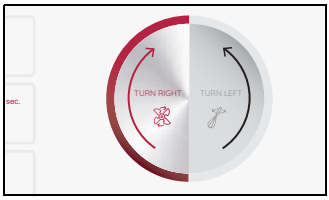


1. Press *DIRECTION*.
   The two directions of rotation are shown on the right of the screen.
2. Select the respective direction of rotation by tapping on *TURN RIGHT* (clockwise rotation) or *TURN LEFT* (anti-clockwise rotation). You can also make the setting via the control dial **8**.

11.11 Turbo function

CAUTION!

- When mixing liquids, the blender jug **5** must not contain more than 2.5 litre, otherwise liquid might be ejected.
- Never use this function when the mixer attachment **20** is used.

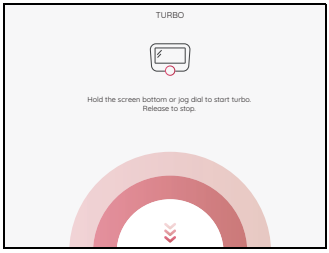

With the turbo function you can briefly select speed setting *10* (maximum). This, for example, is used to quickly chop nuts, small amounts of herbs or onions.

1. Press the *TURBO* button. A new window appears.
2. Keep the control dial **8** pressed as long as you require the function.
   After 20 seconds, the function ends automatically.
3. To repeat, release the button and press it again.

NOTES:

- The turbo function will only work,
  - if the blade assembly **18** is not turning,
  - if the food temperature in the blender jug **5** is less than 60 °C.
- The speed is promptly increased to speed *10* (maximum).

11.12 Scale

The integrated kitchen scale weighs in increments of 1 gram up to 5 kg.
The scale is easy to operate. It is ready for use when no operation is in progress.

NOTES:
- The initial weight is 2 grams.
- If you want to weigh 5 grams or less, the measurement results may be inaccurate.

Easy weighing


1. The device is switched on but no other cycle is in operation.
2. Press the *SCALE* button. The screen **7** shows the scales' function and *0 g*.
3. Place the item to be weighed into the blender jug **5**. On the screen **7**, the weight will be shown in grams up to 5 kilograms.
4. If you add another ingredient to the blender jug **5**, the weight will be added to the display.
5. Press the < arrow key at the top left of the screen to exit the weighing function. The start menu appears again.

Weighing with the tare function

With the tare function you can reset the display of the scale to *0* grams and then add new items to be weighed.

1. The device is switched on but no other cycle is in operation.
2. Press the *SCALE* button. The screen ***7*** shows *0 g*.
3. Place the item to be weighed into the blender jug **5**. On the screen ***7***, the weight will be shown in grams up to 5 kilograms.
4. Press *TARE* to set the weight indicator to *0 g*.
5. Add the new item to be weighed to the existing item to be weighed.
   The screen ***7*** will now show only the weight of the new item in grams.
6. If necessary, repeat the process with new items to be weighed.
7. Press the < arrow key at the top left of the screen to exit the weighing function. The start menu appears again.

11.13 Overflow hole

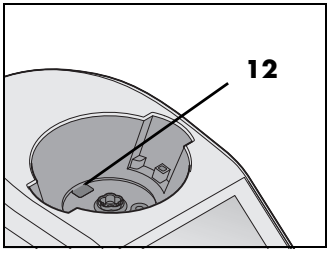

In the socket for the blender jug **10** there is an overflow hole **12**.

Should liquid escape from the blender jug **5**, this will not collect in the base unit **13**, but can escape via the overflow hole **12** onto the work surface.

12. Cooking modes

12.1 Kneading

CAUTION!

⊙ The program may run for a maximum of 4 minutes for firm and soft doughs, and for a maximum uninterrupted running time of 6 minutes for liquid doughs.
After that:
To use the kneading programme again, please wait approx. 30 minutes.
Other functions can be used directly after kneading.


The programme is only operated with the blade assembly **18**.

Heavy dough	light, fairly runny dough
• max 1,000 g flour for max 1,750 g dough	• max. 1,000 g flour Make sure that the dough does not exceed the **MAX** marking.

General programme information

- Preset time: 2 minutes (adjustable from 1 Sec. - 4 or 6 min.)
- Preset temperature: 0 °C (fixed)
- Preset speed: 4 (fixed)
- Clockwise/anti-clockwise rotation: is controlled by the programme

Starting the programme

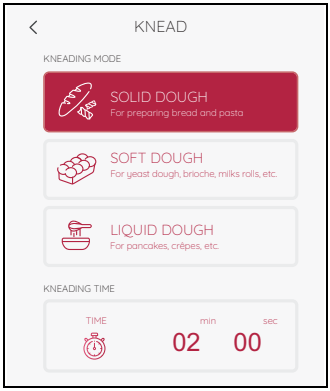

1. Fill food into the blender jug **5**.
2. Close the blender jug **5** with the lid **23**.
3. The device is switched on and shows the programme menu.
4. Press the *KNEAD* button.
5. 3 kneading programs appear on the left of the screen. One each for firm, soft and liquid dough.

NOTE: you can change the values for the time. Tap on *TIME* at the bottom of the screen and make the desired setting.

---

6. Touch to select the desired kneading program.
7. Tap on *START*. The set time is counted down on the screen **7**.
8. After the set time has elapsed, *DONE* appears on the right of the screen **7**.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.


NOTE: when processing yeast, please remember to dissolve it first in the lukewarm liquid (e.g. water or milk). Only then add the other ingredients.

12.2 Adapted cooking

This programme is not really a programme at all, because you set the parameters yourself. You set all the values yourself.

NOTE: It is possible that values you have set are changed automatically. This is always the case when your values contradict other settings. Your settings will then be adjusted automatically.

Starting the programme

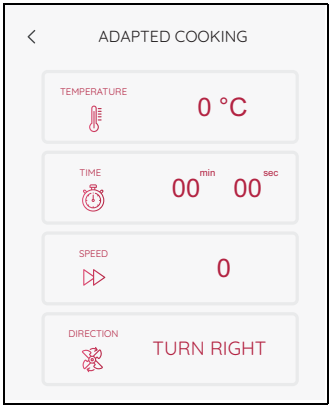

1. Fill food into the blender jug **5**.
2. Close the blender jug **5** with the lid **23**.
3. The device is switched on and shows the programme menu.
4. Press the *ADAPTED COOKING* button. The values for the programme appear on the left of the screen.

NOTE: you can enter all values *(TEMPERATURE / TIME / SPEED / DIRECTION)* manually.

5. Tap the respective field on the left of the screen **7** and make the settings.
6. Tap on *START*. The set time is counted down on the screen **7**.
7. After the set time has elapsed, a short signal sounds and *DONE* appears on the right of the screen **7**.
8. Carefully open the lid of the blender jug **5** and remove the food.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.


12.3 Roasting

With this programme, you can slightly brown up to 500 g of meat, fish, vegetables and spices, e.g. to release roasting flavours. Large pieces must first be cut up into chunks.

General programme information

- Preset time: 7 min.
  (adjustable from 0 sec. - 14 min.)
- Preset temperature: 130 °C
  (adjustable from 0 - 130 °C)
- Preset speed: 1 (fixed)
- Clockwise/anti-clockwise rotation: is controlled by the programme

Starting the programme

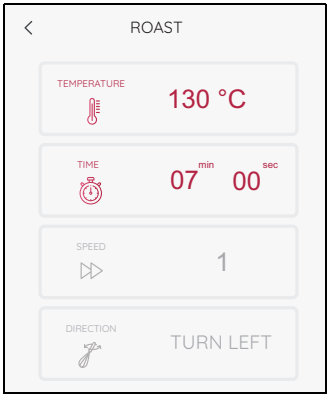

1. Put some fat (e.g. oil) into the blender jug **5**.
2. Fill food into the blender jug **5**.
3. Close the blender jug with the lid **23**.
4. The device is switched on and shows the programme menu.
5. Press the *ROAST* button. The values appear on the left of the screen.

NOTE: you can change the values for temperature and time.

6. Tap the respective field on the left of the screen **7** and make the settings.
7. Tap on *START*.
   The set time is counted down on the screen.
8. After the set time has elapsed, a short signal sounds and *DONE* appears on the right of the screen.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

12.4 Steaming

DANGER! Risk of injury from scalding!

⊙ When opening the lid **1** or **23** during operation, hot steam may escape.

NOTE: when placing the food, make sure that some slots in the steamer attachment **2** / **3** or in the cooking pot **19** are left free. Only then is it possible for steam to spread freely and cook the ingredients evenly.

General programme information

- Preset time: 20 min.
  (adjustable from 0 sec. - 60 min.)
- Preset temperature: 120 °C (fixed)
- Speed: *1*, not selectable
- After pressing *START*, a window appears in which you can select whether the blender jug **5** should be preheated first. Select *YES, PREHEAT* or *NO, STEAM WITHOUT PREHEAT*.
- If you have selected *YES, PREHEAT* the blender jug will be preheated. *PREHEAT...* is displayed on the screen **7**.
- With approx. 1.5 litres of water in the blender jug **5**, the preheating time is approx. 10 minutes.
- When the temperature is reached, *PREHEAT...* goes out and steaming begins. The time is counted down.
- A window also appears indicating the end of the preheating time. Press *OK* to close the window.

Tips on steaming

Steaming is one of the healthiest methods of cooking food. Not only nutrients and colour of the food are maintained to the largest extent possible but also the natural flavour and texture are the gourmet's delight. Thus, it is possible to use salt, fat and spices sparingly.

Using the steamer attachments


As required, you can either use only the deep steamer attachment **3** or both steamer attachments (**2** and **3**).
The shallow steamer attachment **2** cannot be used without the deep steamer attachment **3**.

Preparing menus


If you prepare a whole menu and therefore use both steamer attachments on top of one another, please make sure that:

- Meat and fish should always be cooked in the bottom steamer attachment **3**, so that dripping juice will not come into contact with other food.
- The heaviest food to be cooked should possibly be placed in the bottom steamer attachment **3**.


Preparation of the steamer attachments

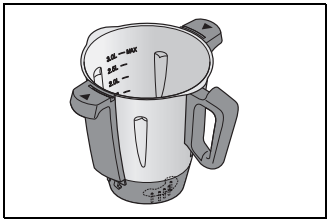

1. Place the blender jug **5** into the socket **10**.
2. Fill 1 litre of water into the blender jug **5**.

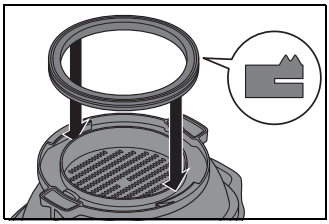

3. Check that the seal **4** for the deep steamer attachment **3** has been placed correctly.

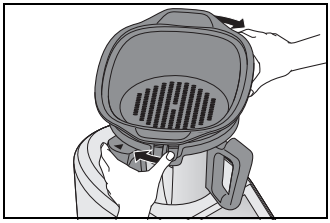


4. Place the deep steamer attachment **3** slightly twisted onto the blender jug **5**.
   - Turn the deep steamer attachment **3** so that it clearly clicks into place and an acoustic signal sounds.
   - The programme can only be started when the steamer attachment **3** has been put on correctly.
5. Fill food into the steamer attachment **3** and (if necessary) **2**.

NOTE: when placing the food, make sure that some slots in the steamer attachment **2** / **3** or in the cooking pot **19** are left free. Only then is it possible for steam to spread freely and cook the ingredients evenly.

---

6. If you need it, place the filled steamer attachment **2** on the steamer attachment **3**.
7. Place the lid **1** on the top steamer attachment.

Starting the steaming process

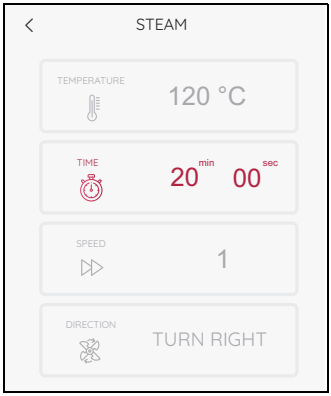

1. The device is switched on and shows the programme menu.
2. Press the *STEAM* button. The values for the programme appear on the left of the screen.

NOTE: you can change the values for the time. Tap on TIME and make the setting.

---

3. Press the *START* button.
4. Select whether the device should heat up or not (see „General programme information“ on page 68).
   - The time display on the left shows *20 min* or the selected time.
5. After the set time has elapsed, a short signal sounds and *DONE* appears on the right of the screen **7**.
6. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

DANGER! Risk of injury from scalding!

⊙ When opening the lid **1** or **23** during operation, hot steam may escape.

---

7. Remove the food from the steamer attachments **2** / **3**.

Checking the cooking temperature

You should ensure that the food is not cooking too long, since vegetables may become too soft and meat and fish too dry and tough.



DANGER! Risk of injury from scalding!

⊙ When opening the lid **1** during operation, hot steam may escape.

In order to check the condition of the food to be cooked from time to time, proceed as follows:

1. Tap on *PAUSE* on the screen.
2. Carefully open the lid **1** for the steamer attachments.
   When opening the lid **1**, make sure not to be hit by a surge of hot steam. Let the steam escape on the side away from you before fully opening the lid.
3. Check the condition of the food to be cooked with a longer stick or a fork:
   - When the food is ready, press the *STOP* button.
   - If the food is not ready, put the lid back on and press the *RESUME* button.
4. To switch off the device, press the on/off switch **6** or go to the next step in the recipe.

Steaming with the cooking pot

NOTE: you can also use the *STEAM* programme with the cooking pot **19**.

1. Fill the blender jug **5** with 500 ml of water.
2. Fill food into the cooking pot **19**.
3. Put the cooking pot **19** into the blender jug **5**.
4. Close the blender jug **5** with the lid **23** and with the measuring beaker. **24**.
5. Start the programme (see „Starting the steaming process“ on page 71).
6. When the programme has finished, open the lid **23** and take the cooking pot **19** out of the blender jug with the spatula.
7. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

Overheating protection

The device has an overheating protection system. As soon as there is no water left in the blender jug **5** thus causing the device to become too hot, the device will automatically switch off.
In this case, pull out the mains plug **15** and allow the device to cool.
You may then fill in water and put the device back into operation.

If the blender jug **5** becomes hot (60 °C) or too hot, a window with the corresponding message will appear on the touchscreen **7**. Press *OK* and follow the on-screen instructions if necessary.
The blender jug **5** is overheated as long as the LED ring is flashing.

Reference values for steaming

- When placing the food, ensure that some of the slots in the steamer basket **2** / **3** or the cooking pot **19** remain empty. Only then is it possible for steam to spread freely and cook the ingredients evenly. Since the cooking pot is smaller, less food can be processed at the same time
- Water volume inside the blender jug **5**: 1 litre with the steamer attachment **3** // 0.5 litres with the cooking pot **19**.


Food	Quantity	Cooking time
Vegetables		
Asparagus, whole spears	500 g	18 minutes
Beans, green, whole	500 g	10 minutes
Broccoli, in florets	500 g	12 minutes
Brussels sprouts, whole	500 g	12 minutes
Cabbage, shredded	500 g	12 minutes
Carrots (approx. 3 mm slices)	500 g	12 minutes
Carrots, whole, very thin	500 g	12 minutes
Cauliflower, in florets	500 g	15 minutes
Courgettes (approx. 5 mm slices)	500 g	12 minutes
Fennel (approx. 1 cm slices)	500 g	12 minutes
Kohlrabi (approx. 1 cm slices)	500 g	15 minutes
Leek (approx. 1 cm rings)	500 g	6 minutes
Mangetout, whole	200 g	8 minutes
Mushrooms, sliced	250 g	15 minutes
Peas, frozen	250 g	8 minutes
Pepper (approx. 1 cm strips)	500 g	10 minutes
Potatoes, peeled and quartered	800 g	15 minutes
Potatoes, small, skin on	800 g	15 minutes
Spinach, fresh	250 g	7 minutes
Fruit		
Apples, quartered	500 g	12 minutes
Apricots, halved	500 g	10 minutes
Peaches, halved	500 g	10 minutes
Pears, quartered	500 g	12 minutes
Plums, halved	500 g	12 minutes

Food	Quantity	Cooking time
Meat		
Chicken breast fillet, in portion-sized pieces	500 g	12 minutes
Chicken breast fillet, whole	150 g	15 minutes
Meatballs	500 g	15 minutes
Turkey fillet, in portion-sized pieces	500 g	12 minutes
Turkey fillet, whole	150 g	15 minutes
Fish		
Mussels	1 kg	15 minutes
Pollock fillet	1 - 4 pieces, 200 g each, 2 cm thick	12 minutes
Prawns, raw	250 g	10 minutes
Salmon fillet	1 - 4 pieces, 300 g each, 3 - 4 cm thick	12 minutes
Trout, whole	2 pieces, 250 g each	15 minutes

12.5 Cook eggs

With the *COOK EGGS* programme you can cook a maximum of 5 - 6 eggs at the same time.

Starting the programme

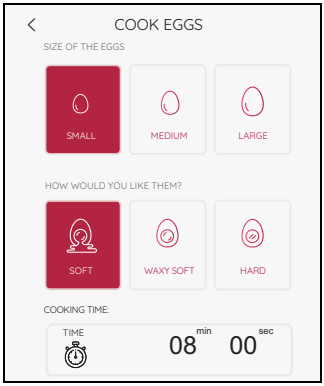

1. The device is switched on and shows the programme menu.
2. Fill 0.5 l of cold water into the blender jug **5**.
3. Put the eggs in the cooking pot **19** and place it in the blender jug **5**.
4. Close the lid **23** of the blender jug.
5. Select the *COOK EGGS* programme.
6. Now choose:
   - the size of the eggs:
     SMALL / MEDIUM / LARGE
   - and the degree of hardness:
     SOFT / WAXY SOFT / HARD
7. Tap on *START*. *COOKING EGGS...* appears on the screen.
   The clock starts running backwards and the eggs are cooked.
8. After the set time has elapsed, a short signal sounds and *DONE* appears on the screen **7**.
9. Carefully open the lid **23** of the blender jug and take out the cooking pot **19** with the help of the spatula **21**.
10. If necessary, rinse the eggs with cold water.
11. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

12.6 Sous-Vide

With the *SOUS-VIDE* programme, you can prepare vacuum-sealed food slowly and gently.

General programme information


- Preset time: 6 hrs.
  (adjustable from 1 min. - 12 hrs.)
- Preset temperature: 60 °C
  (adjustable from 40 - 85 °C)
- Preset speed: 1 (fixed)
- the bags must be protected from the blades of the blade assembly **18**. To do this, place the bags in the cooking pot **19**.

Starting the programme

1. The device is switched on and shows the programme menu.
2. Put the vacuumed food in the cooking pot **19** and place it in the blender jug **5**.
3. Pour enough water into the blender jug **5** to cover all the food with water.

NOTE: note the maximum filling volume.

4. Put the lid **23** on the blender jug and close it.
5. Select the *SOUS-VIDE* programme.
6. Set the temperature and the time.
7. Tap on *START*.
   When the preheating to the set temperature has finished, the clock starts to run backwards. After the set time has elapsed, a short signal sounds and *DONE* appears on the screen **7**.
8. Carefully open the lid of the blender jug and take out the cooking pot **19** with the help of the spatula **21**.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

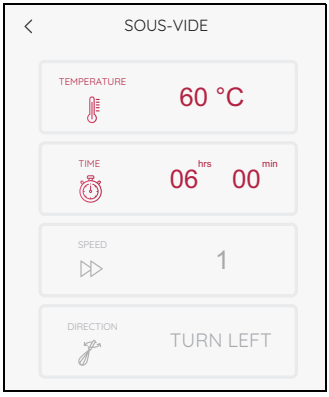

- Place the food in a vacuum-sealing bag, and vacuum seal it. Or you put it in a freezer bag. Place the freezer bag in the water with the opening facing upwards and squeeze out all the air. Finally, close the bag tightly with clips.
- Put the cooking pot into the blender jug.
- Fill the blender jug with hot water to just below the top edge of the cooking pot.
- Place the bag in the cooking pot and press it gently into the water until it is completely covered with water.
- Place the freezer bag in the cooking pot so that the bag opening with the clips is facing upwards.
- If necessary, add a little more hot water. However, pay attention to the maximum filling level of the blender jug.
- It is best to sear the food briefly in a frying pan after cooking.

Product	Weight (approx. 4 portions)	Cooking time	Rare	Medium rare	Medium	Well done
Meat						
Saddle of venison, boned	600 g	1 hr	-	52 °C	55 °C	62 °C
Beef steaks	4 pieces (180 g each, 2 - 3 cm thick)	1 hr	52 °C	55 °C	58 °C	62 °C
Beef tenderloin	800 g	2 hrs	-	54 °C	59 °C	-
Pork neck	800 g	2 hrs 30 min	-	60 °C	65 °C	72 °C
Pork tenderloin	600 - 800 g	1 hr 30 min	-	56 °C	59 °C	63 °C
Chicken breast	4 pieces (150 g each, 3 - 4 cm thick)	50 min	-	-	-	70 °C
Duck breast	2 pieces (300 g each, 2 - 3 cm thick)	70 min	-	58 °C	60 °C	70 °C
Lamb fillet	500 g	45 min	-	62 °C	65 °C	70 °C

Product	Weight (approx. 4 portions)	Cooking time	Rare	Medium rare	Medium	Well done
Fish						
Salmon fillet	4 pieces (125 g each, 2 - 3 cm thick)	40 min	40 °C translucent	45 °C tender	50 °C firm	65 °C cooked through
King prawns	20 pcs.	25 min	40 °C translucent	45 °C tender	50 °C firm	56 °C cooked through
Vegetables						
Green asparagus	400 g	20 min	-	-	-	85 °C
Carrots	400 g (cut thick carrots in half lengthwise)	1 hr	-	-	-	85 °C
Green beans	400 g	1 hr	-	-	-	85 °C
Fruit						
Pineapple / peaches / apricots / cherries washed, cleaned, cored and cut into pieces as desired	400 g	1 hr	-	-	-	85 °C
Apples/pears washed, cleaned, cored and cut into wedges	400 g	25 min	-	-	-	85 °C


12.7 Slow-Cook

With the *SLOW-COOK* programme you can braise meat slowly, e.g. for pulled pork or goulash. It is especially suitable for less valuable cuts of meat.
The rotations of the blade are controlled automatically.

General programme information

- Preset time: 4 hrs.
  (adjustable from 1 min. - 8 hrs.)
- Preset temperature: 90 °C
  (adjustable from 37 - 95 °C)
- Preset speed: 1 (fixed)

Starting the programme

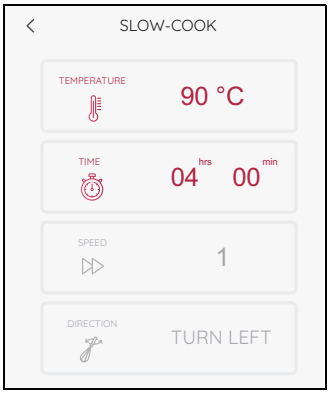

1. The device is switched on and shows the programme menu.
2. Fill food into the blender jug **5**.
3. Close the lid **23** for the blender jug.
4. Select the *SLOW-COOK* programme.
5. Set the temperature and the time.
6. Tap on *START*.
   The clock starts running backwards.
7. After the set time has elapsed, a short signal sounds and *DONE* appears on the screen.
8. Carefully open the lid **23** of the blender jug **5** and remove the food.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

The *SLOW COOK* programme cooks the food in some sort of liquid. Depending on taste and the product used, this can be broth, juice, water or wine, for example. Spices and additional food can be added as desired.

Product	**Weight (approx. 4 portions)**	**Recipe step**	**SLOW COOK button**	
Meat			**Cooking time**	**Temperature**
Roast beef/ boiled fillet	800 g in one piece	Place in the blender jug with 1 litre of meat stock	6 hrs	85 °C
Beef goulash	800 g in 2 x 3 cm cubes	Place in the blender jug with 500 ml of meat stock	4 hrs	85 °C
Pork chops	800 g in one piece	Place in the blender jug with 1 litre of meat stock	6 hrs	85 °C
Pork goulash	800 g in 2 x 3 cm cubes	Place in the blender jug with 500 ml of meat stock	4 hrs	85 °C
Chicken cutlets	800 g in strips, approx. 1 cm thick	Place in the blender jug with 500 ml of meat stock	1 hr	90 °C
Fish				
Fish stew	1 kg vegetables cleaned, washed and cut into bite-sized pieces, 500 g ready-to-cook skinless fish fillet in bite-sized pieces, spices	Place the vegetables in the blender jug with 1 litre of vegetable or fish stock. Add the fish.	2 hrs max. 30 min	85 °C 70 °C
		NOTE: add the fish to the stew only at the end. It should not be cooked for more than 30 minutes to prevent it from falling apart.		
Vegetables				
Vegetable stew	1 kg vegetables cleaned, washed and cut into bite-sized pieces, spices	Put the vegetables in the blender jug with 1 litre of vegetable stock.	2 hrs	90 °C

Product	Weight (approx. 4 portions)	Recipe step	SLOW COOK button	
Fruit				
Compote	800 g fruit, washed, cleaned, cored and cut into max. 2 cm cubes	Place the fruit in the blender jug with 100 ml water and 3 tbsp sugar	2 hrs	90 °C
Apple-sauce, plum puree	1.2 kg fruit, washed, cleaned, cored and cut into max. 2 cm cubes	Place the fruit in the blender jug with 200 ml of strained fruit juice.	5 hrs, then puree with the measuring beaker in place for 1 min on speed 10	80 °C


12.8 Fermenting

With the *FERMENT* program you can make yoghurt and sweet and sour pickled vegetables such as mixed pickles.

General programme information

- Preset time: 8 hrs.
  (adjustable from 1 min. - 12 hrs.)
- Preset temperature: 40 °C
  (adjustable from 37 - 65 °C)
- Preset speed: 1 (fixed)
- The yoghurt can be made both in jars and directly in the blender jug.

Starting the programme

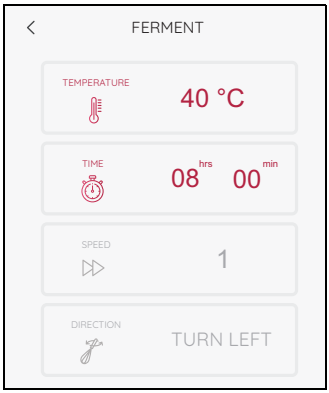

1. The device is switched on and shows the programme menu.
2. Fill food into the blender jug **5** or steamer attachment **2** / **3**.
3. Close the corresponding lid **23** / **1**.
4. Select the *FERMENT* programme.
5. Set the temperature and the time.
6. Tap on *START*.
   The clock starts running backwards. The blade assembly **18** rotates for the first 5 minutes, then no longer.
7. After the set time has elapsed, a short signal sounds and *DONE* appears on the screen.
8. Carefully open the lid **23** / **1** and remove the food.
9. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

- You can refine finished products with spices, herbs, nuts or fruit as you like.
- You can ferment yeast dough in the steamer attachment. To do this, put 250 ml of water in the blender jug and cover all the ventilation slots with baking paper. Then close the lid.

Recipes	Ingredients	FERMENT button	
		Cooking time	Temperature
Yoghurt 5 jars of 200 g each	900 ml room temperature milk (UHT milk, 3.5 % fat) 100 g natural yoghurt (3.5 % fat)	8 hrs	40 °C
Cream cheese	1500 ml cold milk (fresh milk, 3.5 % fat) 200 g sour cream (10 % fat)	10 hrs	65 °C
Sweet yeast dough	Ready-made sweet yeast dough. You can find a recipe for this in our files.	1 hr	50 °C
Savoury yeast dough / bread doughs	Ready-made savoury yeast dough. You can find a recipe for this in our files.	1 hr 30 min	50 °C


12.9 Puréeing

With the *PURÉE* programme, you can puree soups and sauces, for example.

General programme information

- Preset time: 30 sec.
  (adjustable from 1 sec. - 2 min.)
- Preset temperature: 0 °C (fixed)
- Preset speed: 8 (fixed)

Starting the programme

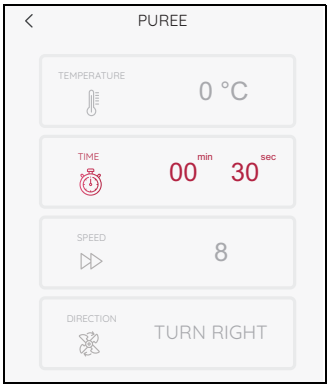

1. The device is switched on and shows the programme menu.
2. Select the *PURÉE* programme.
3. Fill food into the blender jug **5**.
4. Close the lid **23** of the blender jug.
5. Tap on *START*.
   After the set time has elapsed, a short signal sounds and *DONE* appears on the screen.
6. Carefully open the lid of the blender jug **5** and remove the food.
7. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.


12.10 Smoothie

With the *SMOOTHIE* programme you can make delicious and vitamin-rich smoothies.

General programme information

- Preset time: 1 min.
  (adjustable from 1 sec. - 2 min.)
- Preset temperature: 0 °C (fixed)
- Preset speed: 10 (fixed)

Starting the programme

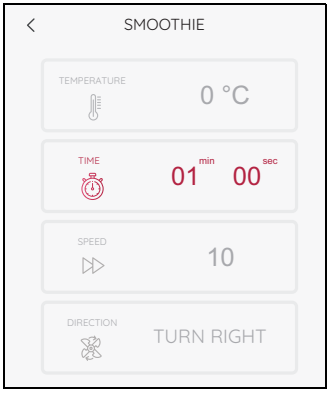

1. The device is switched on and shows the programme menu.
2. Fill food into the blender jug **5**.
3. Close the **23** lid for the blender jug.
4. Select the *SMOOTHIE* programme.
5. Tap on *START*.
   After the set time has elapsed, a short signal sounds and *DONE* appears on the screen.
6. Carefully open the lid of the blender jug **5** and remove the food.
7. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

- Fruit and vegetables must always be washed, cleaned, peeled, cored and cut into chunks before placing them in the blender jug.
- For best results, place the ingredients in the blender jug up to a maximum of the 1 litre marking.
- For 4 jars of approx. 250 ml each, put 660 g solid ingredients and 350 g liquid (e.g. water, milk, yoghurt, buttermilk, kefir) into the blender jug.
- Always choose the time that is listed for the firmest of the ingredients used.

SMOOTHIE button			
	For a smoothie made from soft fruit and vegetables	**1 minute 30 seconds** for a smoothie made from firmer fruit and vegetables	**2 minutes** for a smoothie made from hard fruit and vegetables
FRUIT (washed, cleaned, peeled, cored and cut into chunks)	Berries, bananas, grapes, ripe kiwi, citrus pulp, melon, passion fruit, cherries, mirabelles, plums	Mango, firmer kiwis, apples, pears, peaches, apricots, rhubarb, nectarines	Firmer apples, firmer pears, firmer nectarines
VEGETABLES (washed, cleaned, peeled, cored and cut into chunks)	Tomatoes, avocado, cucumber, lettuce leaves (without stem/stalk)	Celery, beetroot (cooked), sweetcorn (tinned), peppers, spring onions, kale (without stalk), fennel, peppers	Carrots, radishes, courgettes, kohlrabi, celery root, red kuri squash, lettuce leaves with stems
OTHER	Peanut butter, herb leaves, spices (e.g. cinnamon, ginger, vanilla), sweetener (e.g. honey, agave syrup)	Oatmeal, ice cream	Crushed ice, nuts


12.11 Cook rice

You can cook rice using the *COOK RICE* programme.

General programme information

- Preset time: 30 min.
  (changeable 1 sec. - 40 min.)
- Preset temperature: 100 °C (fixed)
- Preset speed: 1 (fixed)

Starting the programme

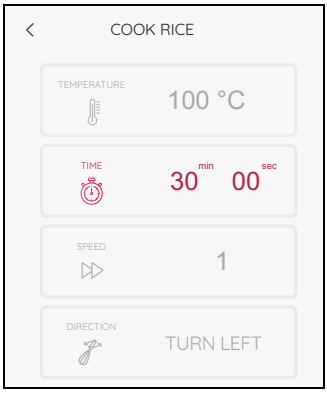

1. The device is switched on and shows the programme menu.
2. Select the *COOK RICE* programme.
3. Fill food into the blender jug **5**.
4. Close the lid **23** for the blender jug.
5. Tap on *START*.
   After the set time has elapsed, the LED ring stops flashing, lights up white and *DONE* appears on the screen.
6. Carefully open the lid for the blender jug **5** and remove the food.
7. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.


12.12 Heat water

You can boil water with the *HEAT WATER* programme.

General programme information

- After starting, the programme will run until the water boils.
- You can heat a maximum of 1.5 litres of water with this programme.

Starting the programme

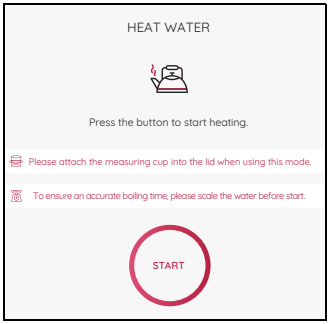

1. The device is switched on and shows the programme menu.
2. Select the *HEAT WATER* programme.
3. Pour the water into the blender jug **5**.
4. Close the lid **23** for the blender jug.
5. Tap on *START*.
   When the water boils, the LED ring stops flashing and lights up white. After a few seconds, *DONE* appears on the screen.
6. Carefully open the lid of the blender jug **5** and remove the water.
7. Press the on/off switch **6** to switch the device off.

12.13 Cutting and grating


The food processor attachment is an accessory that you can buy separately.
With the food processor attachment and the *FOOD PROCESSOR* program you can cut and grate food.

NOTE: please follow the user instructions of the food processor.

General program information

- Preset time: 30 Sec.
  (adjustable from 1 Sec. - 5 Min.)
- Preset temperature: 0 °C (fixed)
- Preset speed: 5 (fixed)

Starting the program

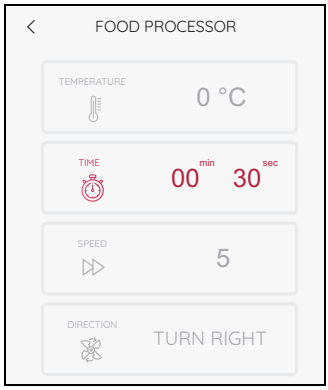

1. Place the food processor attachment in the blender jug **5** and put the lid of the attachment on the blender jug **5**. It is placed like the lid of the blender jug.
2. The device is switched on and shows the program menu.
3. Select the *FOOD PROCESSOR program.*
4. Tap on *START*.
5. Fill food into the food chute. Push them down with the food pusher.
   After the set time has elapsed, the LED ring stops flashing, is lit white and *DONE* appears on the screen.
6. Carefully remove the food processor attachment and take out the food.
7. Press the on/off switch **6** to switch off the device or go to the next step in the recipe.

13. Recipes

The CookingPilot of the *Monsieur Cuisine smart* guides you step by step through the selected recipe - hence the name CookingPilot (guided cooking).

13.1 The most important buttons


Back to the start of the recipe. The current step can be saved. If here is an X and you press it, the recipe menu appears.

This bar shows you the progress while cooking the recipe.

shows and hides the screen info

opens a window with all work steps

opens a window for your notes

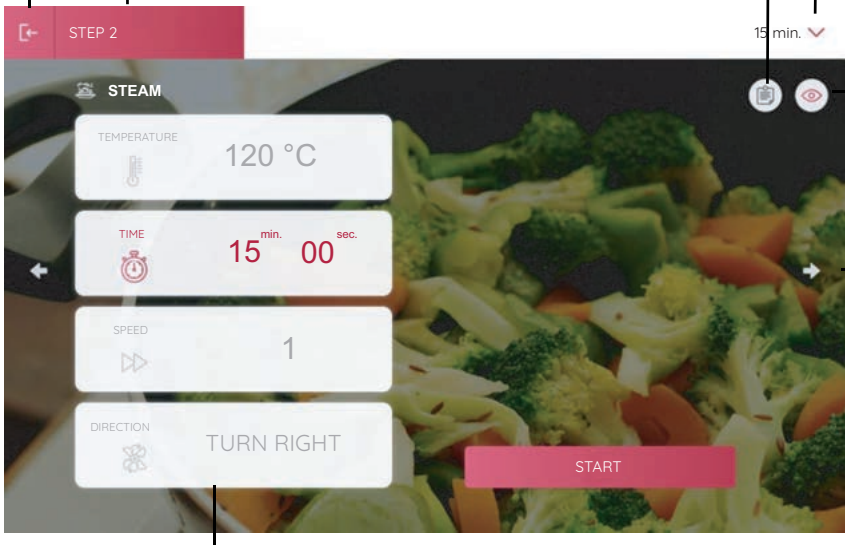


Display for the current work step. The grey fields cannot be changed.

The arrow keys move to the previous/next work step.
Tap *START*, *STOP* or *PAUSE* to enter the appropriate command.


13.2 General information about CookingPilot

- The *Monsieur Cuisine smart* is delivered with many recipes stored in its memory.
- When you open a recipe, the *Add to shopping list* button appears at the bottom of the screen after a few seconds. Press the button to load the recipe into the Shopping List (see „The Shopping List“ on page 104).
- When connected to the Internet and your member account, additional recipes are loaded into the memory. Don't forget to log in, if necessary.
- You may deviate from the parameters by changing the temperature, time, or stirring/mixing speed. This makes sense if you have cooked a recipe several times and would like to change something.
- The quantities of food indicated in the recipes are the quantities of unpeeled food.

Calling up the menu

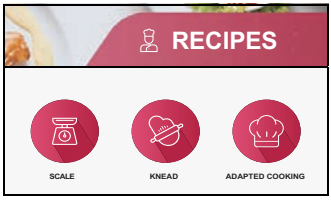

- Press the *RECIPES* button to open the menu. A series of recipe photos will appear. You can scroll through this list. To do this, simply swipe a finger up or down across the screen.

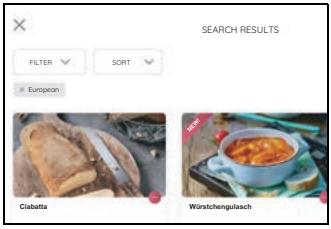


- To open a recipe, tap on the photo.

Exit recipes

- If you want to exit a recipe, proceed as follows:
  - Press the button ⍈ at the top left. The next window allows you to save the current step of the recipe.
  - The start page of the recipe appears. Press the arrow key < at the top left to open the main recipe menu.

Basic information about the recipes

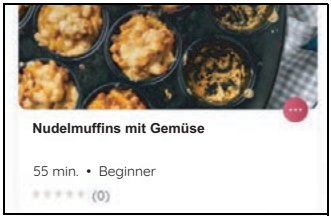

At the bottom of each recipe picture you will find 4 basic pieces of information.

- the name of the recipe
- the approximate duration of the preparation
- the level of difficulty
- how many stars the recipe has received from other users

This information is fixed and can not be changed.

Working in the recipes menu

- Swipe your finger on the recipe list to scroll through it. The same applies to other lists or to setting values such as time or temperature.
- Swipe your finger across the screen
  - up/down (e.g. to display further categories)
  - or left/right (e.g. to display more recipes in a category).
- Press a button to start the corresponding function, e.g. a recipe.

13.3 Recipes: important buttons

The symbols do not all appear at the same time, but only when they are needed.

Button	Action
X	Cancel recipe and return to the recipe overview.
< >	Press the arrow keys to see the previous or the next recipe step.
	You can load the recipe into the weekly planner or, if it is already there, remove it from the weekly planner. Existing videos can be downloaded here. If there is none, the menu item is missing. Simply tap the button.
	The recipe is not saved in the favourites list. Tap once and the recipe is added to the favourites list.
	The recipe is saved in the favourites list. Tap once and the recipe is deleted from the favourites list.
	After tapping, you can choose whether you want to share the recipe on Facebook or Twitter. Simply press the corresponding button and then follow the instructions on the screen.
	Hide and show the information on the current recipe step. During the next step, the information is automatically displayed again.
	After tapping, a window opens. You can enter your notes for the current recipe there. Tap the field, enter your text and save the note.

13.4 Search for recipes



1. Tap the *SEARCH* field in the recipe menu.
2. In the next window, tap the coloured bar at the top. A keyboard appears on the screen.
3. Now enter what you are looking for, e.g. a recipe name or an ingredient.
4. Even as you type, suggestions appear in the box below. Tap on one of the suggestions or on the magnifying glass and then on a suggestion in the list.
5. Tapping on the recipe opens it. You can now cook with it as usual.


You can also search for a recipe in other ways. You can:

- simply scroll through the recipe menu,
- narrow down the selection of recipes by using the filter function,
- You can search the recipes via the app and the website.


13.5 Choose a recipe and cook



1. If you want to cook a recipe, click on the photo or the name of the recipe. A figure appears with the basic information for the recipe.
2. In the new window you can choose between the display for the ingredients, the individual steps or the nutritional values. Simply tap the corresponding button.

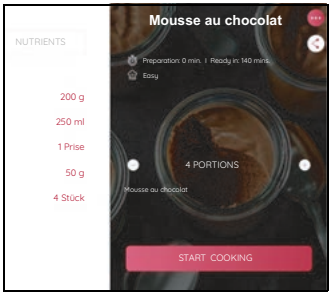

3. Click on the button below to start the process. The first work step is displayed.
4. Complete the first step and then continue with the next. You have several options for this.
   - Press the > button on the screen,
   - turn the control dial to the right,
   - or swipe a finger sideways across the screen.

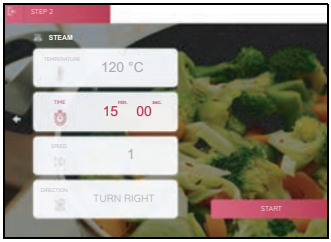

5. When the screen shows the display for temperature, time, speed and direction of rotation, you can start the process immediately. To do this, press *START*.
   - The values are already predefined, but you can also adjust them. Simply tap on the field and then make the settings.

NOTE: fields that are greyed out cannot be changed.

---

6. Now go through the recipe step by step.
7. After the last work step, a melody sounds and *ENJOY YOUR MEAL!* appears.

13.6 Save favourite recipes

You will see a heart symbol in the recipe overview or on the start page of a recipe.

	The recipe is not saved in the favourites list. Tap once and the recipe is added to the favourites list. It is automatically loaded into your member account after logging in and can be seen and controlled from all devices. This only applies to Monsieur Cuisine smart recipes.
	The recipe is saved in the favourites list. Tap once and the recipe is deleted from the favourites list.

NOTE: if you did not log in to your member account when first switching on chapter „Use for the first time and connecting to the Internet“ on page 15, you can do so at any time (see „User account - log in to the Lidl account“ on page 27).

13.7 New recipes: how, when, where?

How do you get new recipes?

The new recipes are automatically uploaded to the *Monsieur Cuisine smart*. Adding new recipes manually is not possible.

The prerequisites for obtaining new recipes are the following:

- Your device must be connected to the Internet and our server.
- You need a member account with which you are logged in to the *Monsieur Cuisine smart* (see „User account - log in to the Lidl account“ on page 27).
- The device must not have been switched off with the main switch.

When will you get new recipes?

- As soon as new recipes are available, they are automatically uploaded.
- Due to the large number of devices, a new set of recipes will not be uploaded to all devices in one day. It may take a few days for new recipes to be uploaded to all *Monsieur Cuisine smart*. So, don't worry if friends have already received new recipes.
- If your device has been switched off with the main switch or is not connected to the mains power supply, no new recipes will be loaded. New recipes will be added after switching on, connecting to the Internet and logging in to your member account.

Where are the new recipes?

- All new recipes are grouped in the category *NEW RECIPES*. They will remain there for approx. 4 weeks.
- A dot appears at the top right of the bell symbol when new recipes are available.

1. Tap on the bell.
2. A list with the new recipes appears.
3. Tap on one of the recipes and the *NEW RECIPES* menu will open.
4. Tap on the recipe you want to process.

- The new recipes are marked as new recipes for approx. 4 weeks.
- Recipes that you have viewed once are no longer marked as new.
- In addition, all new recipes are included immediately in all other lists after being loaded.

13.8 Filter recipes

Due to the large number of recipes, it sometimes helps to narrow down the selection. Why not give it a try the next time you're browsing through the recipes.

1. Open the Recipes menu.
2. Tap the *FILTER* field. A window opens with the different filters.
3. Now tap one or more buttons or move the cooking time sliders. Only recipes that match your selection will then be shown.
4. Tap *APPLY* and the overview with the matching recipes will appear.

NOTE: if no recipe is displayed, you may have to delete one or two filters. In this case, no recipe with this combination exists. It is also possible that there is no recipe associated with only one filter.

---

5. To switch off one/all filters again:
   - Tap the button again.
   - If you have set multiple filters, tap *CLEAR* to turn off all filters.
   - If the device is switched off, the settings for the filters are also deleted.

13.9 Sort recipes

Select one of the preset menu items to change the order in which the recipes are displayed.


1. Open the recipe menu.
2. Tap the *SORT* field.
3. Now tap on one of the fields and the recipes will be displayed in a new order.
   - *Most popular:* the recipes that are viewed the most are displayed first. This selection is preset.
   - *Newest:* the new recipes are displayed first.
   - *Highest to lowest rating:* the recipes with the highest ratings will be displayed first.
4. Switching the device off reactivates the default setting.

13.10 The weekly planner for recipes

You can add different recipes to a weekly planner for optimum planning.
Log in to your Lidl account to use this function.

The data is synchronised with the app on your smartphone.

Add recipes

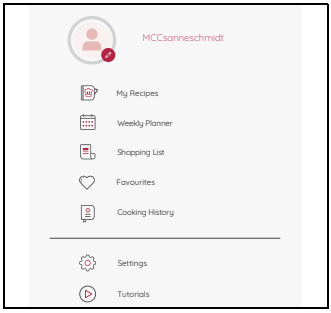

1. Tap the ☰ symbol to access the information menu.
2. Tap on *Weekly Planner*. The weekly planner will open.
3. Tap on *Explore recipes*. The recipe list opens.
4. Tap the desired recipe ⋯. A window will open.
5. Tap *Add too weekly planner* to save the recipe to the weekly list.
6. Mark the desired day and tap *ADD TO WEEKLY PLANNER*. Saving is briefly confirmed.

NOTE: you can also find the *Add to weekly planner* button in other places. Tap on it and the recipe will be added to the weekly planner.

Start recipe from weekly planner

Tap on the picture of the desired recipe and the recipe will open.

Change the date for the recipe

1. Tap the ☰ symbol to access the information menu.
2. Tap on *Weekly Planner*. The weekly planner will open.
3. At the top right of the photo of the recipe, press ⋯.
4. Tap *Change date* to save the recipe for another day in the weekly list.
5. Mark the day of the week and then press *SAVE*. The recipe appears in the new planner location.

Delete recipe from the weekly planner

1. Tap the ☰ symbol to access the information menu.
2. Tap on *Weekly Planner*. The weekly planner will open.
3. At the top right of the photo of the recipe, press ⋯.
4. Tap *Remove* to delete the recipe from the weekly planner. The deletion is confirmed and the recipe is no longer displayed in the weekly planner.

Further functions

Tap the arrow at the top next to Month/Year to switch between the weekly and monthly view.

Swipe left and right to scroll through the weeks.

14. The Shopping List

No more forgetting. Use the *MC Smart* Shopping List to make sure you always buy the right ingredients. Log in to your Lidl account to use this function.

The data is synchronised with the app on your smartphone.

Add recipes

1. Open a recipe.
2. After a few seconds, the *Add to shopping list* button appears. Tap the button. A message briefly appears stating that the recipe has been saved to the Shopping List.

Shopping List sorted by recipes

1. Tap on the ☰ symbol to access the information menu.
2. Tap on *Shopping List*. The Shopping List will open.
3. At the top right you will see a button that indicates the current display type. It should now say *BY RECIPE*.
   If this is not the case, tap the button and select the function.
   The display now shows the loaded recipes on the left.
4. Tap on the text next to the recipe picture.
   The ingredients you need for the recipe will now appear on the right. There is a small box in front of each ingredient.
5. Tap the empty box once for each ingredient you already have. The ingredients will then appear crossed out at the end of the list.
6. If you want to get cooking straight away, tap on the picture of the recipe in the left-hand column. The recipe will open.

Shopping List sorted by categories

NOTE: this view displays the ingredients of **all** loaded recipes in different categories. When shopping, remember that you plan to use some of the fresh ingredients within the next few days only.

1. Tap on the ≡ symbol to access the information menu.
2. Tap on *Shopping List*. The Shopping List will open.
3. At the top right you will see a button that indicates the current display type. It should now say *BY CATEGORY*.
   If this is not the case, tap the button and select the function.
   The display now shows the different categories on the left, e.g. fruit or vegetables. All ingredients for which there is no separate category are listed under the *Others* category.
4. Tap on a category.
   The ingredients you need and the corresponding quantity appear on the right. There is a small box in front of each ingredient.
5. Tap the empty box once for each ingredient you already have. The ingredients will then appear crossed out at the end of the list.

Enter your own ingredients into the Shopping List

1. Tap on the ☰ symbol to access the information menu.
2. Tap on *Shopping List*. The Shopping List will open.
3. At the top right you will see a button that indicates the current display type. It should now say *BY CATEGORY*.
   If this is not the case, tap the button and select the function.
4. Scroll to the bottom of the list of categories.
5. Tap the *My Items* field.
6. Tap the *Add item* field on the right.
7. Enter the ingredient and the desired quantity. Then tap *ADD*.

Clear the contents

To delete a recipe or an ingredient from the My Items list, simply press the wheelie bin icon next to it.

When you delete a recipe, all the ingredients it requires are deleted from the Shopping List.

15. Voice control with Google Assistant

NOTE: For safety reasons, the *MC smart* cannot be switched on or off, nor can a cooking process be started via the voice control.

Your *MC smart* can also be voice-controlled via the Google Home app.

Requirements

- A smartphone or tablet is connected to your *MC smart*.
- The Google Home app is installed and activated on your smartphone/tablet.
- Your *MC smart* is switched on.

General

Several functions, but not all, can be carried out via the voice control of Google Home.

Functions for your speech commands

- Opening cooking programs
- Setting the time in the cooking programs
- Setting the temperature in the cooking programs
- Setting the speed setting in the cooking programs
- Checking the remaining time of a cooking process
- Stopping a cooking process
- Filter by recipe categories
- Filter by ingredient categories

How to connect the MC smart to the Google app

1. If you have not already done so: Register your *MC smart* and the *Monsieur Cuisine* App on your smartphone/tablet using the same Lidl account.
2. Download the Google Home app from your smartphone's app store.
3. Open the app.
4. Sign in with your Google account.
5. You have not yet added any device in the Google Home app? Then click on + (plus) in the middle of the screen. If you already have devices displayed in the app, the + symbol is in the top left-hand corner.
6. Click on *Set up device*.
7. Select *Works with Google*.
8. Tap the magnifying glass symbol and enter *Monsieur Cuisine* in the search bar.
9. Click on *Monsieur Cuisine* in the list to add this service.

NOTE: If *Monsieur Cuisine* does not appear in the list, please check if your MC smart and the *Monsieur Cuisine* App on your smartphone/tablet are logged in to the **same** Lidl account.


---

10. Log in with your Lidl account, which is also stored on the *Monsieur Cuisine smart*.
11. Follow the instructions in the app.

16. Information menu

NOTE: You can find the information for the *Settings* menu in chapter „Software - Basic functions".



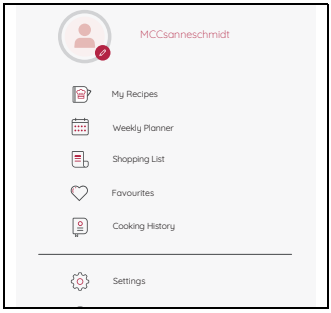

1. You will see the ☰ symbol in different menus. Among others in the
   - home screen,
   - in the main menu of *PROGRAMAS*,
   - in the main menu of *RECIPES*.
2. Tap on the ☰ symbol to access the information menu.

16.1 My recipes

You can access your own recipes from this menu item. You can create your own recipes on the *Monsieur Cuisine* website. Your recipes will be transferred to your *MC smart* if it is logged into the same account. It may take a while until your recipe is displayed on the *MC smart*.

1. Go to the website *www.monsieur-cuisine.com*.
2. Log in with your Lidl account.
3. Enter your own recipe and save it.
4. Tap on *My Recipes*. A window opens displaying your own recipes. Tap on a recipe to start it.

16.2 Cooking history

Here you can browse through the list of recently used recipes and open the recipes to cook them again.

If you want to delete several recipes, proceed as follows:

1. Tap on *Edit*.
2. Tap all the recipes you want to delete.
3. Tap *Remove* and confirm the deletion in the next window.

16.3 Favourite Recipes

Here you will find all the recipes you have saved as favourites. You can scroll through the list and open the recipes directly.

To remove a recipe from your favourites, press ♥.

16.4 Tutorials

Here you will find video tutorials with ingenious live hacks for your MC smart.

1. Tap on *Tutorials*.
2. Tap on a picture to start the tutorial.
3. To stop, briefly tap once on the display.

Tap < to close the tutorial. You will see the tutorial window again.

17. Cleaning and servicing the device



DANGER! Risk of electric shock!

- Disconnect the mains plug **15** from the mains socket before any cleaning.
- Never immerse the base unit **13** in water.



DANGER! Risk of injury from cutting!

- Please remember that the blades of the blade assembly **18** are very sharp. Never touch the blades with your bare hands to avoid cuts.
- Before removing the blade assembly **18**, rinse the blender jug **5** with water and remove scraps of food from the blades so that the blade assembly **18** can be removed safely.
- When washing manually, the water should be sufficiently clear so that you can see the blade assembly **18** easily to avoid injuries caused by the very sharp blades.

CAUTION!


- Never use any abrasive, corrosive or scouring cleaning agents. These might damage the device.

NOTE: certain foods or spices (e.g. curry) may discolour the plastic. this is not a device error and is harmless to health.

17.1 Storage

- Store the device so that it is protected against dust and dirt and out of the reach of children.

17.2 Prerinsing

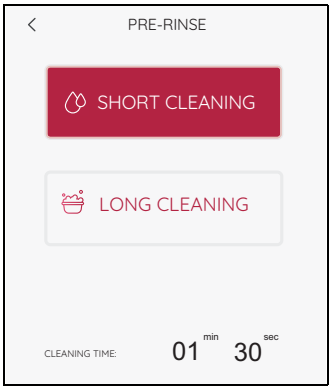

1. Put the blender jug **5** into the device.
2. Fill 0.5 l of water into the blender jug. You can add a little mild detergent to the water.
3. Put the lid **23** on the blender jug.
4. Select the program *PRE-RINSE*.
5. Choose between:
   - *SHORT CLEANING* (1 min. 30 sec.) or
   - *LONG CLEANING* (1 min. 45 sec)
6. Press *START*. The program starts with the rinse cycle and the time runs backwards.

NOTE: in the long cleaning process, the water is heated before the actual cleaning process.

7. When the rinsing process is finished, *DONE* appears in the display.
8. Pour out the water and start cleaning.

17.3 Cleaning the base unit

1. Clean the base unit **13** with a damp cloth. You can also use a little detergent.
2. Wipe with a clean, slightly damp cloth with clear water.
3. Do not use the base unit **13** until it is completely dry again.
4. The screen can also be cleaned with a lens cleaning cloth or special cleaning agents for monitors.

17.4 Cleaning in the dishwasher

The following parts are dishwasher-safe:

- Blender jug **5**
- Measuring beaker **24**
- Lid for blender jug **23**
- Seal of blender jug **22**
- blade assembly **18**
- Seal for blade assembly **17**
- Cooking pot **19**
- Mixer attachment **20**
- Spatula **21**
- Steamer attachment, deep **3**
- Seal of the steamer attachment **4**
- Steamer attachment, shallow **2**
- Lid for the steamer attachments **1**

The following parts must **never** be cleaned in a dishwasher:

- Base unit **13**

NOTES:

- Slight deformation may occur when cleaning in the dishwasher. This only occurs with accessories that are under tension when heated. Please place the parts loosely in the dishwasher. This way you can be sure that no deformation will occur.
- Before cleaning the blender jug **5** in the dishwasher, always remove the blade assembly **18**.

17.5 Cleaning the accessories



How to reorder accessories
If you discover that something needs to be renewed while cleaning, you can reorder the accessories. Simply scan the QR code.

1. Rinse the blender jug **5** with warm water and dump the water.
2. Remove the blade assembly **18** (see „Inserting and removing the blade assembly" on page 43) and take the seal **17** off (see „Cleaning, checking and replacing seals" on page 114).
3. Clean all accessories by hand in a sink with dishwater or in the dishwasher.
4. When cleaning by hand, rinse all parts with clean water.
5. Allow the parts to dry completely before using them again.
6. Before using the device again, reinsert the blade assembly **18** in the blender jug **5**.

17.6 Cleaning, checking and replacing seals

Remove the seals **17**, **22** and **4** for cleaning and check them for damage. Pay attention to changes (e.g. porous material or tears).

- The removed seals **17**, **22** and **4** can be cleaned in the dishwasher.
- Damaged seals **17**, **22** and **4** must be replaced with new ones. You can reorder new seals (see „How to order accessories" on page 123).


CAUTION!

⊙ Prior to the next use, damaged seals **17**, **22** and **4** must be inserted again or replaced with new ones. An operation without seals **17**, **22** and **4** in place is not permitted.

Blade assembly


1. Remove the blade assembly **18** from the blender jug **5** (see „Inserting and removing the blade assembly“ on page 43).
2. Pull the seal **17** off the blade assembly **18**.
3. Insert the cleaned seal **17** or a new one.
4. Before using the device again, reinsert the blade assembly **18**.

Deep steamer attachment

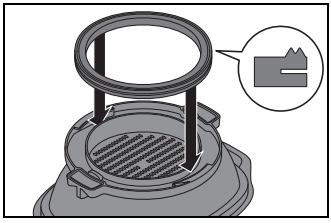


1. Pull the seal **4** off the underside of the deep steamer attachment **3**.
2. Insert the cleaned seal **4** or a new one in the deep steamer attachment **3**. The raised area must be visible after insertion, see figure. Ensure that the seal is in continuous contact with the surface without any waves.

Lid of the blender jug

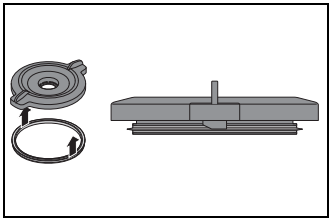

1. Pull the seal **22** off the underside of the lid for the blender jug **23**.
2. Insert the cleaned seal **22** or a new one in the lid for the blender jug **23**.

17.7 Cleaning, checking and replacing the spatula

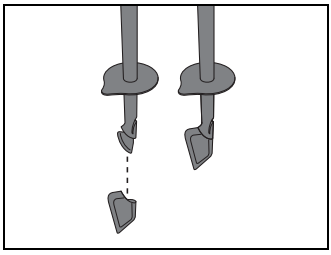

The spatula **21** is provided with a detachable silicone scraper. For cleaning, remove the silicone scraper, and check it for damage. Pay attention to changes (e.g. porous material or tears).

- Both parts can be cleaned in the dishwasher.
- You can reorder a new silicone scraper(see „How to order accessories“ on page 123).

17.8 Descaling

When steaming with hard water, limescale may build up on the parts used, especially in the blender jug **5**.

Normal cleaning

In most cases, the limescale deposits are removed by cleaning in the dishwasher or by hand.

Slight limescale deposits

1. Remove slight limescale deposits, which cannot be removed with normal cleaning by hand or in the dishwasher, with a towel on which you put some household vinegar.
2. Rinse with clean water.

Major limescale deposits

CAUTION!

⊙ Do not use commercially available descaling agent, not even glacial acetic acid or vinegar essence. Use the following gentle method.

1. Prepare a mixture of 50 % white household vinegar and 50 % boiling water.
2. Fill this mixture into the blender jug **5** or put other furred-up parts into a container with this mixture.
3. Allow the mixture to react for 30 minutes.


NOTE: more extended reaction periods do not improve the limescale deposits but may damage the parts permanently.

4. Rinse with clean water.
5. Allow the parts to dry completely before using them again.

17.9 Replacing the blade socket


If you process larger quantities than those specified in these instructions (e.g. dough with more than 1000 g of flour), the blade socket **11** can become so worn out that the blade assembly **18** no longer turns correctly.
If this happens, replace the blade socket **11** with a new one. You can reorder these including a silicone cover **25** (see „How to order accessories" on page 123).
Comply with the specified maximum quantities in future.

Removing the old blade socket

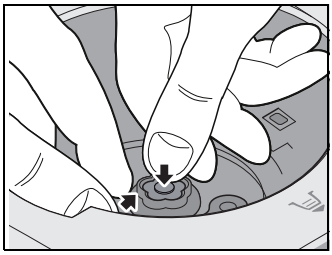


1. Press your thumb down on the silicone cover **25** and simultaneously reach under the rim of the old blade socket **11**. Pull the old blade socket **11** out upwards.
   You may need to "wobble" it a bit before the blade socket **11** becomes loose enough to be removed.

Inserting the new blade socket

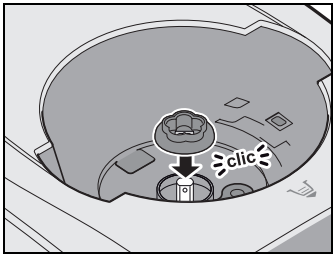

2. Place the blade socket **11** onto the drive axle. The recess in the blade socket **11** must be set to fit the flattened sides of the drive axle. The blade socket **11** clicks into place on the drive axle.

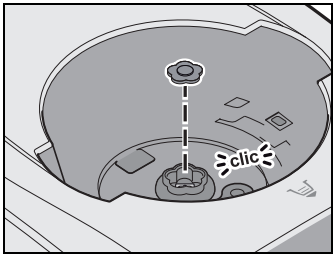

3. Insert the silicone cover **25** into the blade socket **11**.

18. Malfunctions, Cause, Remedy

If your device fails to function as required, please try this checklist first. Perhaps there is only a minor problem, and you can solve it yourself.

DANGER! Risk of electric shock!

⊙ Do not attempt to repair the device yourself under any circumstances.

18.1 Spare parts

Malfunction	Cause	Remedy
Where can I order spare parts?		You can order accessories or spare parts in the shop at shop.monsieur-cuisine.com.

18.2 Motor runs irregularly

Malfunction	Cause	Remedy
If the motor runs irregularly, this could be caused by the following reasons.	The rotational speed of the blender is set too low.	The motor runs rough on the lower settings on purpose, to achieve a satisfactory mixing ratio. There is no need to intervene.
	You have selected an automatic program.	Many automatic programs take a break to change the blade direction. This can give the impression that the motor is stalling. But do not worry – that is how it is supposed to be.
	The motor is overloaded. This can happen when e.g. too much dough is to be processed.	Please give your Monsieur Cuisine smart a break and allow it to cool down for approximately 30 minutes before you continue. Then you can continue, obviously with less dough.

18.3 Other malfunctions

Malfunction	Cause	Remedy
Device does not start.	Blender jug **5** is not positioned correctly.	Insert blender jug **5** correctly (see „Insert blender jug“ on page 44).
	Lid **23** or deep steamer attachment **3** have not been placed correctly onto the blender jug **5**.	Place lid **23** or deep steamer attachment **3** correctly.
	No power supply.	Check mains plug **15**, on/off switch **6** and possibly the fuse.
WiFi is not displayed	Your *MC smart* only works with a WiFi network frequency of 2.4 GHz. However, your router is set to 5 GHz.	In the settings menu of your router, activate the 2.4 GHz WiFi in addition to the 5 GHz WiFi and connect the *MC smart* to it.
Device cannot be connected to the WiFi.	Your *MC smart* only works with a WiFi network frequency of 2.4 GHz. However, your router is trying to establish a 5 GHz connection.	In the settings of your router, give the 2.4 GHz WiFi a new name that is different from the 5 GHz WiFi. For example, simply add 2.4 GHz to the existing name and connect the *MC* to this WiFi. Other devices that operate on the 2.4 GHz WiFi and were previously connected to it must be reconnected to it.
	The 2.4 GHz frequency was switched off at the router.	Switch the 2.4 GHz frequency back on in the router menu.
		Check mains plug **15**, on/off switch **6** and possibly the fuse.

Malfunction	Cause	Remedy
Liquid underneath the device.	The blade assembly **18** has not been inserted correctly so that the blender jug **5** is leaking.	Insert blade assembly **18** correctly (see „Inserting and removing the blade assembly“ on page 43).
	Seal **17** for blade assembly is defective.	Insert new seal **17** (see „Cleaning, checking and replacing seals“ on page 114).
	Liquid escaped from the blender jug **5** flowing onto the work surface through the overflow **12** hole of the base unit **13** (see „Overflow hole“ on page 63).	When mixing liquids at speed 10 or with button *TURBO*, the blender jug **5** must not contain more than 2.5 litre, since otherwise liquid might be ejected. For speed settings of less than 10, the blender jug **5** may only be filled up to a maximum of 3 litres.
Liquid escapes at the lid **23** of the blender jug **5**.	Seal **22** has not been inserted correctly.	Insert seal **22** correctly (see „Cleaning, checking and replacing seals“ on page 114).
	Seal **22** is defective.	Insert new seal **22** (see „Cleaning, checking and replacing seals“ on page 114).
No temperature can be set.	A speed setting 4 - 10 was selected.	Select speed setting 0 - 3 (see „Set the speed“ on page 58).
My entries are constantly being changed.	You have entered something that is not possible with the current programme.	Look for information on the display or in the instructions.
Blade assembly **18** not turning.	Is the blade socket **11** worn out? This can happen, for example, if you have processed a quantity of dough that is too large.	Replace the blade socket **11** with a new one (see „Replacing the blade socket“ on page 117) and comply with the specified maximum quantities in future.
Parts of the device or accessories are discoloured or look slightly milky.	Certain foods or spices (e.g. curry) may discolour the plastic. This is not a device error.	Remedy unnecessary, since not harmful to health.
A speed setting exceeding 3 cannot be selected.	A temperature has been set.	Set temperature to *0*.
Error messages or notes in the screen.	Warning against incorrect operation.	Follow the instructions on the screen.

19. Disposal



This product is subject to the provisions of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.



This recycling symbol marks e.g. an object or parts of the material as valuable for recycling. Recycling helps to reduce the consumption of raw materials and protect the environment.

Packaging

When disposing of the packaging, make sure you comply with the environmental regulations applicable in your country.

Delete data

Delete your personal data before disposing of the device. This could be, for example: Connections to apps or websites, personal information or settings.

20. Technical specifications

Model:	SKMS 1200 C1
Mains voltage:	230 V ~ 50 Hz
Protection class:	I
Power rating:	1,200 watts Blender: 1,000 watt Cooking: 1,050 watt
On-off switch to **0** = power consumption:	0 watt
Switch to standby mode:	< 20 min.
Power consumption when in standby mode:	≤ 0,5 watt
WIFI: Frequency range:	2,400 Mhz - 2,483.5 Mhz
Transmitting power:	< 20 dBm
Maximum filling volume of the blender jug **5**:	3 litres
Maximum weight capacity of the scale:	5 kg

Notes on the EU declaration of conformity

HOYER Handel GmbH hereby declares that this product meets the basic requirements of the RED 2014/53/EU and the RoHS Directive 2011/65/EU + 2015/863/EU.
A complete declaration of conformity can be found on the Internet at:
http://qr.hoyerhandel.com/d/503201

Symbols used

	Geprüfte **S**icherheit (**C**ertified **S**afety). Devices must comply with the generally acknowledged rules of technology and the German Product Safety Act (Produktsicherheitsgesetz - ProdSG). (Not for UK)
	With the CE marking, HOYER Handel GmbH declares the conformity with EU guidelines.
	This symbol reminds you to dispose of the packaging in an environmentally friendly manner.
21 PAP	Recyclable materials are marked with the recycling symbol (3 arrows). The material can be specified by the recycling number in the centre (here: 21) and/or an abbreviation (here: PAP).
~	AC voltage
	The symbol indicates that the accessories are dishwasher-safe. Information on which parts can be cleaned in the dishwasher can be found in these operating instructions.
BPA FREE	The product does not contain bisphenol A.

Subject to technical modification.

Due to further product and software developments, symbols may change.

Information on batteries / rechargeable batteries according to EU 2023/1542

Name / trademark of the manufacturer	SHENZHEN LIDEA BATTERY CO., LTD, No. 5 Building, Houhai Xufa Tech Park, No. 8 Zhenxing Road, Xinhu Sub-district, Guangming district, Shenzhen 518106, China.
Battery type	Lithium button cell: LIR1220 Batch number: 2405
Brand name	MALAK
The declaration of conformity is issued under the sole responsibility of:	SHENZHEN LIDEA BATTERY CO., LTD
The mentioned battery was produced in accordance with EU Regulation EU2023/1542.	

21. How to order accessories

On our website you will find information on which accessories can be reordered.

Order online



1. Scan the QR code with your smartphone/tablet.
2. The QR code will take you to a website where you can place the reorder.

22. Website

Website:
www.monsieur-cuisine.com

23. Warranty of the HOYER Handel GmbH

Dear Customer,
your device is provided with a 3 year warranty starting with the purchase date. In the event of product defects, you are entitled to statutory rights against the vendor. These statutory rights are not restricted by our warranty presented in the following.

Warranty conditions

The warranty period starts with the purchase date. Please keep the original Lidl purchase receipt in a safe place. This document is required to verify the purchase.
If within three years from the purchase date of this product a material or factory defect occurs, the product will be repaired or replaced by us – at our discretion – free of charge to you, or the purchase price will be refunded. This warranty implies that within the period of three years the defective device and the purchase receipt are presented, including a brief written description of the defect and the time it occurred. Another requirement is the rating plate on the device. If this has been removed, the warranty is expired.
If the defect is covered by our warranty, the repaired or a new product will be returned to you. No new warranty period starts with a repair or replacement of the product.

Warranty period and statutory claims for defects

The warranty period is not extended when the warranty has been claimed. This also applies to replaced and repaired parts. Any damages and defects already existing at the time of purchase must be reported immediately upon unpacking. Repairs arising after the expiration of the warranty period are subject to a charge.

Warranty coverage

The device was produced carefully according to strict quality guidelines and tested diligently prior to delivery.
The warranty applies to material or factory defects.

Excluded from the warranty are burnt pots as well as wearing parts subject to normal wear and damages to fragile parts, e.g. switches, bulbs, seals, blender blades, blade socket, spatulas, mixer assembly or other parts manufactured from glass.

This warranty expires if the product is damaged, not used as intended or not serviced. For the proper operation of the product, all instructions listed in the operating instructions must be observed carefully. Any form of use and handling that is advised against in the operating instructions or warned against must always be avoided.
The product is only intended for private and not for commercial use. In the case of incorrect and improper treatment, use of force and interventions not performed by our authorised Service Centre, the warranty shall cease.

Handling in case of a warranty claim

In order to ensure prompt processing of your matter, please observe the following notes:

- Please keep the article number **IAN: 503201_2407** and the purchase receipt as a purchase verification for all inquiries.
- The article number can be found on the rating plate, an engraving, the title page of your instructions (in the bottom left), or as a label on the rear or underside of the device.
- If faulty operation or other defects occur, first contact the Service Centre listed in the following by **telephone** or **email**.
- Then, you are able to send a product reported as defective free of charge to the service address specified to you, including the purchase receipt and the information on the defect and when it occurred.

At www.lidl-service.com you can download this and many other manuals, product videos and installation software.



This QR code takes you directly to the Lidl Service website (www.lidl-service.com), where you can enter the article number (IAN) **503201_2407** to open your user instructions.

Repair without guarantee or warranty claims

Even if the warranty is expired, you can have your defective device repaired by us. For example due to an expired warranty period or a damage that was accidentally caused by yourself.

In this case, you can still contact us as described above. You are responsible for the dispatch and repair costs.

Service Centre

(GB) Service Great Britain
Tel.: 0800 404 7657
E-Mail: hoyer@lidl.co.uk

(IE) Service Ireland
Tel.: 1800 101010
E-Mail: hoyer@lidl.ie

IAN: 503201_2407

Supplier

Please note that the following address is **no service address**. First contact the aforementioned Service Centre.

HOYER Handel GmbH
Kühnehöfe 12
22761 Hamburg
GERMANY

HOYER Handel GmbH
Kühnehöfe 12
22761 Hamburg
GERMANY

Status of information:
01/2025 ID: SKMS 1200 C1_24_V1.2

IAN 503201_2407

IE