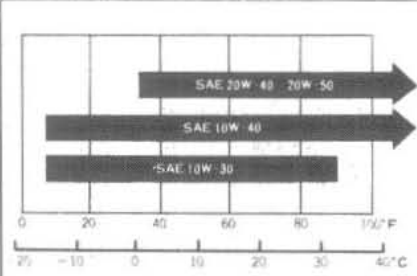


2. LUBRICATION

SPECIFICATIONS

Engine oil



Oil recommendation	Use Honda 4-Stroke Oil or equivalent. API Service Classification: SE or SF. VISCOSITY: SAE 10W-40 Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.	OIL VISCOSITIES  The chart shows three horizontal bars representing temperature ranges in degrees Fahrenheit (F) and degrees Celsius (C). The top bar is for SAE 20W-40/70W-50, the middle for SAE 10W-40, and the bottom for SAE 10W-30.
--------------------	---	---

ENGINE OIL LEVEL

Run the engine and allow it to idle for 2-3 minutes.

Stop the engine and support the motorcycle on the center stand. Check the oil level with the dipstick after a few minutes. Do not screw in the cap when making this check.

If the level is below the lower level mark on the dipstick, remove the filler cap and add the specified oil. Start the engine and check the warning light/display. The light should go off when the engine starts. If it does not, check the oil pump function and/or oil circuit.

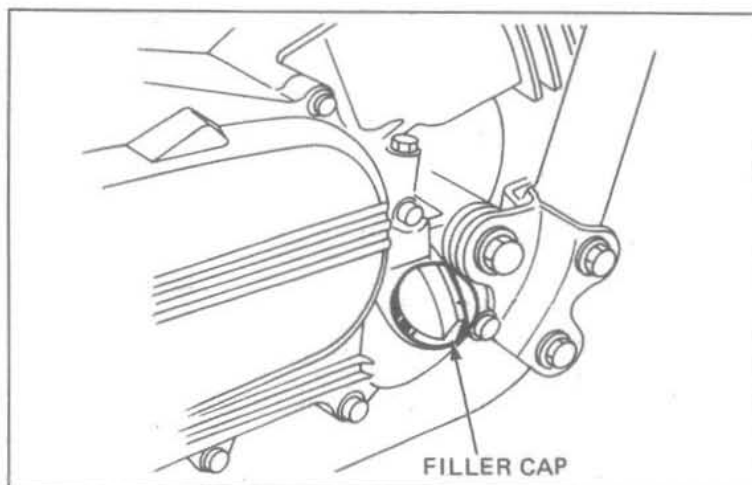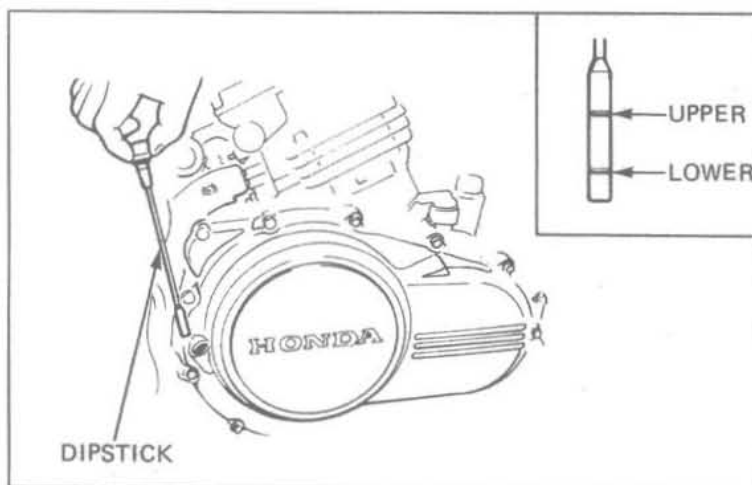



3. MAINTENANCE

MAINTENANCE SCHEDULES

V45 SABRE-VF750S

Perform the PRE-RIDE INSPECTION in the Owner's Manual at each scheduled maintenance period.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE, OR REPLACE IF NECESSARY.

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

		FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE 3)								Refer to page
				600 mi (1,000 km)	4,000 mi (6,400 km)	8,000 mi (12,800 km)	12,000 mi (19,200 km)	16,000 mi (25,600 km)	20,000 mi (32,000 km)	24,000 mi (38,400 km)		
ITEM		EVERY										
EMISSION RELATED ITEMS	*	FUEL LINES				I		I		I	3-5	
	*	THROTTLE OPERATION		I		I		I		I	3-6	
	*	CARBURETOR-CHOKE				I		I		I	3-7	
	*	AIR CLEANERS	NOTE 1		C	C	C	C	C	C	25-10	
		CRANKCASE BREATHER	NOTE 2		C	C	C	C	C	C	3-9	
		SPARK PLUGS			R	R	R	R	R	R	3-9	
	*	VALVE CLEARANCE		I		I		I		I	3-11	
		ENIGNE OIL	YEAR	R		R		R		R	25-7	
		ENGINE OIL FILTER	YEAR	R		R		R		R	2-3	
	*	CARBURETOR-SYNCHRONIZE		I		I		I		I	3-12	
	*	CARBURETOR-IDLE SPEED		I	I	I	I	I	I	I	3-13	
		RADIATOR COOLANT				I		I		*R	3-13	
	*	RADIATOR CORE				I		I		I	3-14	
	*	COOLING SYSTEM HOSES & CONNECTIONS		I		I		I		I	3-14	
NON-EMISSION RELATED ITEMS		FINAL DRIVE OIL				I		I		R	2-10	
	*	FINAL DRIVEN FLANGE	TIRE CHANGE			L		L		L	17-6,25-26	
		BATTERY	MONTH	I	I	I	I	I	I	I	3-15	
		BRAKE FLUID (FRONT)	MONTH 1 2 YEARS* R	I	I	I	I	I	I	*R	3-15	
		BRAKE SHOE/PAD WEAR			I	I	I	I	I	I	3-16	
		BRAKE SYSTEM		I		I		I		I	3-16	
	*	BRAKE LIGHT SWITCH		I		I		I		I	3-17	
	*	HEADLIGHT AIM		I		I		I		I	3-17	
		CLUTCH FLUID	MONTH 1 2 YEARS* R	I	I	I	I	I	I	*R	3-18	
		CLUTCH SYSTEM		I		I		I		I	3-18	
		SIDE STAND				I		I		I	3-18	
	*	SUSPENSION		I		I		I		I	3-19	
	*	NUTS, BOLTS, FASTENERS		I		I		I		I	3-21	
	**	WHEELS		I		I		I		I	3-21	
	**	STEERING HEAD BEARINGS		I		I		I		I	3-21	

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: 1. SERVICE MORE FREQUENTLY WHEN RIDING IN DUSTY AREAS.

2. SERVICE MORE FREQUENTLY WHEN RIDING IN RAIN OR AT FULL THROTTLE (U.S.A. ONLY).

3. FOR HIGHER ODOMETER READINGS, REPEAT AT THE FREQUENCY INTERVAL ESTABLISHED HERE.



V45 MAGNA-VF750C

Perform the PRE-RIDE INSPECTION in the Owner's Manual at each scheduled maintenance period.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE, OR REPLACE IF NECESSARY.

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

		FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE 3)								Refer to page
				600 mi (1,000 km)	4,000 mi (6,400 km)	8,000 mi (12,800 km)	12,000 mi (19,200 km)	16,000 mi (25,600 km)	20,000 mi (32,000 km)	24,000 mi (38,400 km)		
ITEM		EVERY										
EMISSION RELATED ITEMS	* FUEL LINES				I		I		I	3-5		
	* FUEL FILTER								R	3-5		
	* THROTTLE OPERATION		I		I		I		I	3-6		
	* CARBURETOR-CHOKE				I		I		I	3-6		
	* AIR CLEANER	NOTE 1			R		R		R	3-7		
	CRANKCASE BREATHER	NOTE 2		C	C	C	C	C	C	3-9		
	SPARK PLUGS			R	R	R	R	R	R	3-9		
	* VALVE CLEARANCE		I		I		I		I	3-11		
	ENGINE OIL	YEAR	R		R		R		R	2-3		
	ENGINE OIL FILTER	YEAR	R		R		R		R	2-3		
	* CARBURETOR-SYNCHRONIZE		I		I		I		I	3-12		
	* CARBURETOR-IDLE SPEED		I	I	I	I	I	I	I	3-13		
	RADIATOR COOLANT				I		I		*R	3-13		
	* RADIATOR CORE				I		I		I	3-14		
	* COOLING SYSTEM HOSES & CONNECTIONS		I		I		I		I	3-14		
NON-EMISSION RELATED ITEMS	FINAL DRIVE OIL				I		I		R	2-10		
	* FINAL DRIVEN FLANGE	TIRE CHANGE			L		L		L	17-6		
	BATTERY	MONTH	I	I	I	I	I	I	I	3-15		
	BRAKE FLUID (FRONT)	MONTH 1 2 YEARS* R	I	I	I	I	I	I	*R	3-15		
	BRAKE SHOE/PAD WEAR			I	I	I	I	I	I	3-16		
	BRAKE SYSTEM		I		I		I		I	3-16		
	* BRAKE LIGHT SWITCH		I		I		I		I	3-17		
	* HEADLIGHT AIM		I		I		I		I	3-17		
	CLUTCH FLUID	MONTH 1 2 YEARS* R	I	I	I	I	I	I	*R	3-18		
	CLUTCH SYSTEM		I		I		I		I	3-18		
	SIDE STAND				I		I		I	3-18		
	* SUSPENSION		I		I		I		I	3-19		
	* NUTS, BOLTS, FASTENERS		I		I		I		I	3-21		
	** WHEELS		I		I		I		I	3-21		
	** STEERING HEAD BEARINGS		I		I		I		I	3-21		

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: 1. SERVICE MORE FREQUENTLY WHEN RIDING IN DUSTY AREAS.

2. SERVICE MORE FREQUENTLY WHEN RIDING IN RAIN OR AT FULL THROTTLE (U.S.A. ONLY).


3. FOR HIGHER ODOMETER READINGS, REPEAT AT THE FREQUENCY INTERVAL ESTABLISHED HERE.



AIR CLEANER (V45 SABRE)

Remove the fuel tank.
 Remove the two air cleaner case cover mounting bolts and air cleaner case cover.

AIR CLEANER CASE COVER

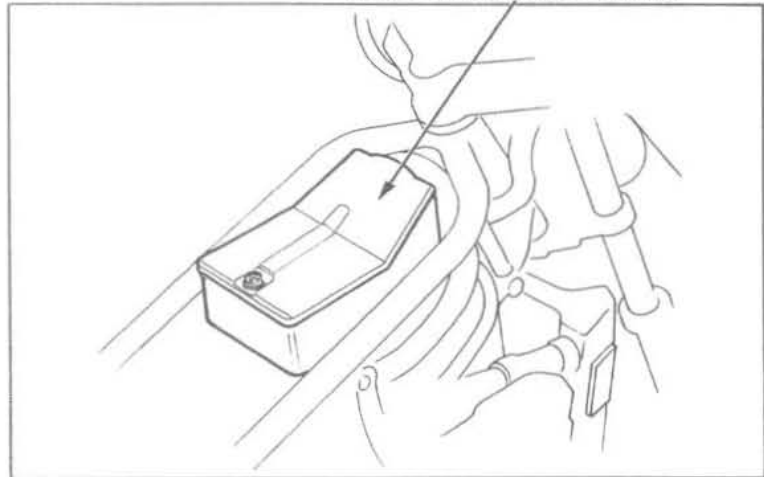


Remove the element setting plate B and element.

Wash the elements in non-flammable or high flash point solvent and let it dry.
 Soak the elements in gear oil (SAE #80—#90) and squeeze out the excess.

Install the removed parts in the reverse order of disassembly.

ELEMENT

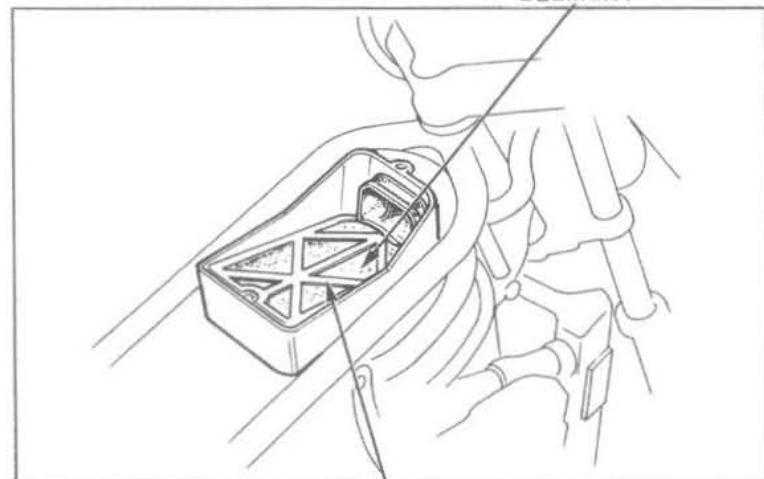

ELEMENT SETTING PLATE B

4. FUEL SYSTEM (V45 SABRE) SERVICE INFORMATION

SPECIFICATIONS

Venturi dia.	Primary 10.5 mm (0.41 in) Secondary 30 mm (1.18 in)
Identification No.	VD51C
Float level	7.0 mm (0.28 in)
Main jet	# 128 (Front) # 132 (Rear)
Idle speed	1,000 ± 100 rpm
Throttle grip free play	2–6 mm (0.08–0.24 in)
Pilot screw initial opening	2-1/2



CARBURETOR REMOVAL

Remove the air cleaner element (page 25-9).
Remove the air cleaner case.

AIR CLEANER CASE
COVER




Remove the air cleaner base cover screws and base cover.

AIR CLEANER BASE




Remove the thermostat cover bolt and disconnect the ground cable.

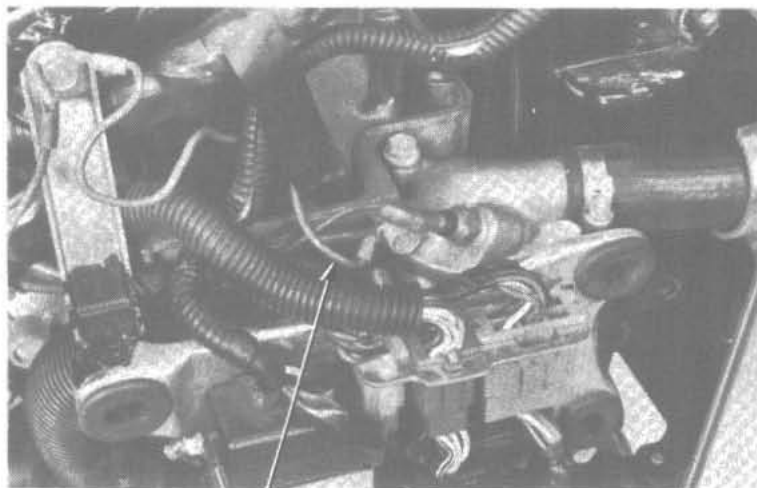

GROUND CABLE




Remove the high tension cords and left electric parts bracket.

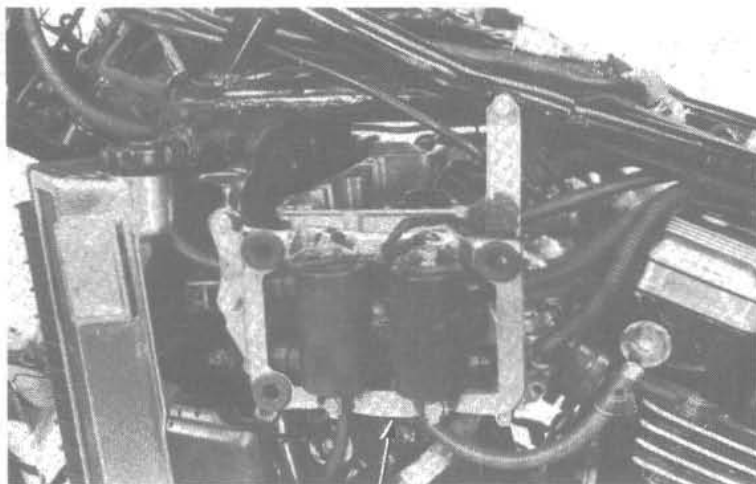

LEFT ELECTRIC PARTS
BRACKET

Loosen the carburetor bands and remove the carburetors from the left side.

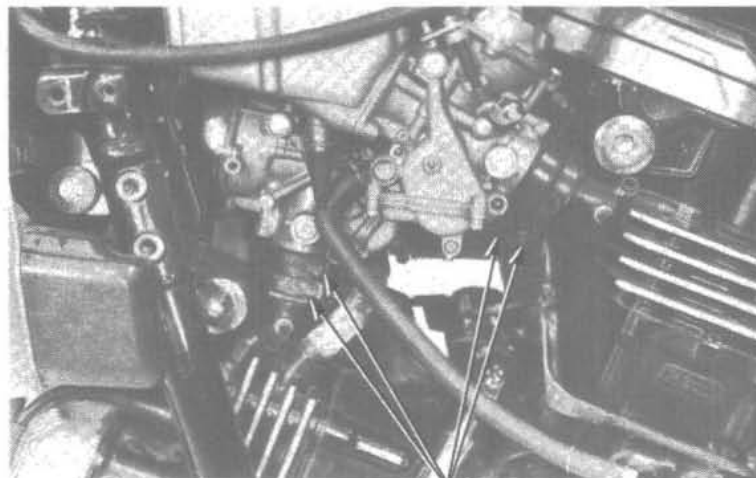

CARBURETOR BANDS


FLOAT CHAMBER FLOAT AND JET

Remove the needle jet holder and needle jet.

NOTE:

If the needle jet is difficult to remove, carefully press the needle jet from the cylinder side with a soft material.

NEEDLE JET

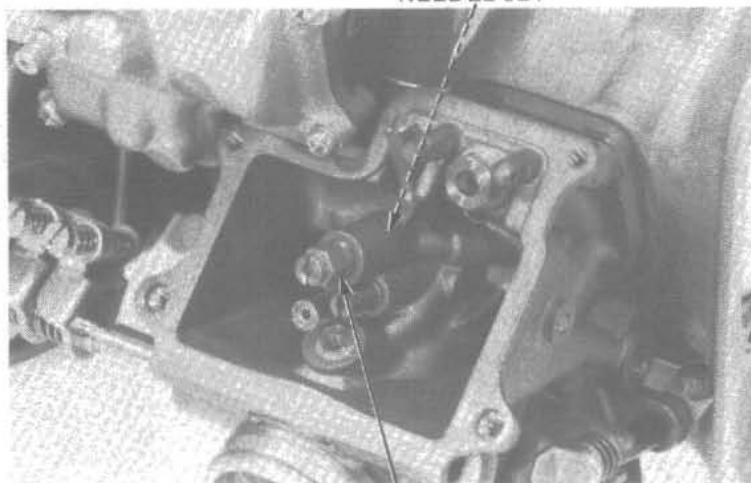


NEEDLE JET HOLDER



CARBURETOR SEPARATION/ ASSEMBLY

Remove and install fuel joints as shown.

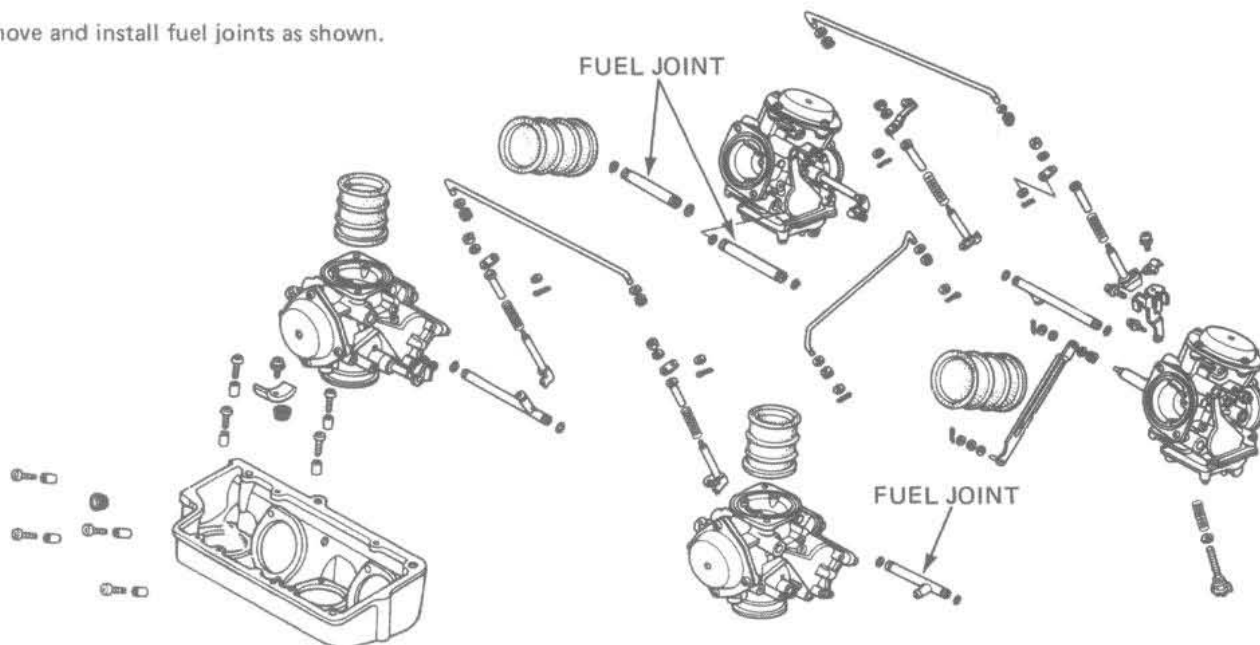

AIR CLEANER CASE/CHAMBER

Check the air cleaner case for deterioration.

CRANKCASE VENTILATION SYSTEM

Check that breather tube is not restricted.

