

NUOVO DUCATO X250 3.0 JTD STARTING AND RECHARGING - COMPONENT LOCATION E5010


STARTING AND RECHARGING - DESCRIPTION

STARTING AND RECHARGING - FUNCTIONAL DESCRIPTION

STARTING AND RECHARGING - WIRING DIAGRAM

STARTING AND RECHARGING - COMPONENT LOCATION

Packet print

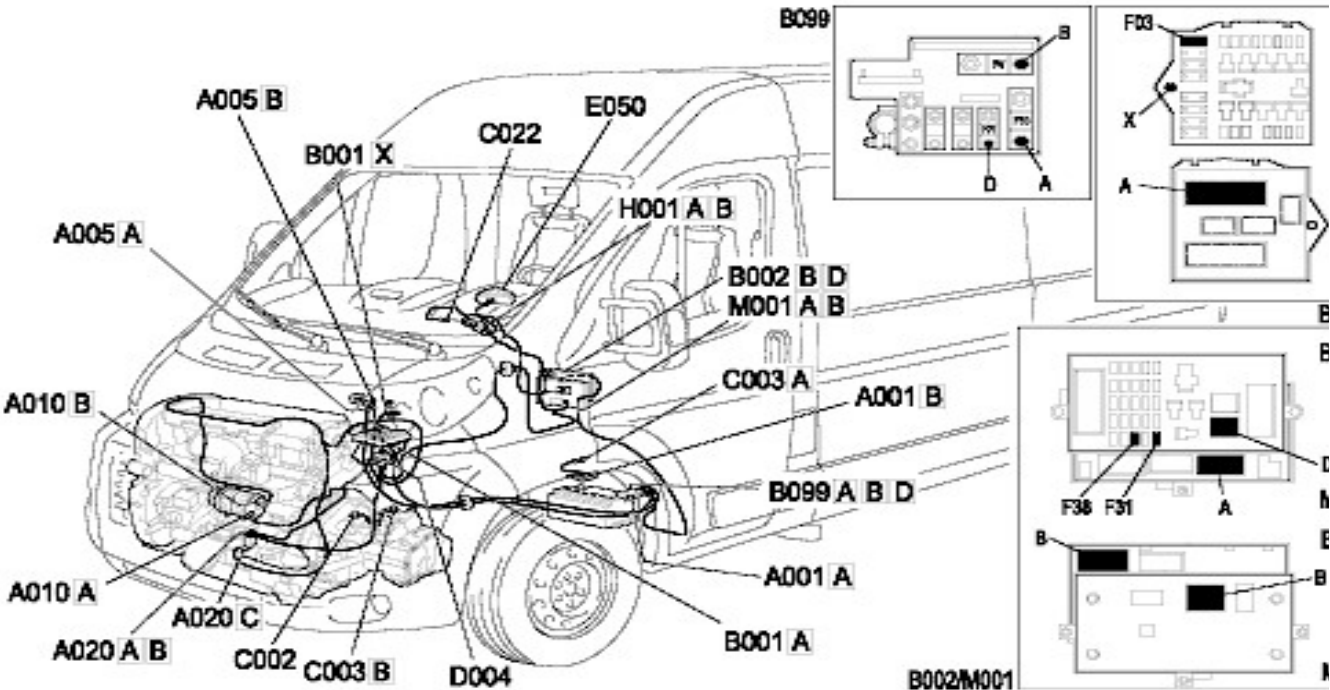

[Full-size](#)

Component code	Description	With reference to the assembly
A001	BATTERY	Op. 5530B BATTERY AND LEADS
A005	Contact board	Op. 5530B BATTERY AND LEADS
A010	ALTERNATOR	Op. 5530A ALTERNATOR COMPONENTS
A020	STARTER MOTOR	Op. 5520B STARTER MOTOR COMPONENTS
B001	JUNCTION UNIT	Op. 5505A MULTI-FUNCTIONAL COMPONENTS
B002	JUNCTION UNIT UNDER DASHBOARD	Op. 5505A MULTI-FUNCTIONAL COMPONENTS

B099	MAXI FUSE BOX ON BATTERY	Op. 5530B BATTERY AND LEADS
C002	BATTERY EARTH ON ENGINE	-
C003	BATTERY EARTH ON BODYSHELL	-
C022	Centre dashboard earth	-
D004	FRONT/ENGINE COUPLING	-
E050	INSTRUMENT PANEL	Op. 5560B ANALOGUE CONTROL PANEL
H001	IGNITION SWITCH	Op. 5520A IGNITION SWITCH
M001	BODY COMPUTER	Op. 5505A MULTI-FUNCTION COMPONENTS