




Residential Use Only

THIS PRODUCT IS INTENDED FOR USE BY
CHILDREN FROM AGES 3 TO 14

SAVE THESE
INSTRUCTIONS



CrazyCoconut

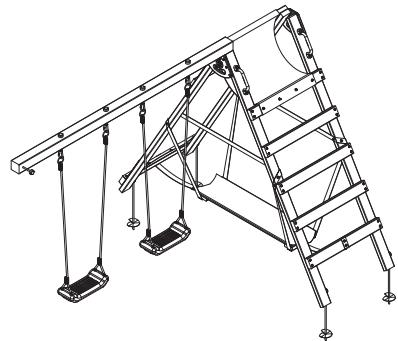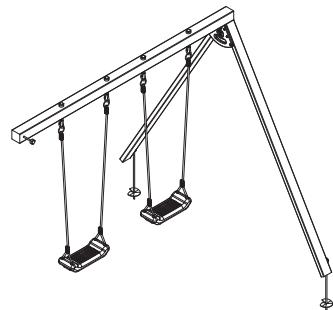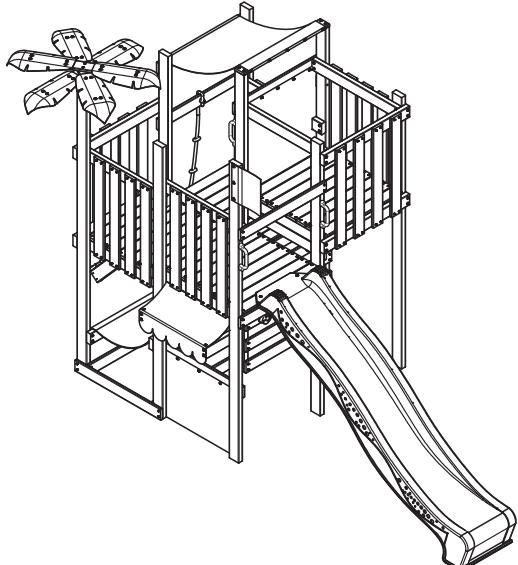

Warning! Choking Hazard - Small parts! Only for domestic use. For outdoor use only.
Product must be assembled by an adult. Customer must keep this information



Ages
3-14



Page intended to be empty

PRODUCT REGISTRATION

3 EASY WAYS TO REGISTER

OPTION 1

Scan the QR Code:



OPTION 2

Make a photo of the completed registration card and send it by e-mail to:
info@wickey.com

OPTION 3

Mail the completed form to:

Wickey Corporation
4001 Calhoun Ave, Chattanooga
TN 37407

Where did you buy this product?

Date of Purchase

Store

Store City

Store State

Your registration information:

Name: _____ Email: _____

Address: _____ Street _____ City _____ State _____ Zip _____

Please select 18-30 41-50
your age 31-40 51+
How old are 2-3 6-7
your children? 4-5 8+

How would ★ ★ ★ ★ ★ Excellent
you rate the ★ ★ ★ ★ Above Average
quality of this ★ ★ ★ Average
product? ★ ★ Below Average
 ★ Poor

Number of
children

Would you recommend this product to friends & family? Yes No

May we add you to our mailing list? Yes No

May we use your comments on websites or other marketing materials? Yes No

Comments: _____



General safety information

Congratulations on the purchase of your Wickey climbing frame. The purchased product is expandable at any time, so years of fun are guaranteed. Our systems meet the latest safety requirements: the used materials comply with the European standards, according to ASTM F1148 - Standard Consumer Safety Performance Specification for Home Playground Equipment. All woods are pressure impregnated and thus protected from the elements. Our playground equipment is examined with the utmost care to ensure the necessary safety.

- ▶ Please use only original Wickey components and add-on parts.
- ▶ For domestic use only!
- ▶ Suitable for children between 3 and 14 years old.
- ▶ Maximum load capacity: 220 lbs.
- ▶ For outdoor use only!

Safety instructions for assembly

- ▶ The product may only be assembled by adults.
- ▶ Make sure that no children are present during the installation of the play equipment.
- ▶ Children must not use the equipment until properly installed.
- ▶ The climbing frame may only be used after the complete inspection of all attachments.
- ▶ Read the installation instructions carefully and keep these instructions for future adjustments or extensions
- ▶ Wear suitable protective clothing, such as safety glasses, and gloves, during the assembly.
- ▶ Do not step onto the platform until the playground equipment is completely assembled.
- ▶ In order to ensure the stability of the climbing frame, you should use ground anchors and fix them in concrete.
- ▶ Make sure that the ground anchors disappear into the ground

completely, to prevent tripping hazards.

- ▶ Tighten the nuts on bolts securely, and flush to the component.
- ▶ Caps which go over the exposed bolts shall be put on snug to the nut.

Swing Clearance Distances

- ▶ The distance between the swing seat and the ground should be at least 14".
- ▶ The distance between the individual swing seats and other swinging products should be at least 18".
- ▶ The clearance distance between swings and frame should be at least 12".

Surroundings and underground

- ▶ Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
- ▶ Place the equipment on level ground, not less than 6 ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

Inappropriate use

Improper use or the attachment of inappropriate or foreign materials such as heavy chains, poles or ropes release the manufacturer from his responsibility. The same applies to incorrect assembly. Do not deviate from the assembly instructions and do not change the design and implementation.

Supervision

Keep in mind that adult supervision is mandatory and essential while children play on these devices. Children under 3 years of age are not allowed to use the playground equipment.

Maintenance

At the beginning of each play session and every two weeks during the season, check the strength of the screws and hooks. Note, however, that overtightened screws can cause cracks in the wood.

Also check the fastening material, fittings and swing hooks for any signs of wear or rust. Also check the anchors and replace them in case of defects. In addition, all moving metal parts must be lubricated on a regular basis. Also check all the screw covers and sharp edges and replace them or grind them off if necessary. Check the wooden parts for splinters and cracks, which can naturally occur during the drying process. Remove any splinters that may have developed during this process. Swing seats, chains, ropes and other accessories must be checked for signs of wear. Defective parts must be replaced in accordance with the manufacturer's instructions. Lack of inspection can cause the climbing frame to overturn or can have other dangerous effects.

Wood treatment

Since all wooden parts are pretreated (pressure impregnated) there is no need for further treatment against weathering or decay. Under no circumstances should you paint the wood or use a paint that could result in a slippery/smooth surface.

Maintenance of plastics

For cleaning the plastic parts, we recommend tap water with detergent. In wintertime, you should store the plastic parts in the house or garage to slow down the natural aging process of the materials.

Wickey's play equipment is intended for private use only, as additional safety requirements are required for public play equipment. Spare parts can be ordered via our webshop: www.wickey.com

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

**OBSERVING THE FOLLOWING STATEMENTS AND WARNINGS
REDUCES THE LIKELIHOOD OF SERIOUS OR FATAL INJURY**

WARNING

ADULT SUPERVISION REQUIRE. On-site supervision is required anytime a play set is being used.

WARNING

ADULT ASSEMBLY REQUIRED. KEEP AWAY FROM CHILDREN UNTIL ASSEMBLED AND ANCHORED. Product prior to assembly contains sharp points, sharp edges and small parts.

WARNING

FOLLOW ASSEMBLY INSTRUCTIONS. Product must be assembled and anchored on a suitable level surface as instructed (see section X for Assembly Instructions).

WARNING

ENSURE SAFE DISTANCES. Choose a location that allows for minimum safe distances from objects like trees, large rocks, fences, as instructed (see section X for Assembly Instructions for safe distances).

WARNING

WEIGHT CAPACITY. Adhere to all recommendations for number of users and equipment weight limits.

Max 6 occupants (340 lbs) on the elevated fort platform.

Max 2 occupants (130 lbs) on the swings.

Total capacity: 8 occupants (470 lbs)

WARNING

DO NOT MODIFY EQUIPMENT. Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

WARNING

Ensure suspended climbing ropes, chains, and cables are securely fastened at both ends and cannot be looped back onto themselves.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

WARNING

Playground equipment and/or surfacing in direct sunlight may reach temperatures high enough to cause serious burn injuries within seconds. Check for hot play surfaces and surfacing before letting children play.

WARNING

Children must be taught safe use practices, including:

- Do not use equipment in a manner other than intended.
- Do not get off equipment while it is in motion.
- Do not walk close to, in front of, behind, or between moving items.
- Do not attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.

SWING SAFETY WARNING

Failure to follow the below safe practices can result in serious injury.

Children must be taught to:

- Seat themselves safely, children must sit with full weight in the swing seat center.
- Not to stand on swings.
- Not to jump from moving swings.
- Not push empty swings - they can cause injury to themselves or others.
- Not to twist or loop chains/ropes over beams - this weakens them.
- Never wrap arms or legs around swing chains.
- Never slide down a swing chain.

SLIDE SAFETY WARNING

Failure to follow the below safe practices can result in serious injury.

Children must be taught to:

- Always go down slide feet first, never headfirst.
- Look before sliding to ensure no one is at the bottom.
- Never run up a slide—this increases fall risk.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

FORT AND CLIMBING WARNING

Failure to follow the below safe practices can result in serious injury.

Children must be taught to:

- Not climb when the equipment is wet.
- Never jump from a fort deck—always use the ladder, ramp, or slide.
- Never crawl or walk across the top of equipment.
- Never crawl on top of a fort roof.
- Never look at the sun through accessories like telescopes, periscopes, or binoculars.

PROPER DRESS WARNING

Failure to follow the below safe practices can result in serious injury.

- Children must wear well-fitting shoes that completely enclose feet; no clogs, flip-flops, or sandals.
- DO NOT allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Teach children to remove bike or sports helmets before playing on the playground. These items can cause death by strangulation.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

Before each play session

- Tighten all hardware but avoid over-tightening to prevent wood from cracking.
- Lubricate all metallic moving parts as needed (See “2.2 Lubrication of Moving Components”).
- Inspect protective coverings on bolts, pipes, edges, and corners. Replace any that are loose, cracked, or missing.
- Check all moving parts—swing seats, ropes, cables, and chains—for wear, rust, or damage. Replace as needed. Replace any swing seat with cracks.
- Inspect metal parts for rust. If found, sand and repaint with a non-lead-based paint.
- Examine wood components for deterioration and splinters. Sand down splinters and replace deteriorated wood. Apply a protective sealant once or twice a year, as required by the warranty (See “2.3 Applying Protective Sealant”).
- Reinstall plastic parts, such as swing seats, that were removed for winter storage.
- Rake and check the depth of loose-fill protective surfacing to prevent compaction and maintain proper cushioning. Replenish as needed.
- Ensure the playset remains level. As children play, the set may shift into the soil-adjust as necessary to keep it stable.
- Ensure legibility of safety warnings.
- Ensure suspended climbing ropes, chains, and cables are securely fastened at both ends and cannot be looped back onto themselves.
- Ensure equipment has not been modified in anyway.
- On sunny and or hot days, skin contacting plastic surfaces (e.g., slides and swing seats) very hot plastic surfaces can cause burns. If needed cool with water prior to use.

After each play session:

- Check for any damaged components, splinters, or cracks.
- Ensure all protective coverings are still in place.
- Ensure all moving components function as intended.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

Twice a month during play session:

- Tighten all hardware but avoid over-tightening to prevent wood from cracking.
- Check all moving parts—swing seats, ropes, cables, and chains - for wear, rust, or damage.
- Replace as needed. Replace any swing seat with cracks.
- Rake and check the depth of loose-fill protective surfacing to prevent compaction and maintain proper cushioning. Replenish as needed.

Once a month during play session:

- Lubricate all metallic moving parts as needed
(See “1.2 Lubrication of Moving Components”).
- Check all moving parts—swing seats, ropes, cables, and chains - for wear, rust, or damage. Replace as needed. Replace any swing seat with cracks.

When temperature drops below 32 degrees Fahrenheit:

- Remove plastic swing seats and other specified items per the manufacturer’s instruction. Store indoors or discontinue use.

At the end of each play season:

- Remove plastic swing seats and other specified items per the manufacturer’s instructions. Store indoors or discontinue use.
- Rake and check the depth of loose-fill protective surfacing to prevent compaction and maintain proper cushioning. Replenish as needed.
- Ensure warning labels remain legible and replace them if they become worn or unreadable.

Lubrication of Moving Components

- Use a metal-safe lubricant like WD-40 on all metallic moving parts.
- Avoid using WD-40 on non-metal components, as it may cause damage.
- For non-metal parts (e.g., plastic), use a plastic-compatible lubricant such as silicone lubricant.
- Follow the lubricant manufacturer’s application instructions.
- Apply lubricant sparingly to prevent buildup.
- Wipe off excess lubricant to avoid attracting dirt and debris.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

Applying Protective Sealant

- Pressure-treated wood must be fully dry before applying a sealer. Depending on the climate, this drying process can take anywhere from a few weeks to several months.
- A simple way to check if the wood is ready for sealing is the “bead test.” Pour a small amount of water onto a horizontal surface. If the water beads up, the wood still contains moisture. If the wood absorbs the water, it is dry enough to be sealed.
- Before sealing, ensure all surfaces are clean, dry, dust-free, and free from any contaminants that could interfere with adhesion.
- Use a sealant specifically recommended for pressure-treated wood and suited to your climate conditions.

Safe Deconstruction and Disposal Instructions

- Keep Children Away: Do not let children play on the playground while dissembling
- Disassemble Safely: Wear proper personal protective equipment (PPE) and start from the top and work downward, removing non-structural components first (e.g., swings, climbing rope, ladder). Identify and support load-bearing components before removing them to prevent collapse, especially on multi-level structures.
- Check for Sharp Points or Edges: Ensure de-construction hasn't resulted in accessible sharp points and edges, check for and safely dispose of any hardware.
- Do Not Burn Treated Wood: Burning releases harmful chemicals into the air and environment.
- Check Local Disposal Rules: Contact local waste management to determine proper disposal options for treated wood.
- Avoid Composting or Chipping: Do not compost or chip treated wood, as it can release chemicals into the soil.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

WARNING
CONTINUOUS ADULT SUPERVISION REQUIRED!
STRANGULATION HAZARD

Never allow children to wear bike or sport helmets when using this playset.

Never allow children to play with ropes, clotheslines, pet leashes, cable, chains, or cord-like items when using the playset or to attach these items to the playset.

Never allow children to wear loose-fitting clothing, ponchos, hoods, scarves, capes, necklaces, flip-flops, sandals, or items with drawstrings, cords, or ties when using this playset.

Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD

- Installation over hard surfaces creates a risk of serious injury or death from falls to the ground. Maintain shock-absorbing material under and around the playset as recommended in the Installation and Operating instructions.

SERIOUS BURN HAZARD

- Playground equipment and/or surfacing in direct sunlight may reach temperatures high enough to cause serious burn injuries within seconds. Check for hot play surfaces and surfacing before letting children play.
- Refer to the instructions for the maximum number of users, installation, and operating instructions.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

PLAYGROUND SITE SELECTION AND PROTECTIVE SURFACING

WARNING: PROPER SITE SELECTION AND INSTALL PROTECTIVE SURFACING DOES NOT ELIMINATE THE NEED FOR ADULT SUPERVISION AND TEACHING CHILDREN SAFE PLAY PRACTICES.

- Site Selection: Place the equipment on level ground, not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, over-hanging branches, laundry lines, or electrical wires (see “Playground Site Diagram”).
- Remove any objects from areas where users might run into, trip, or land when falling or exiting the equipment.
- If site is not level, professional grading may be needed.
- Placement of Protective Surfacing:
- NOTE: MAXIMUM FALL HEIGHT = 76.529"

WARNING: INSTALL PROTECTIVE SURFACING

It is critical that all areas where a child may fall onto or exit equipment is covered with adequate protective surfacing to minimize injury (see “Playground Site Diagram”)

- For Stationary Climbing Equipment and Slides: At a minimum install protective surfacing at least 6 feet in every direction from the equipment's perimeter.
- For Swings: Extend protective surfacing in front and behind the swing to at least twice the height of the swing (measured from the ground to the top of the support structure).
- Depth of Protective Surfacing Material:
 - For equipment up to 60 in./1524 mm tall: Use at least 9 in. (229 mm) of sand or pea gravel.
 - For taller equipment (up to 96 in./2438 mm): Use at least 9 in. (229 mm) of loose-fill material such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch.

SAFETY CHECKS AND MAINTAINENCE INSTRUCTIONS

- For equipment less than 48 in. (1219 mm) tall: Use a minimum of 6 in. (152 mm) of protective surfacing. (Less than 6 in. will be too easily displaced or compacted.)
- Initial Fill and Maintenance:
 - Although you might start with a 12 in. (305 mm) layer, it will compress to about 9 in. (229 mm) over time.
 - Because the material will naturally compact, settle, and shift, check it periodically and refill as needed to maintain the minimum depth.
 - Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Installation Surface Requirements







WARNING: Do Not Install Over Hard Surfaces

DO NOT place equipment on concrete, asphalt, or similar hard surfaces—these can increase injury risks if a fall occurs.

Use Proper Surfacing Material: Grass and dirt are not acceptable as protective surfacing since environmental wear reduces their shock-absorbing effectiveness. Carpeting and thin mats generally do not provide adequate protection.


- Exception for Ground-Level Equipment: Items such as sandboxes, activity walls, or playhouses that have no elevated play surface do not require protective surfacing.
- Containment and Drainage: Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles:
- These alternatives generally require professional installation—this is typically not a do-it-yourself project.

Marking predrilling

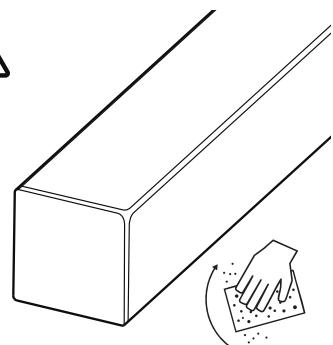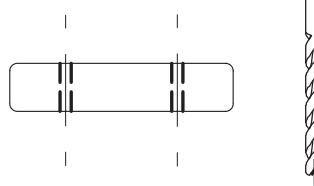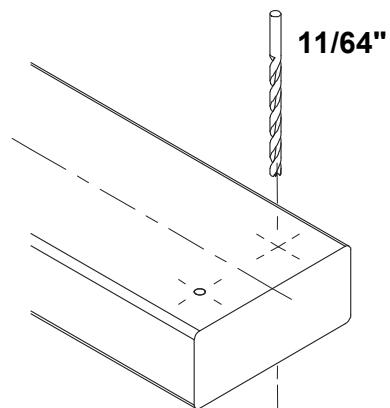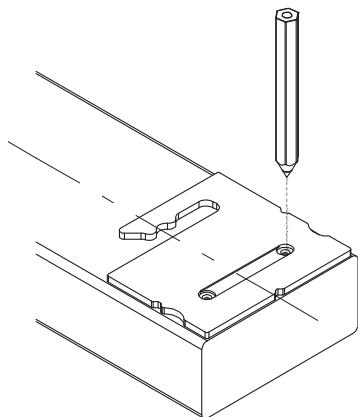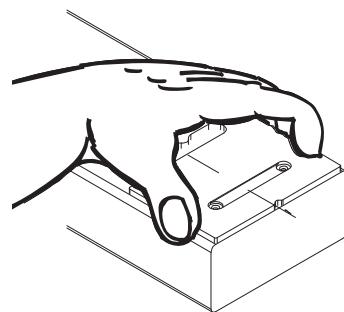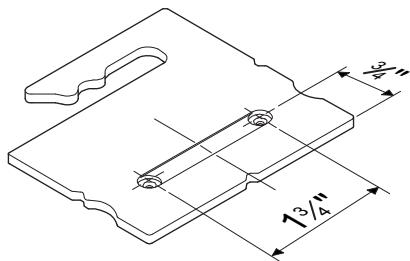

Sand end cut to Radius 1/8"


Tools

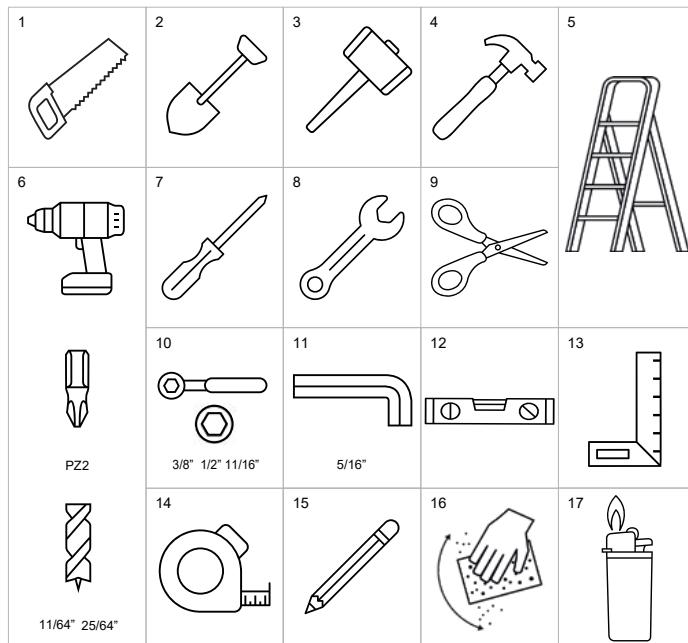





1. Handsaw	10. Ratchet
2. Shovel	11. Hex Key
3. Rubber Mallet	12. Bubble Level
4. Hammer	13. Square
5. Ladder	14. Tape Measure
6. Drilling Set	15. Pencil
7. Phillips Screw	16. Sand-paper, grit size: 1/8"
8. Wrench	17. Lighter
9. Scissors	

Anchoring

- ◎ Required Anchor (Included)
- Optional Anchor (Sold Separately)

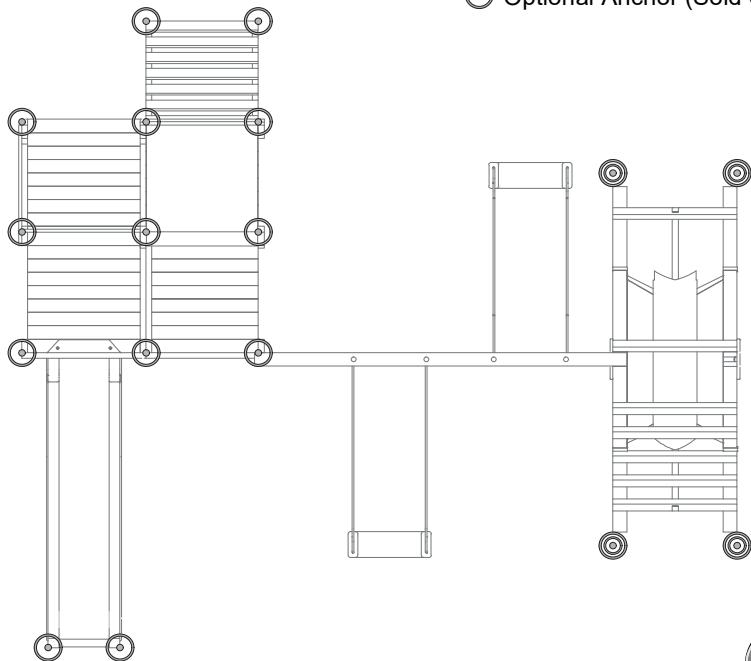


Top View

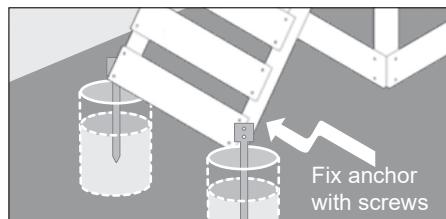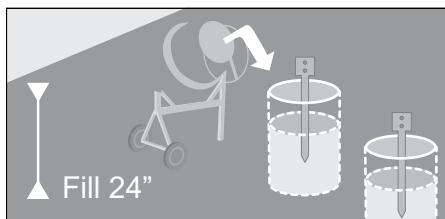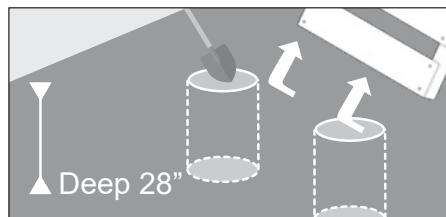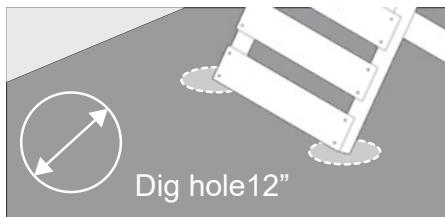


all anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall

Woodlist

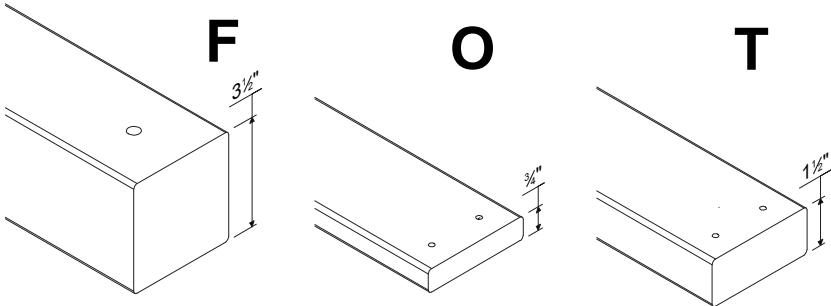

<input type="checkbox"/>		F95B
	$94.5'' \times 3.5'' \times 3.5''$	
<input type="checkbox"/>		T95
	$94.5'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		T87A
	$86.5'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		T87
	$86.5'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		T42A
	$41.5'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		T32A
	$31.5'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		T10
	$10'' \times 1.5'' \times 3.5''$	
<input type="checkbox"/>		O42A
	$41.5'' \times 0.75'' \times 3.5''$	
<input type="checkbox"/>		O42
	$41.5'' \times 0.75'' \times 3.5''$	
<input type="checkbox"/>		O32A
	$31.5'' \times 0.75'' \times 3.5''$	
<input type="checkbox"/>		O29A
	$28.5'' \times 0.75'' \times 3.5''$	

Mounting Materials



Screw, 6x70mm, T30, (length: 2-3/4")



Washer, M10



Screw, 8x2", T20, (length: 2")





Washer





Screw, 5x20mm, PZ2, (length: 3/4")



Lock Nut, M10




Carriage Bolt, M10x40mm, (length: 1-5/8")

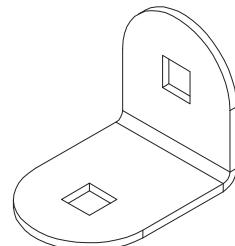


Hexagon Head Wood Screw, 10x80mm, (length: 3-1/4")


Mounting Bracket, 55x45mm




Carriage Bolt, M10X190mm, (length: 7-1/2")

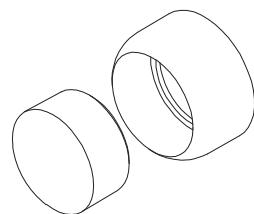


Cap

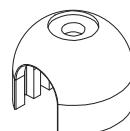


Special Cap

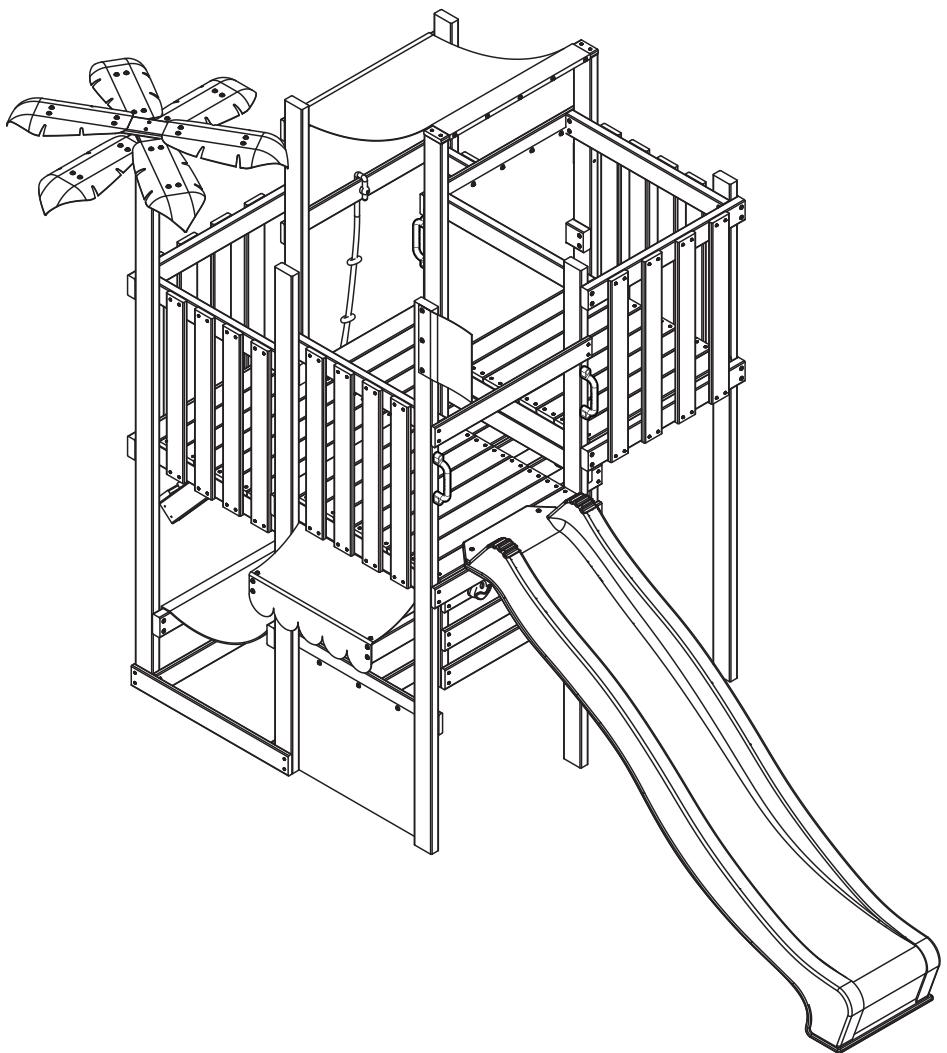


1 Tarp cutting plan

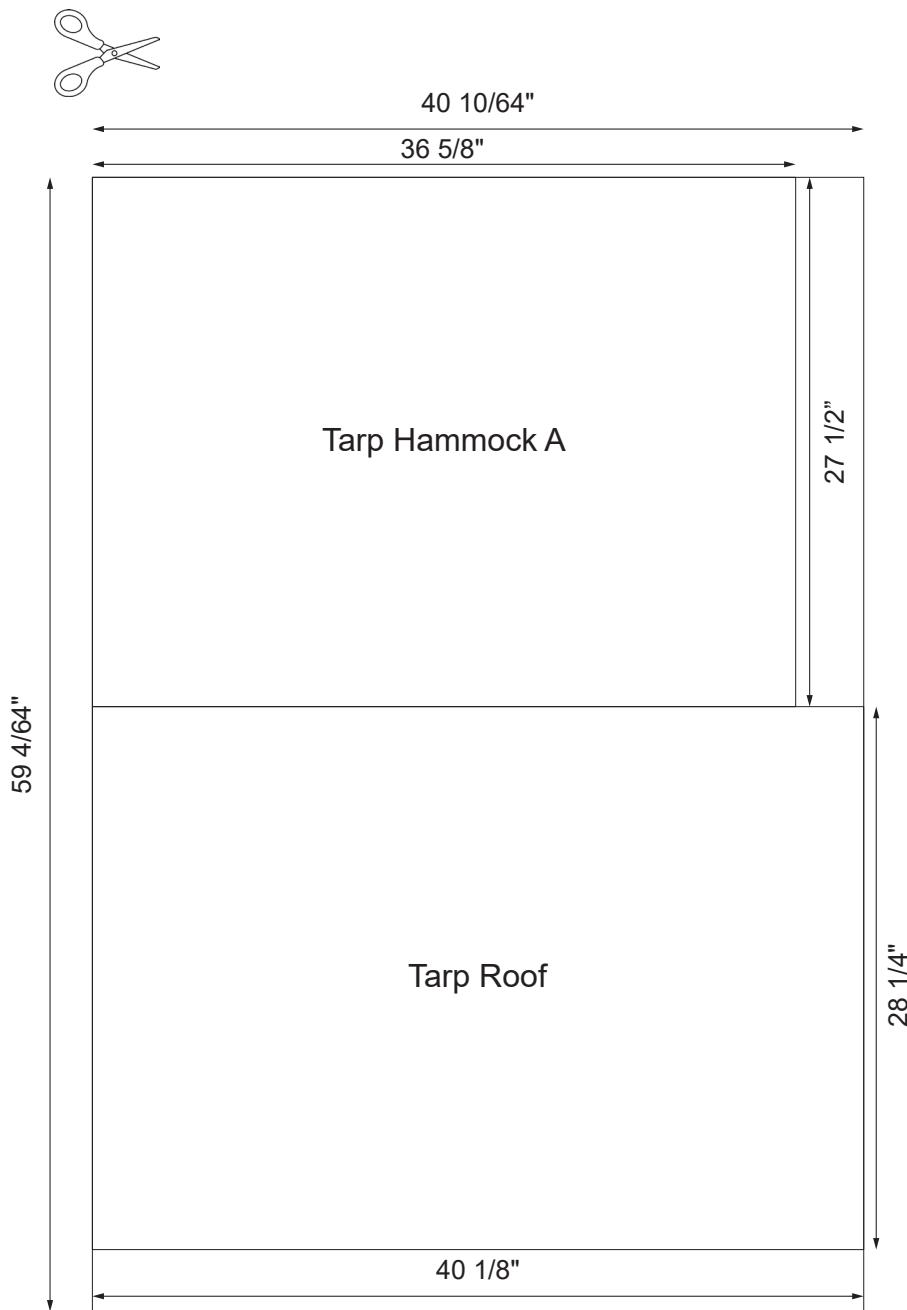


2 Tarp cutting plan

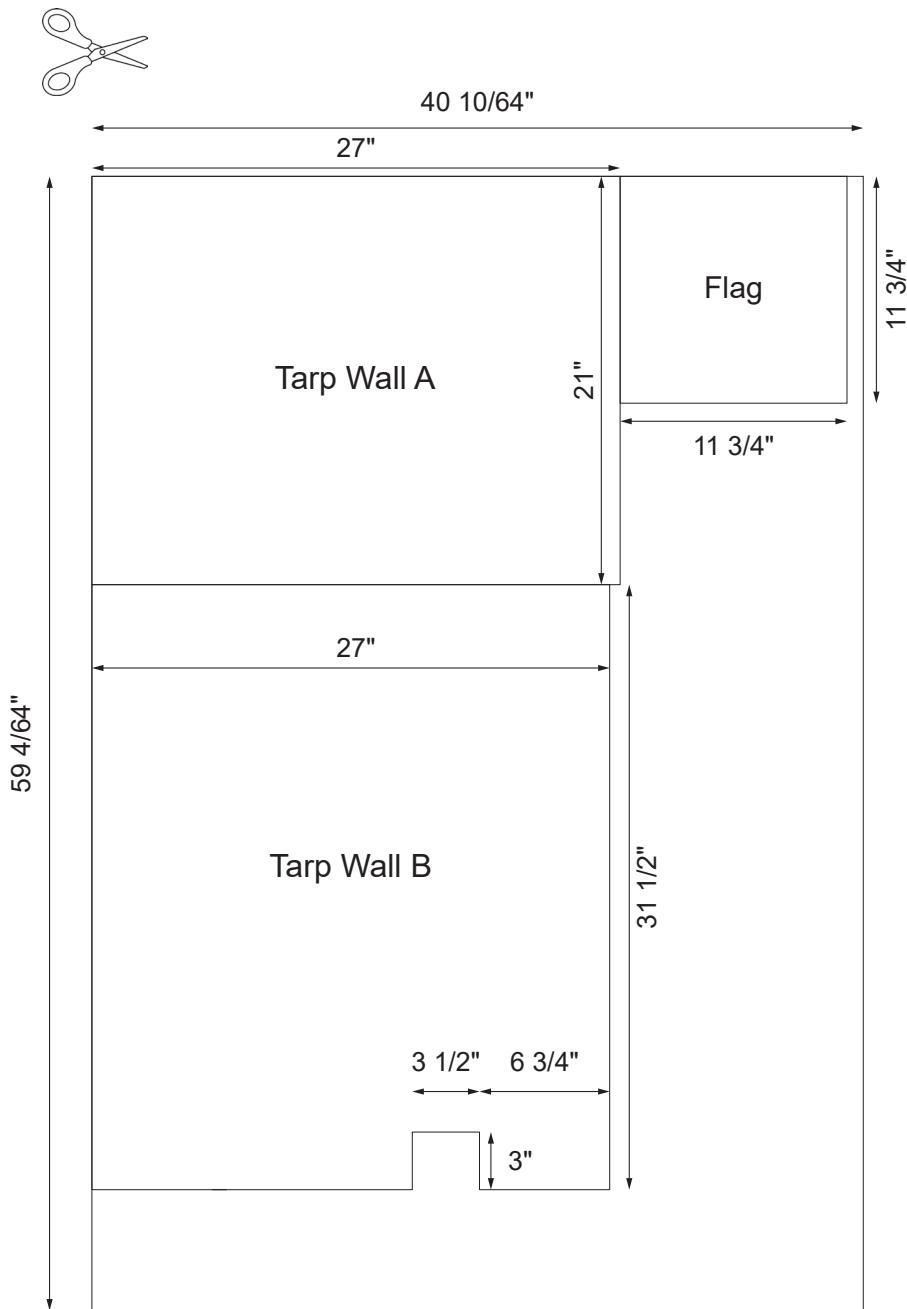

3 Tarp cutting plan



40 10/64"

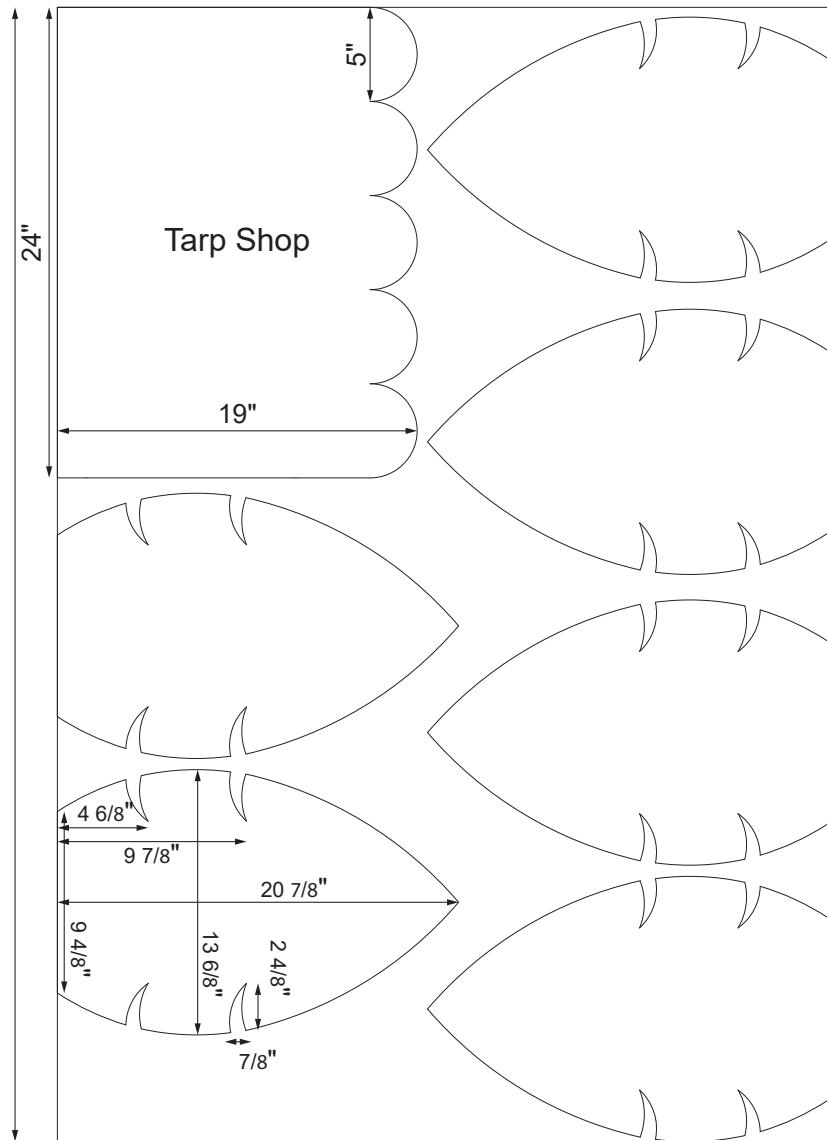



T95A 1.5 x 3.5 x 94.5" A long, thin metal rod.	T95 1.5 x 3.5 x 94.5" A long, thin metal rod.	T87 1.5 x 3.5 x 86.5" A long, thin metal rod.	T42A 1.5 x 3.5 x 41.5" A long, thin metal rod.	T32A 1.5 x 3.5 x 31.5" A long, thin metal rod.	O32A 0.75 x 3.5 x 31.5" A long, thin metal rod.	O29A 0.75 x 3.5 x 28.5" A long, thin metal rod.
1x	3x	5x	2x	20x	48x	42x
T10 1.5 x 3.5 x 9.5" A small rectangular block.	6x70 T30 A long screw with a hex head.	#8x2" T20 A short screw with a Phillips head.	5x20 PZ 2 A medium screw with a Phillips head.	Washer A flat metal washer.	Special Cap A cap with a hole.	Tarp Hammock A simple rectangular frame.
4x	91x	371x	83x	83x	4x	1x
Tarp Roof A large rectangular frame.	Tarp Wall A smaller rectangular frame.	Tarp Shop A frame with a wavy base.	Tarp Palm A curved frame.	Tarp Flag A small rectangular frame.	Slide 47 A curved slide component.	Rope A coiled rope.
1x	1x	1x	6x	1x	1x	1x
Grips A curved metal grip handle.	Wheel A simple wheel component.	Telescope A telescope with a lens and eyepiece.	Climbingstone A climbing stone with a hole.	Sticker A small rectangular sticker.		
2x	1x	1x	5x	1x		

T95
1.5 x 3.5 x 94.5"



T87
1.5 x 3.5 x 86.5"



T32A
1.5 x 3.5 x 31.5"



O32A
0.75 x 3.5 x 31.5"






6x70
T30



#8x2"
T20




1 Frame 1

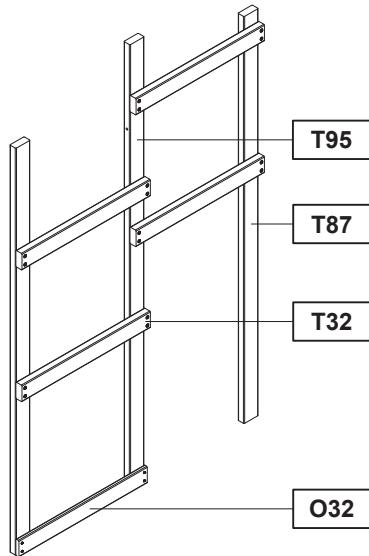


T

6x70

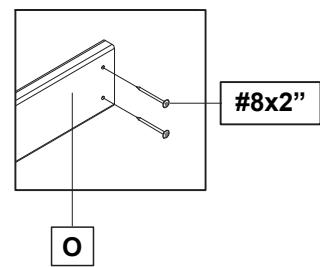



O

#8x2"

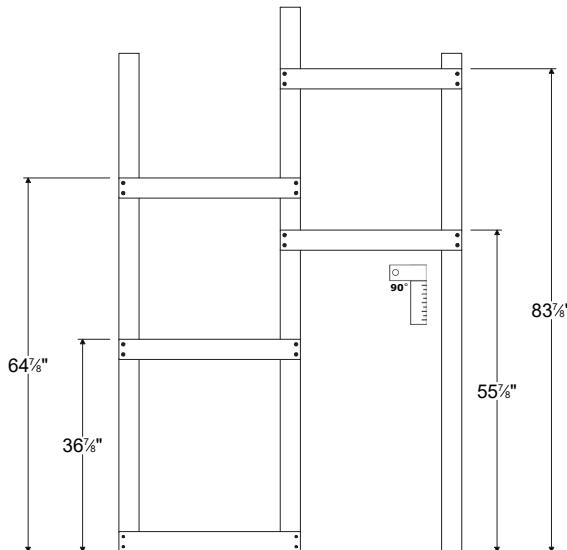

T95 1.5 x 3.5 x 94.5"	T87 1.5 x 3.5 x 86.5"	T32A 1.5 x 3.5 x 31.5"	O32A 0.75 x 3.5 x 31.5"	6x70 T30	#8x2" T20
1x	2x	3x	1x	12x	4x

2 Frame 2

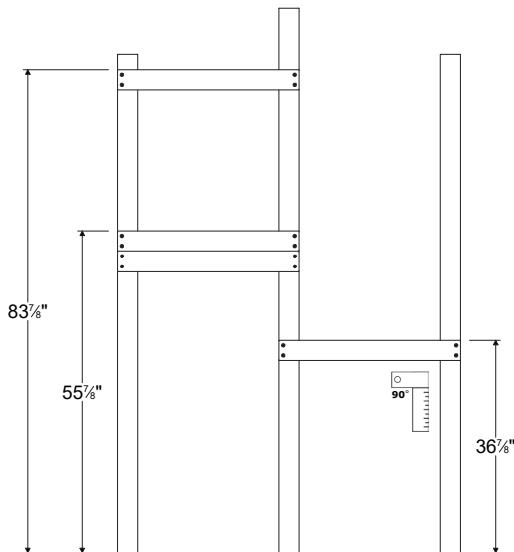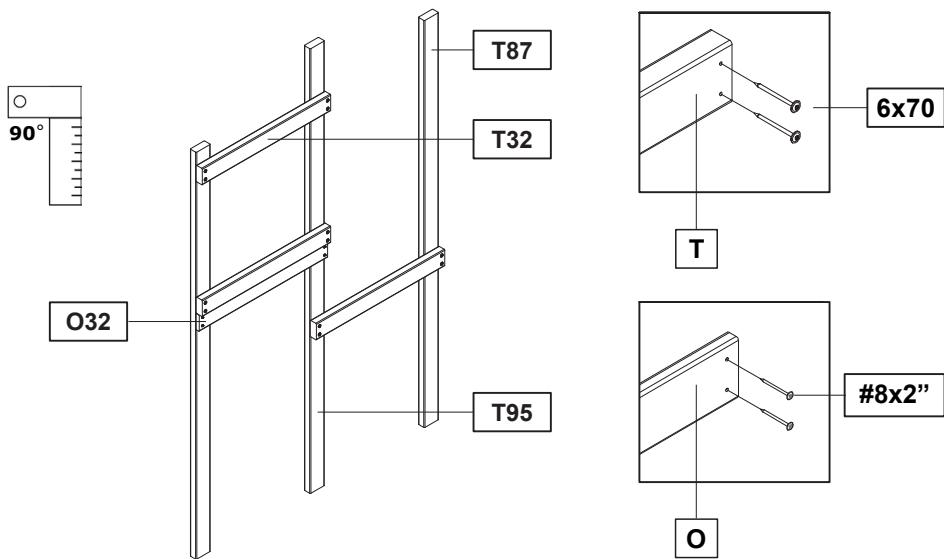

T32A
1.5 x 3.5 x 31.5"





1x

6x70
T30




4x

3 Frame 2 (rear)

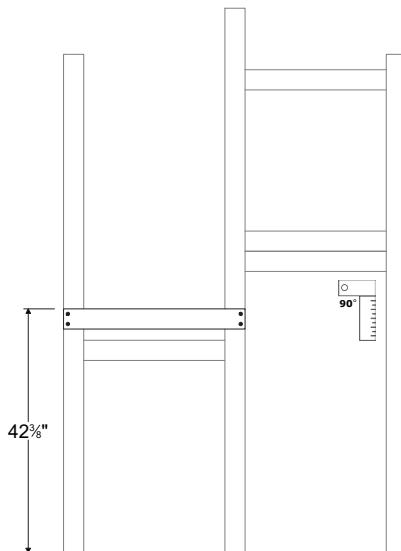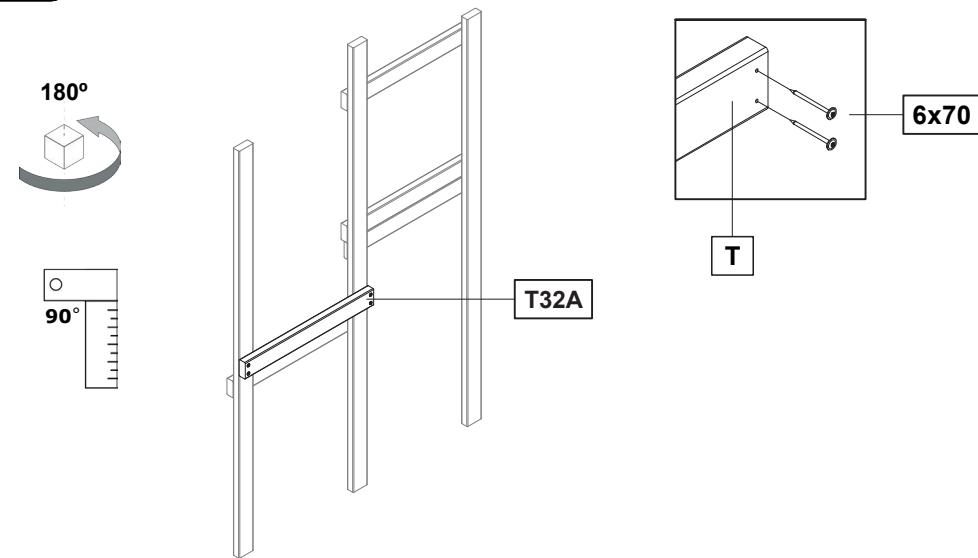


4

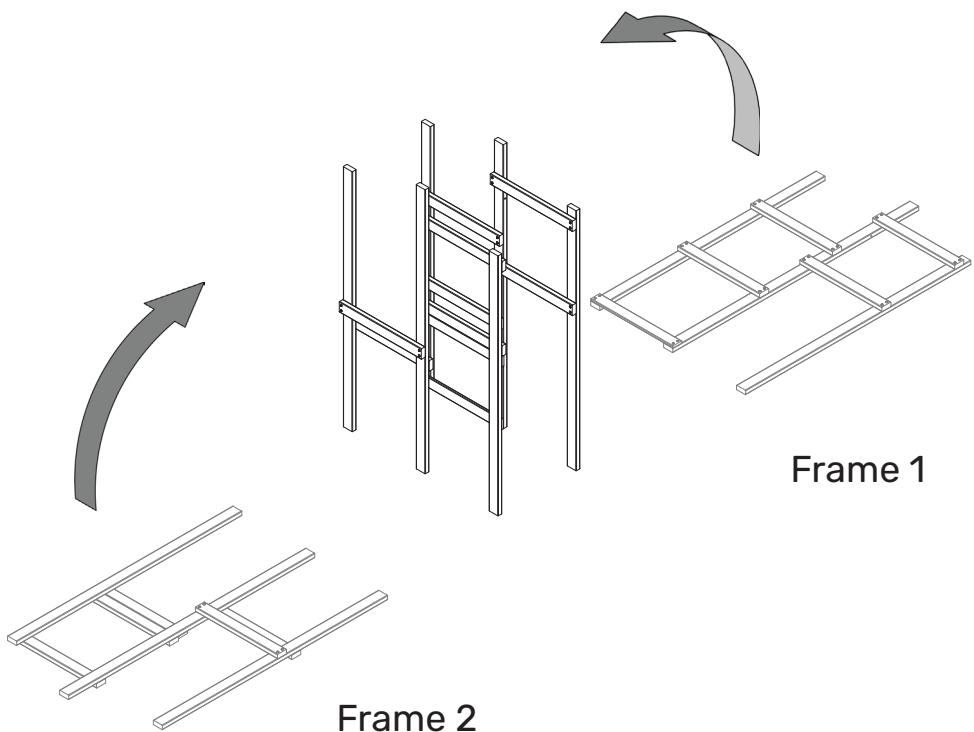

Frame 2

Frame 1

T32A
1.5 x 3.5 x 31.5"





2x

6x70
T30




8x

5

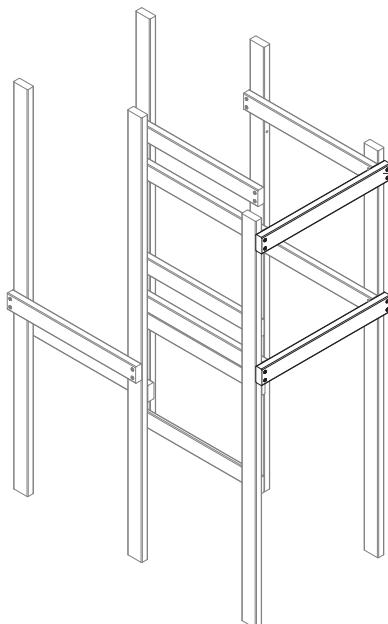


T32

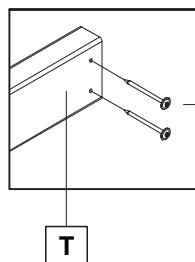

6x70

T

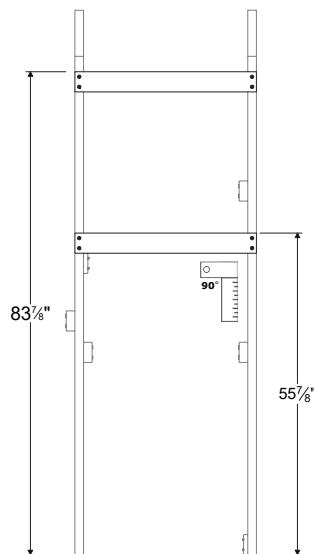

O32A
0.75 x 3.5 x 31.5"




1x

#8x2"
T20





4x

6




O32

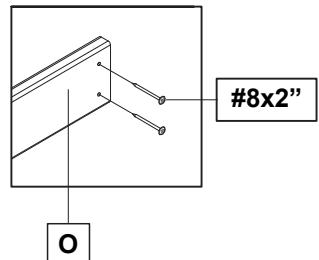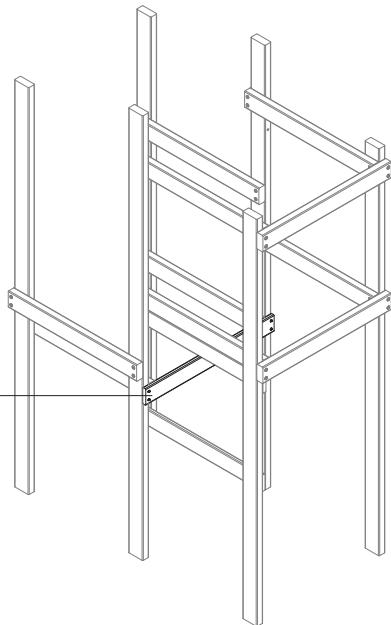

O

#8x2"





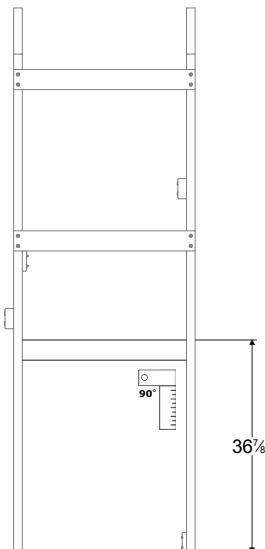


36 $\frac{7}{8}$

O32A
0.75 x 3.5 x 31.5"
2x


#8x2"
T20
8x

7

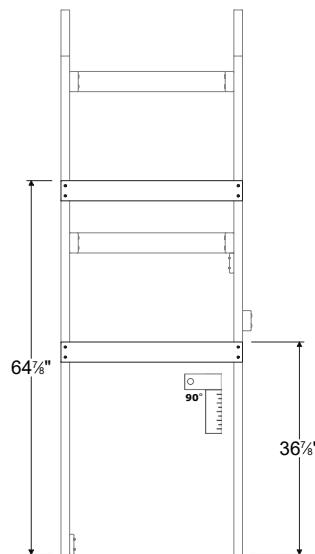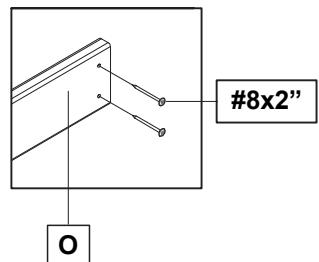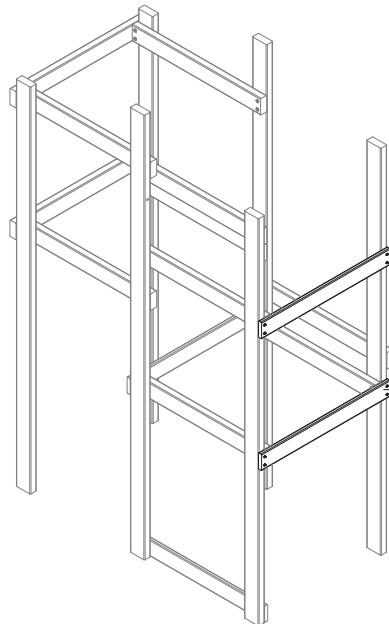

T95A 1.5 x 3.5 x 94.5"	T87 1.5 x 3.5 x 86.5"	T32A 1.5 x 3.5 x 31.5"	6x70 T30
2x	1x	3x	12x




8 Frame 3

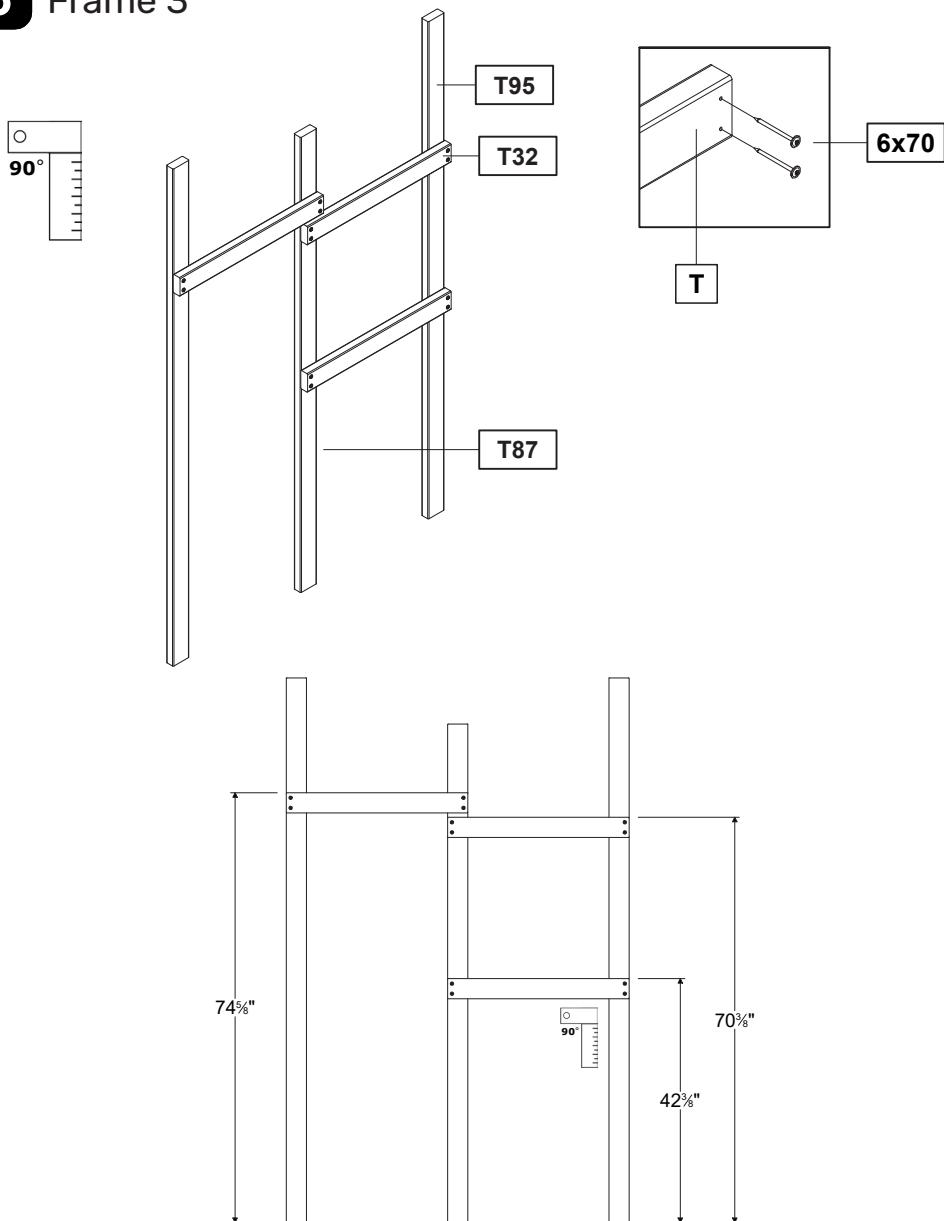


O32A
0.75 x 3.5 x 31.5"
1x

#8x2"
T20
4x

9 Frame 3 (rear)

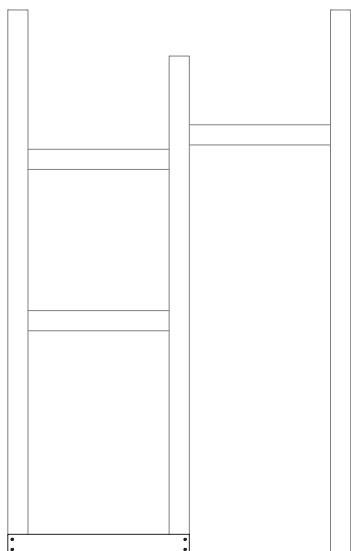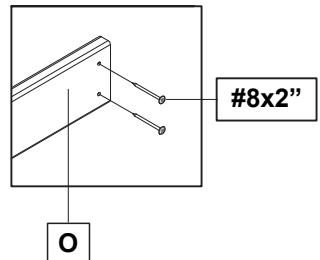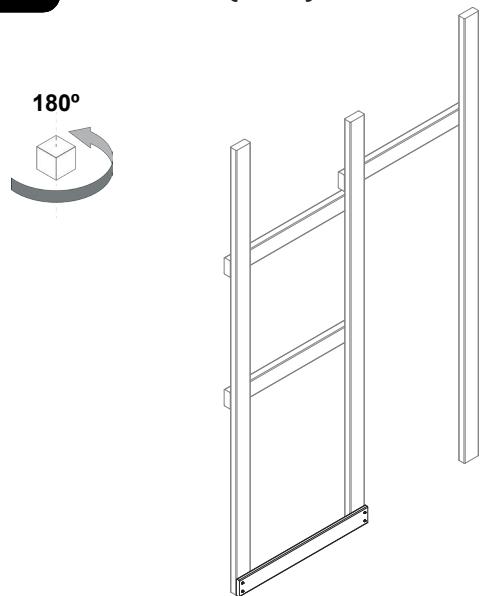

10

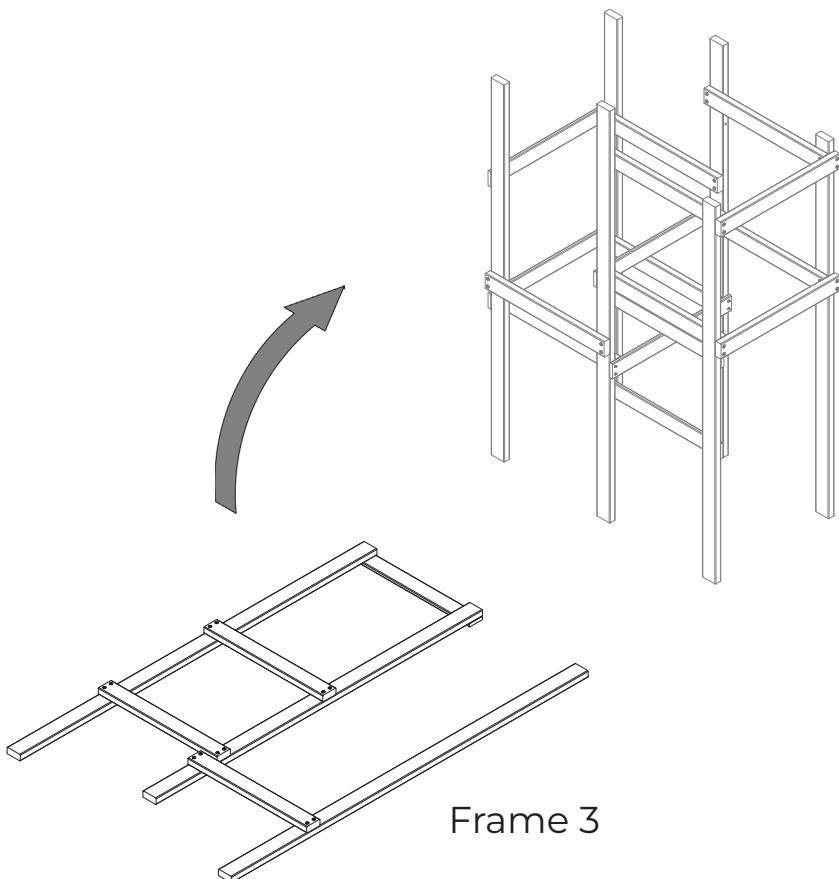

O32A
0.75 x 3.5 x 31.5"




2x

#8x2"
T20





8x

11




90°

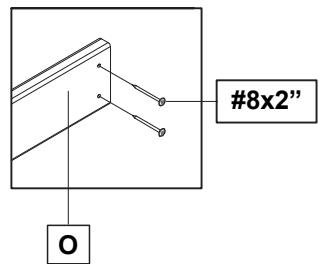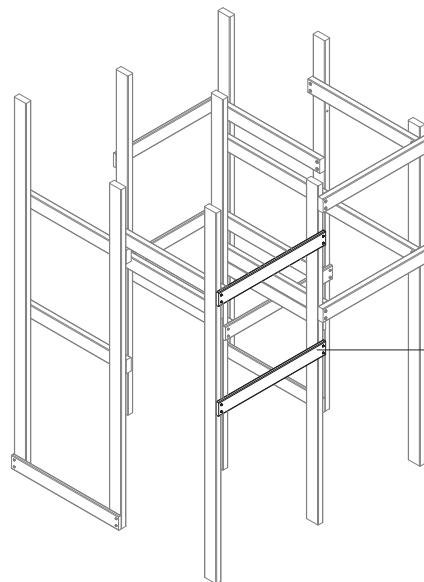

O32

#8x2"

O

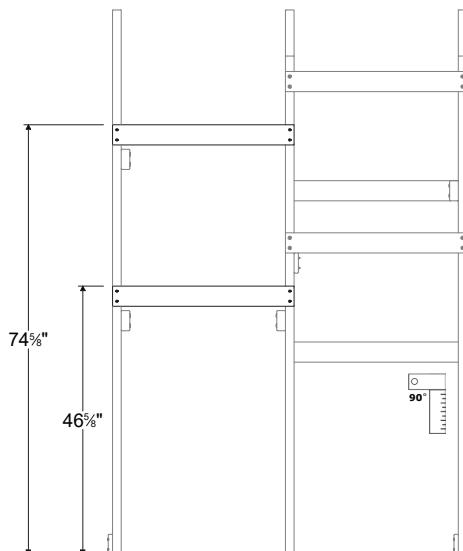

T32A
1.5 x 3.5 x 31.5"




2x

6x70
T30




8x




12



180°






90°

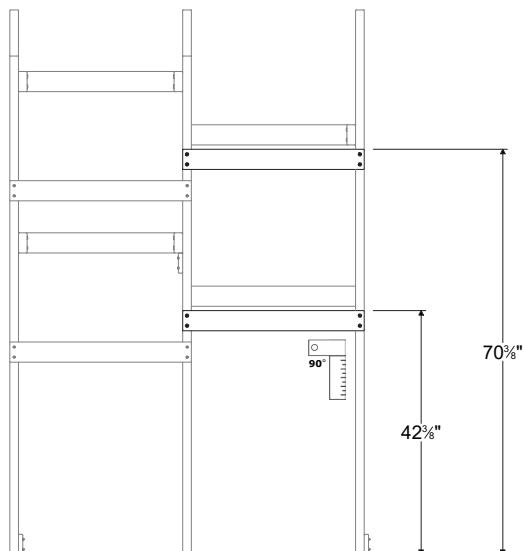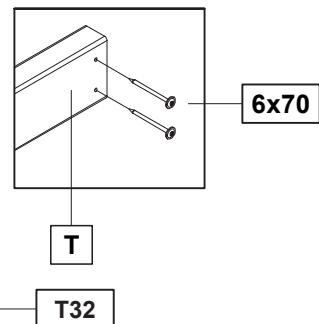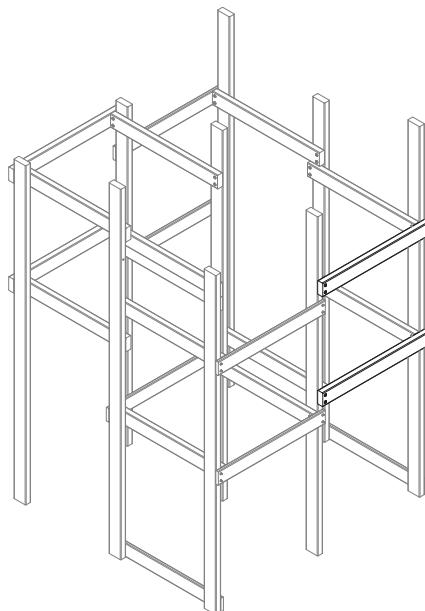




13

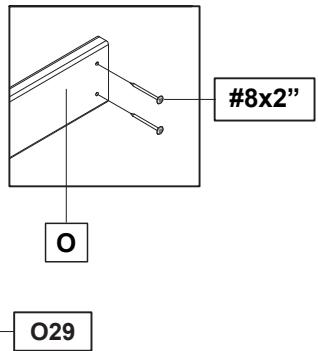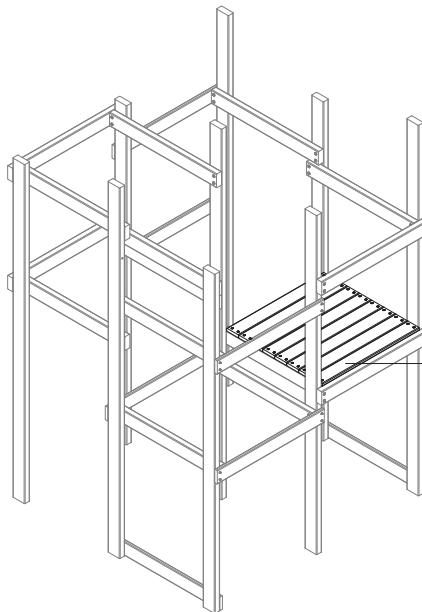




O29

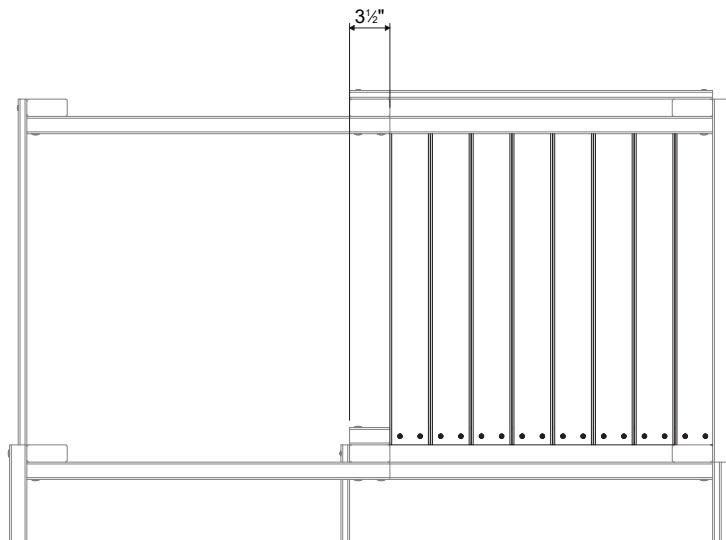


O32A
0.75 x 3.5 x 31.5"
1x






#8x2"
T20
4x

14

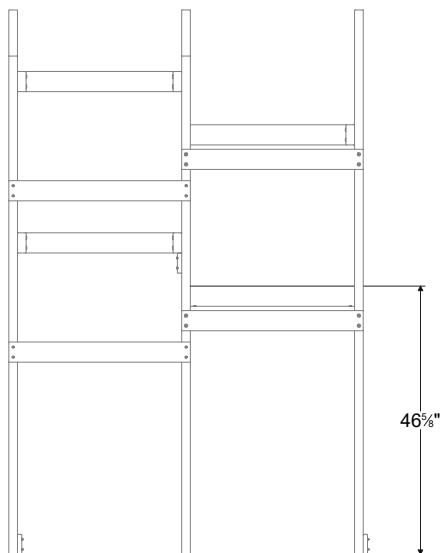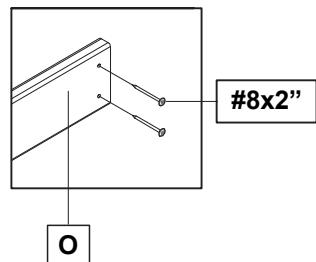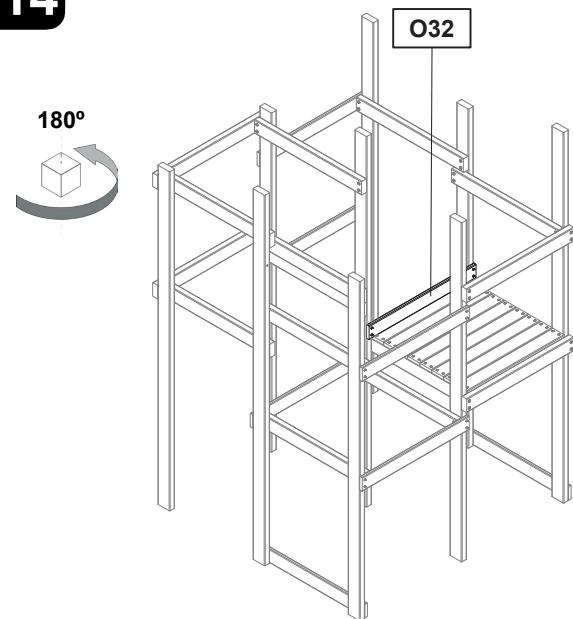



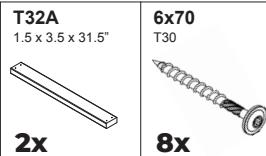


15

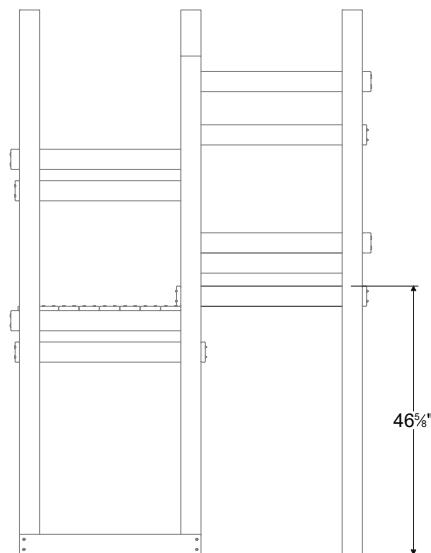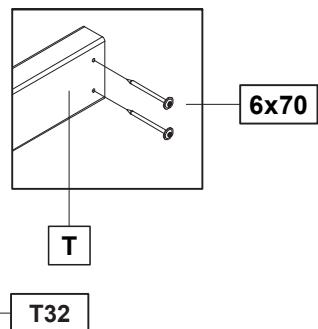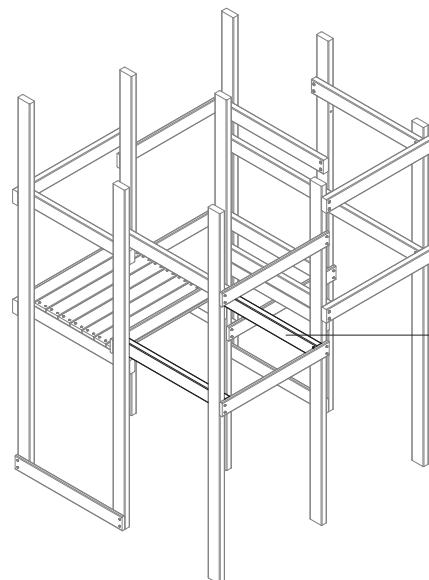




16

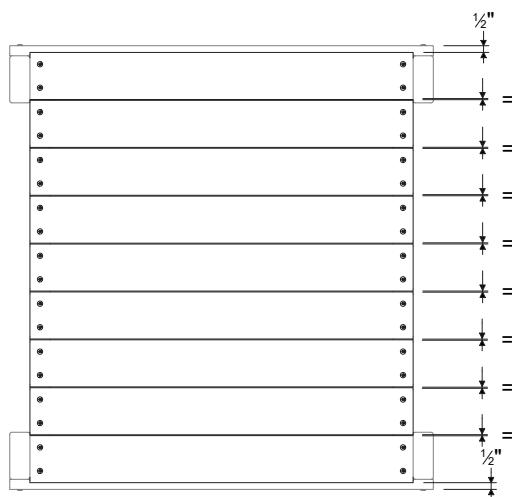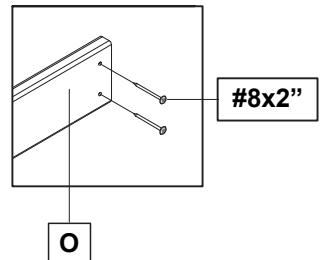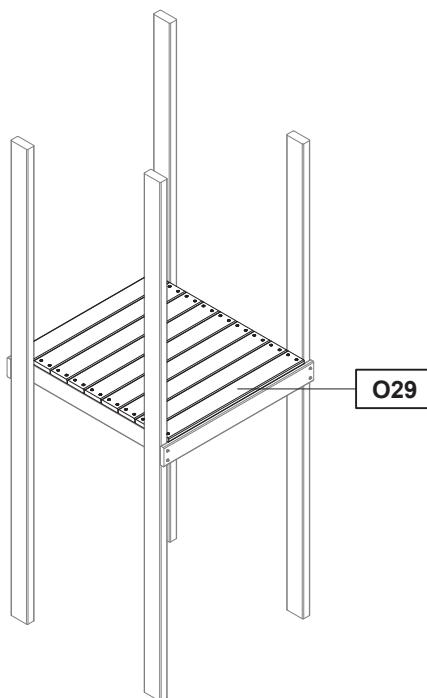

17

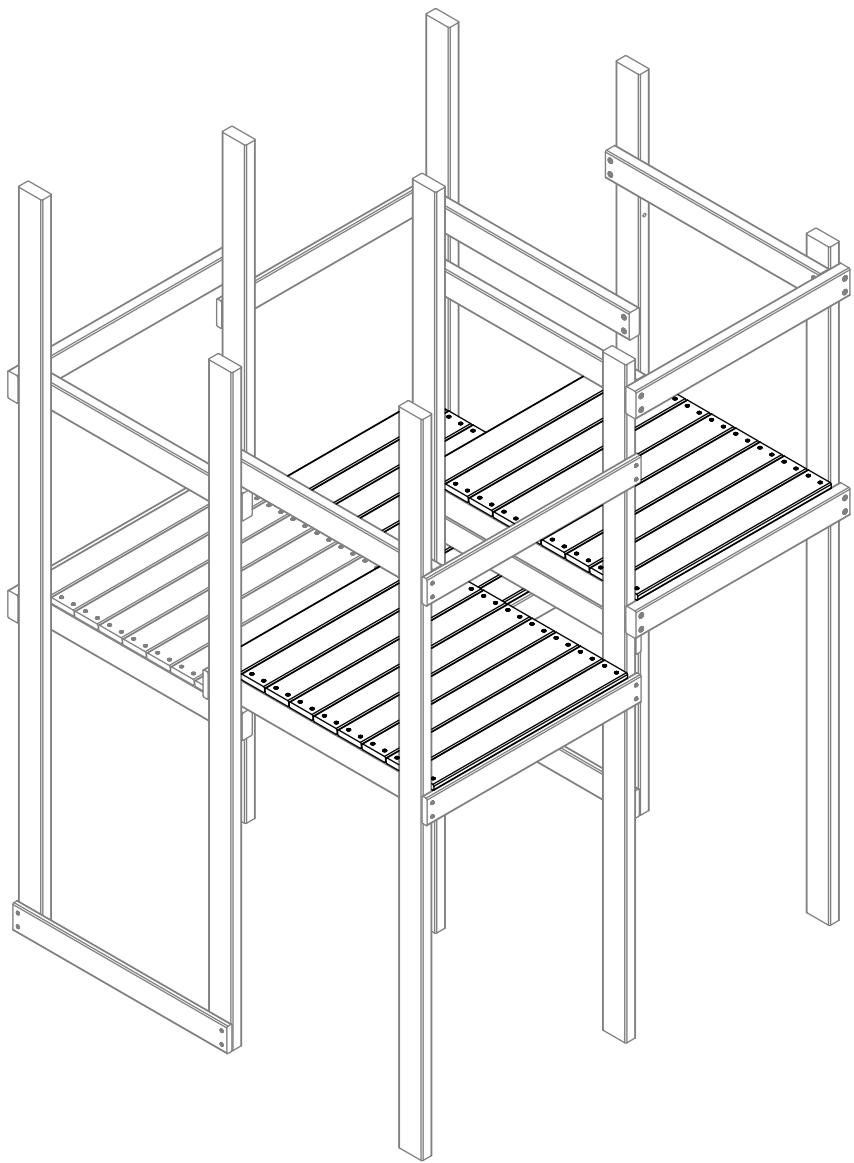

O32A
0.75 x 3.5 x 31.5"






4x

#8x2"
T20




16x





18

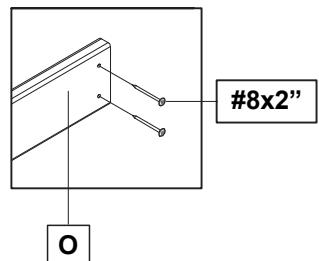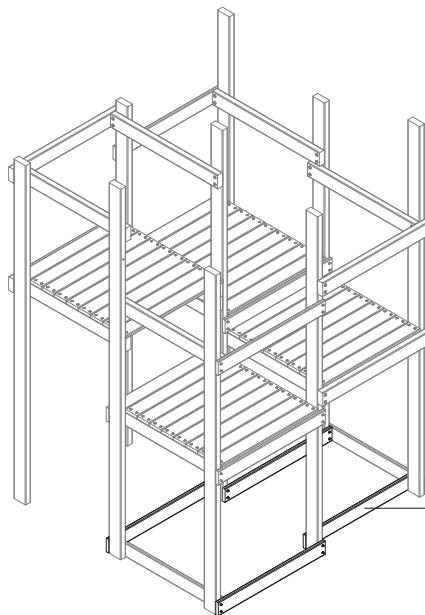

O

O32

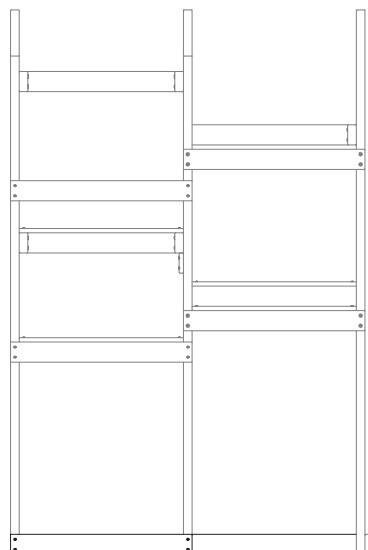

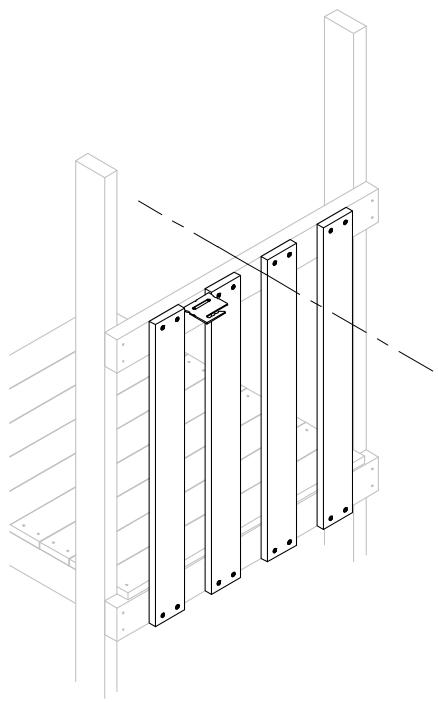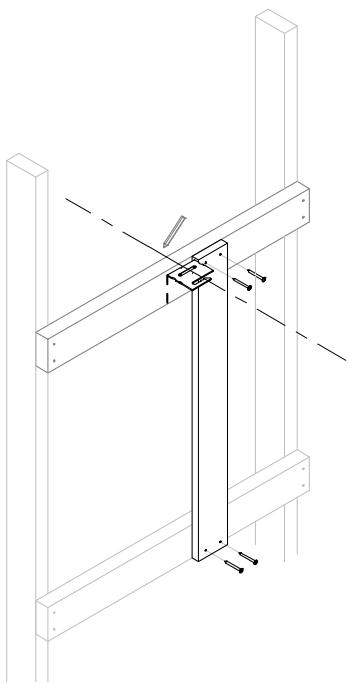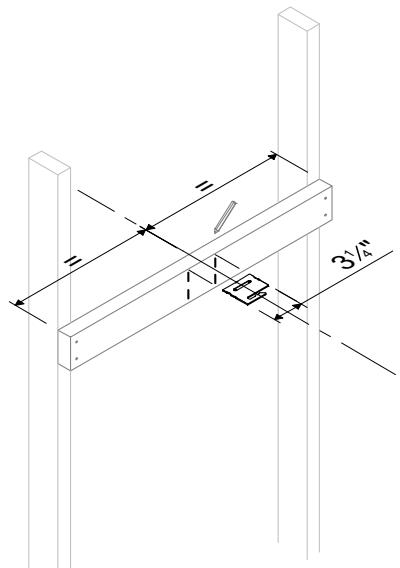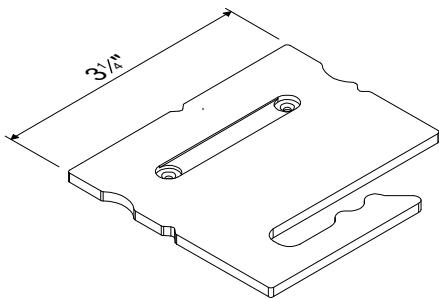

O32A
0.75 x 3.5 x 31.5"



8x



#8x2"
T20




32x





1 Wall outside

180°

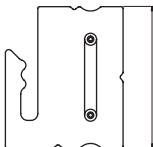

3 1/4"



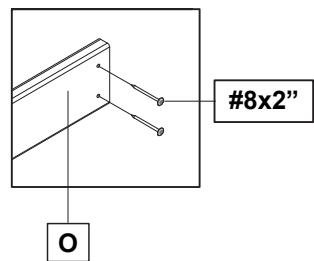


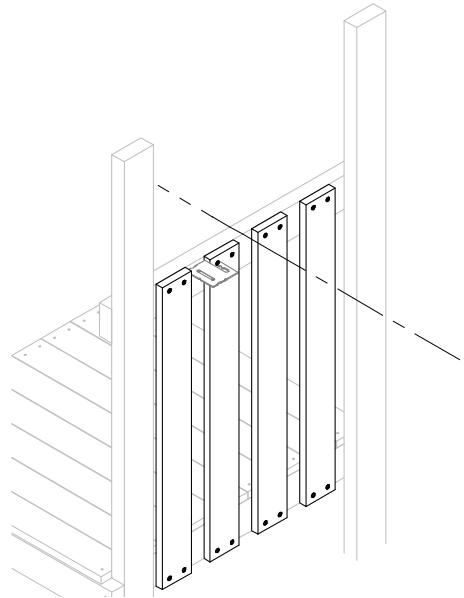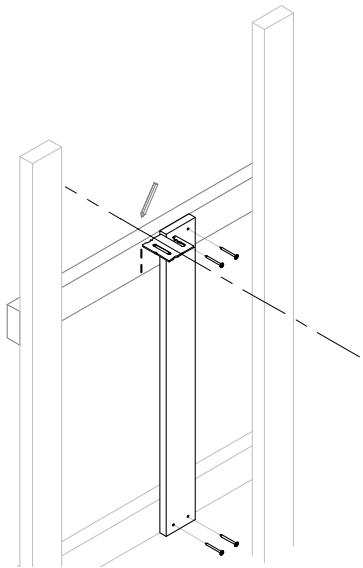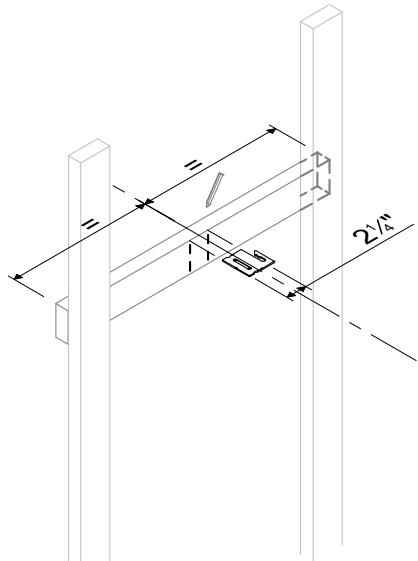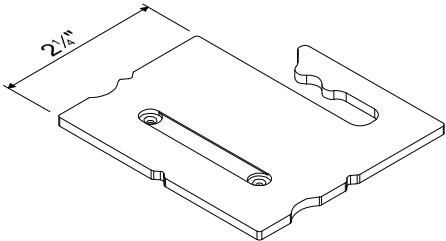




1 Wall inside

180°

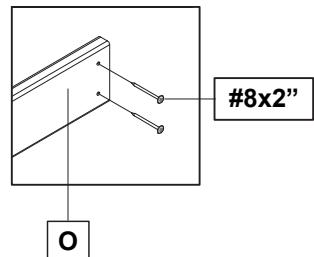

O32

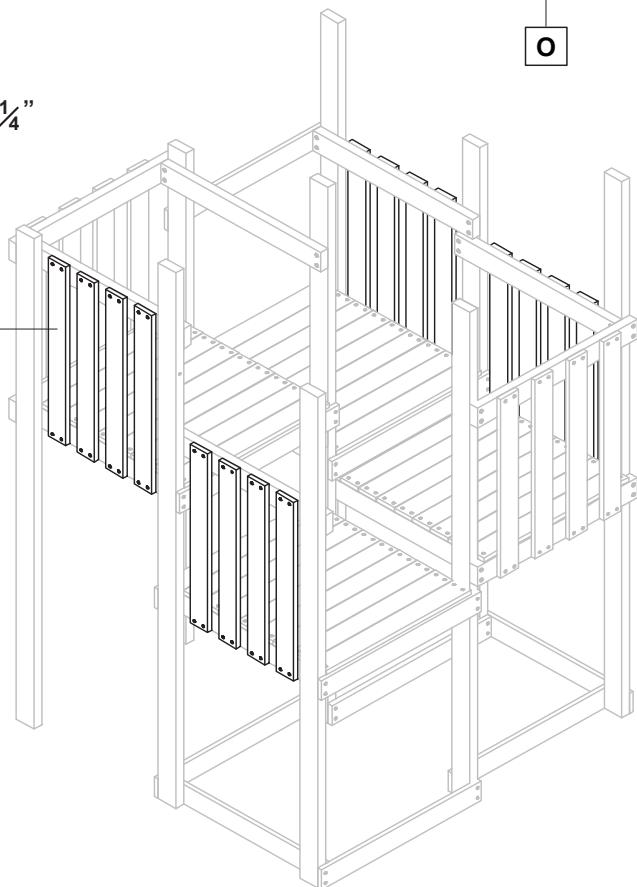


O32A
0.75 x 3.5 x 31.5"



1x

Tarp Wall B



1x

5x20
PZ 2





5x



Washer







5x

1 Wall tarp

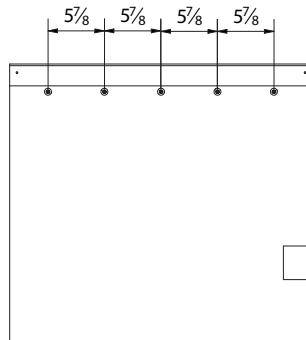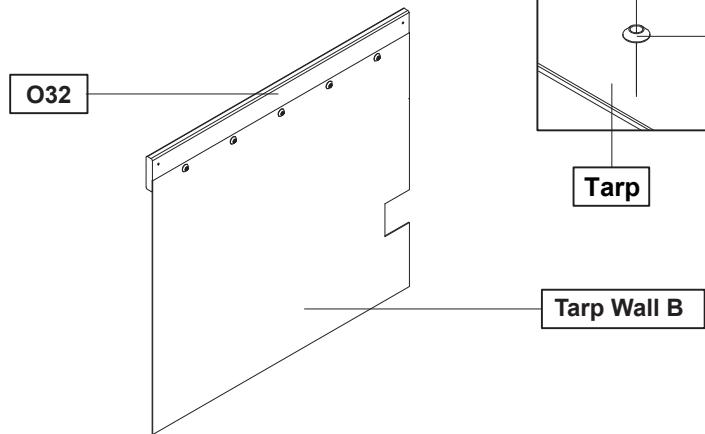

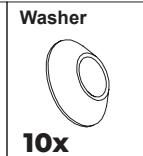
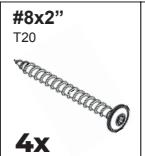


2 Wall tarp

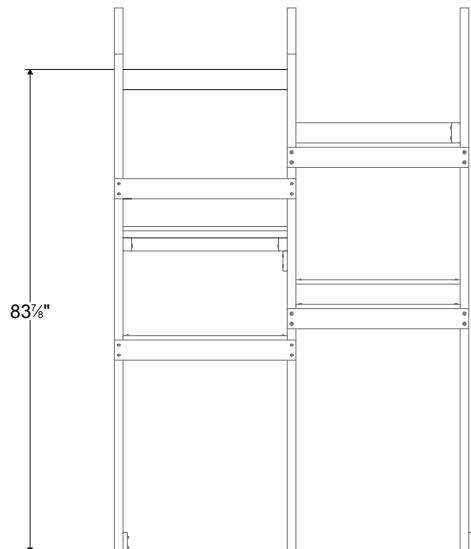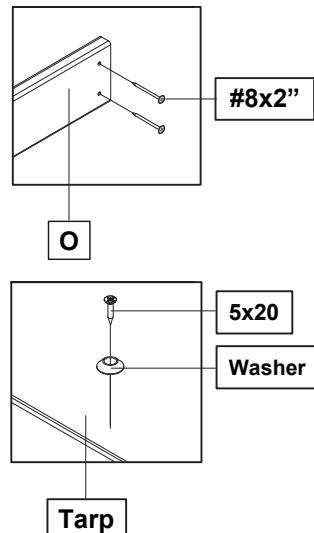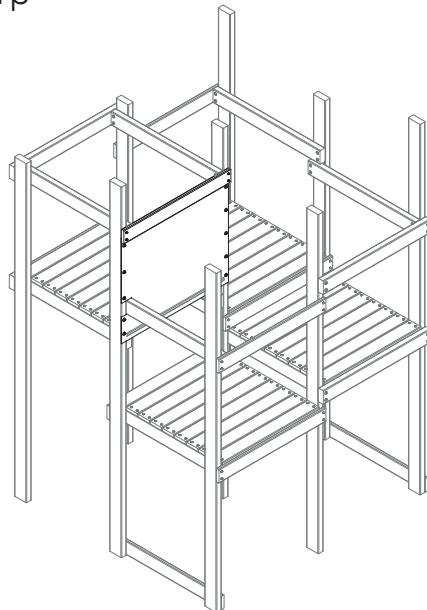






3 Wall tarp

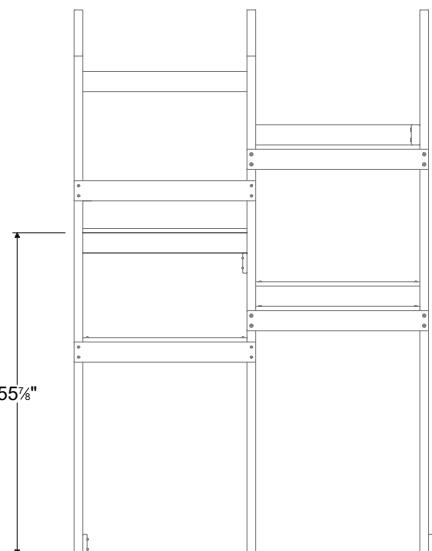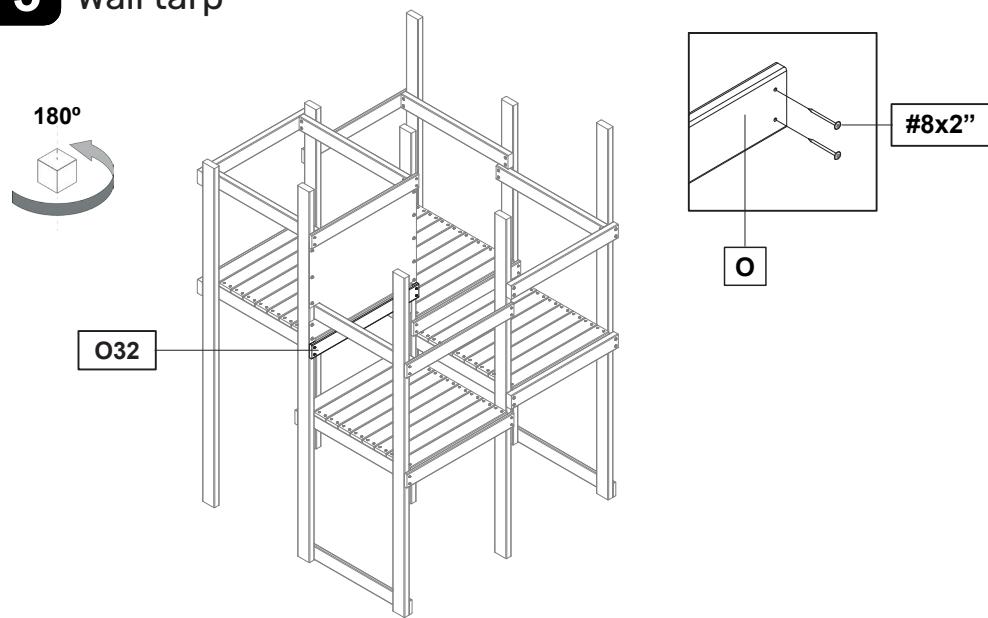






1 Roof tarp

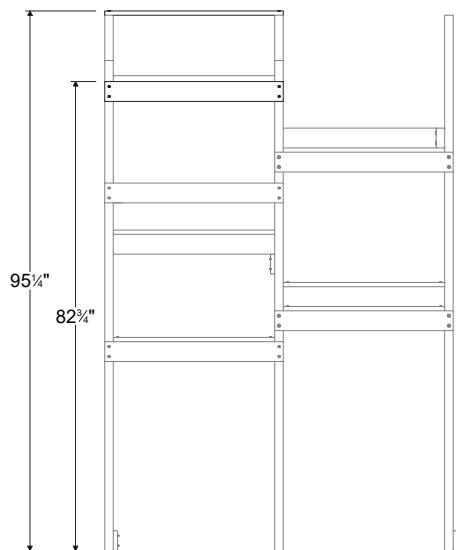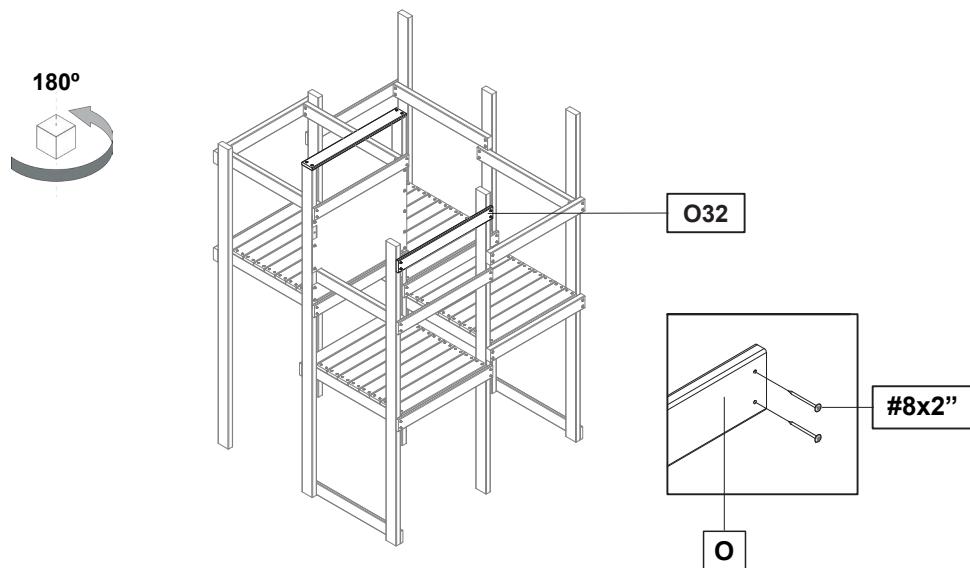

Tarp Roof	5x20 PZ 2	Washer
	 10x	 10x

2 Roof Tarp

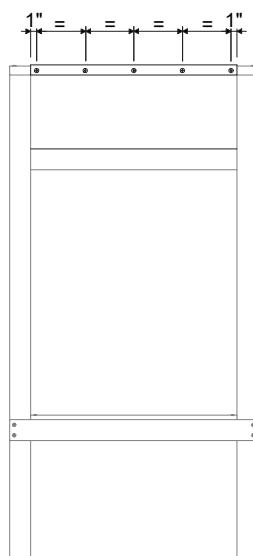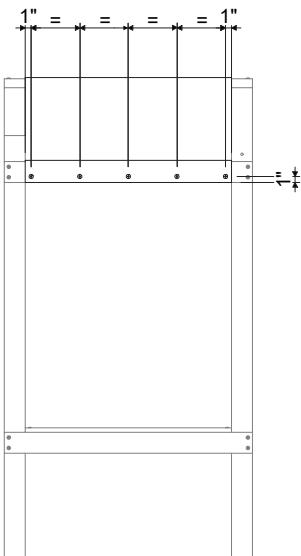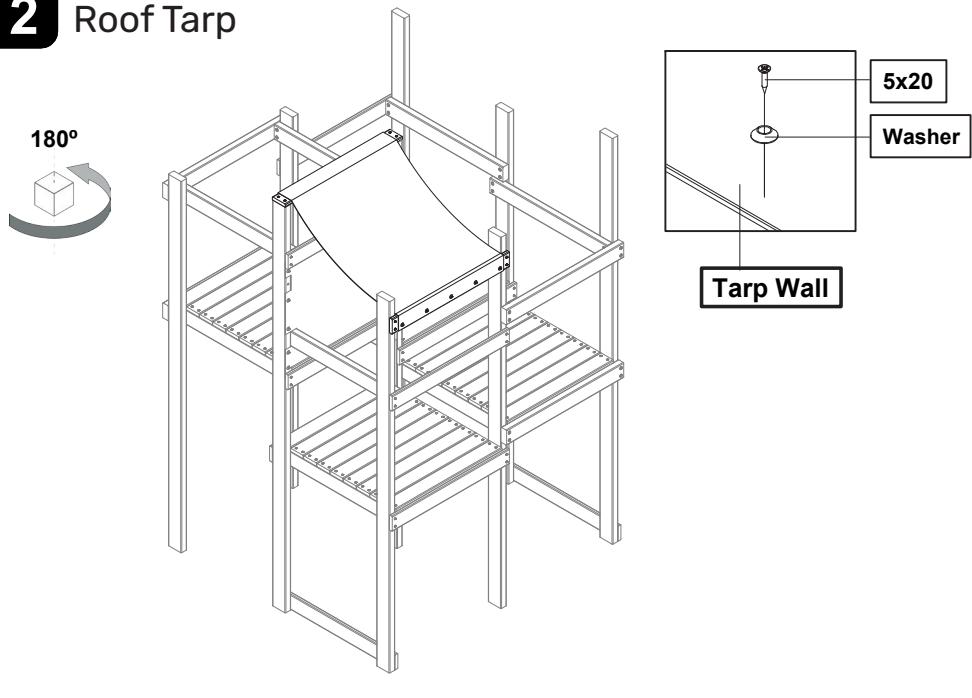

O32A
0.75 x 3.5 x 31.5"







4x

#8x2"
T20



16x

1 Climbing 90


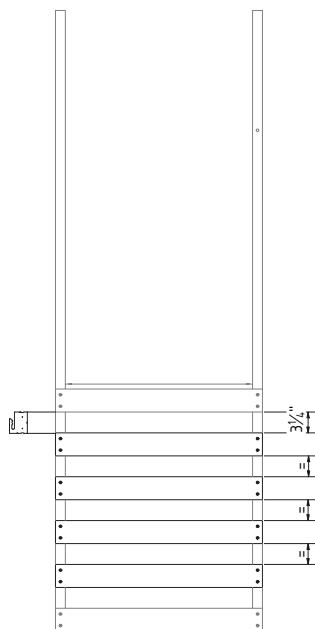
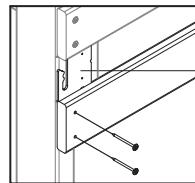
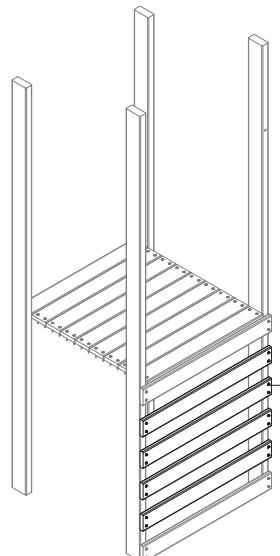
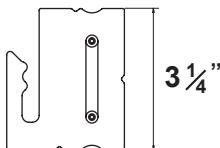


Climbingstone



5x

2 Climbing 90

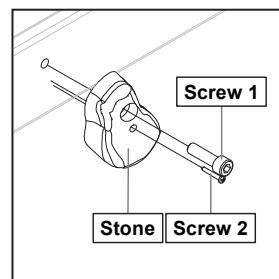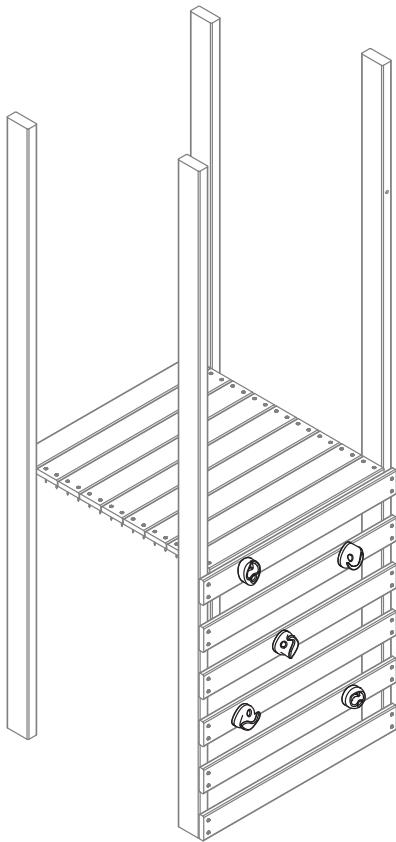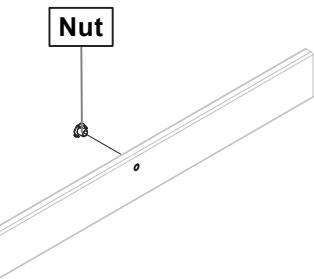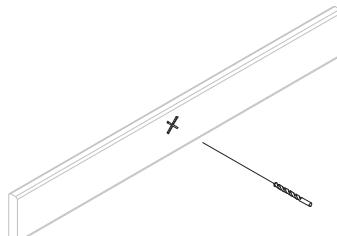

T32
1.5 x 3.5 x 31.5"







1x

6x70
T30



2x



1 Palm

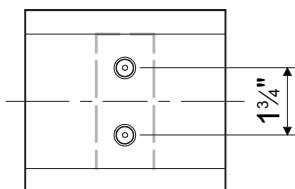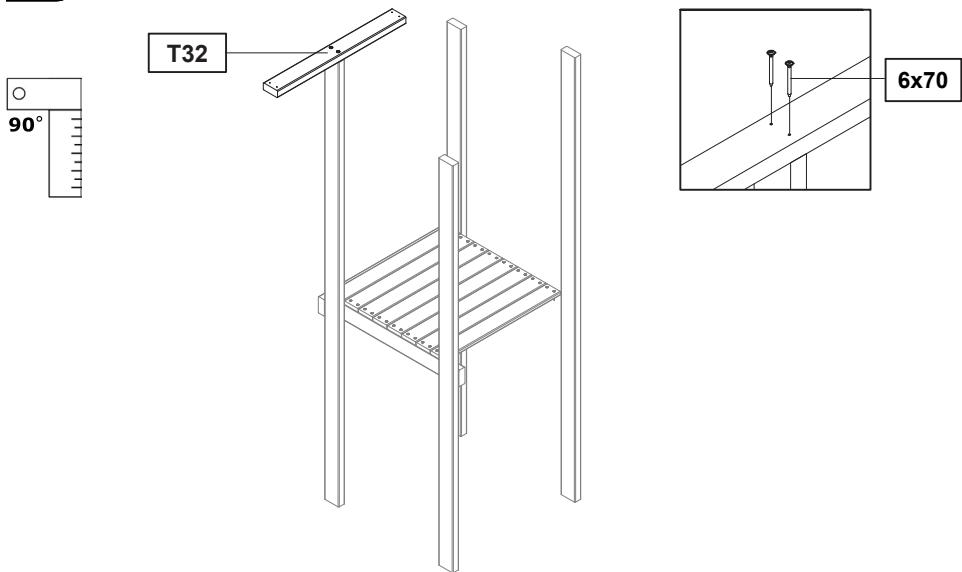






2x **2** Palm

O32

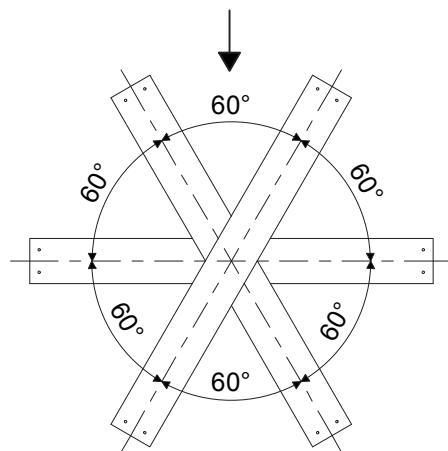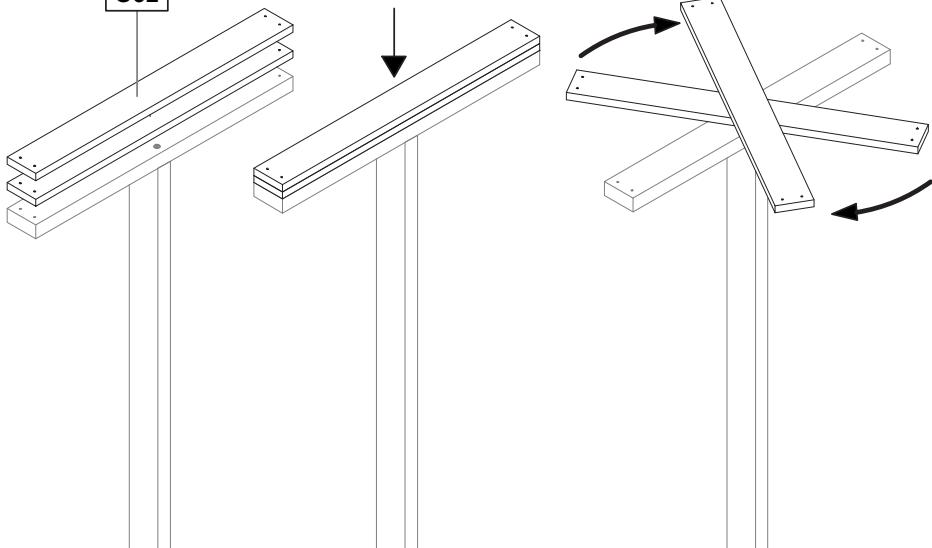







3 Palm

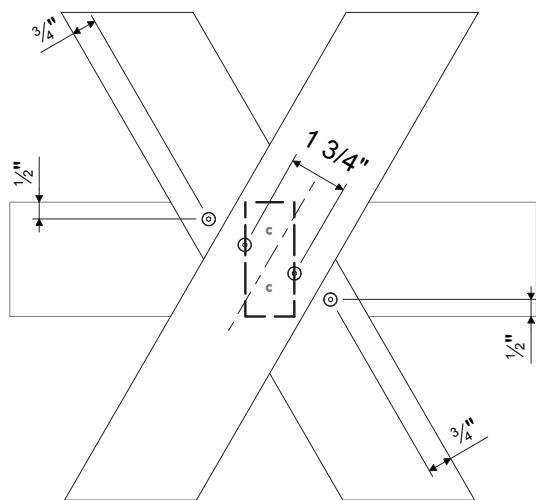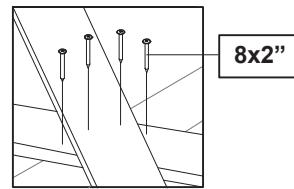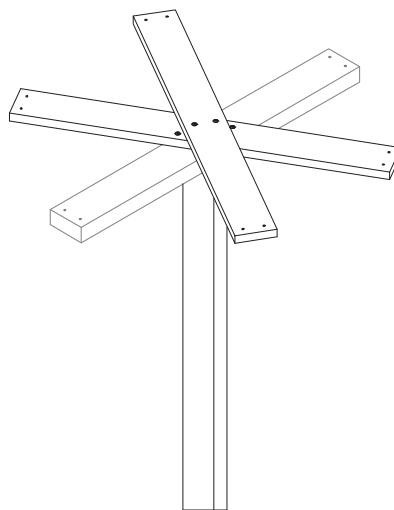


Tarp Palm	5x20 PZ 2	Washer
6x	24x	24x

4 Palm

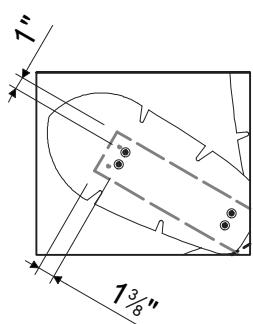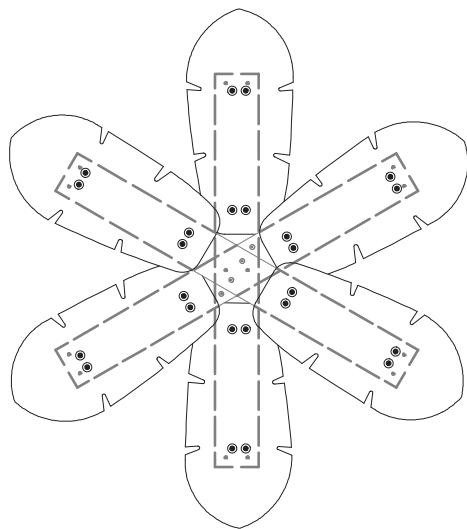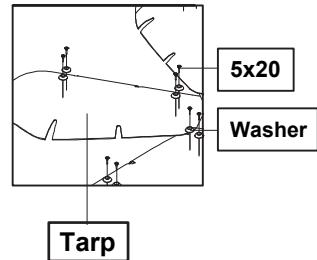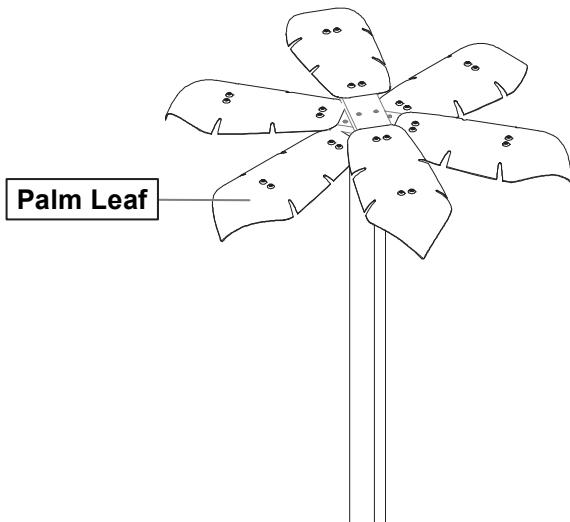

T42A
1.5 x 3.5 x 41.5"



2x

O29A
0.75 x 3.5 x 28.5"






7x

#8x2"
T20







28x


1 Ladder 90

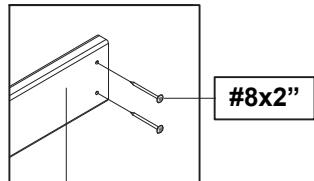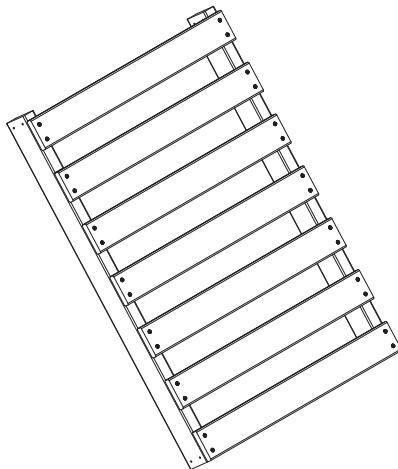






2 Ladder 90

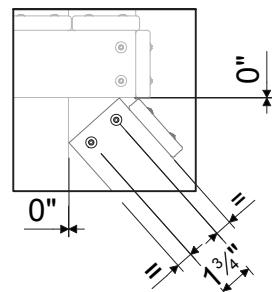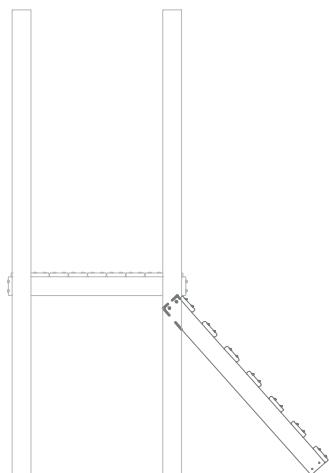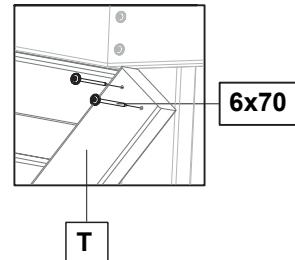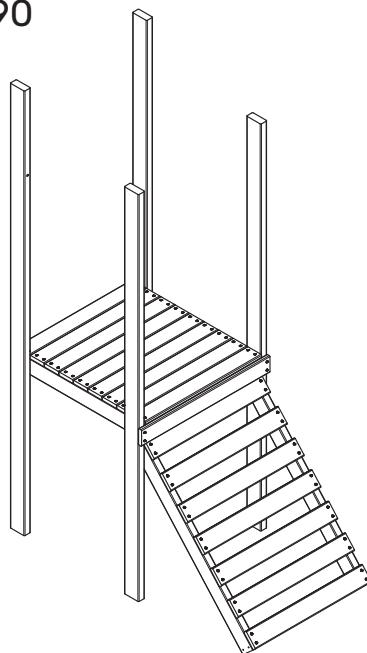

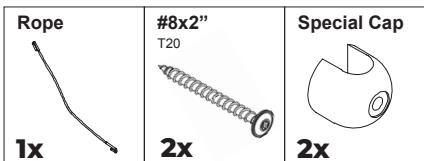

3 Ladder 90

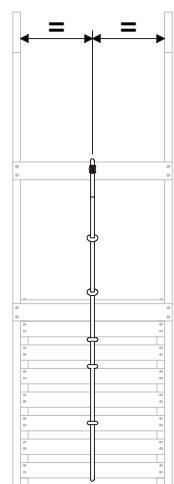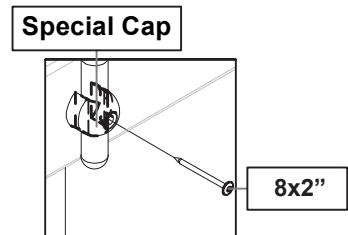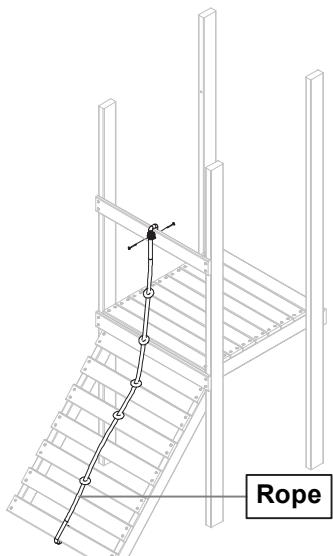

#8x2"

T20




Special Cap

2x






2

Ladder 90

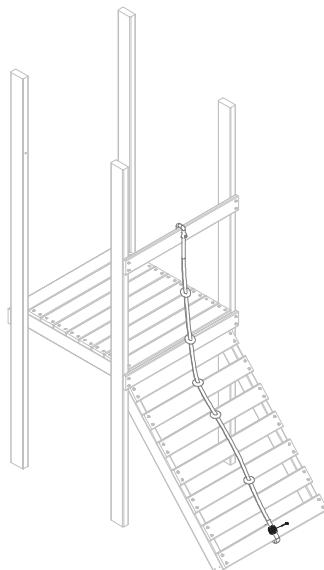

Special Cap

8x2"

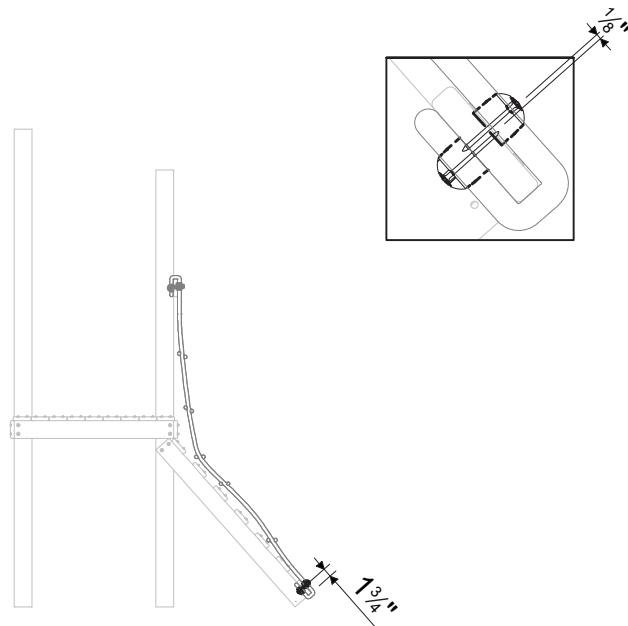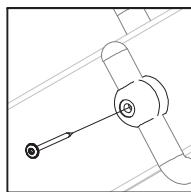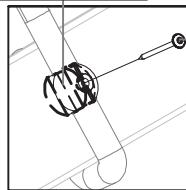

T10
1.5 x 3.5 x 9.5"








2x

6x70
T30








4x

1 Shop Canope

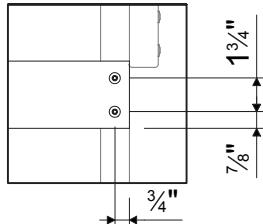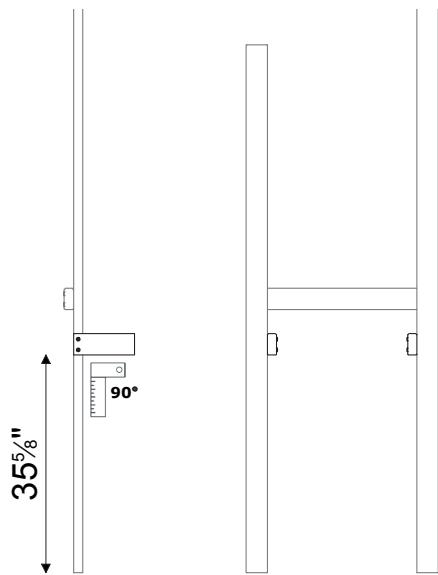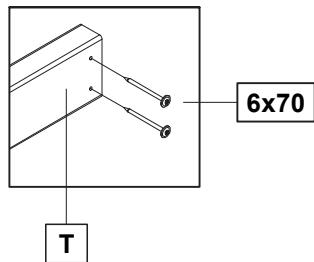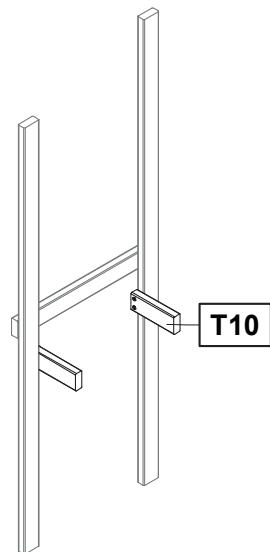



2 Shop Canope

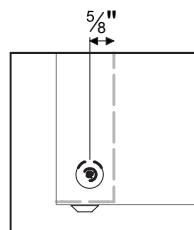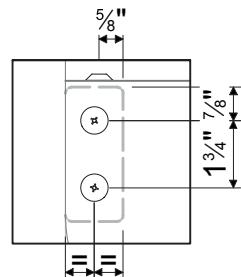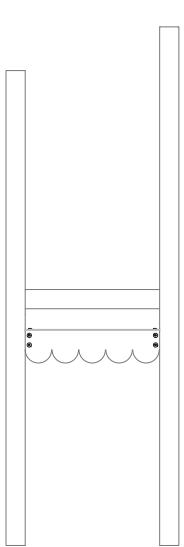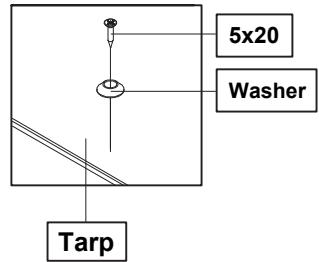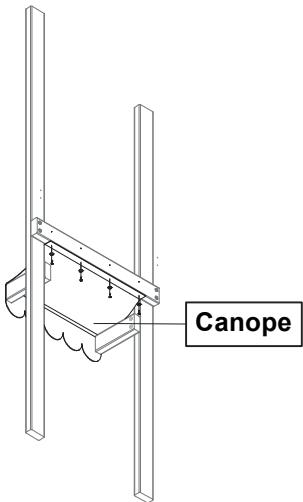

5x20
PZ 2








Washer



6x

6x

3 Shop Canope

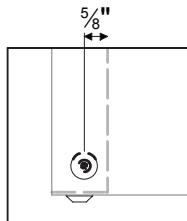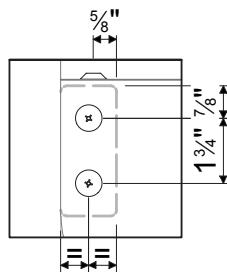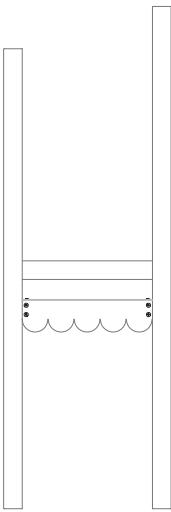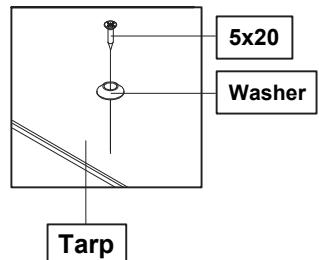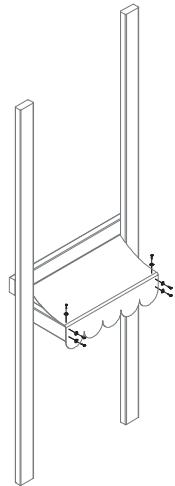



O32A
0.75 x 3.5 x 31.5"
1x

Tarp Wall A
1x

5x20
PZ 2
3x

Washer
3x

1 Shop Wall

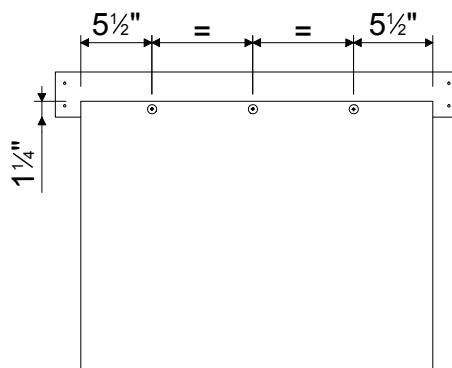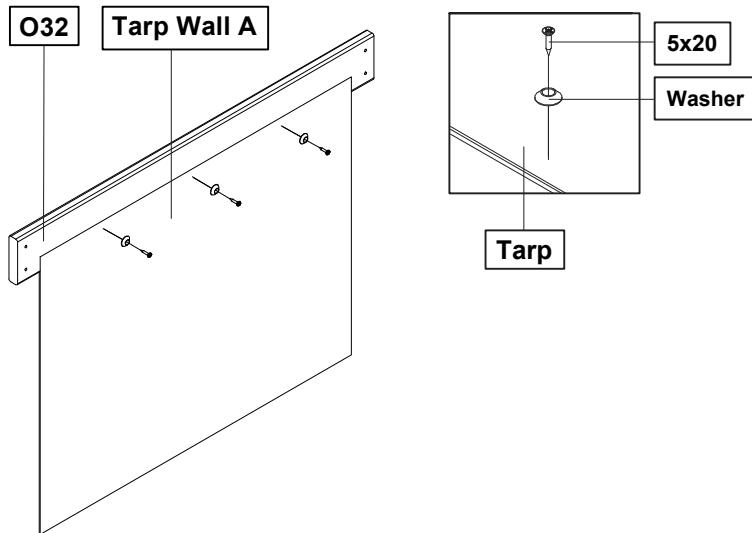

#8x2"



T20





4x

2 Shop Wall

90°

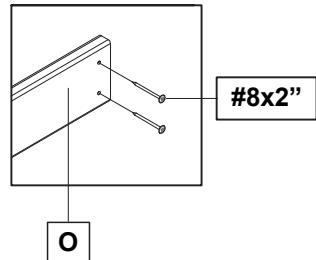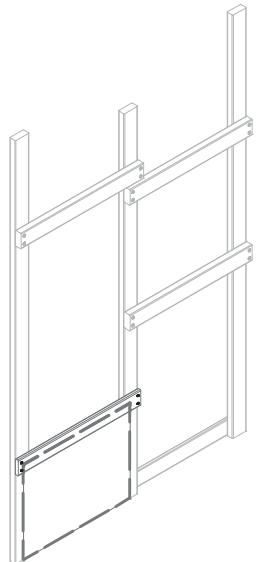

O

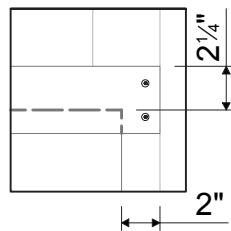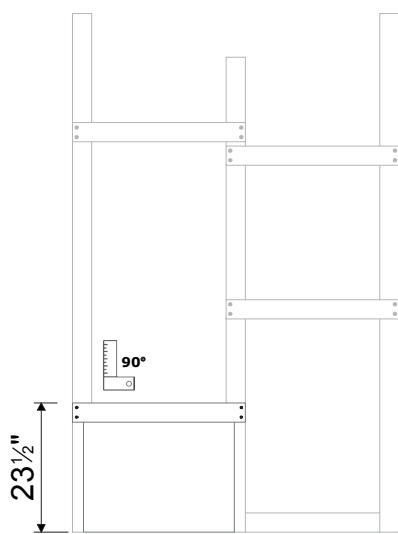

5x20
PZ 2







6x

Washer



6x

3 Shop Wall

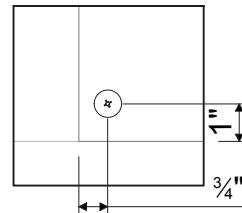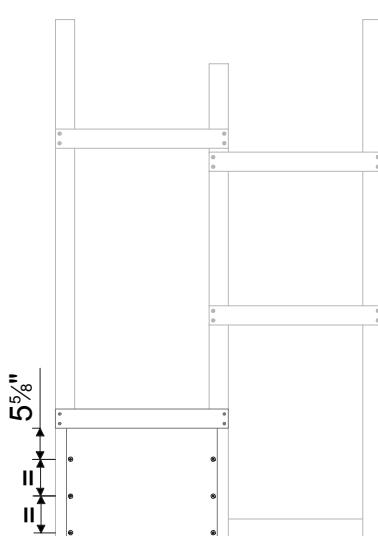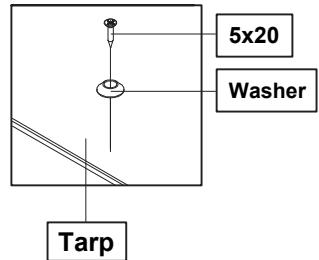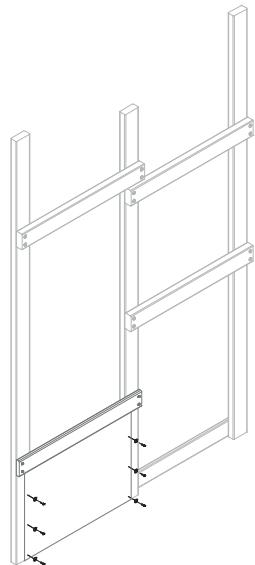

T32A
1.5 x 3.5 x 31.5"






2x


6x70
T30






8x

1 Hammock

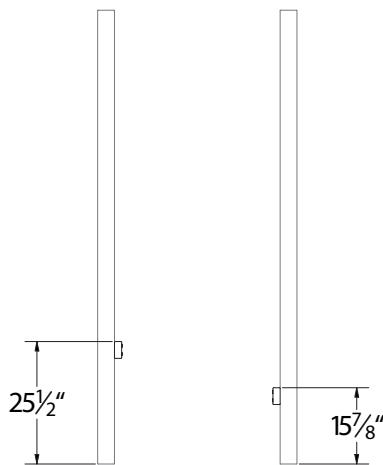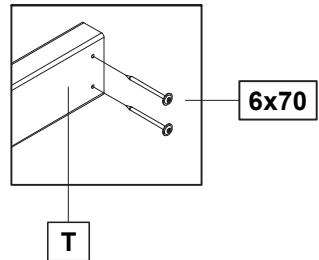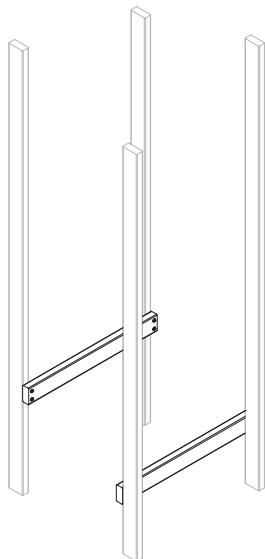



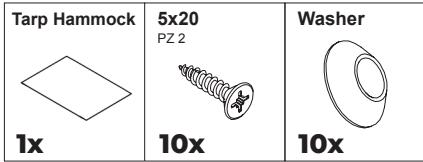


2 Hammock

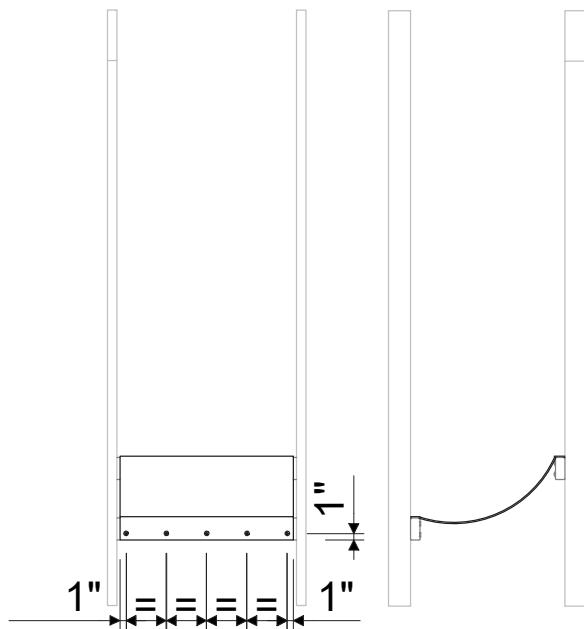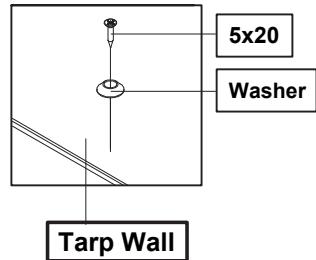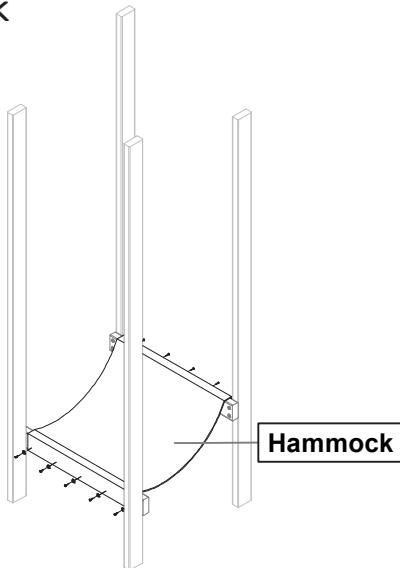



1 Slide

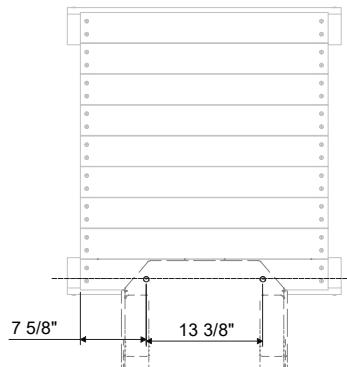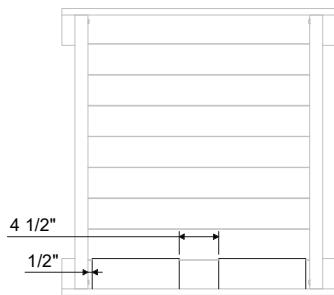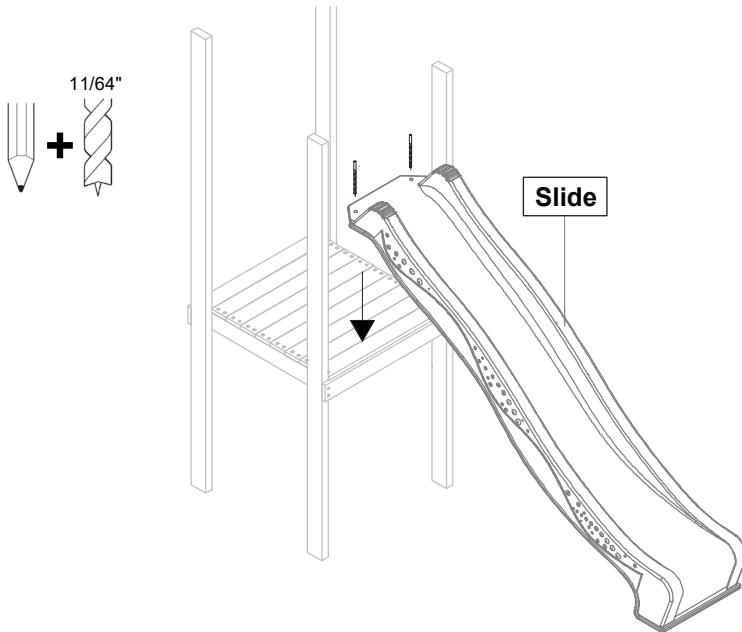

T10
1.5 x 3.5 x 9.5"




2x



6x70
T30






2x

2 Slide

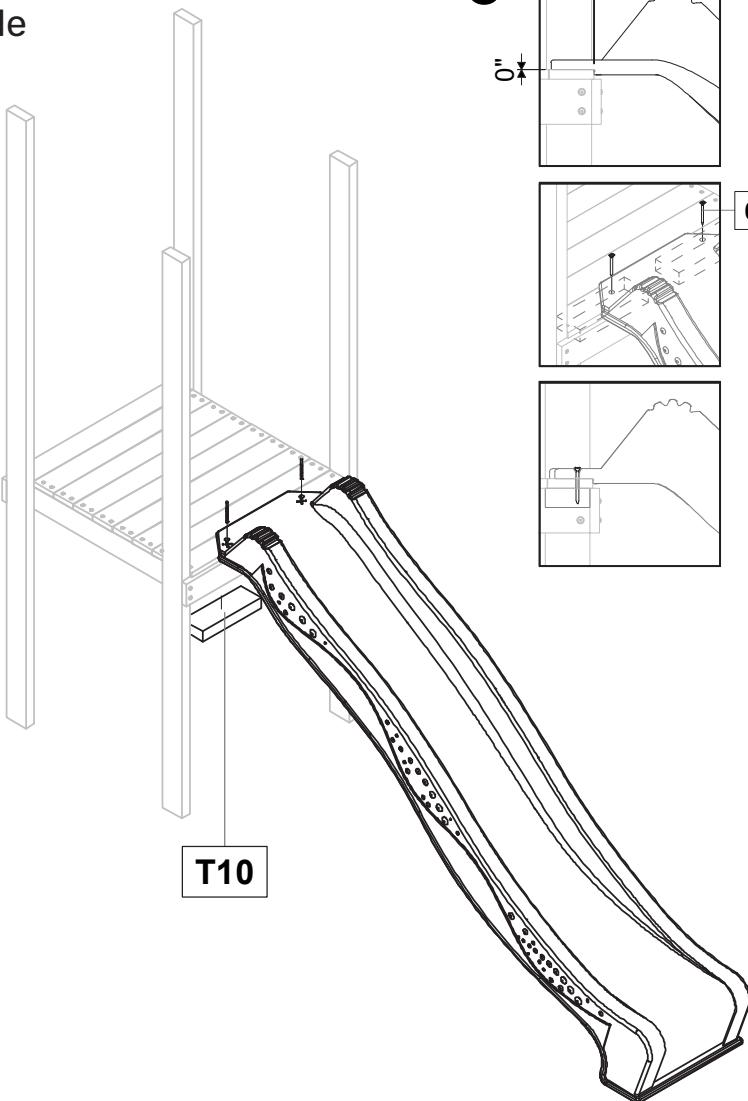

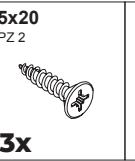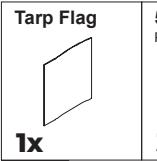

1 Flag

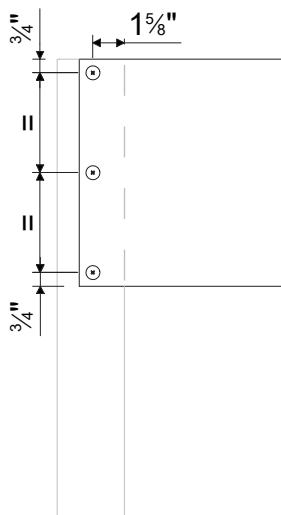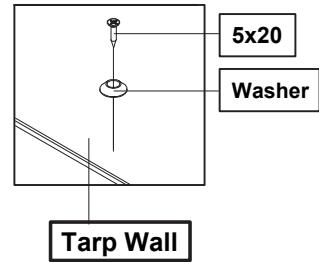
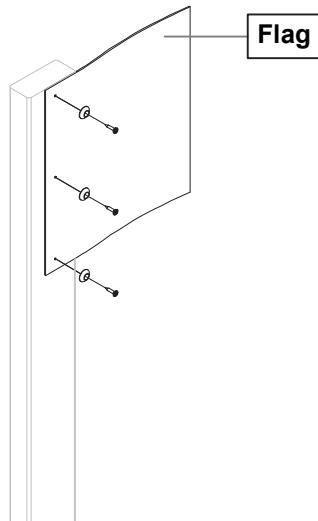


Residential Use Only

THIS PRODUCT IS INTENDED FOR USE BY
CHILDREN FROM AGES 3 TO 14

SAVE THESE
INSTRUCTIONS

Wickey

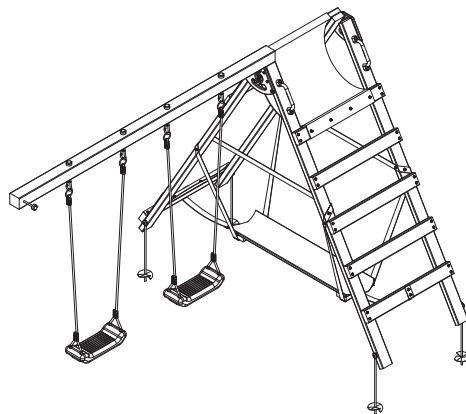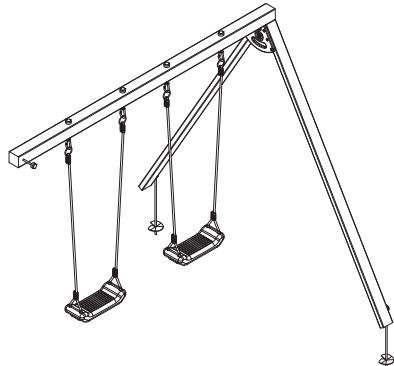



Warning! Choking Hazard - Small parts! Only for domestic use. For outdoor use only.
Product must be assembled by an adult. Customer must keep this information







Ages
0-3




max.
100 kg

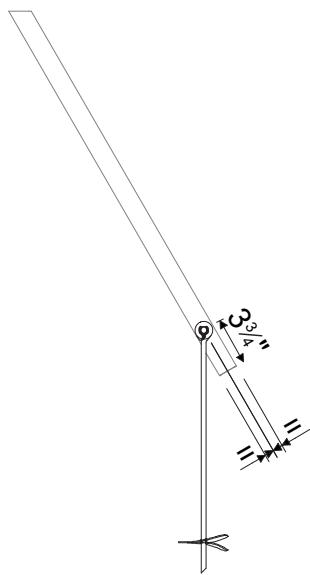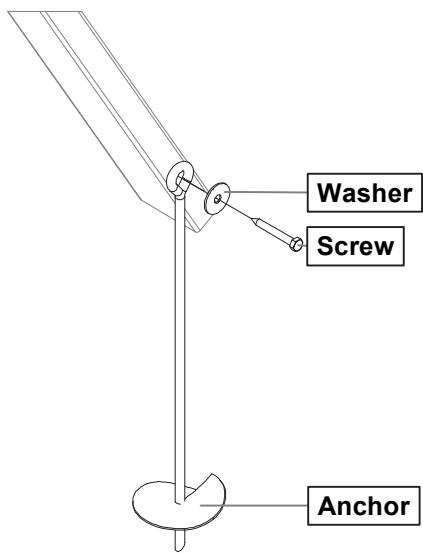




T87 1.5 x 3.5 x 86.5"  2x	F95B 3.5 x 3.5 x 94.5"  1x	6x70 T30  6x	Washer M10  6x	Cap  6x	Nut M10  6x	10x80 Hexagone Wood Screw  1x
Ground Anchor  2x	Swing Hook  4x	M10X190 Carriage Bolt  1x	55x45 Mounting Bracket  1x	M10X40 Carriage Bolt  1x	Swing frame connector  1x	Swing Seat  2x


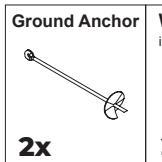


1 Anchoring

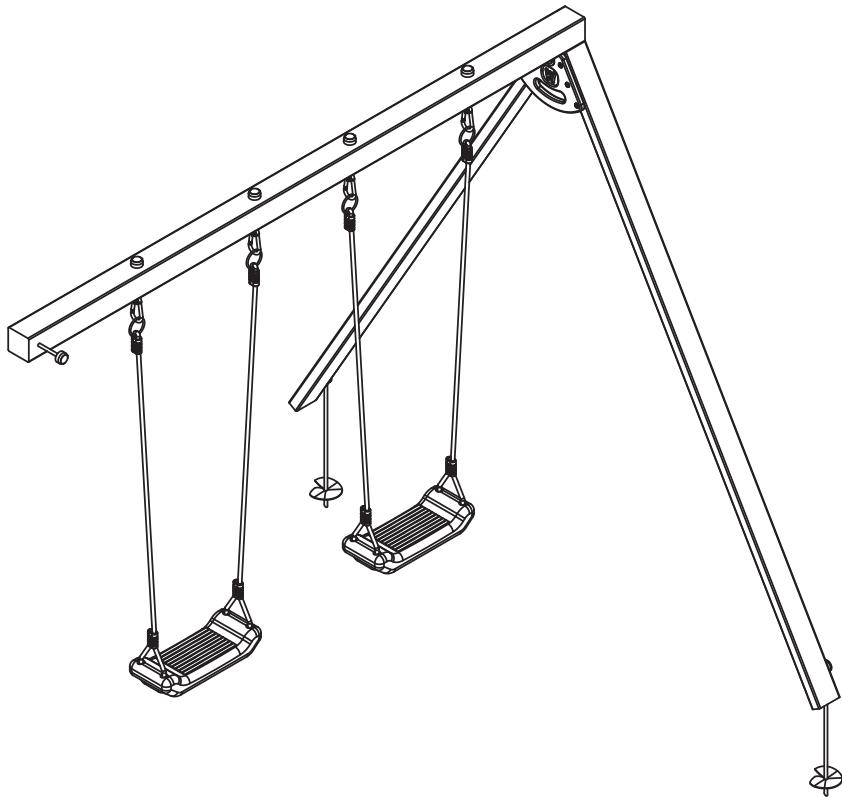

Swing frame connector	M10X40 Carriage Bolt	Nut M10	Washer M10	Cap	55x45 Mounting Bracket
1x	1x	1x	1x	1x	1x






1 Swing Connector

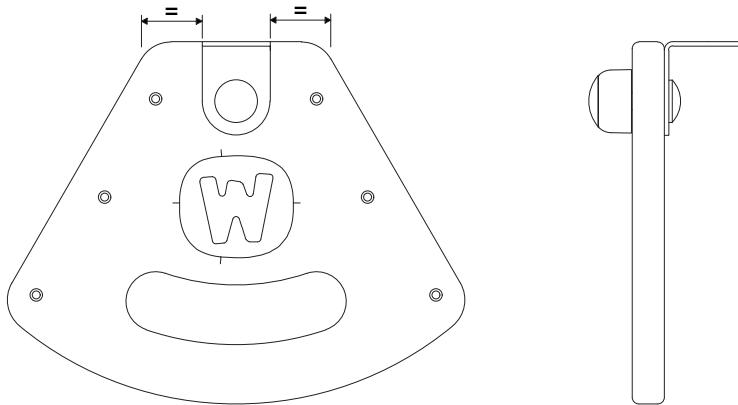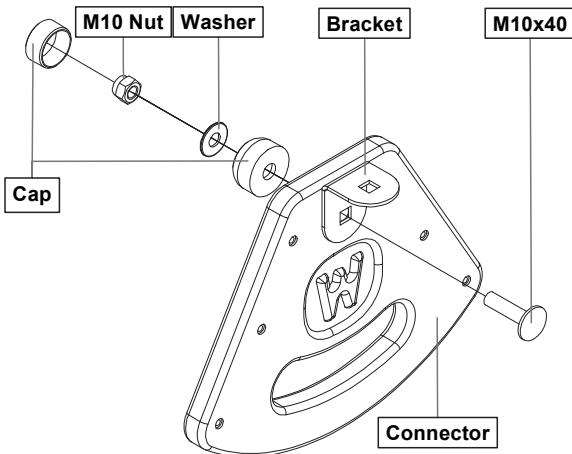

T87
1.5 x 3.5 x 86.5"




2x

2 Swing Connector

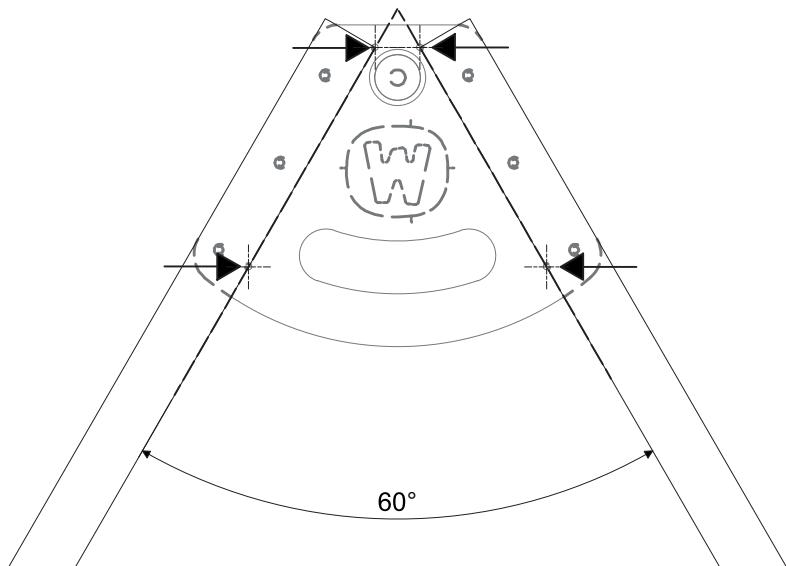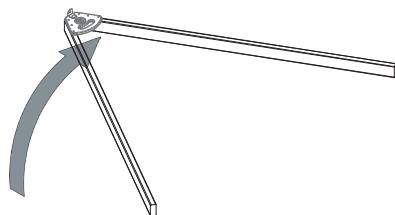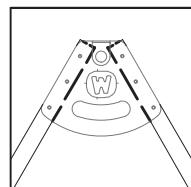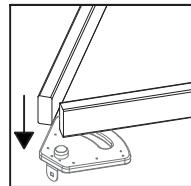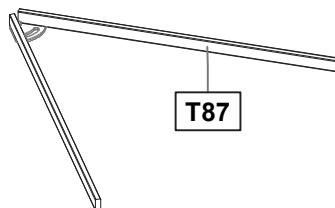



3 Swing Connector

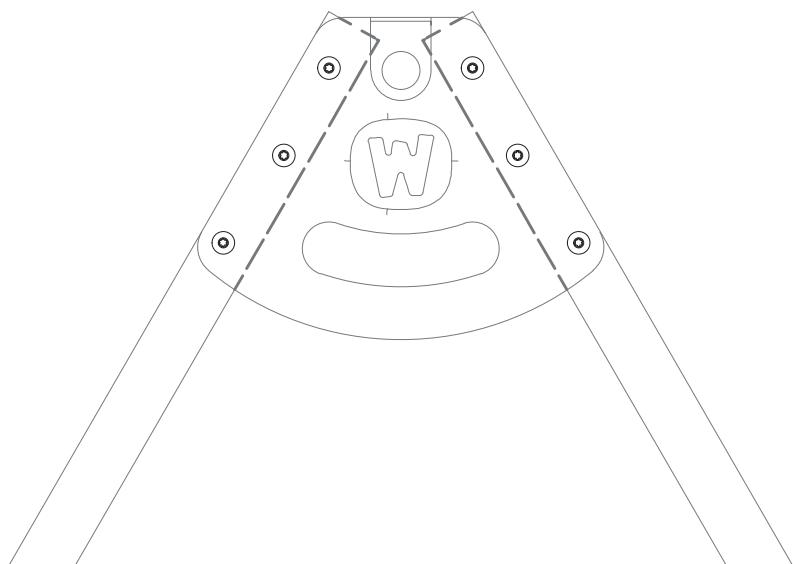
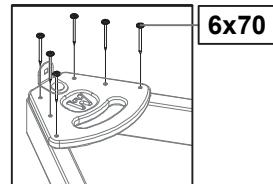
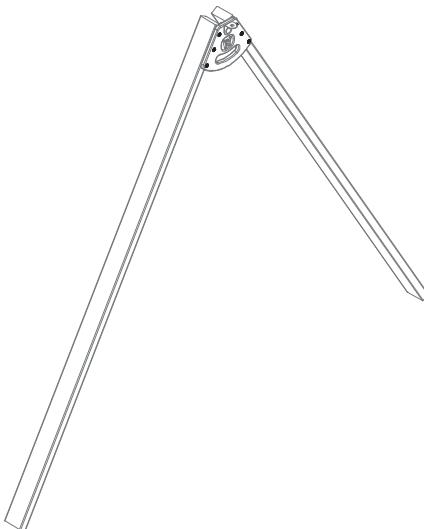



F95B

3.5 x 3.5 x 94.5"







1x


1 Swingbeam

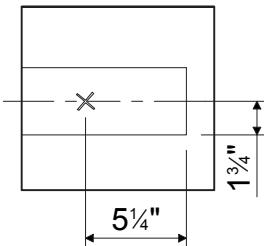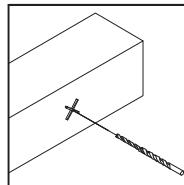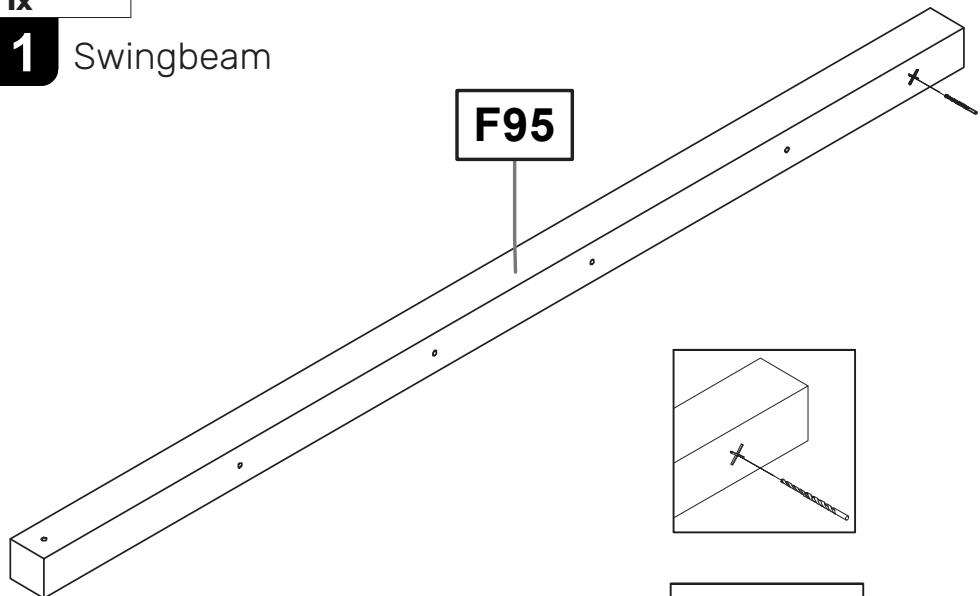


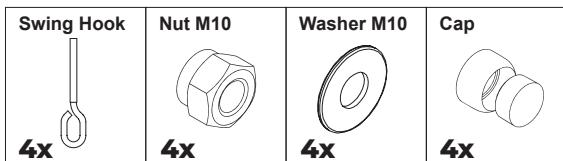


2 Swingbeam

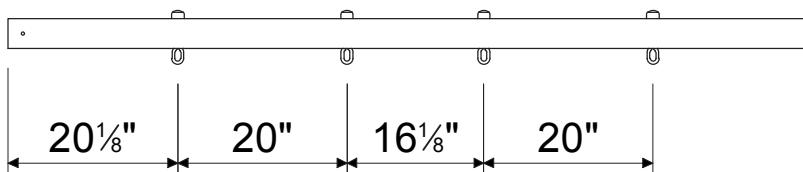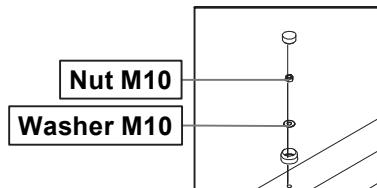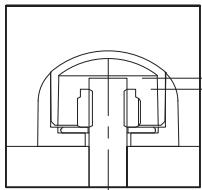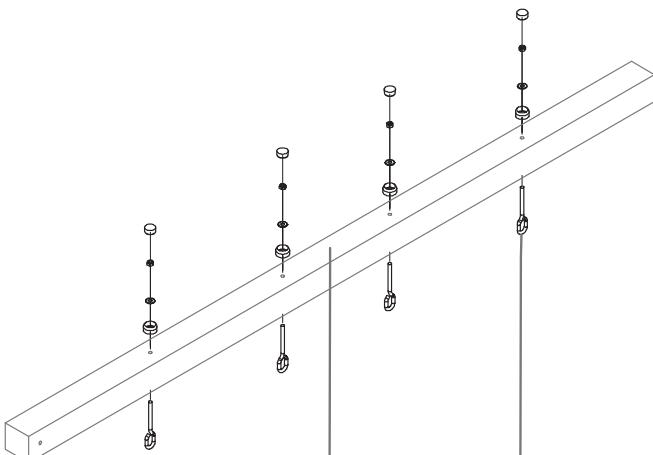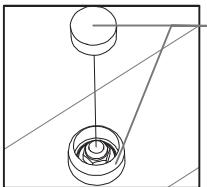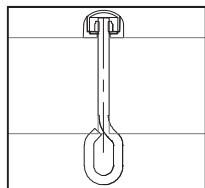

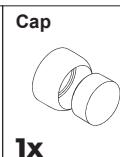


3 Swingbeam

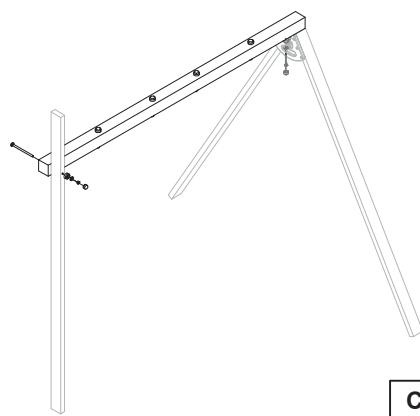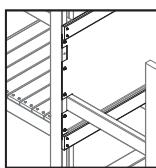

Washer M10

Nut M10

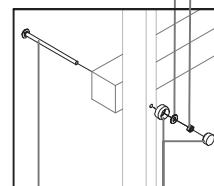


M10 x 190


Cap

Washer

10x80


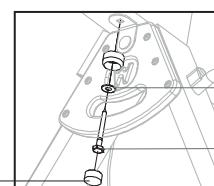


Cap

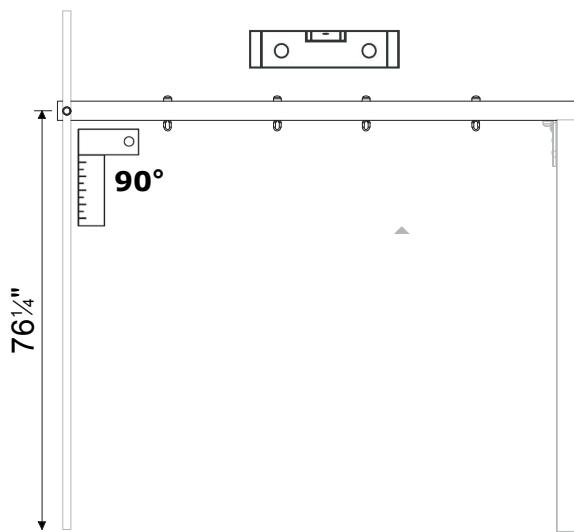

76 $\frac{1}{4}$ "

90°

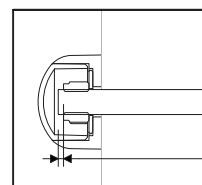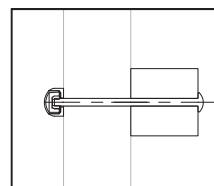



1/8"






4 Swingbeam

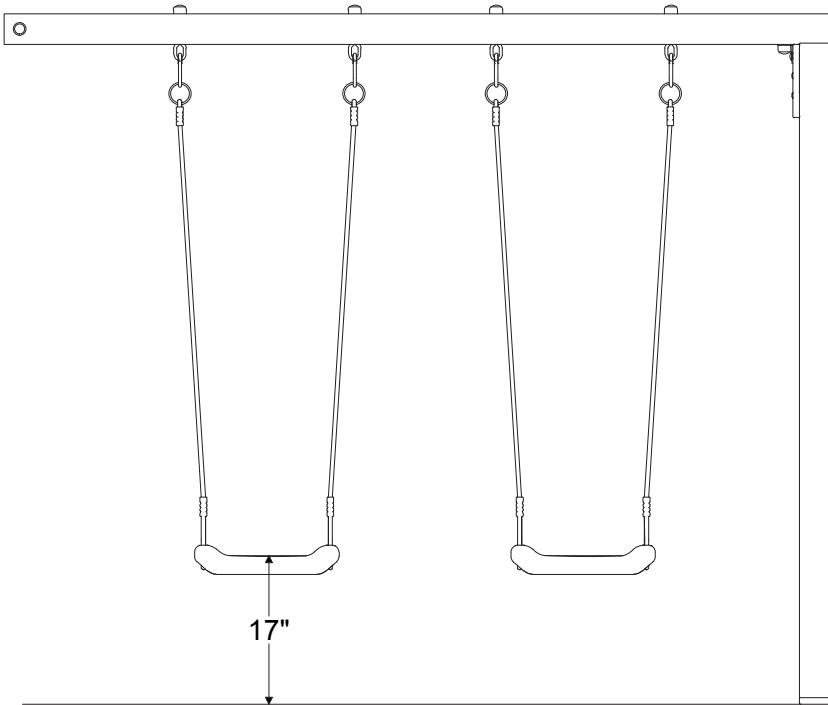


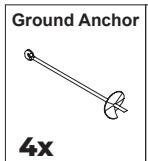

Anchoring

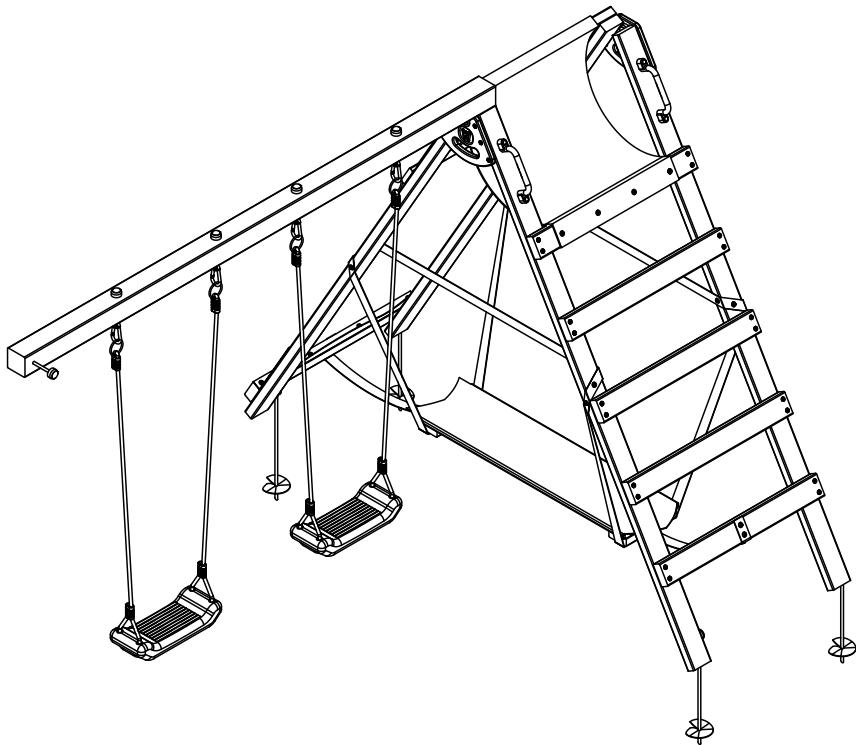


5 Tarp cutting plan



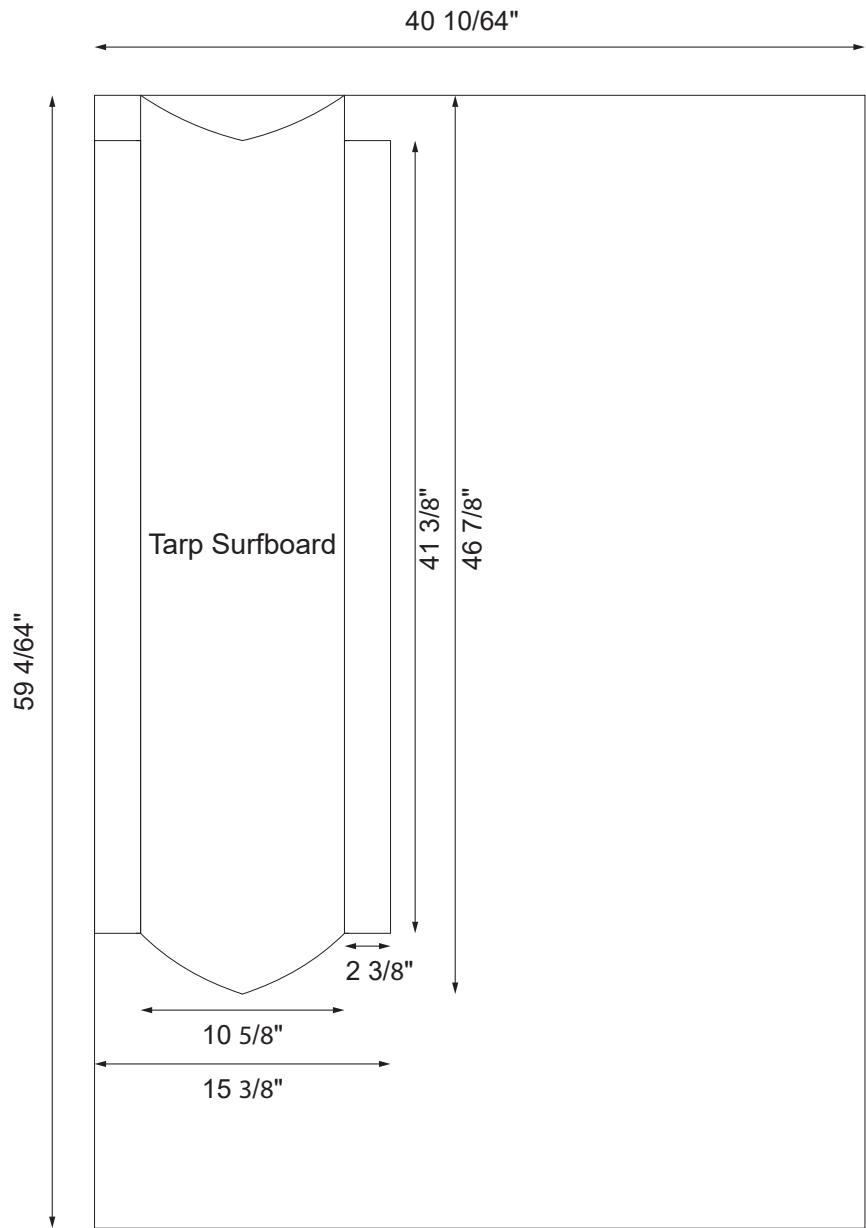





Tarp cutting plan


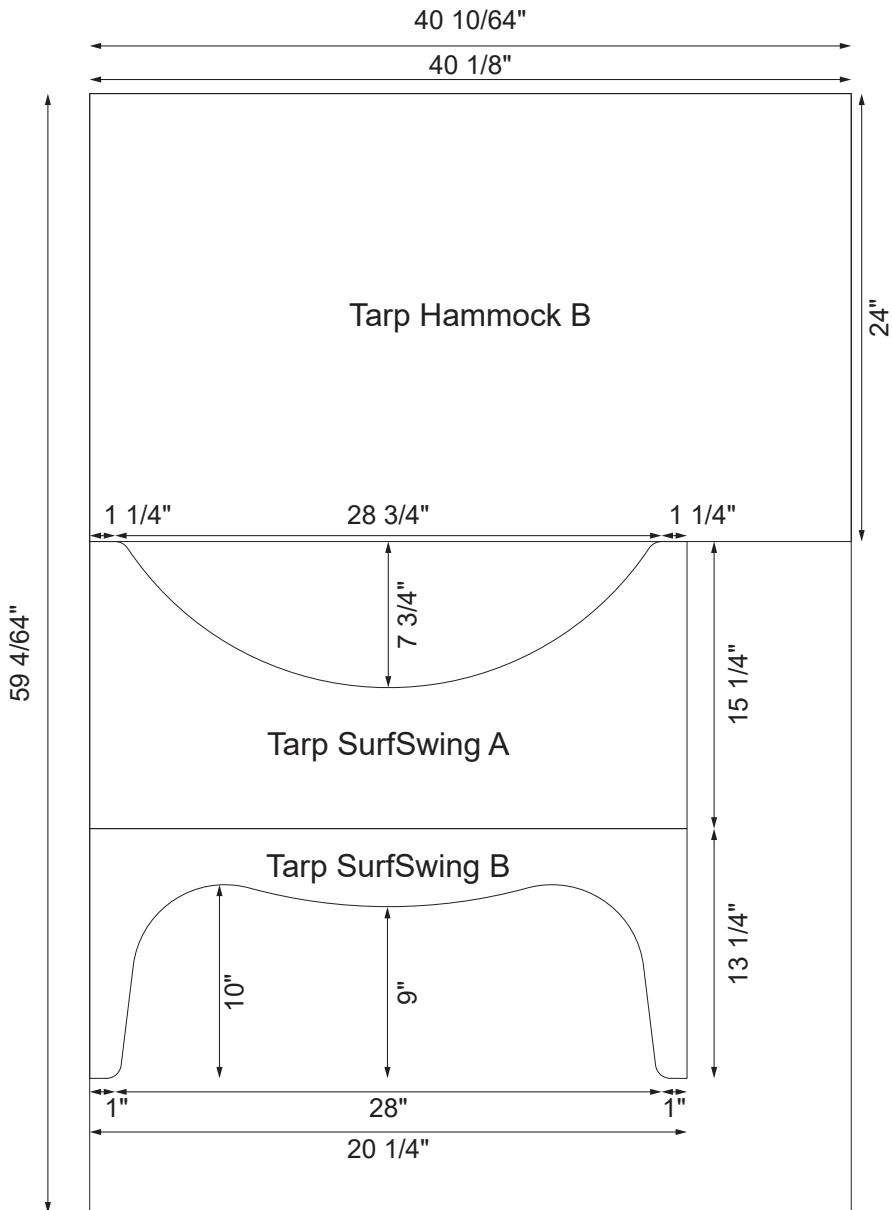




O32A 0.75 x 3.5 x 31.5"  1x	O42A 0.75 x 3.5 x 41.5"  3x	T10 1.5 x 3.5 x 9.5"  2x	T32A 1.5 x 3.5 x 31.5"  7x	T87 1.5 x 3.5 x 86.5"  4x	5x20 PZ 2  72x	#8x2" T20  16x
6x70 T30  34x	M6X40  4x	M10X40 Carriage Bolt  1x	Washer  72x	Washer M10  1x	Cap  1x	Nut M10  1x
Ground Anchor  2x	Tarp Hammock  1x	Tarp Surfboard  1x	Tarp Arch  1x	Tarp Opening  1x	Grips  2x	Belt  2x
Swing frame connector  1x	Sticker  1x					



Swing frame connector  1x	M10X40 Carriage Bolt  1x	Nut M10  1x	Washer M10  1x	Cap  1x
---	--	--	---	--

2 Surfswing

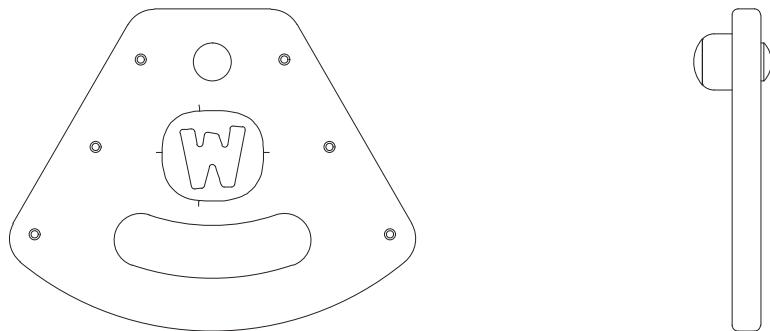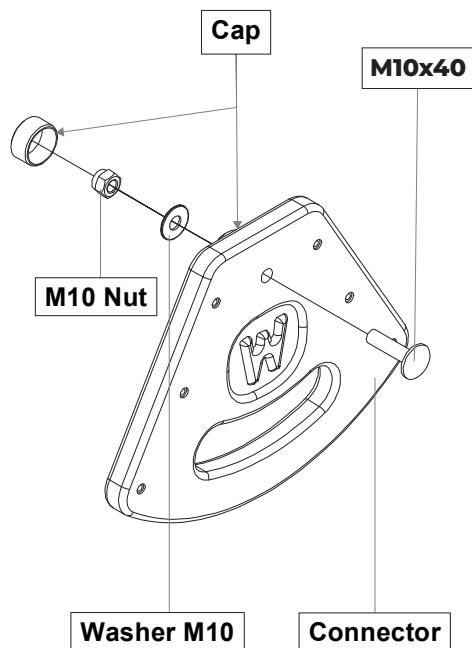

T87
1.5 x 3.5 x 86.5"
2x

2 Surfswing

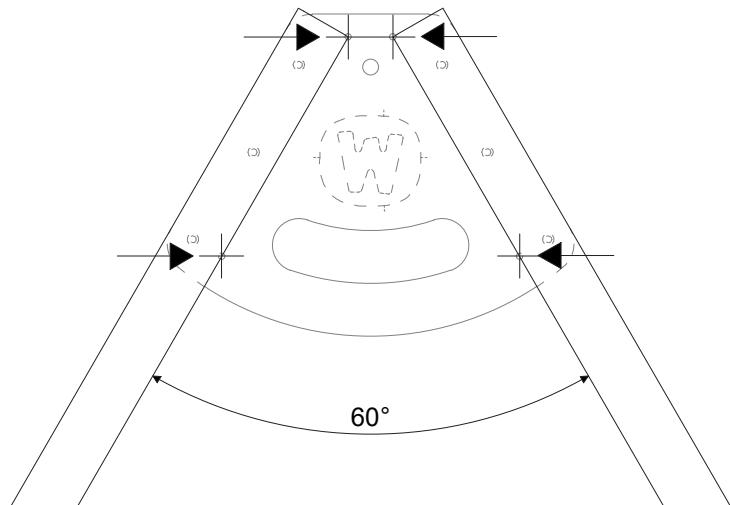
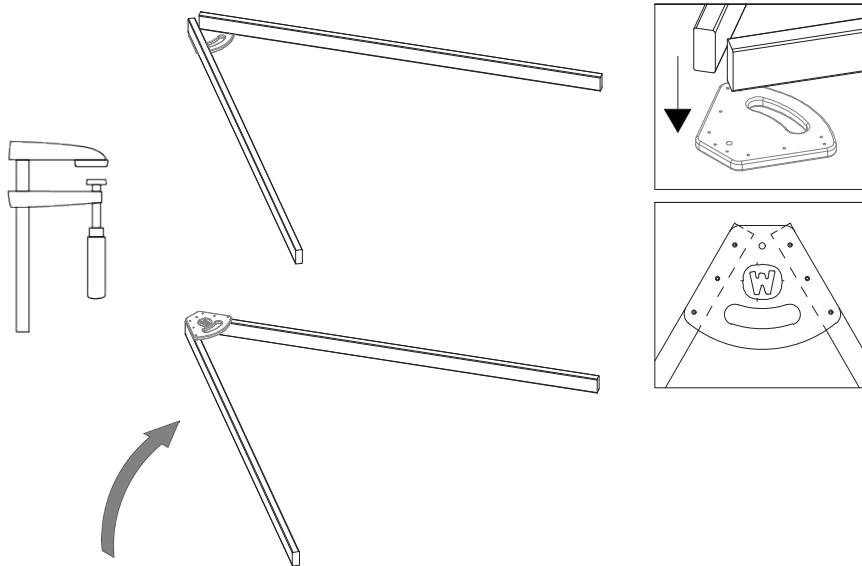


6x70


T30

6x

3 Surfswing

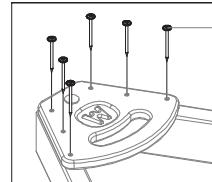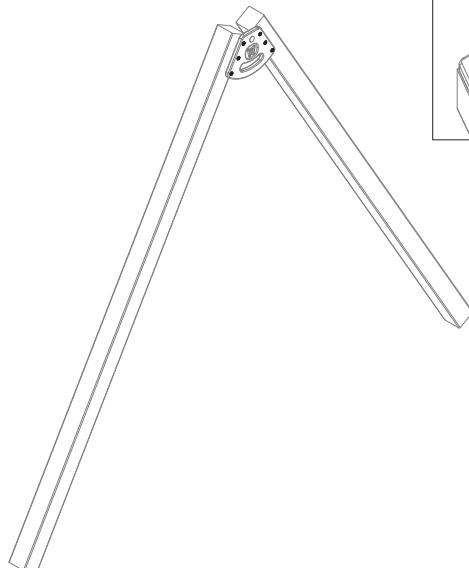


6x70

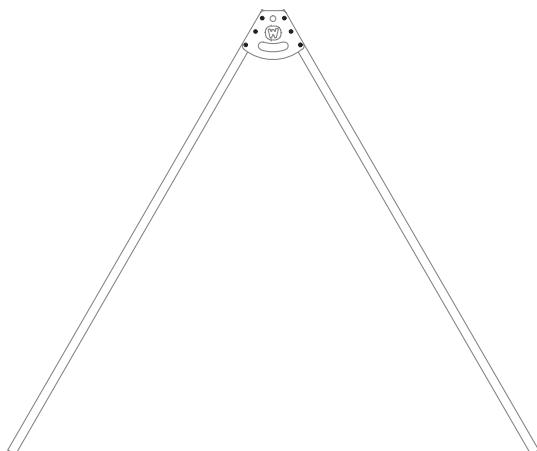


4

Surfswing

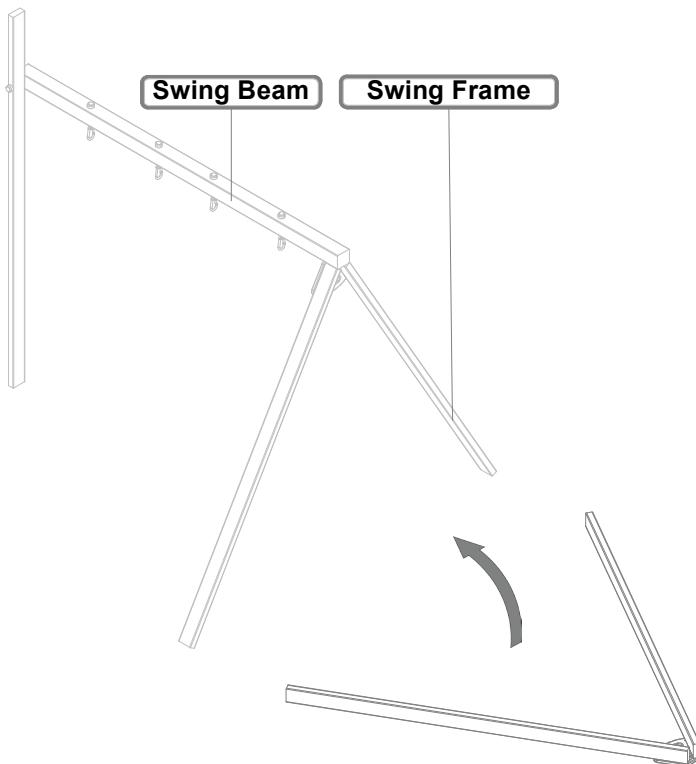

T32A
1.5 x 3.5 x 31.5"





5x

6x70
T30







20x

5 Surfswing

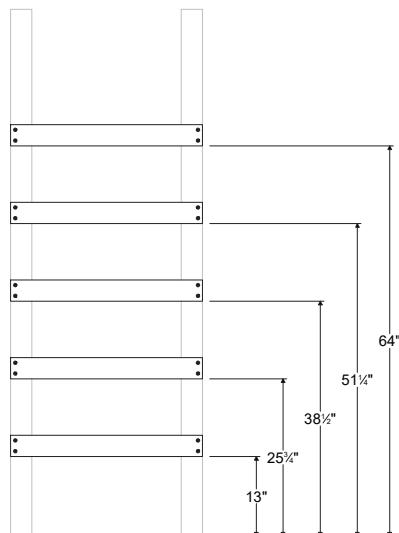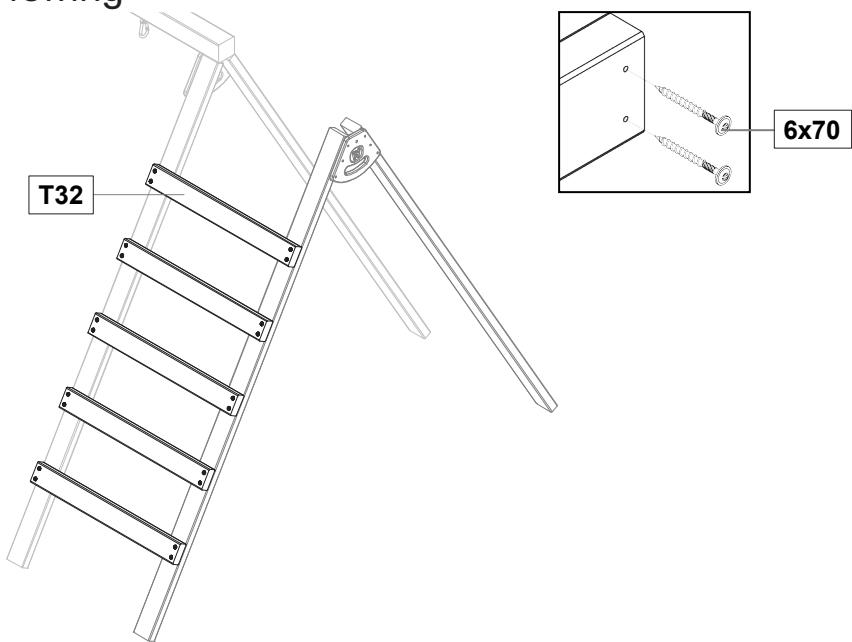





T32A 1.5 x 3.5 x 31.5"	O32A 0.75 x 3.5 x 31.5"	6x70 T30	#8x2" T20
2x	1x	8x	4x

6 Surfswing

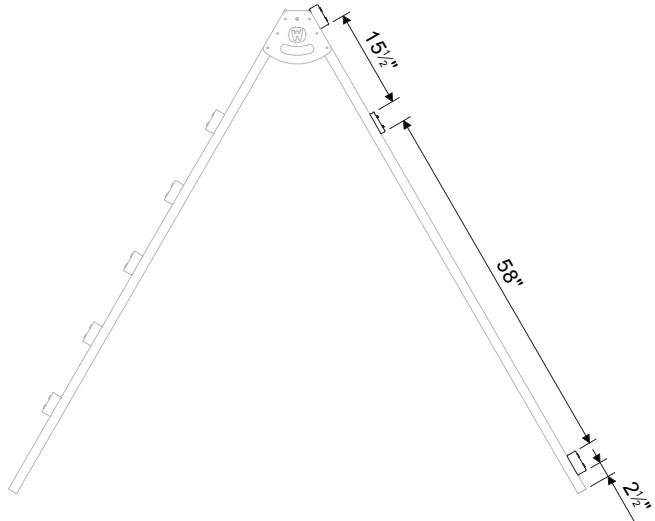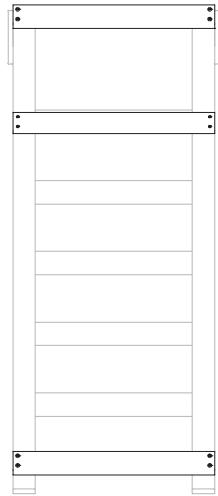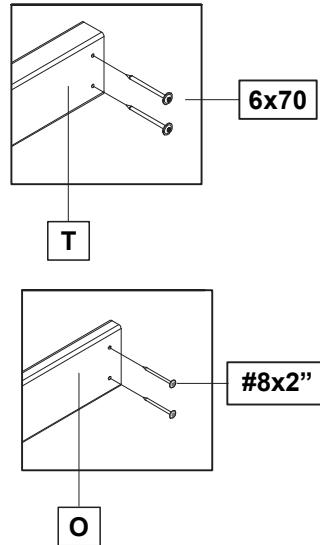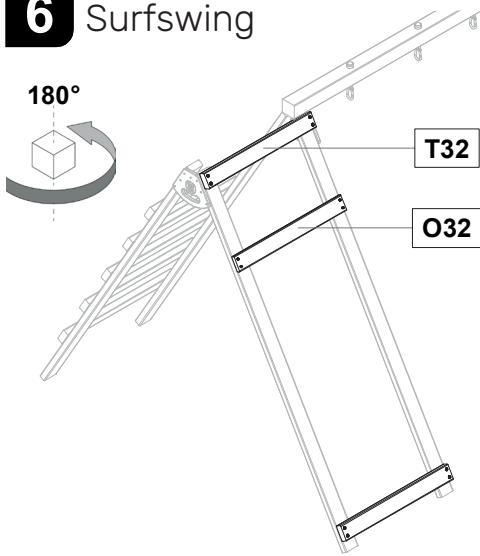







7 Surfswing

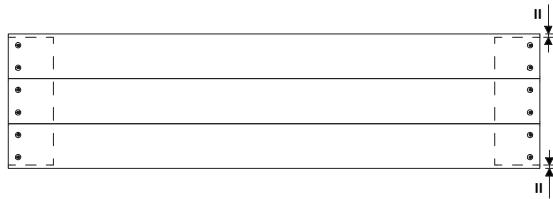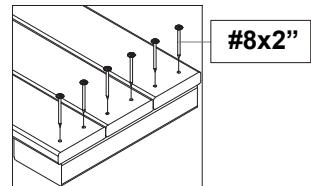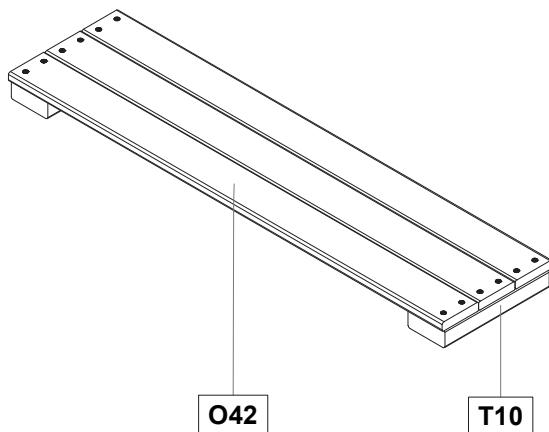

Tarp Surfboard	5x20 PZ 2	Washer
		



1x **12x** **12x**

8 Surfswing

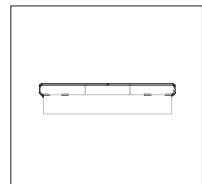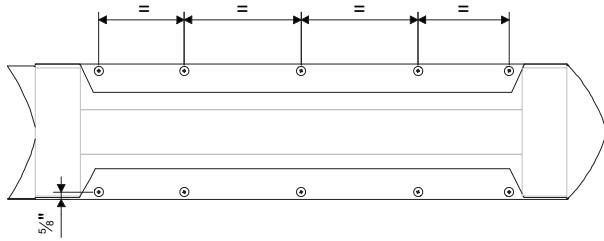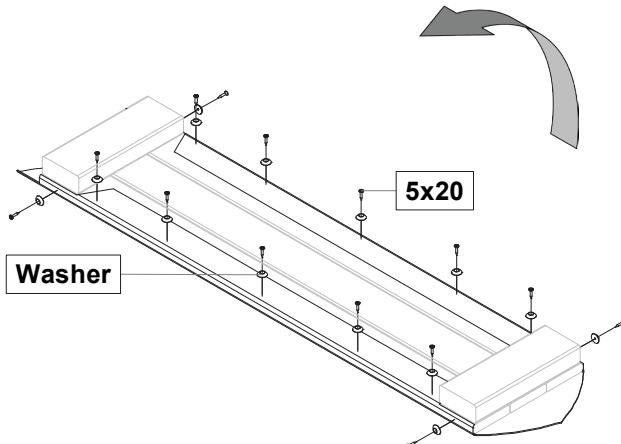

9


Surfswing

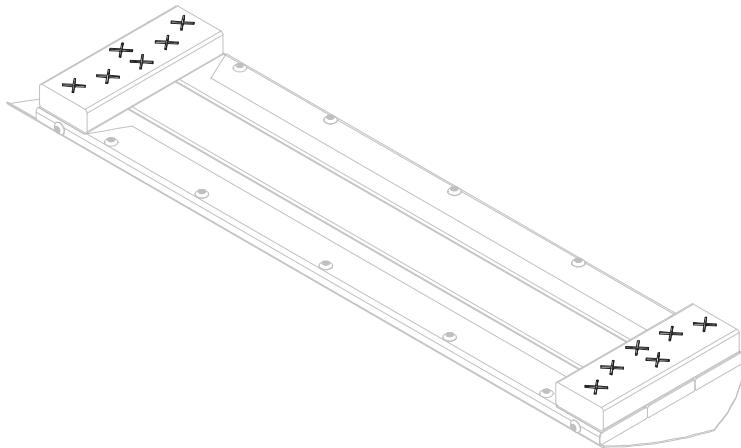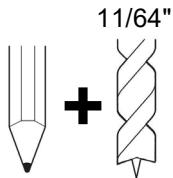





10 Surfswing

2x

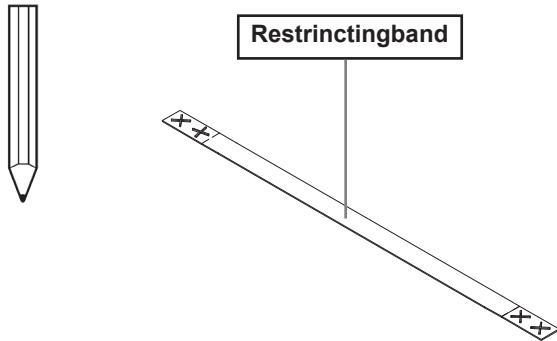





Restrictingband

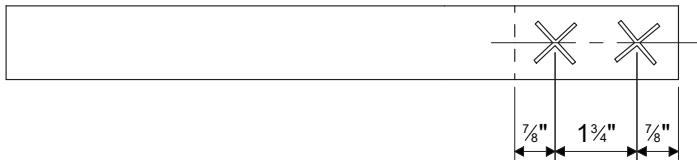

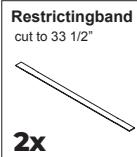



11 Surfswing

2x

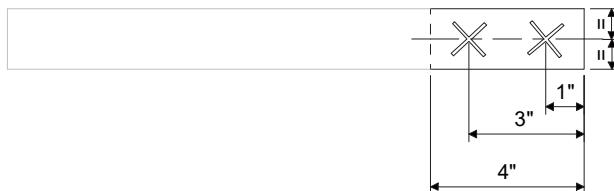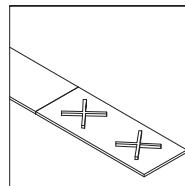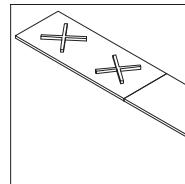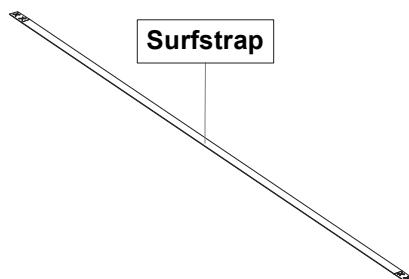

Surfstrap cut to 134"	Restrictingband cut to 33 1/2"	5x20 PZ 2	Washer
2x	2x	8x	8x

12 Surfswing

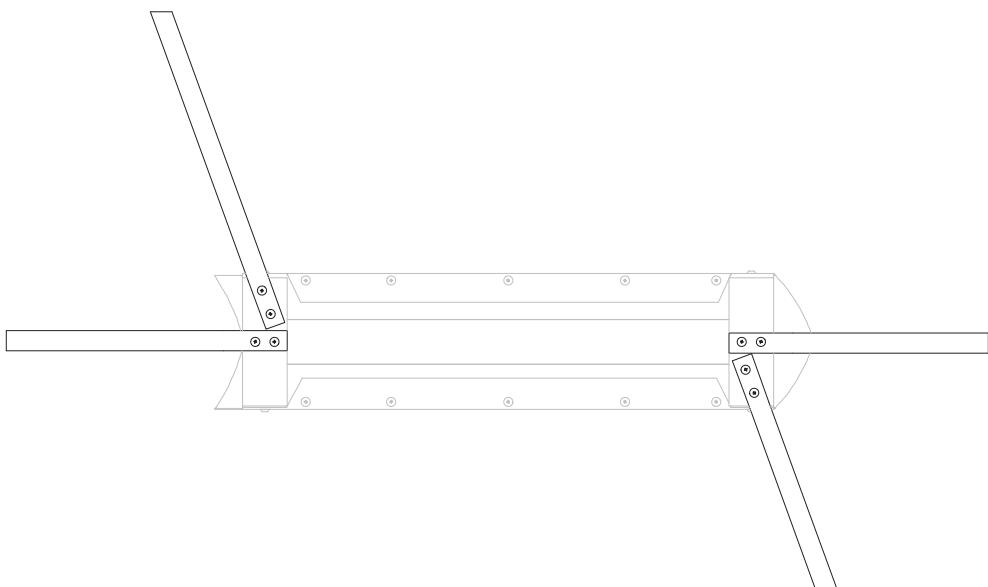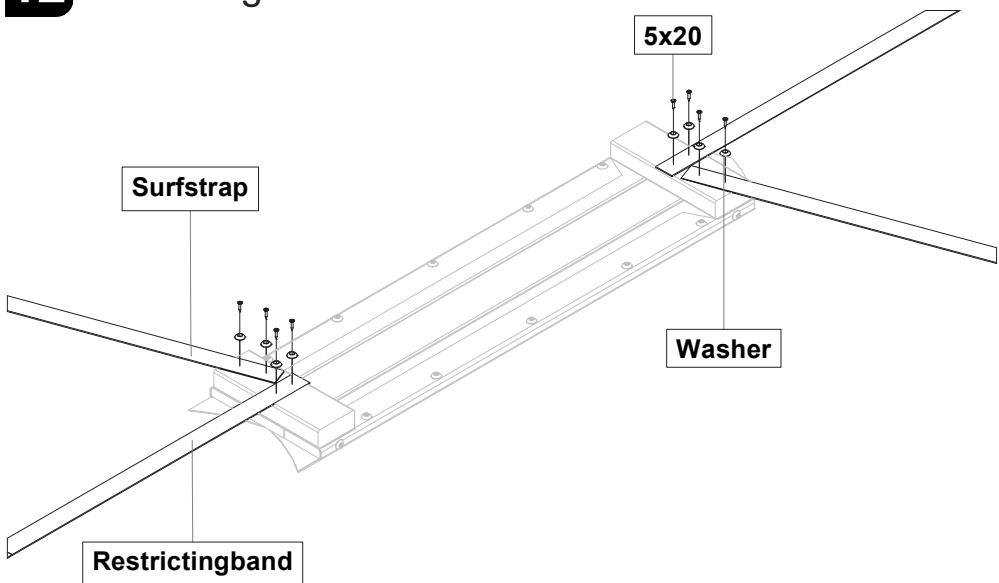

5x20
PZ 2





4x

Washer






4x

13 Surfswing

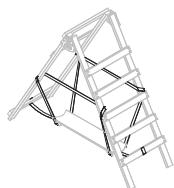






Surfstrap

Restrictingband

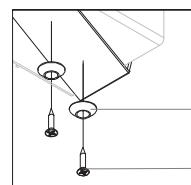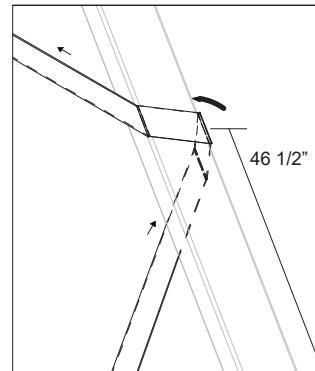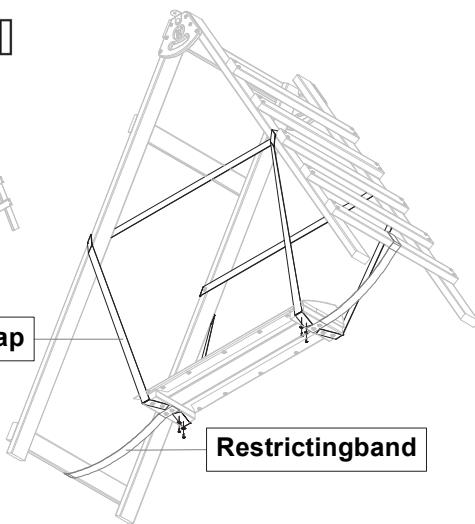

Washer

5x20

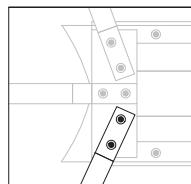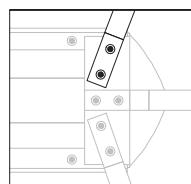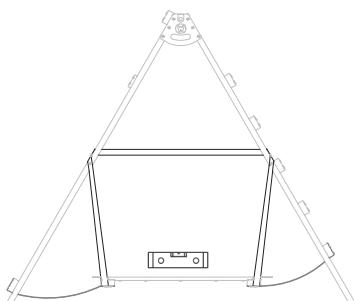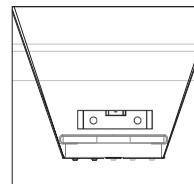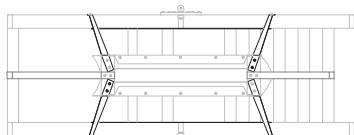

5x20
PZ 2




12x

Washer



12x

14 Surfswing

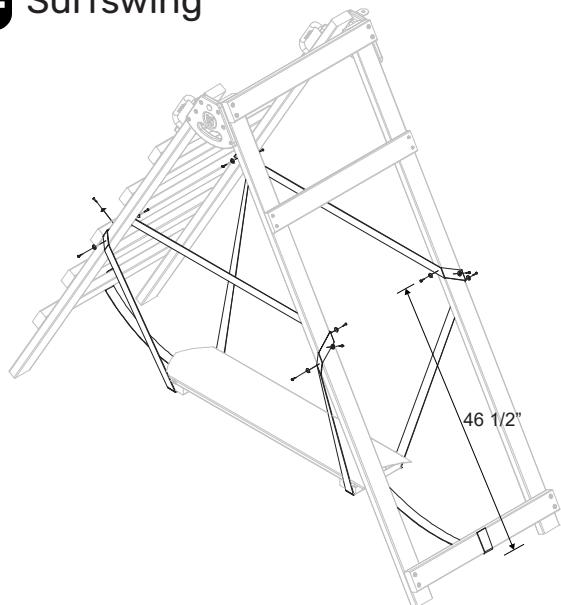


5x20


2.

3.


Washer

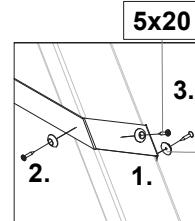




1.

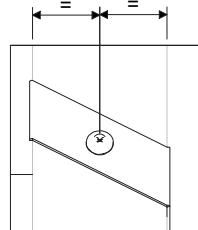

2.

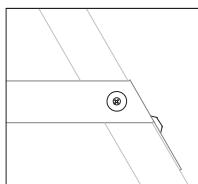

3.

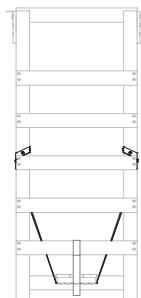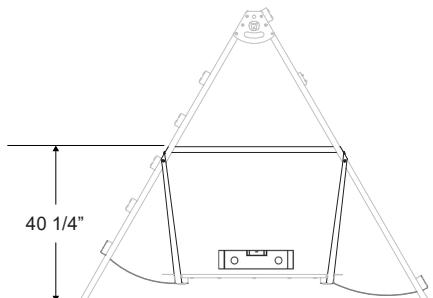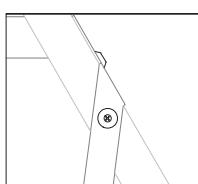

5x20
PZ 2




6x

Washer




6x





15 Surfswing

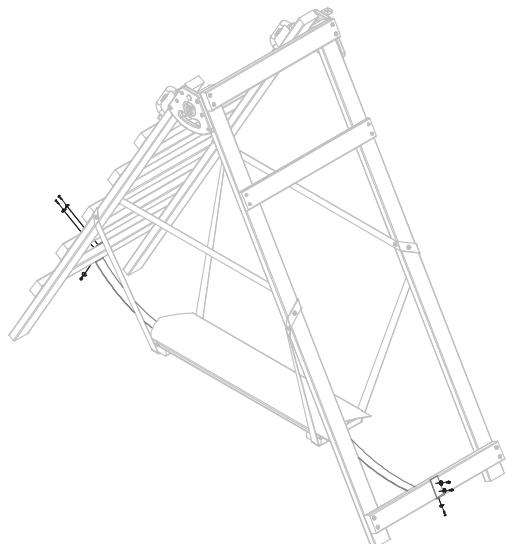

5x20

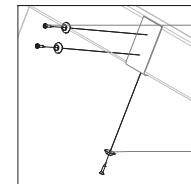






Washer

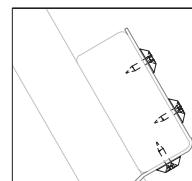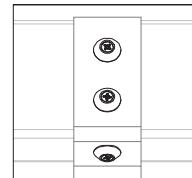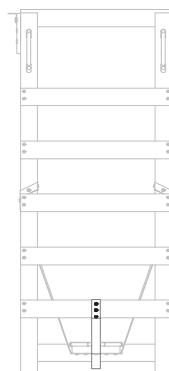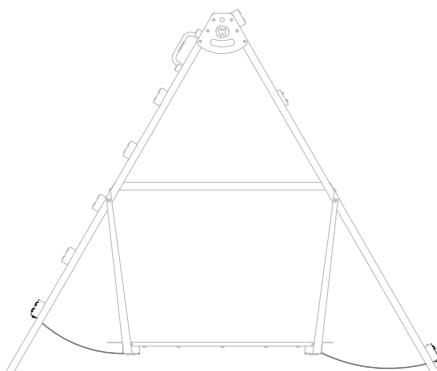


5x20 PZ 2	Washer	Tarp Hammock
8x	8x	1x

16 Surfswing

Hammock

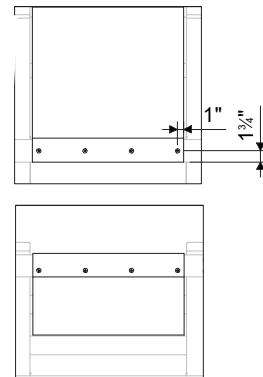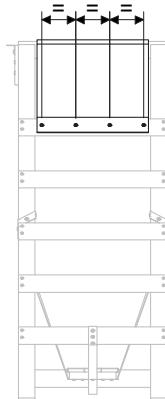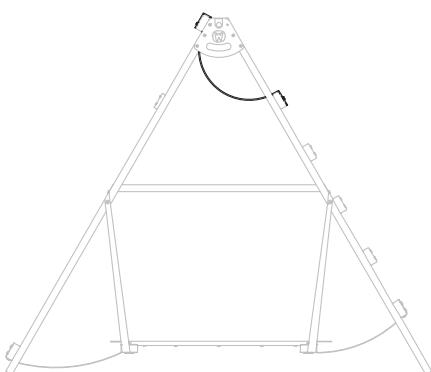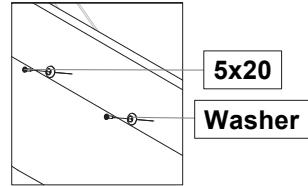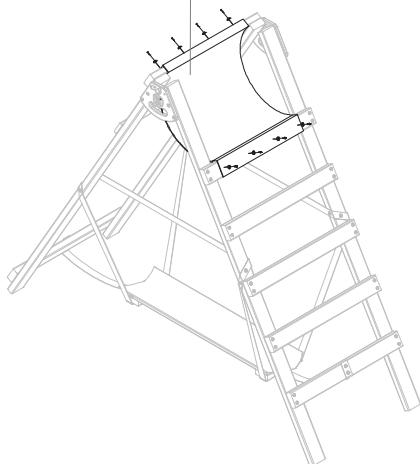

Grips



2x


M6X40




4x

17



Surfswing



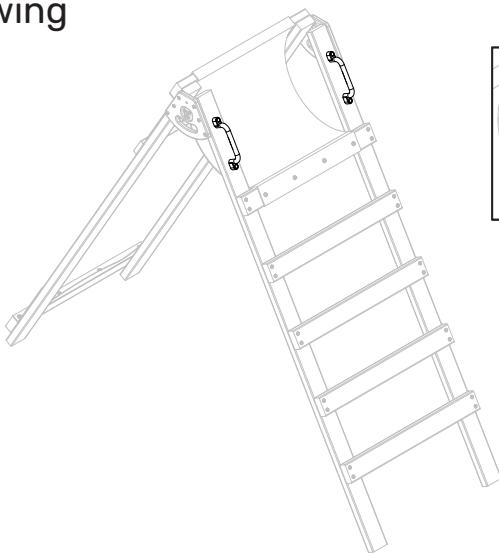


M6X40




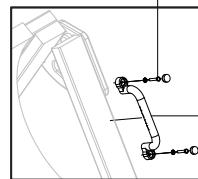


Hand Grip

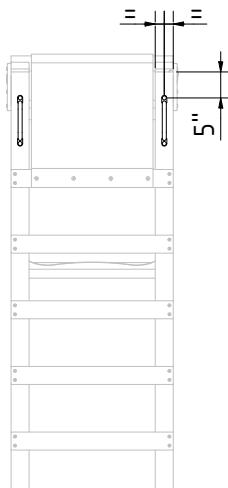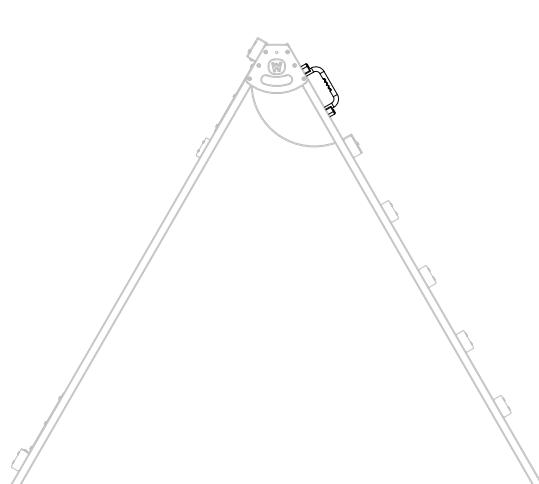

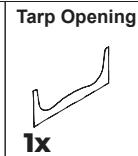

18 Surfswing

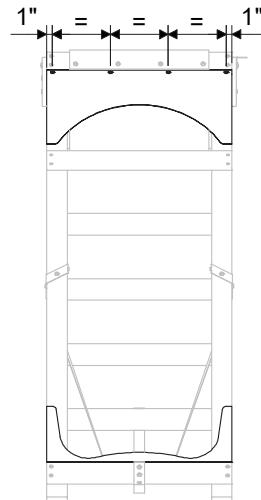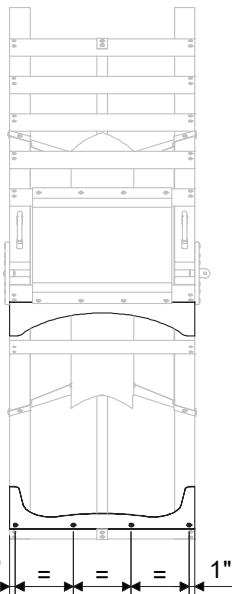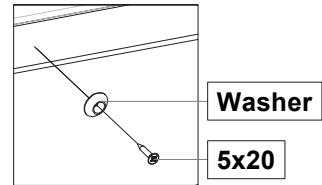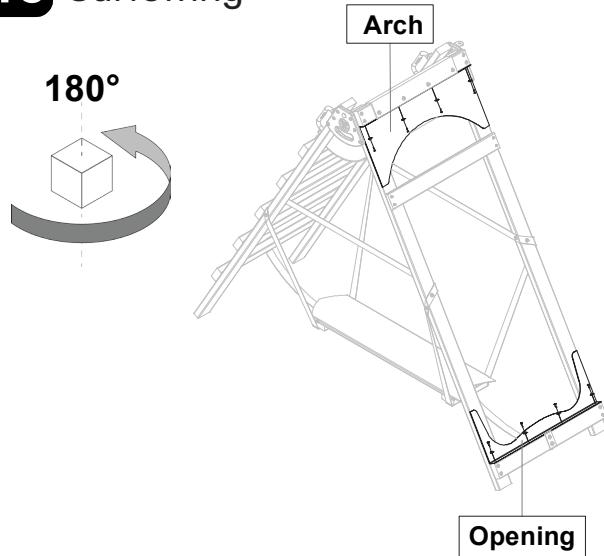

5x20
PZ 2




12x

Washer





12x

19 Surfswing

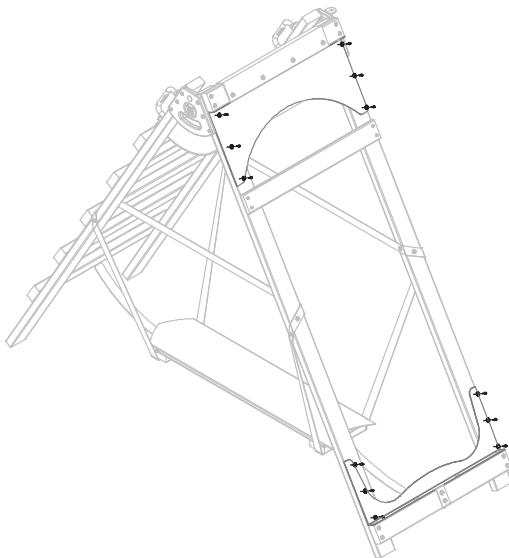

5x20

Washer

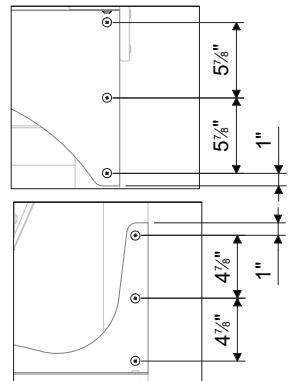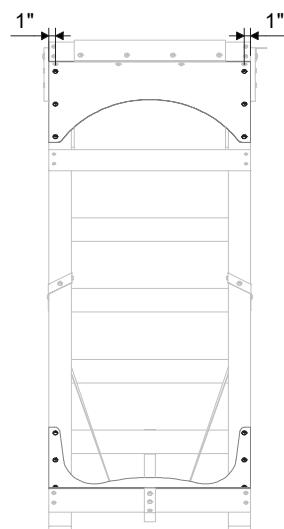

Notes

Inspection and Maintenance report

Date of inspection	Defect	Eliminated



Wickey Corporation
4001 Calhoun Ave Chattanooga, TN 37407

+17042471104
wickey.com

© WICKY Corporation