

8.1.1 VNC Installation and Connection

1. Getting Ready

1.1 Hardware Preparation


A laptop is required. If you're using a desktop computer, please ensure you have a wireless network adapter that supports the 5GHz frequency band.

1.2 VNC Remote Tool Installation


VNC is a graphical remote control software that allows you to operate your Raspberry Pi directly from your computer via the Wi-Fi hotspot created by the Raspberry Pi.

Follow the steps below to install VNC:


- 1) In the folder, double-click the **“VNC-Viewer-6.17.731-Windows”** file. When the dialog box appears, select **“English”** as the installation language and click **“OK”**.

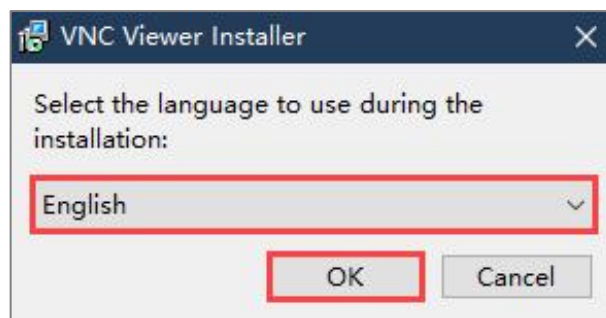


- 2) Click **“Next”** to proceed.

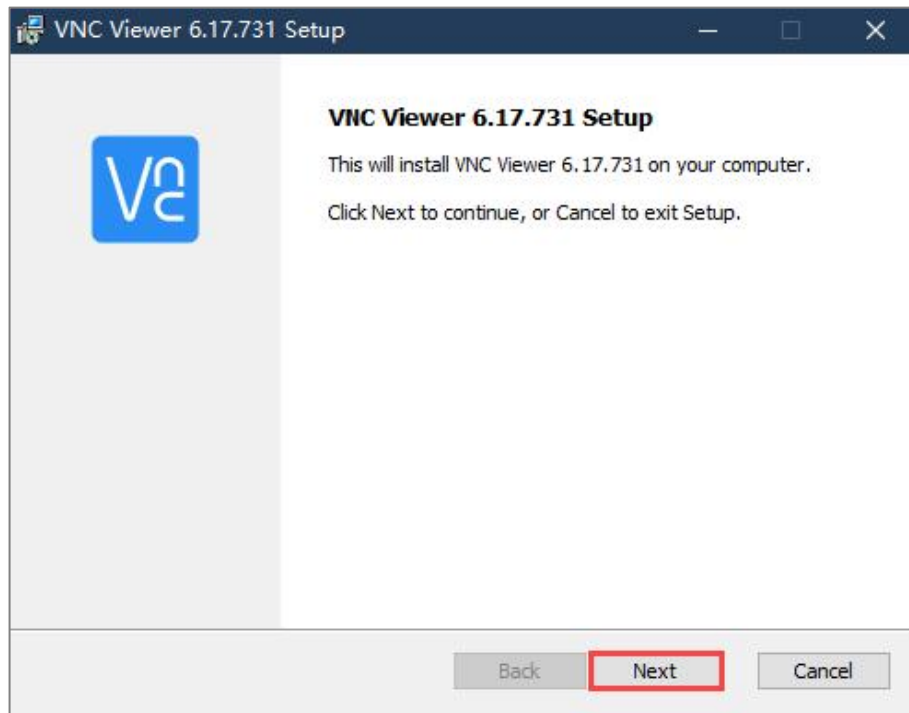


- 3) In the License Agreement window, select **“I accept the terms in the License Agreement”**, then click **“Next”**.

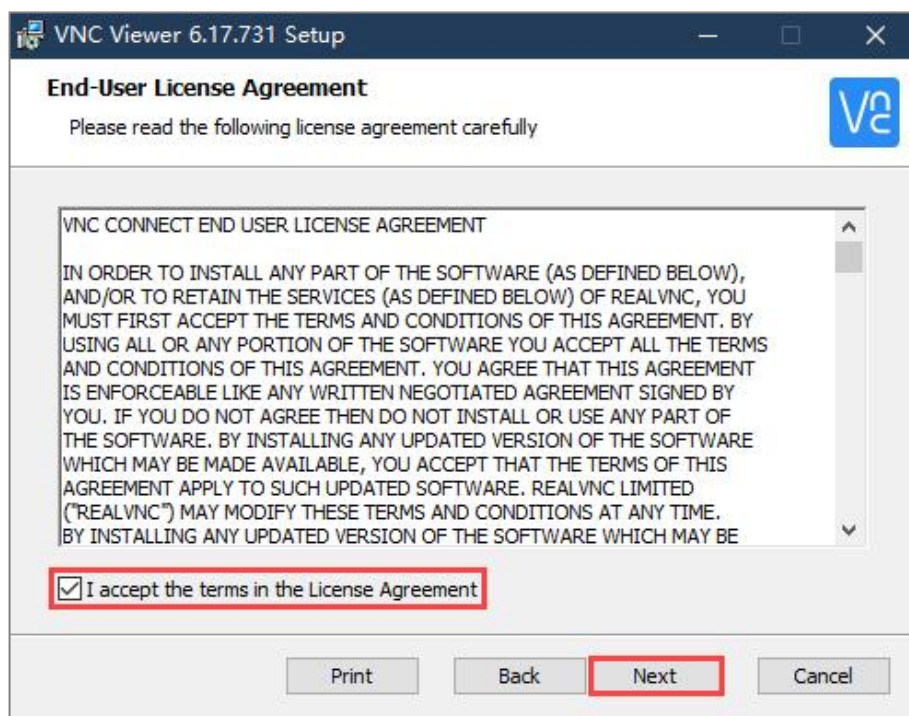

- 4) Keep the default installation location and click **“Next”**. When you are taken to the next screen, simply click **“Install”**.

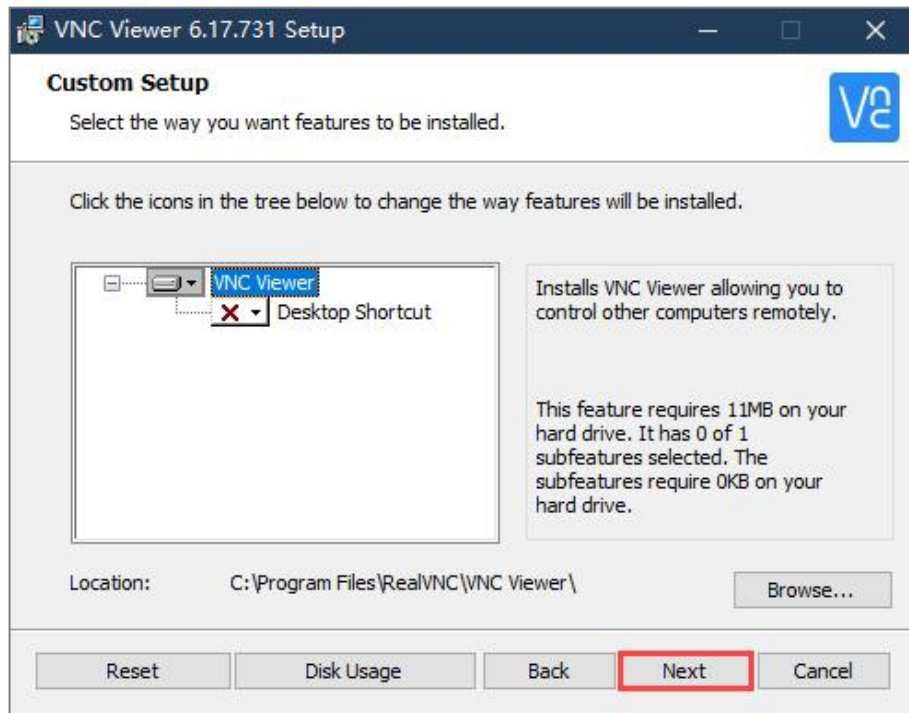

5) Once the installation is complete, click **“Finish”**.

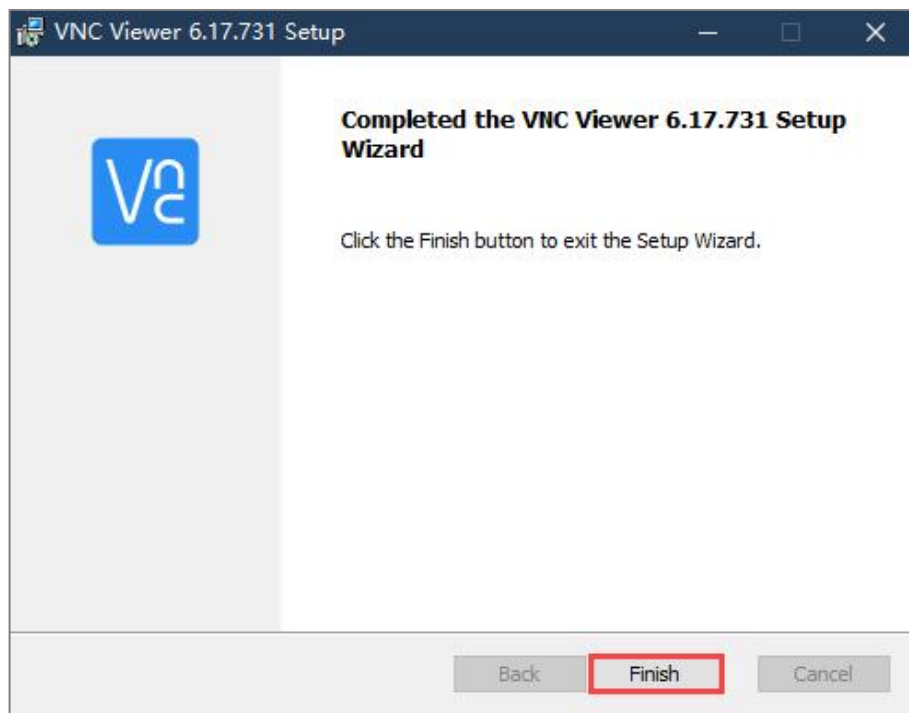

6) After the installation, double-click the VNC Viewer icon  to open the program and begin connecting.

1.3 Turn on Device

After connecting the power adapter, please turn on the Raspberry Pi expansion board. The LED1 indicator will light up first, followed by a sound from the buzzer, indicating that the robot has successfully powered on.

2. Device Connection

1) After turning on, it is the AP direct connection mode by default, and Raspberry Pi will launch a hotspot starting with "HW". Please search for and connect to this hotspot on your computer, as shown below:




2) Click connection, input the password "hiwonder".




3) Enter the default IP address of the Raspberry Pi 192.168.149.1 in the


opened VNC Viewer, and then press "Enter". If the software warns that the connection is not safe, just click "Continue".

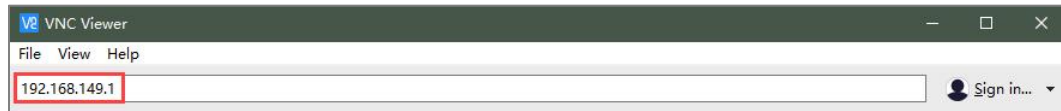

4) Enter the password "raspberrypi" in the pop-up prompt box (if it requires you to enter an account name, use "pi"), then check the "Remember password" box, and then click "OK". The Raspberry Pi's desktop will now display on your computer's monitor.

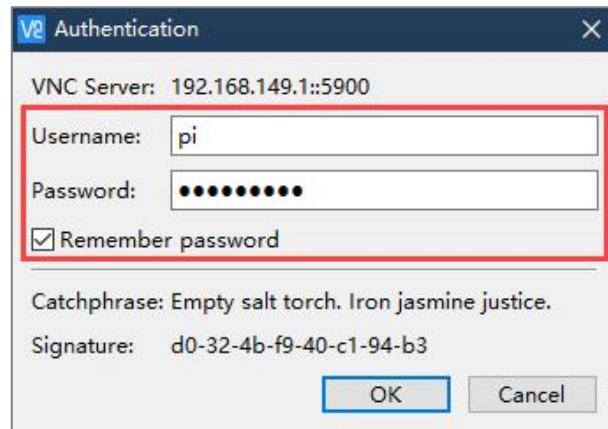


5) After entering the Raspberry Pi interface, a warning dialogue box will pop up (This is normal), click "OK" to close it (if a black screen occurs, please restart the Raspberry Pi).

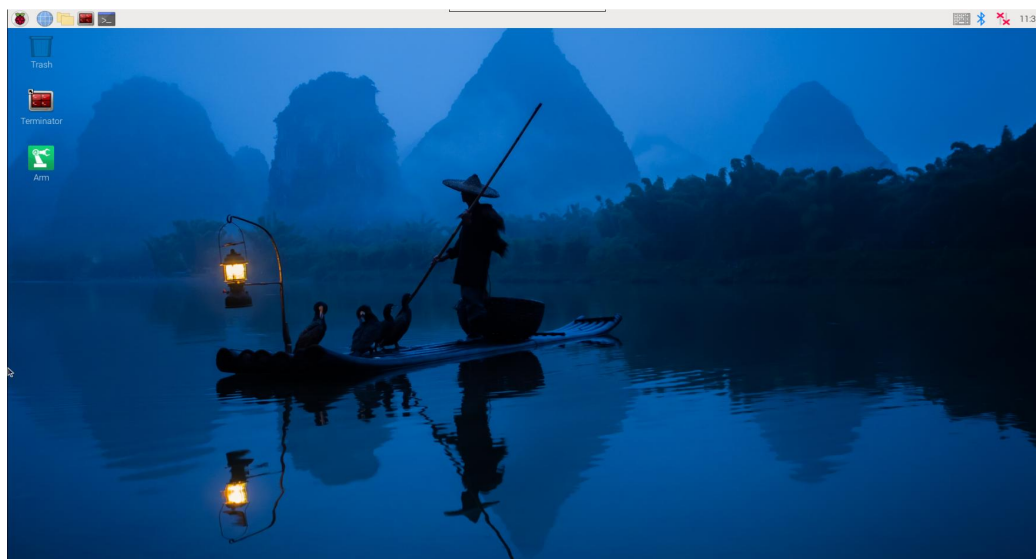


3. Interface Introduction


After successfully connecting to the MentorPi via VNC, the operating interface will appear as shown below:

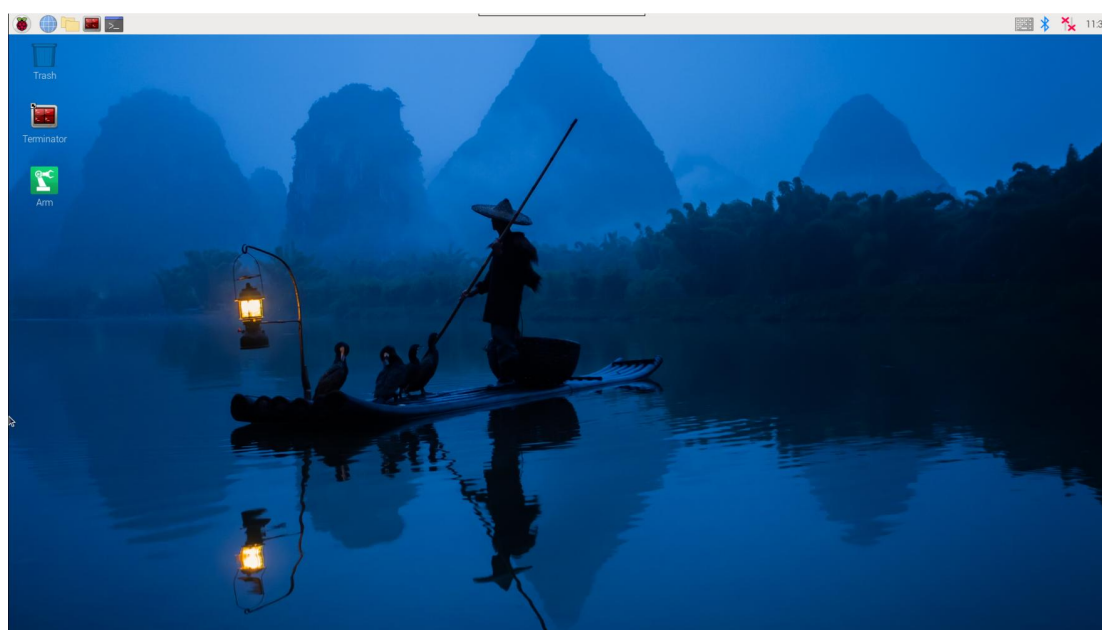

The following table provides an explanation of commonly used functions:

Icon	Function
------	----------

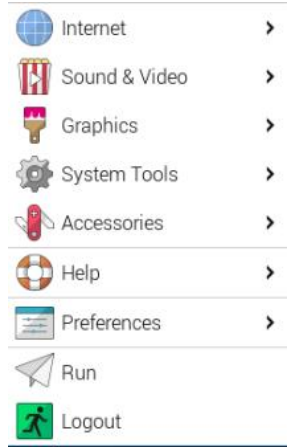	 Application menu. Click it to select different applications.
	Browser comes with the system.
	File management.
	LX terminal. Click it to open a command line terminal for entering commands.
	Trash can allows you to recover recently deleted files.
	PC software allows you to adjust the the position of the pan-tilt and color threshold.
	Click it to enable or disable full-screen display of the desktop.
	Exit full-screen mode.

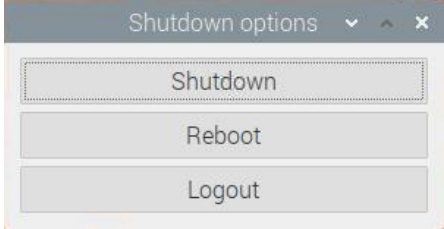	Power. Click it to shut down, restart, or log out of the system. 
---	--