


Robot Version Configuration Instruction

MentorPi offers multiple chassis options (Mecanum wheel or Ackermann steering) and different camera versions. If you need to switch between robot configurations or camera types, please follow the steps below:

- 1) Start the robot and connect it to the VNC. For detailed steps on setting up the connection, please refer to, please refer to "8. Remote Tool Installation and Container Access ->8.1 VNC Installation and Connection".
- 2) In the remote desktop, double-click the robot system configuration tool



. Then, click the "Execute" button to launch it.

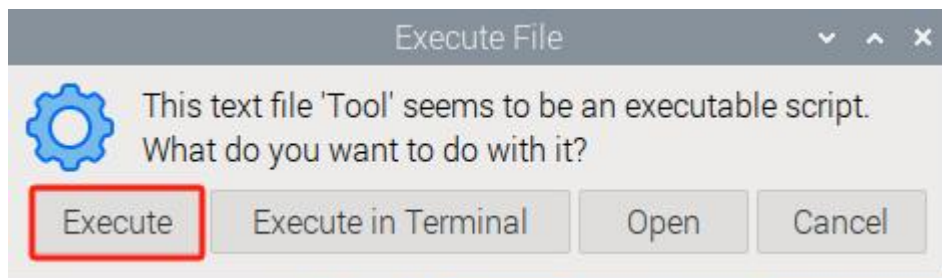

- 3) Select the appropriate camera type under the Camera Type dropdown:




- ① “ascamera” represents the 3D depth camera.
- ② “usb_cam” represents the 2D monocular camera.

4) Select the correct chassis type under the Machine Type dropdown:



- ① “MentorPi_Mecanum” represents the mecanum wheel chassis.
- ② “MentorPi_Acker” represents the Ackermann chassis.

5) Click the buttons in the following order: "Save" → "Apply" → "Quit". This sequence must be followed to successfully apply the new configuration.

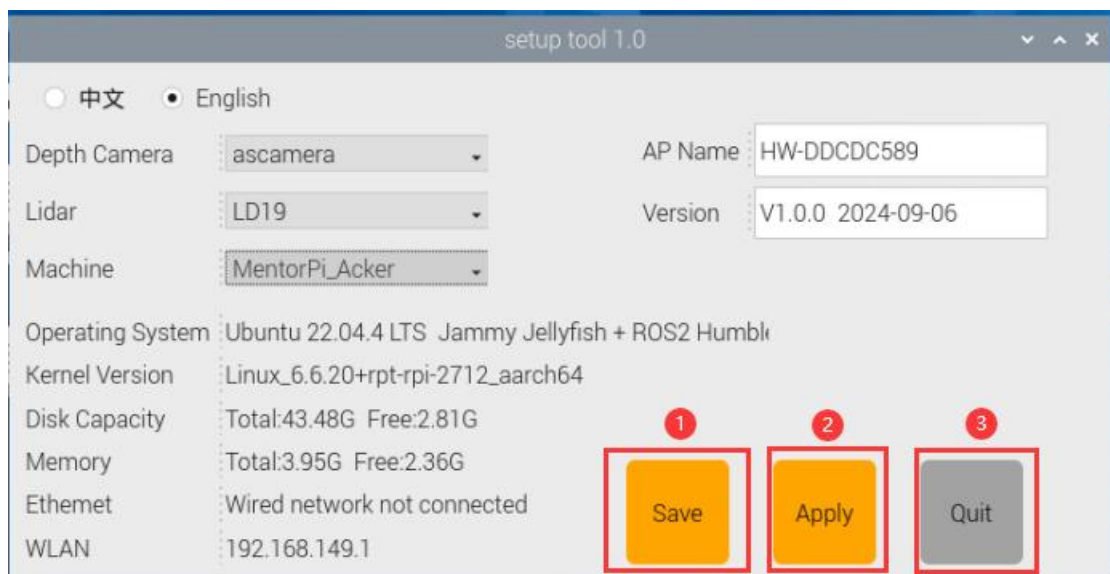

6) Wait for a beep sound from the buzzer, indicating that the chassis type has

been successfully updated. Then, open the terminal  or related tool to check the ROS2 system environment.