


Beat Machine Quick Start Guide

Connections

- Connect USB power and 3.5mm audio (headphone, mixer, or powered speaker)

Orientation

- There are two rings of buttons and LEDs – eight inner and sixteen outer.
- There are 8 dials.
- Inner buttons control the mode/state of the Beat Machine.
- Outer buttons are used for editing the 16 steps in a sequence or selecting parts, mute presets, and so on.

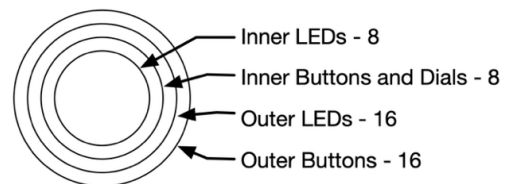

Play and Generate

- Click the PLAY button (next to inner Green LED) to start and stop.
- Hold the STUTTER button (next the inner Pink LED) to stutter the patterns
- Click the GENERATE button (next to inner Blue LED) to create a new pattern.
- Hold the SOUND button (next to inner Orange LED) *and* click GENERATE for a new set of sounds.
- Hold the SOUND button and click outer button 1 (near the top) to reset sounds.

Global Change Patterns

- | | |
|---|--|
| • Dial A (top) changes filter cutoff | • Dial E adds drive to the timbre |
| • Dial B changes pattern density | • Dial F changes the tempo |
| • Dial C evolves a pattern (ongoing minor but permanent changes) | • Dial G changes the pattern length |
| • Dial D introduces chaos to a pattern's playback order | • Dial H changes the volume |

Edit Patterns

- Double-click the SEQUENCE button to show the current part's pattern
- Press the outer button to turn on/off steps in the sequence.
- Change part by holding the PART button and pressing an outer button 1-8.
- Click SEQUENCE again to return to Global mode (so the global pattern changing options above are restored)