


Beat Machine Quick Start Guide

Connections

- Connect USB power and 3.5mm audio (headphones, mixer, or powered speaker)

Orientation

- There are two rings of buttons and LEDs – eight inner and sixteen outer.
- There are 8 dials.
- Inner buttons control the mode/state of the Beat Machine.
- Outer buttons are used for editing the 16 steps in a sequence or selecting parts, presets, muting, and so on.

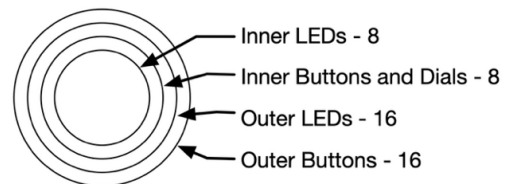

Play and Generate

- Click the PLAY button (next to inner Green LED) to start and stop.
- Hold the STUTTER button (next the inner Pink LED) to stutter the patterns
- Click the GENERATE button (next to inner Blue LED) to create a new pattern.
- Hold the SOUND button (near inner Orange LED) *and* click GENERATE for new sounds.
- Hold the SOUND button and click outer button 1 (near the top) to reset sounds.

Global Changes to Patterns

- Dial A (top) changes **filter cutoff**
- Dial B changes **pattern density**
- Dial C **evolves** a pattern (ongoing minor but permanent changes)
- Dial D introduces **chaos** to a pattern's playback order
- Dial E adds **drive** to the timbre
- Dial F changes the **tempo**
- Dial G changes the **pattern length**
- Dial H changes the **volume**

Edit Patterns by Part

- Double-click the SEQUENCE button to show the current part's pattern
- Press the outer button to turn on/off steps in the sequence.
- Change part by holding the PART button and pressing an outer button 1-8.
- Click SEQUENCE again to return to Global mode (so the global pattern changing options above are restored)

Don't Panic – If things get out of hand or something goes wrong, click the RESET button.

Access the full manual and other resources at: <https://github.com/algomusic/beatmachine>