## $\underline{INSPECT-PBEE}$ : $\underline{IN}$ elastic $\underline{S}$ eismic $\underline{P}$ erformance $\underline{E}$ valuation $\underline{C}$ omputational $\underline{T}$ ool- $\underline{P}$ erformance $\underline{B}$ ased $\underline{E}$ arthquake $\underline{E}$ ngineering


Copyright © 2018, Dr. Mohammad AlHamaydeh et al. All rights reserved.

## **Installation Instructions**


1. Download the installer file [INSPECT\_PBEE\_INSTALLER.exe] from the following link: https://github.com/alhamaydeh/INSPECT-PBEE/tree/master/bin


Copy and paste the link to your browser to download the file to your local hard drive.


- 2. Make sure that you uninstalled all previous versions of INSPECT, if applicable.
- 3. Run the installer by double-clicking on the file.
- 4. If you get any security warning that the file is downloaded from the internet click "Run." The following is an example of the security warning message that may appear; it may look slightly different depending on your OS or/and security programs installed.

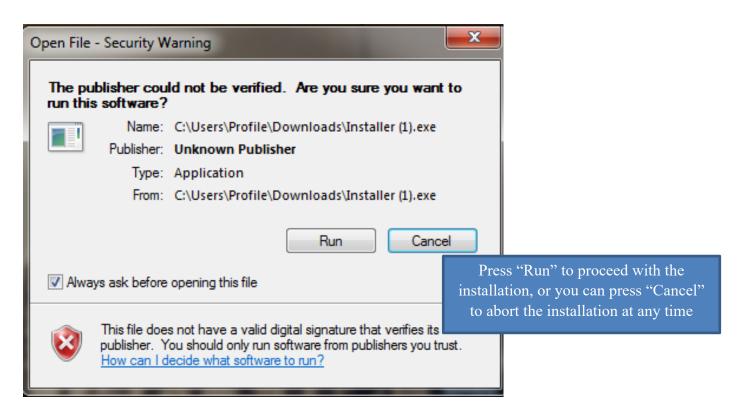



5. Follow the installation wizard:

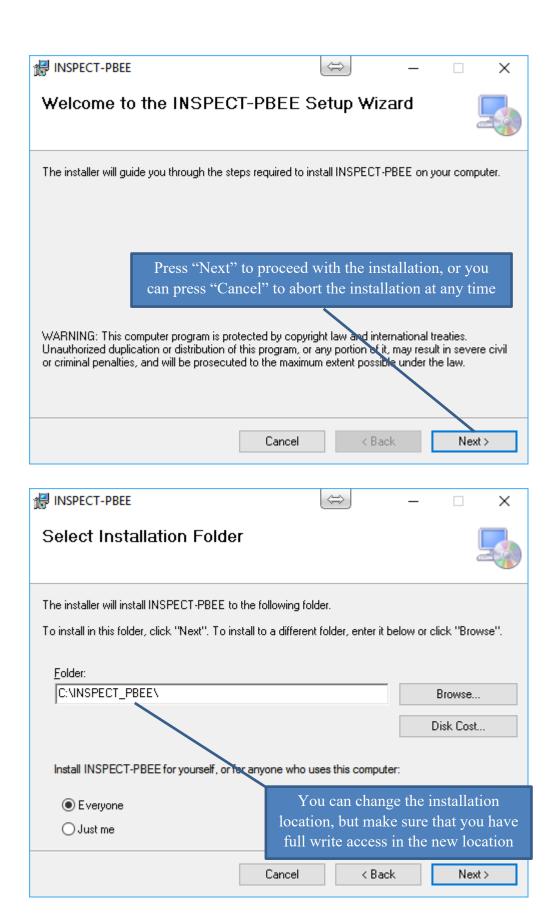

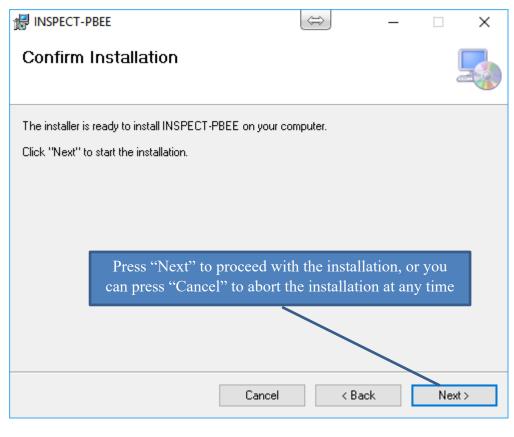

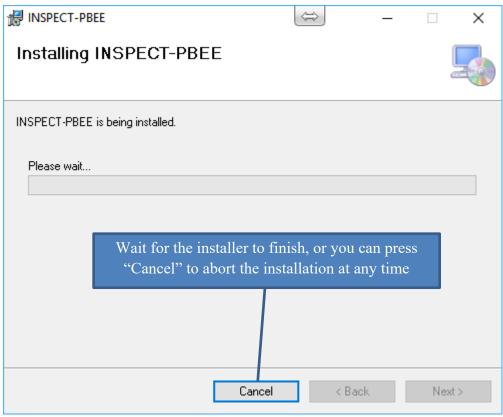


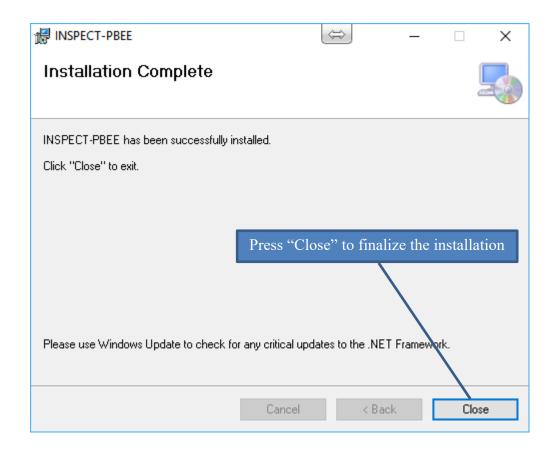

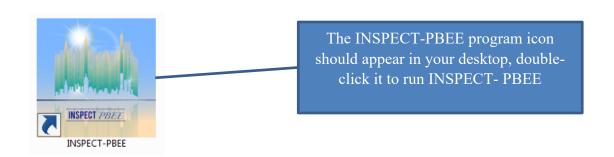


## **Initial Run Instructions**

- 1. Once INSPECT-PBEE installation is completed successfully, double-click on the INSPECT-PBEE icon to run it.
- 2. Upon first run, INSPECT-PBEE will display the IDARC-2D license agreement and disclaimers:

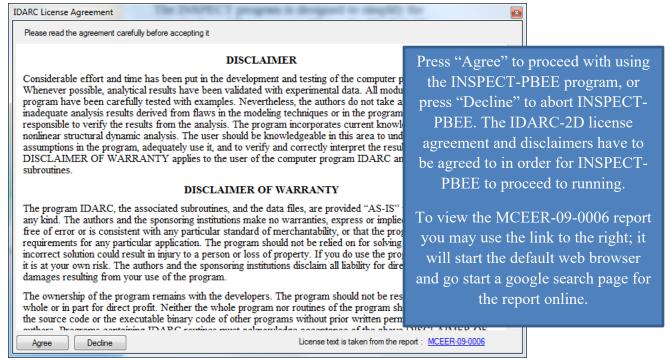

3. Upon accepting the IDARC-2D license and disclaimers, the INSPECT-PBEE license agreement is displayed:

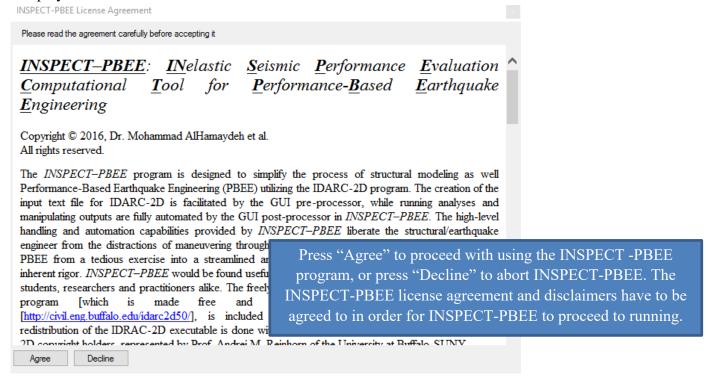

4. Once the IDARC-2D and INSPECT-PBEE agreements have been accepted, the user will not be promoted subsequently.