


ROCKER OUTER PANEL (CUT)

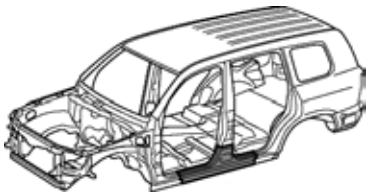

F29225A


Symbol meaning

△△ : Remove Weld Points S : Cut and Join Location

⚡ : Cut Location for Supply Parts

F29225B

REMOVAL

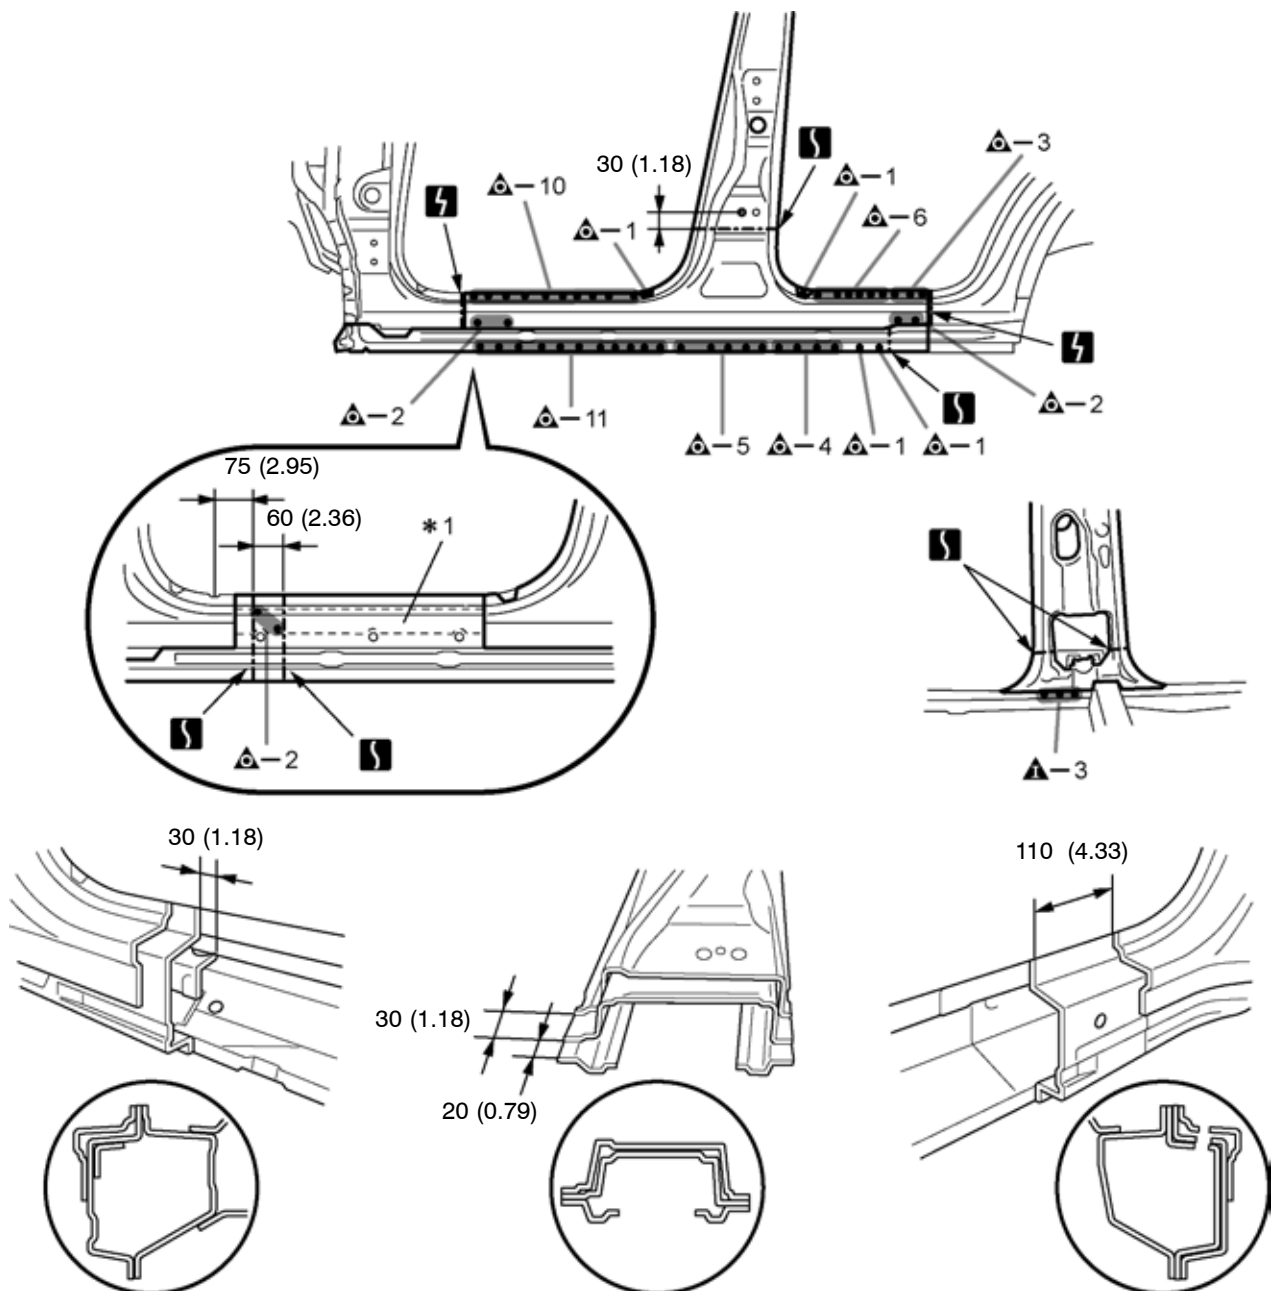

F29225

REMOVAL POINT


- 1 Carefully cut the rocker outer panel so not to damage *1.

Symbol meaning

△ : Remove Weld Points ○ : Spot Weld □ I : Plug Weld S : Cut and Join Location ■ : Butt Weld

F29226B


INSTALLATION

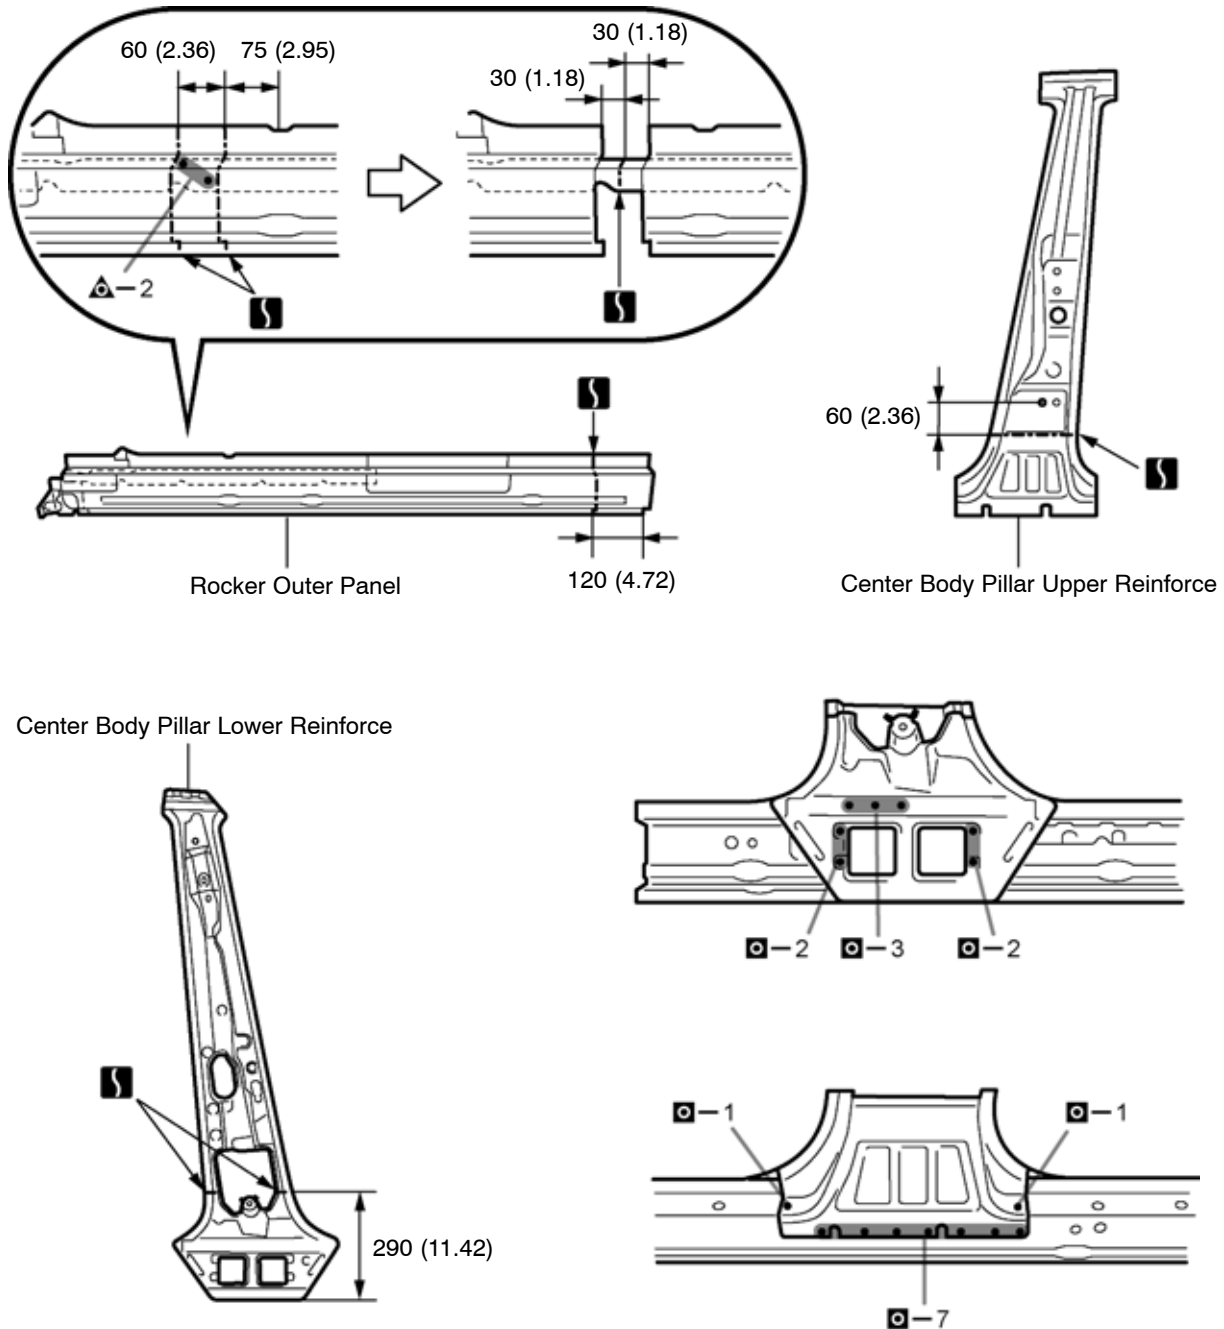

F29226

INSTALLATION POINT

- 1 Before temporarily installing the new parts, weld the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce with the standard number of welding points.

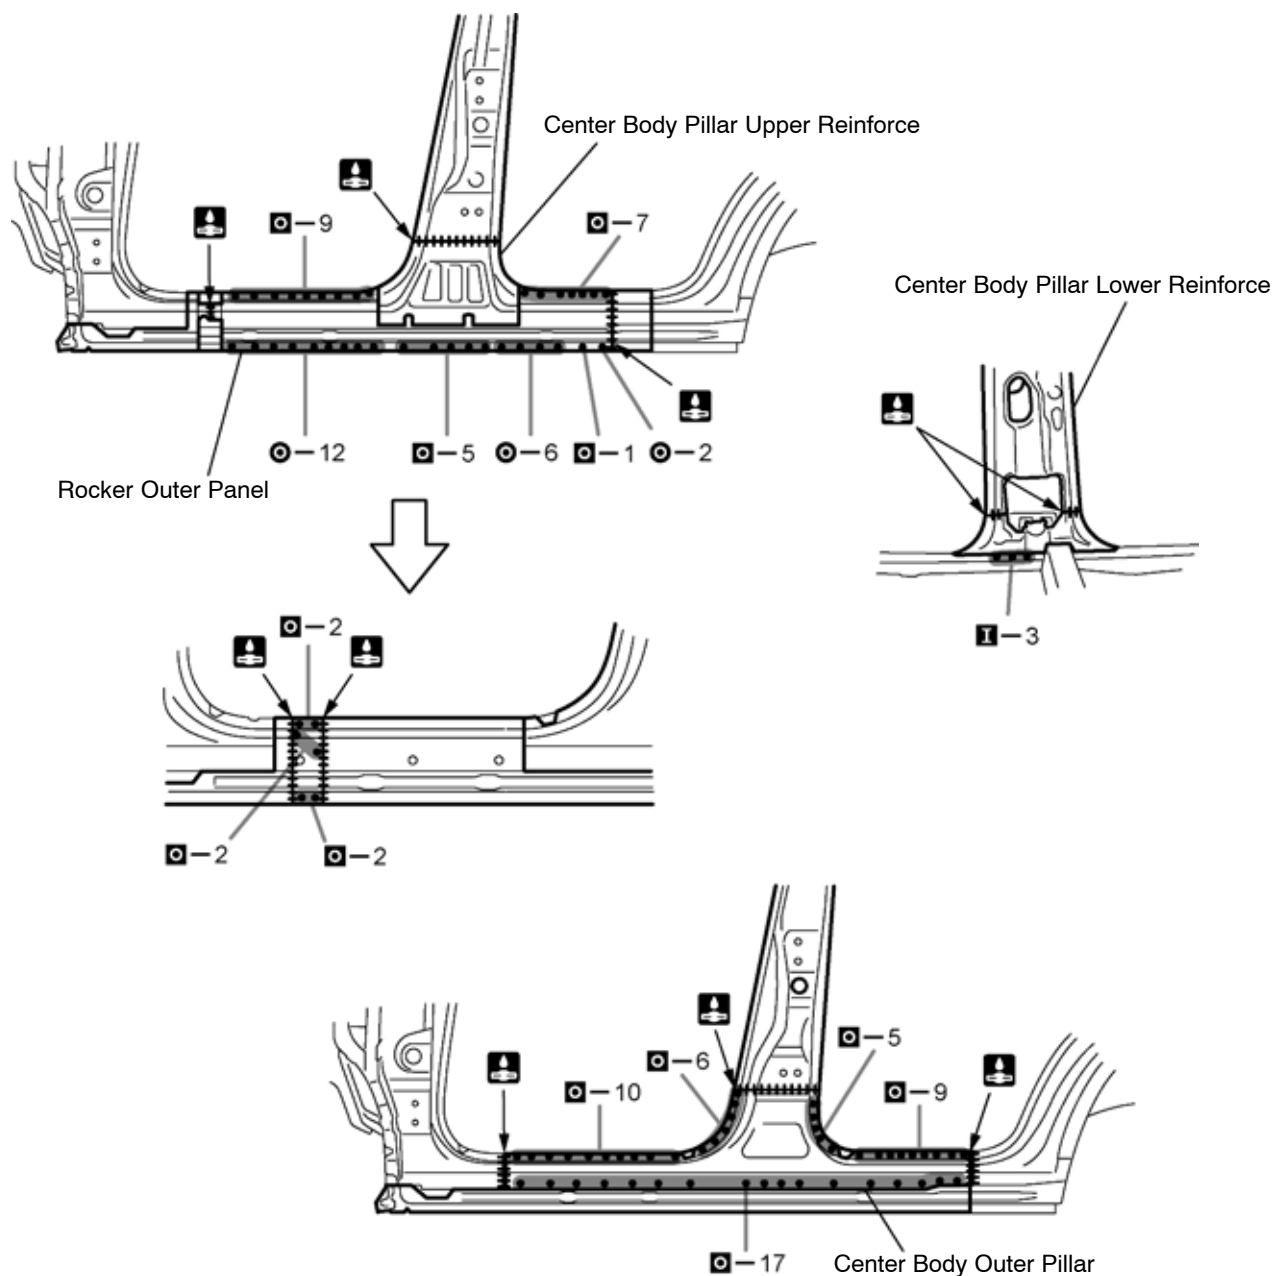

F29227

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.
- 4 After welding, apply the foamed sealing material to the corresponding parts. (See the paint-coating)
- 5 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.