

QUARTER PANEL (ASSY)






F29230A

Symbol meaning


- ▲ : Remove Weld Points  : Cut with Disc Sander etc.
 ⚡ : Cut Location for Supply Parts

F29230B


REMOVAL

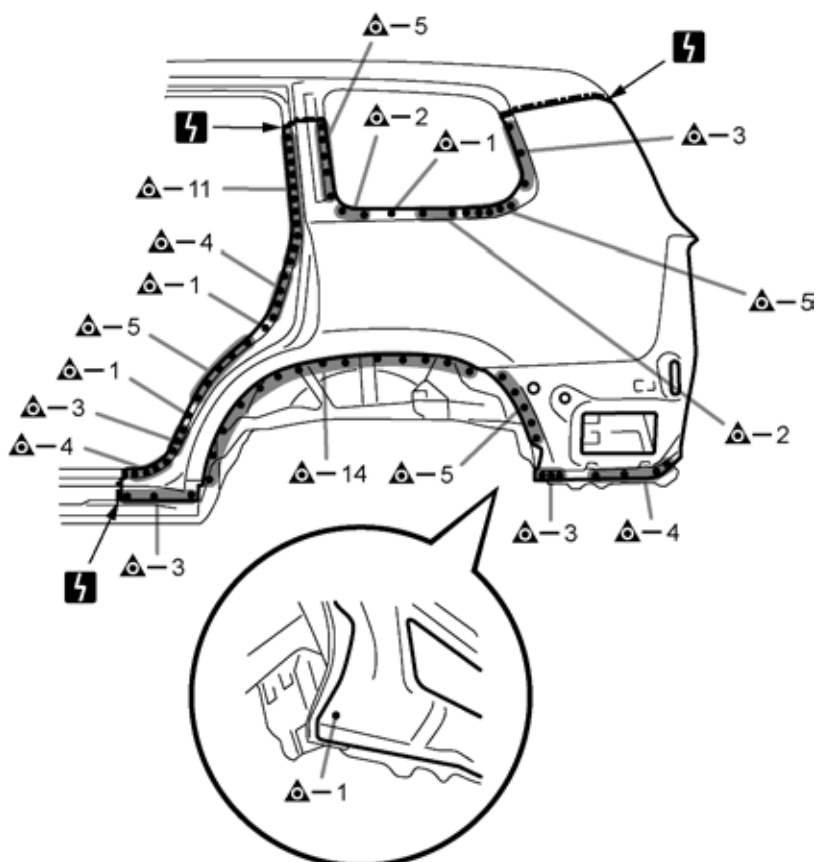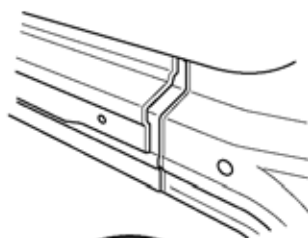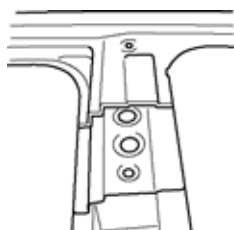


F29230

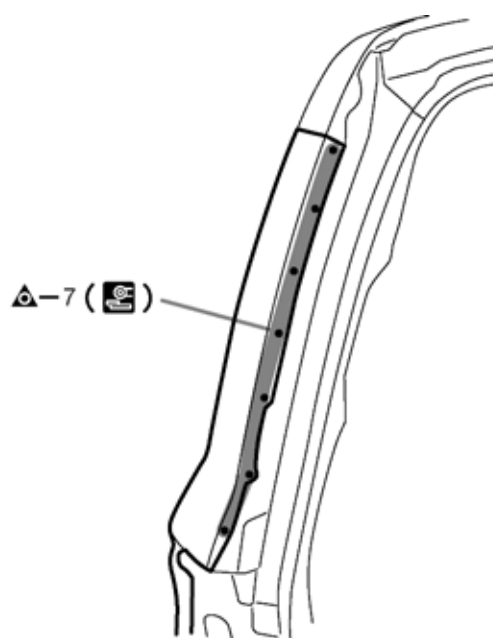

[LH]

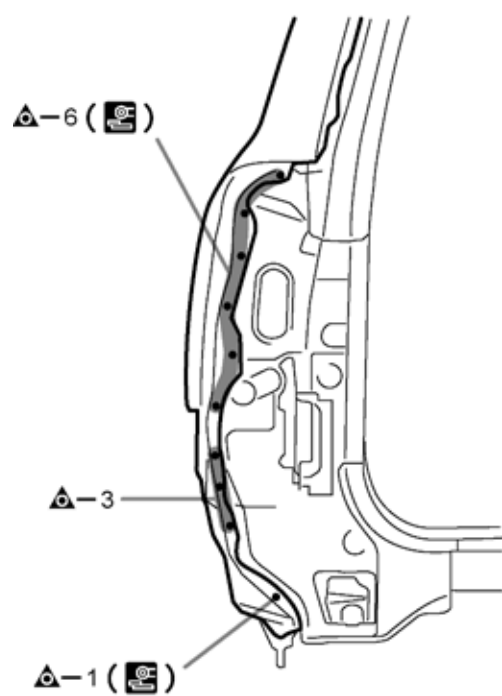

[RH]

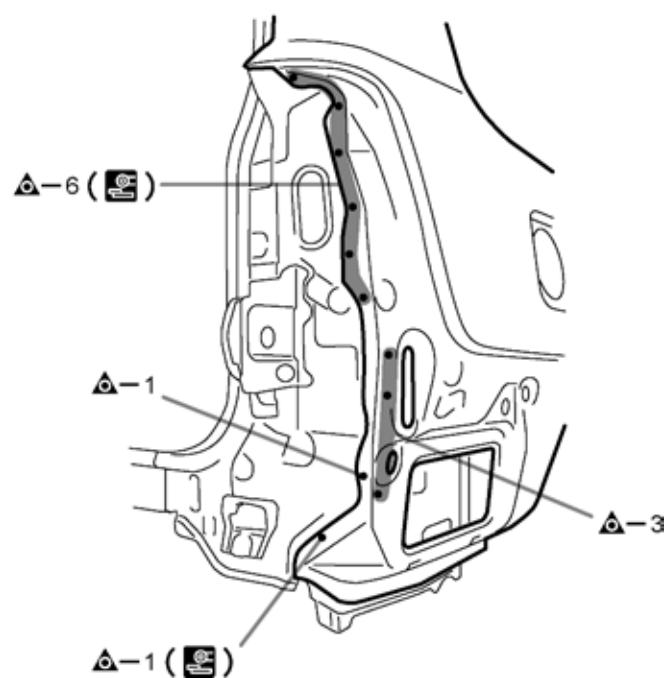


Symbol meaning

○ : Spot Weld □ : Plug Weld ■ : Butt Weld ▨ : Body Sealer

F29232B

INSTALLATION

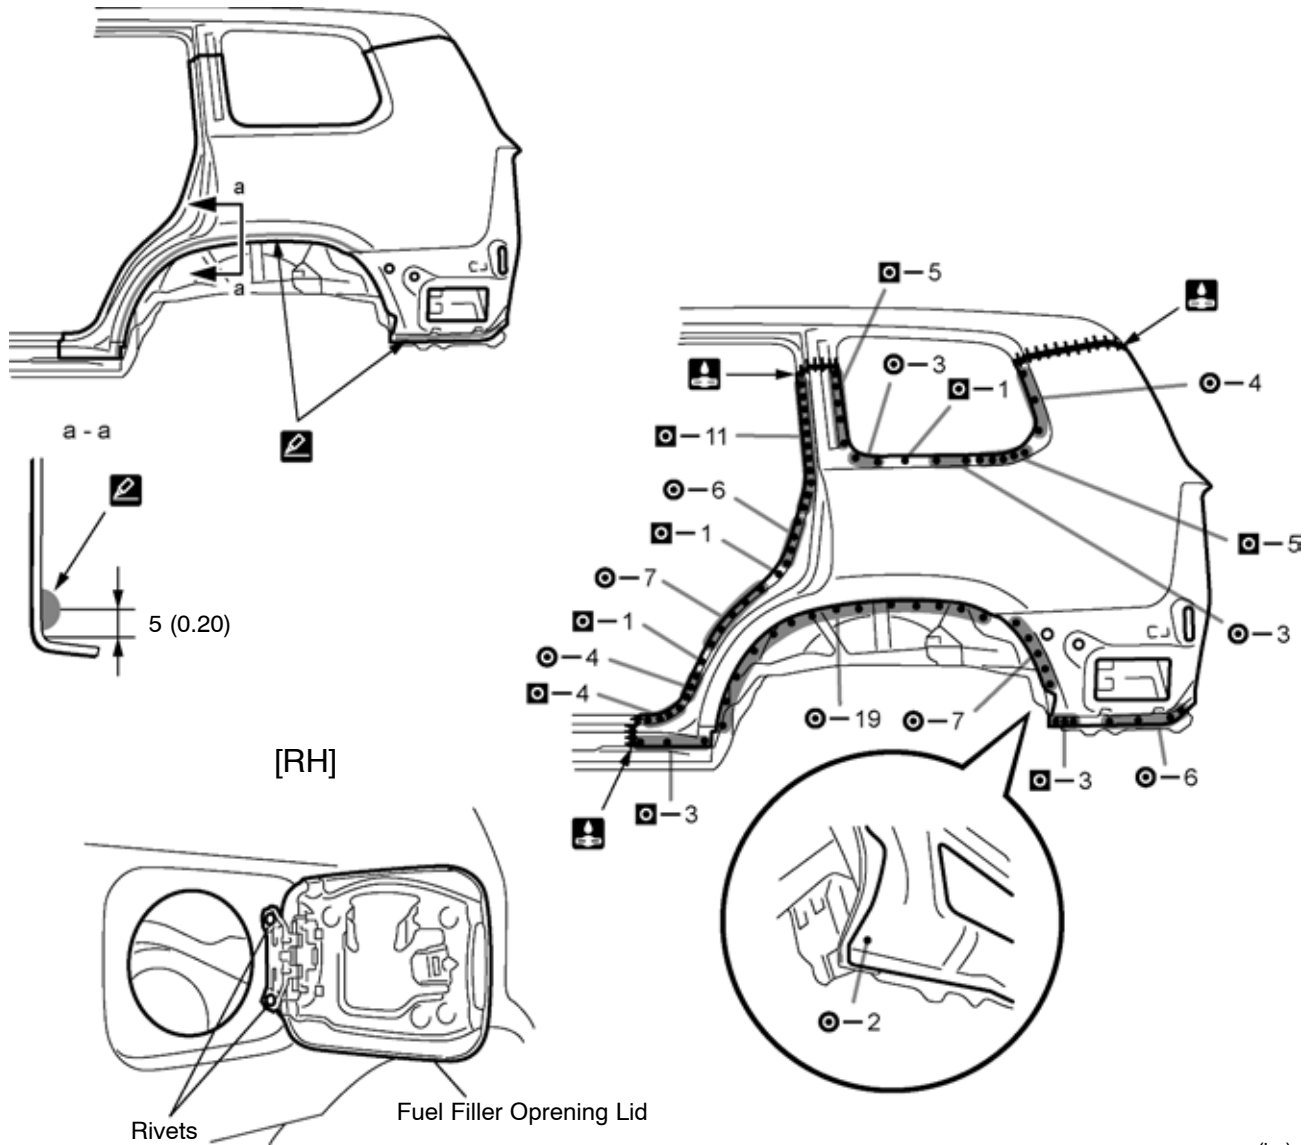

mm (in.)


F29232

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 Before installing a new part, apply body sealer.



HINT:

- Apply body sealer evenly about 5 mm (0.20 in.) from the flange, avoiding any oozing.
- Apply sealer evenly, about 3 – 4 mm (0.12 – 0.16 in.) in diameter.

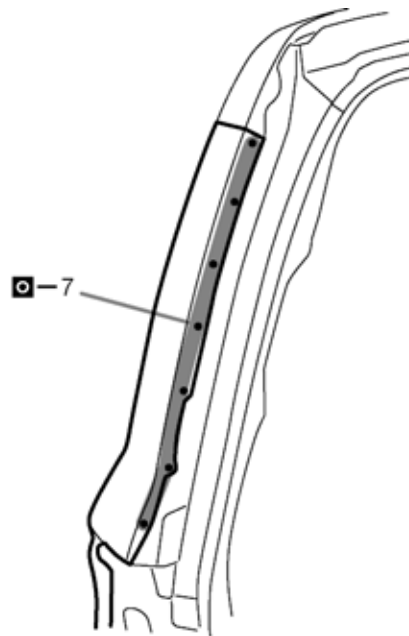

[LH]

[RH]

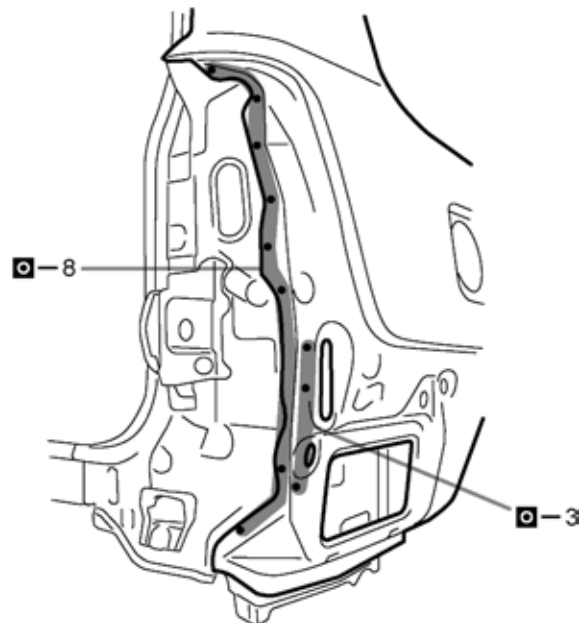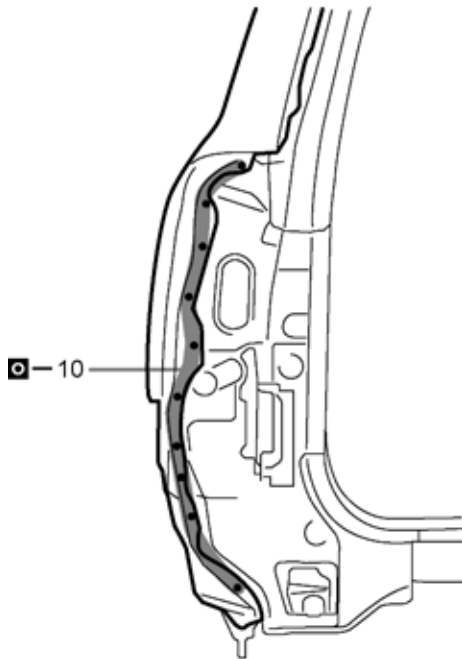

F29233

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply foamed sealing material to the corresponding parts. (See the paint coating)
- 4 After welding, apply body sealer to the corresponding parts. (See the paint coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.