

BODY LOWER BACK PANEL (ASSY)



F29243A

With the quarter panel front extension removed.


Symbol meaning

REMOVAL ▲ ▲ ▲ : Remove Weld Points S : Cut and Join Location

INSTALLATION I : Spot Weld O M I : Plug Weld B : Butt Weld

F29243B

REMOVAL-INSTALLATION

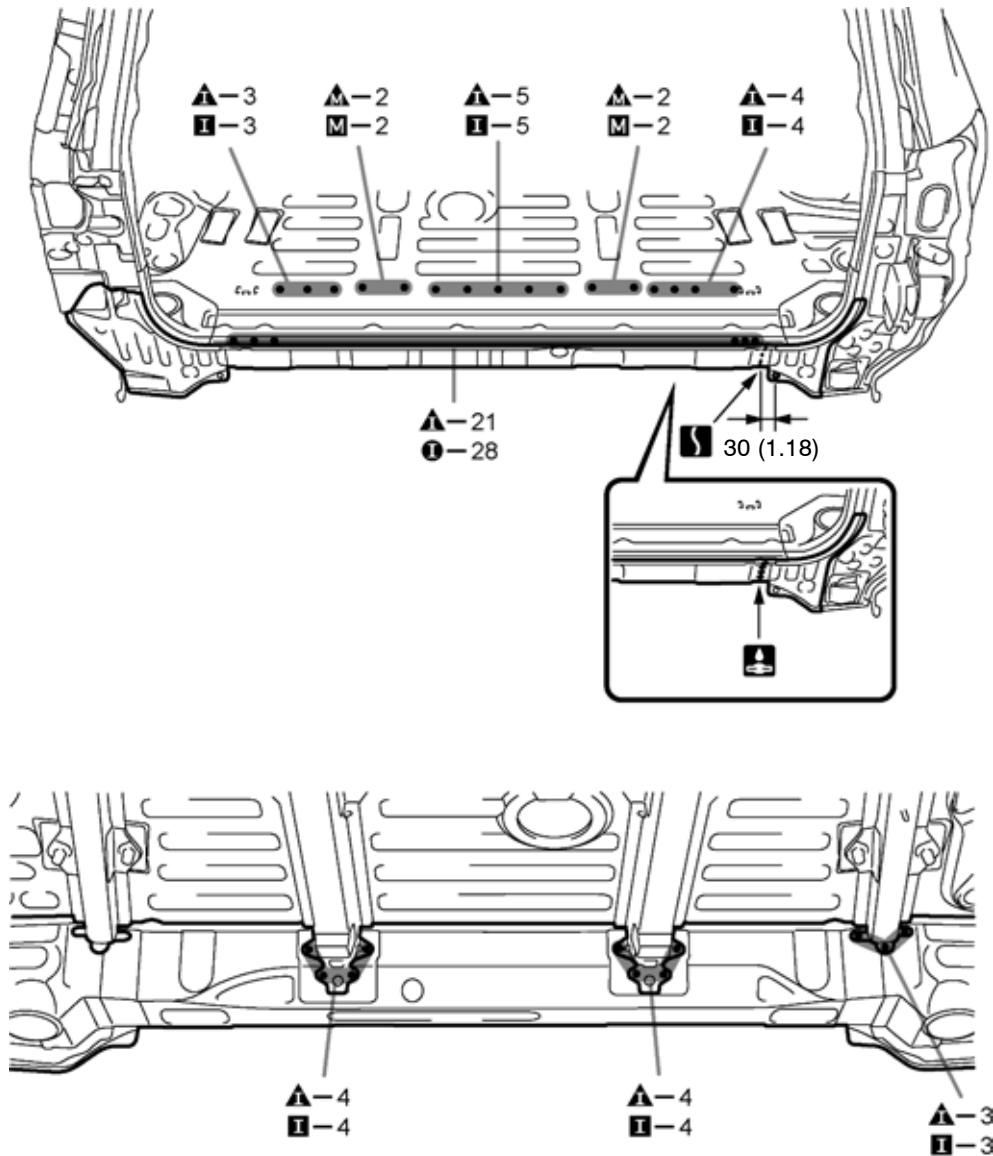

F29243

INSTALLATION POINT


- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

Symbol meaning

REMOVAL ▲ ▲ ▲ : Remove Weld Points S : Cut and Join Location

INSTALLATION I : Spot Weld O M I : Plug Weld B : Butt Weld

F29243B

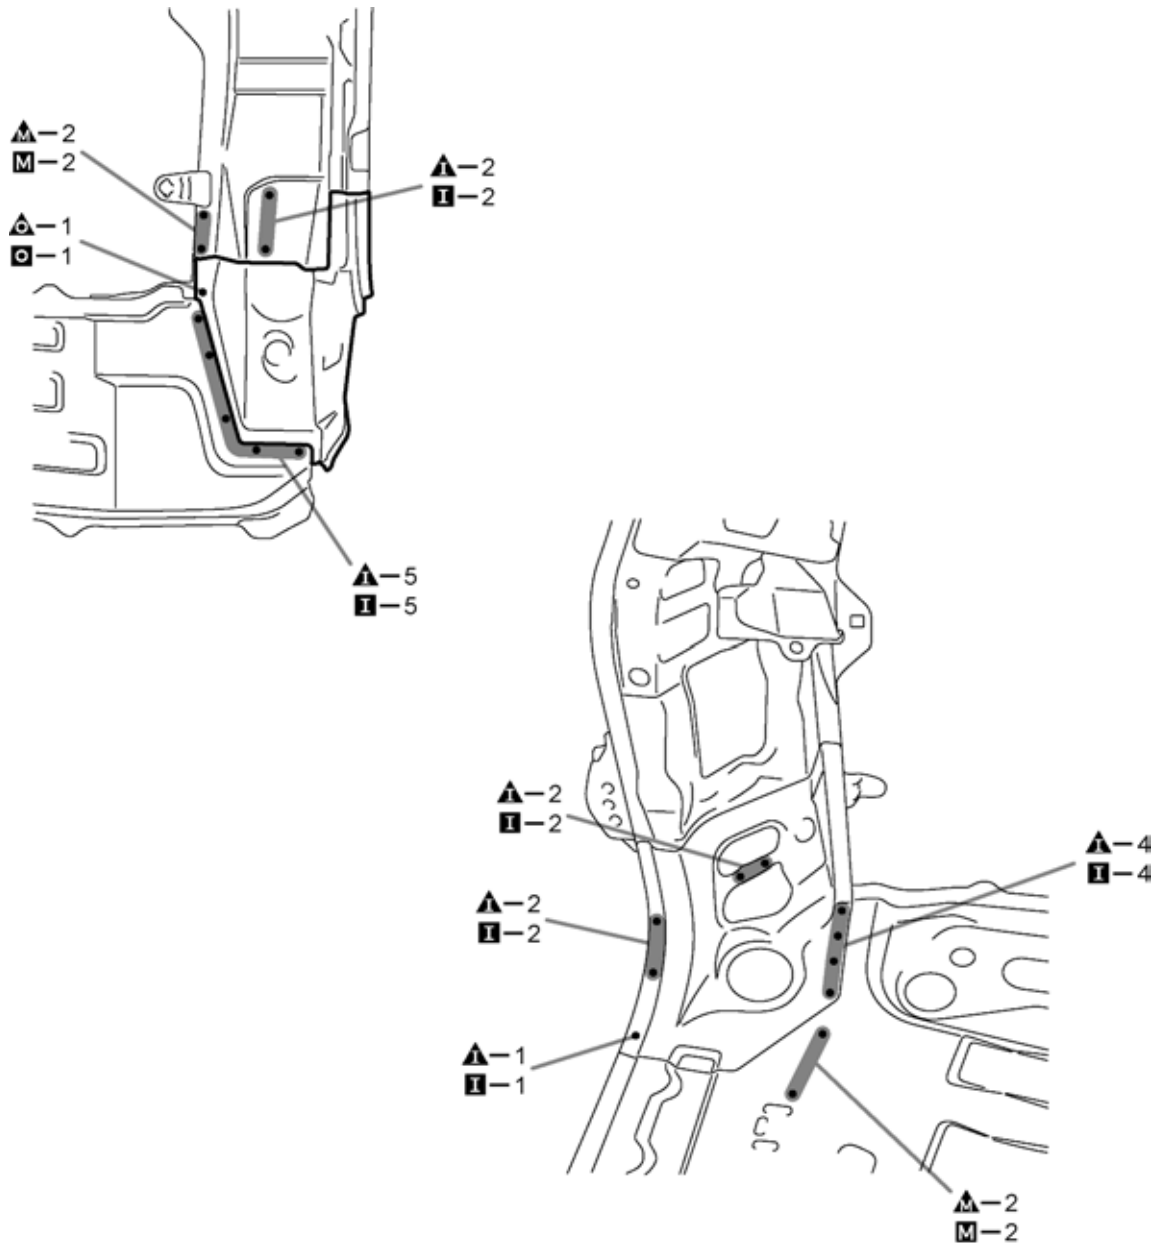

F29244

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.