


7. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION


- (1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.
- (2) When using an electric welder, first remove all airbags and seat belt pretensioners.
- (3) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear side airbag sensors, center airbag sensor, rear floor airbag sensor or seat position sensor, remove each sensor as necessary beforehand.
- (4) Do not allow the front airbag sensors, side airbag sensors, rear side airbag sensors, center airbag sensor, rear floor airbag sensor or seat position sensor to become heated to high temperatures.
- (5) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

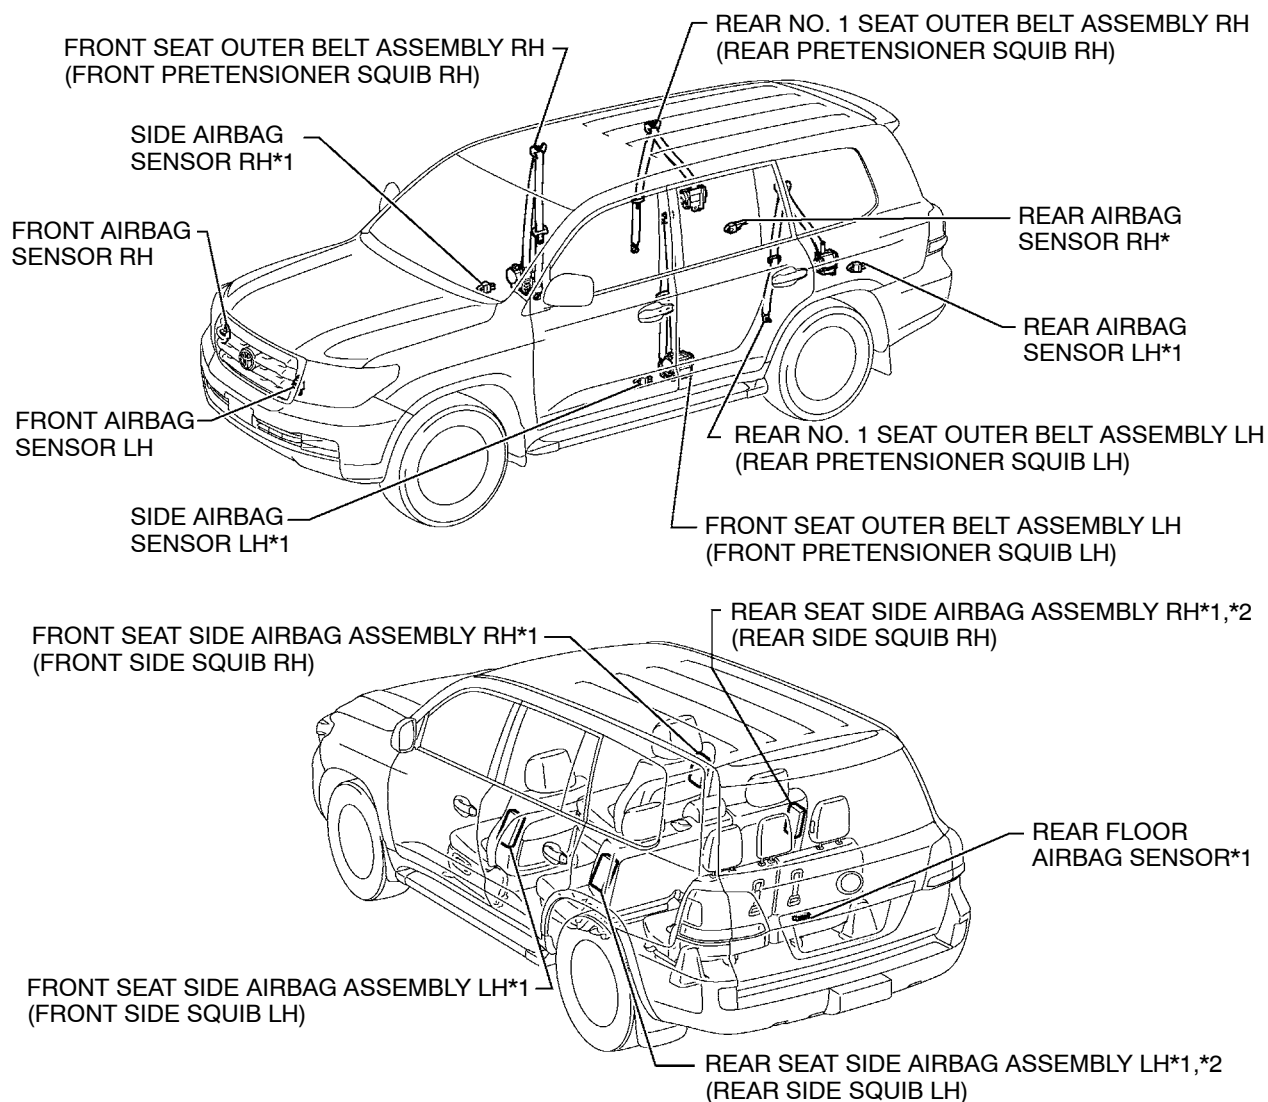


*1: except w/o Side Airbag

*2: w/ Rear Side Airbag

USA, Canada:

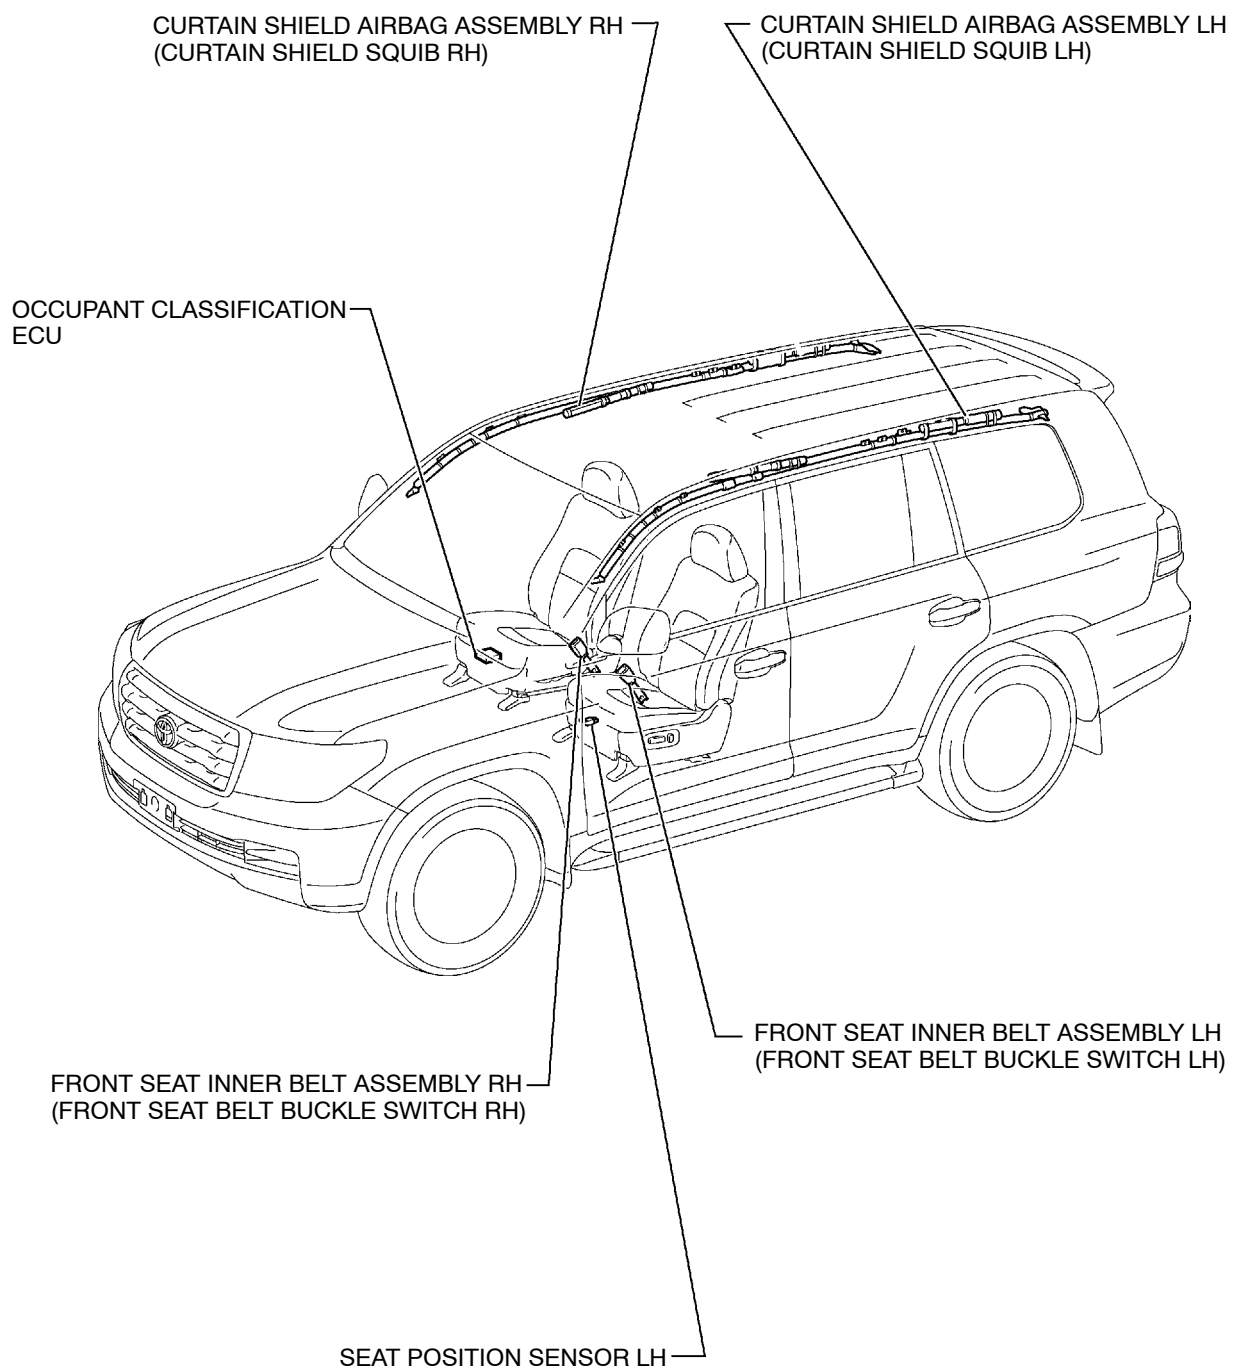


USA, Canada:

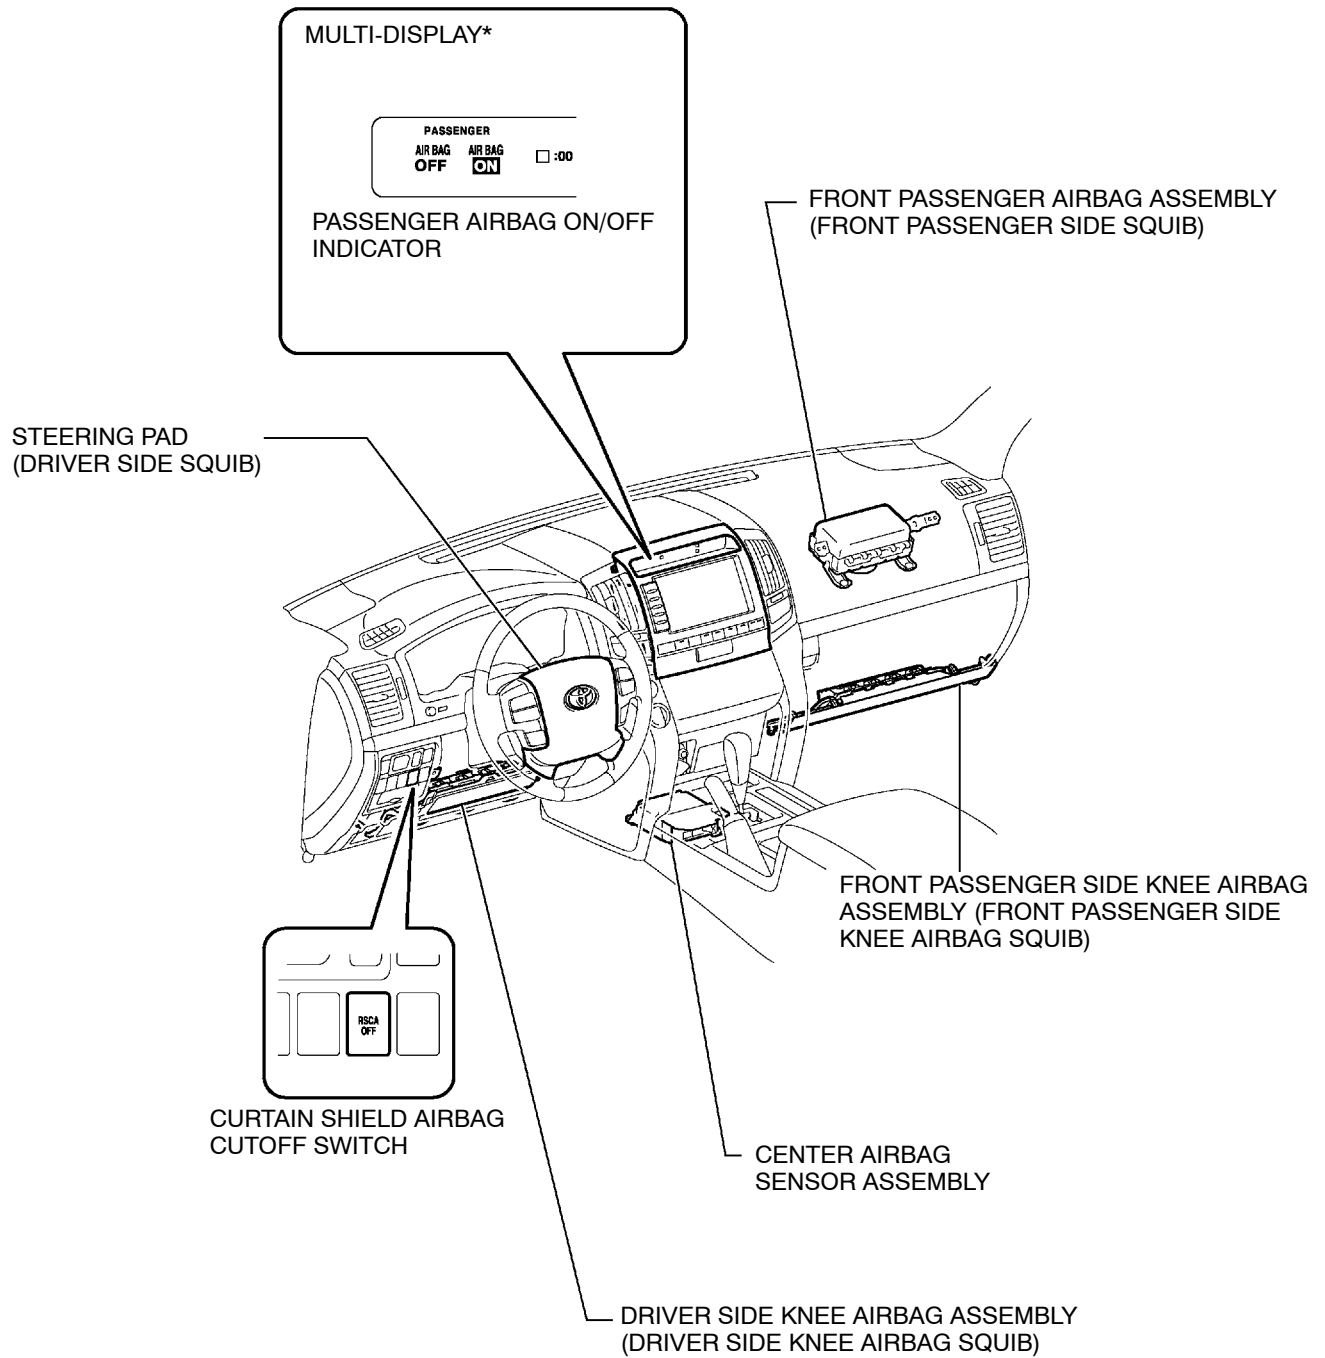



*: w/ Multi-display

USA, Canada:

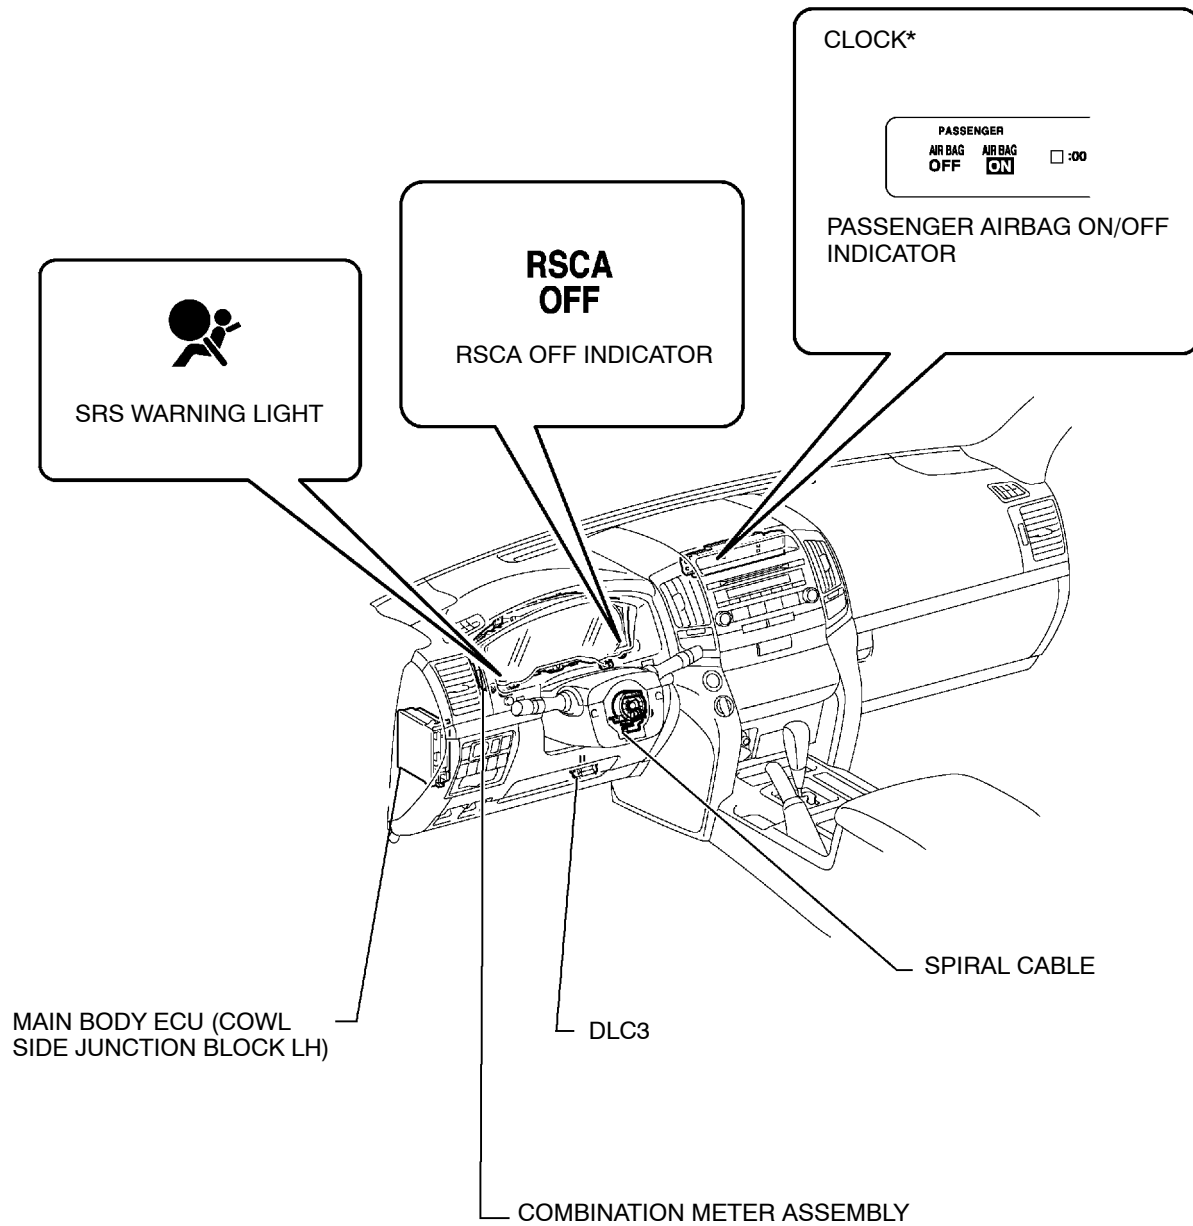

*: w/o Multi-display


Except USA, Canada:

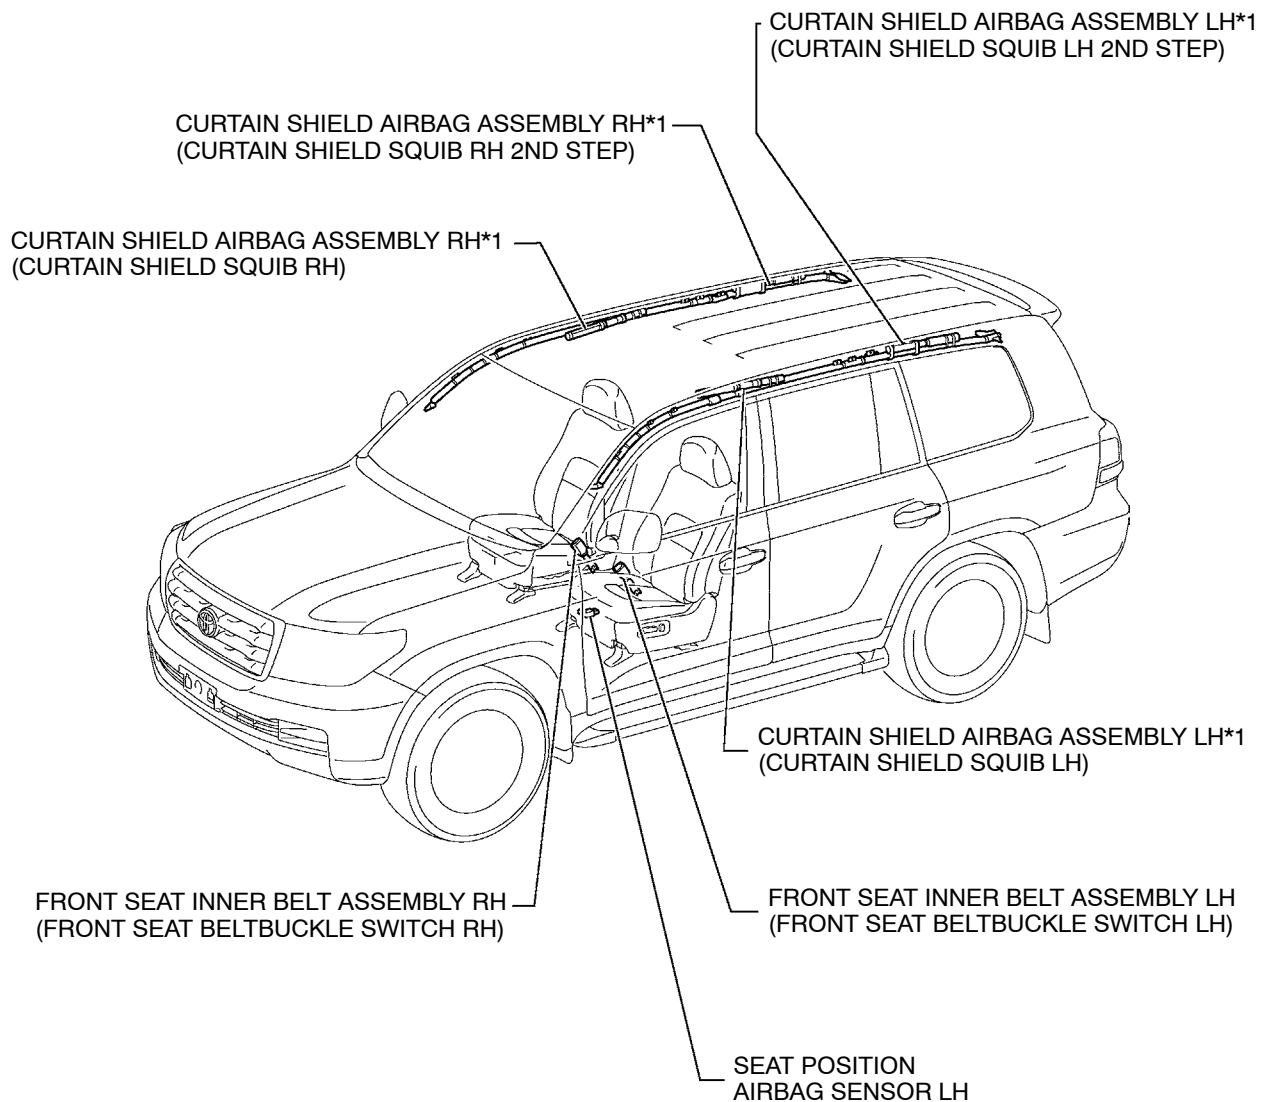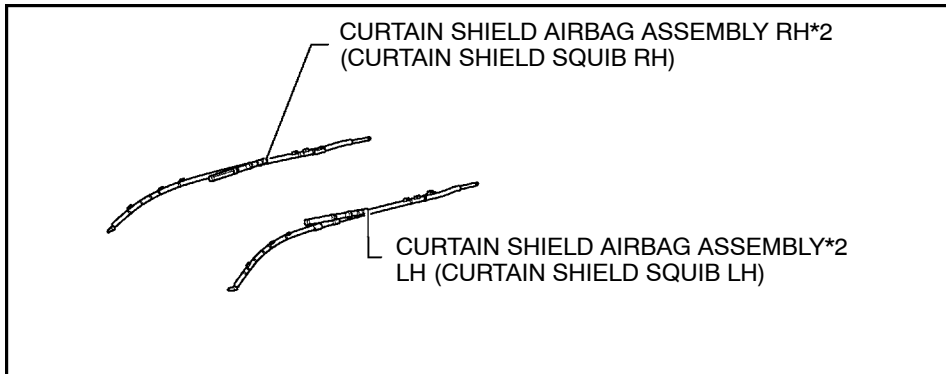

*1: w/ Side Airbag (w/ Rear No. 2 Seat)

*2: w/ Side Airbag (w/o Rear No. 2 Seat)

Except USA, Canada:

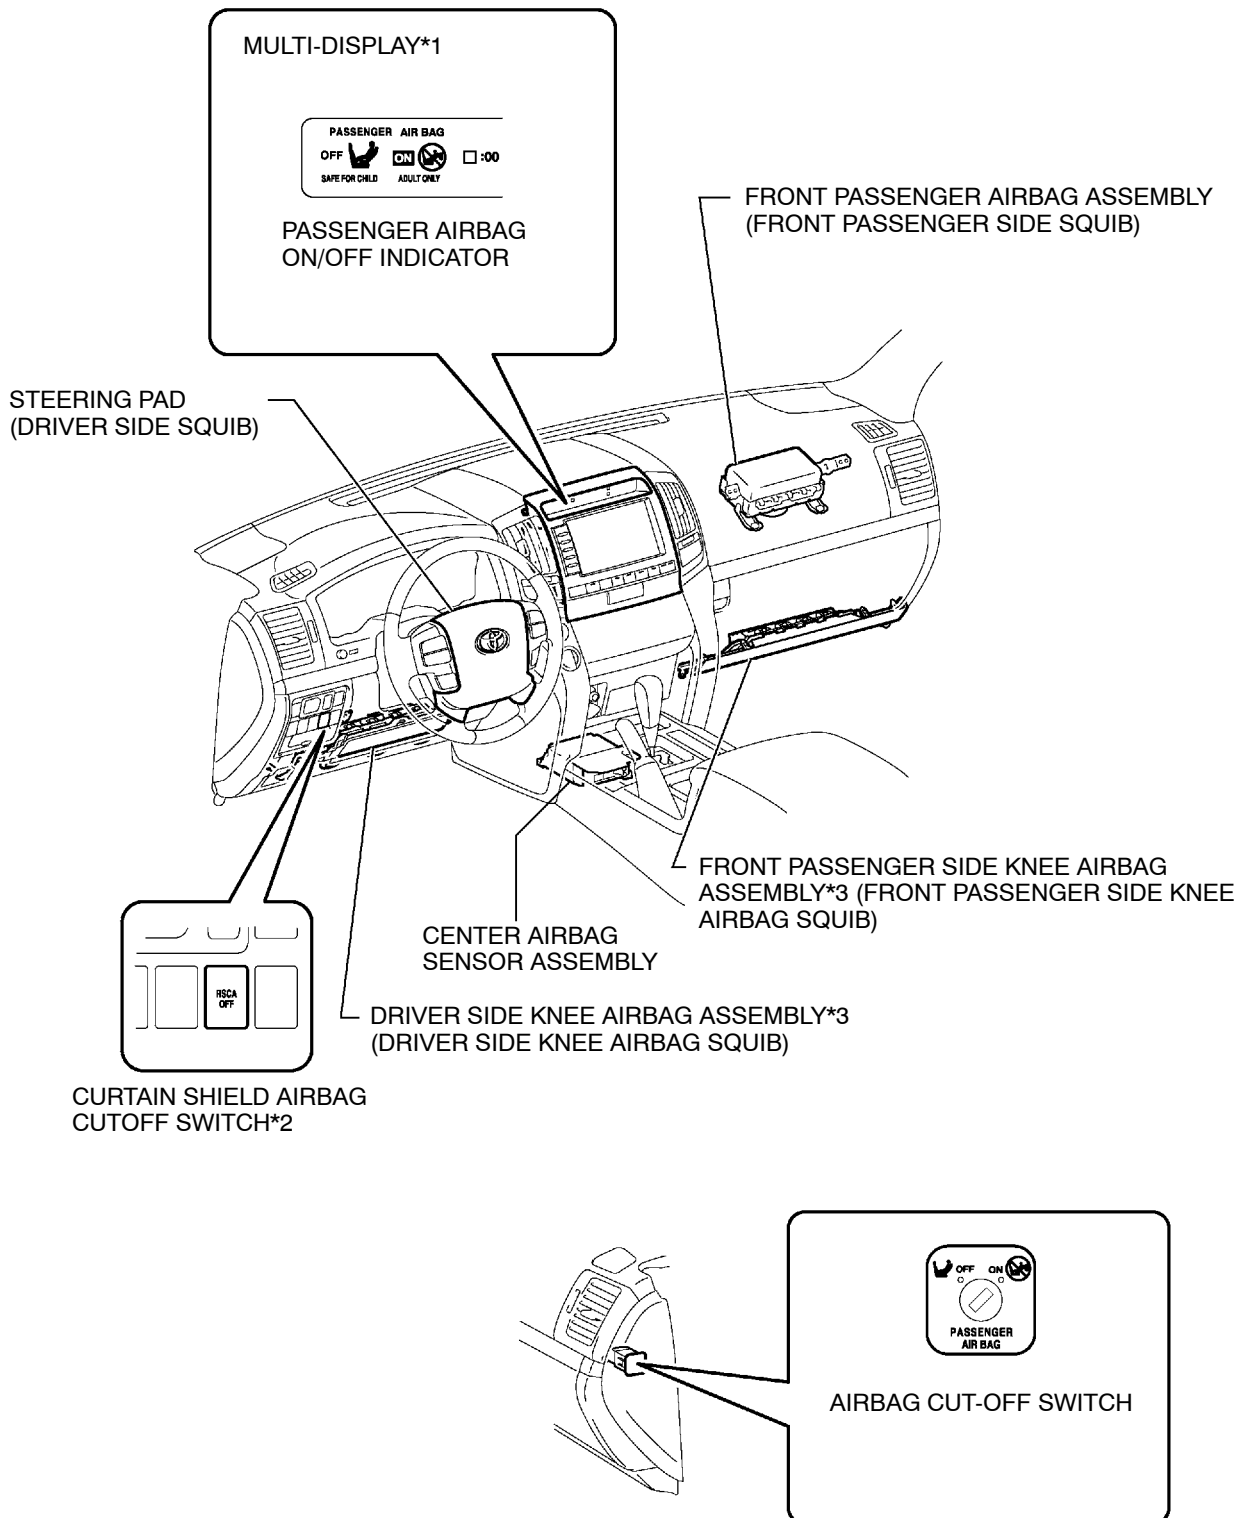

*1: w/ Multi-display


*2: w/ Side Airbag

*3: w/ Knee Airbag


Except USA, Canada:

for RHD:

MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)

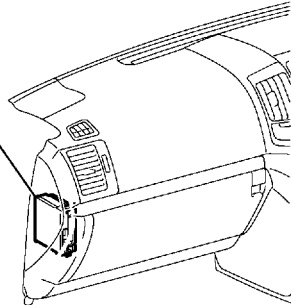


CLOCK*



PASSENGER AIRBAG
ON/OFF INDICATOR

MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)

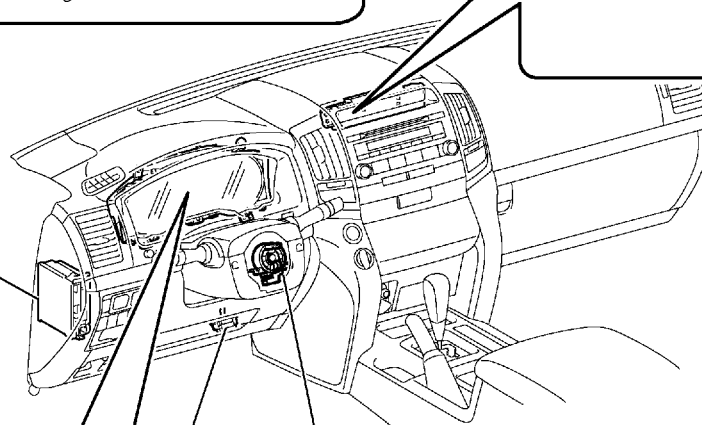


DLC3

SPIRAL CABLE

COMBINATION METER ASSEMBLY


w/ Multi-information Display:

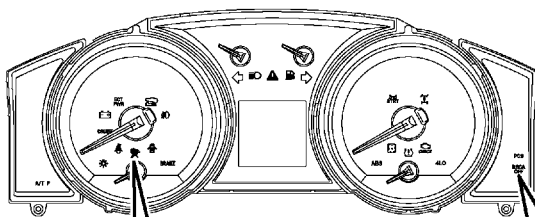

SRS WARNING LIGHT

RSCA
OFF

RSCA OFF INDICATOR

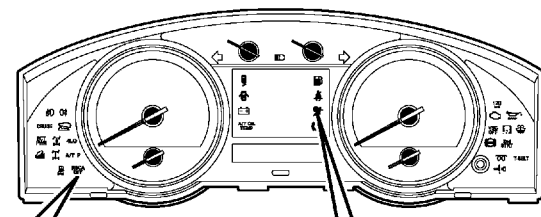

SRS WARNING LIGHT

*: w/o Multi-display