


■ AVC-LAN

1. General

The AVC-LAN is used among the multi display, radio receiver assembly, stereo component amplifier assembly, navigation ECU and parking assist ECU.

► System Diagram ◀

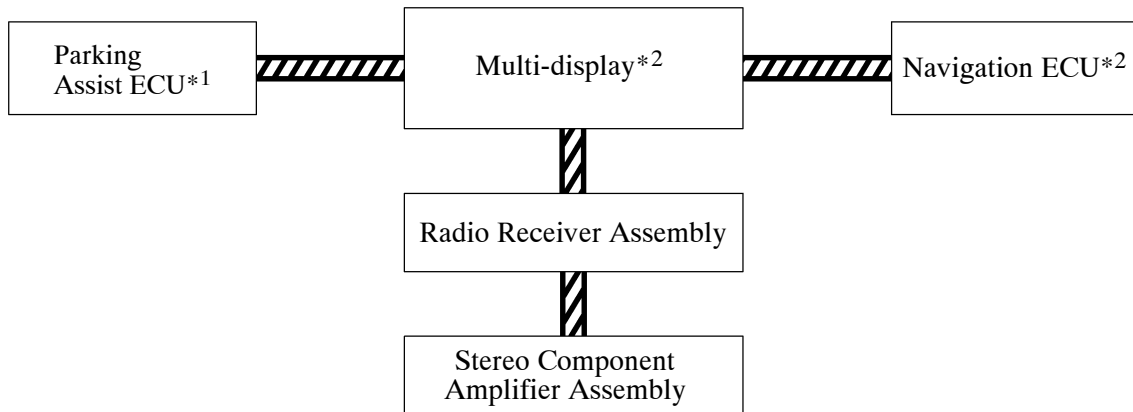


080BE63S

*1: Models with the parking assist monitor system

*2: Optional Equipment

2. Layout of Main Components

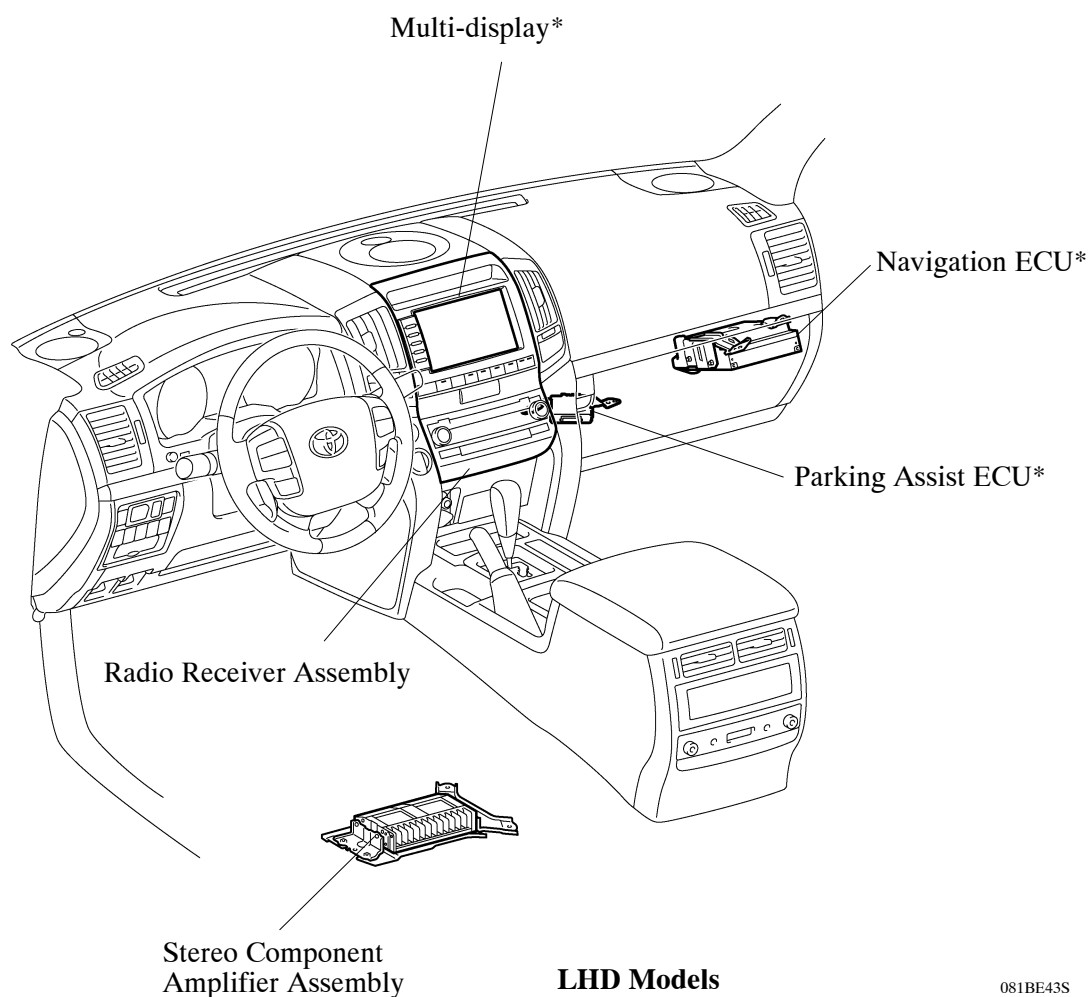

081BE43S

*: Optional equipment

3. Diagnosis

- On models with the multi-display, if a malfunction occurs in the AVC-LAN communication line, the multi-display stores a DTC (Diagnostic Trouble Code) in its memory. On models without the multi-display, the radio receiver stores a DTC in its memory.
- The DTC of models with the multi-display can be read on the diagnosis menu on the multi-display.
- The DTC of models without the multi-display can be read on the LCD of the radio receiver assembly.

For details, see the Land Cruiser (Station Wagon) Repair Manual (Pub. No. RM0810E).