


■ MODE POSITION AND DAMPER OPERATION

► Front Air Conditioning (Models with the multi-zone automatic climate control) ◀

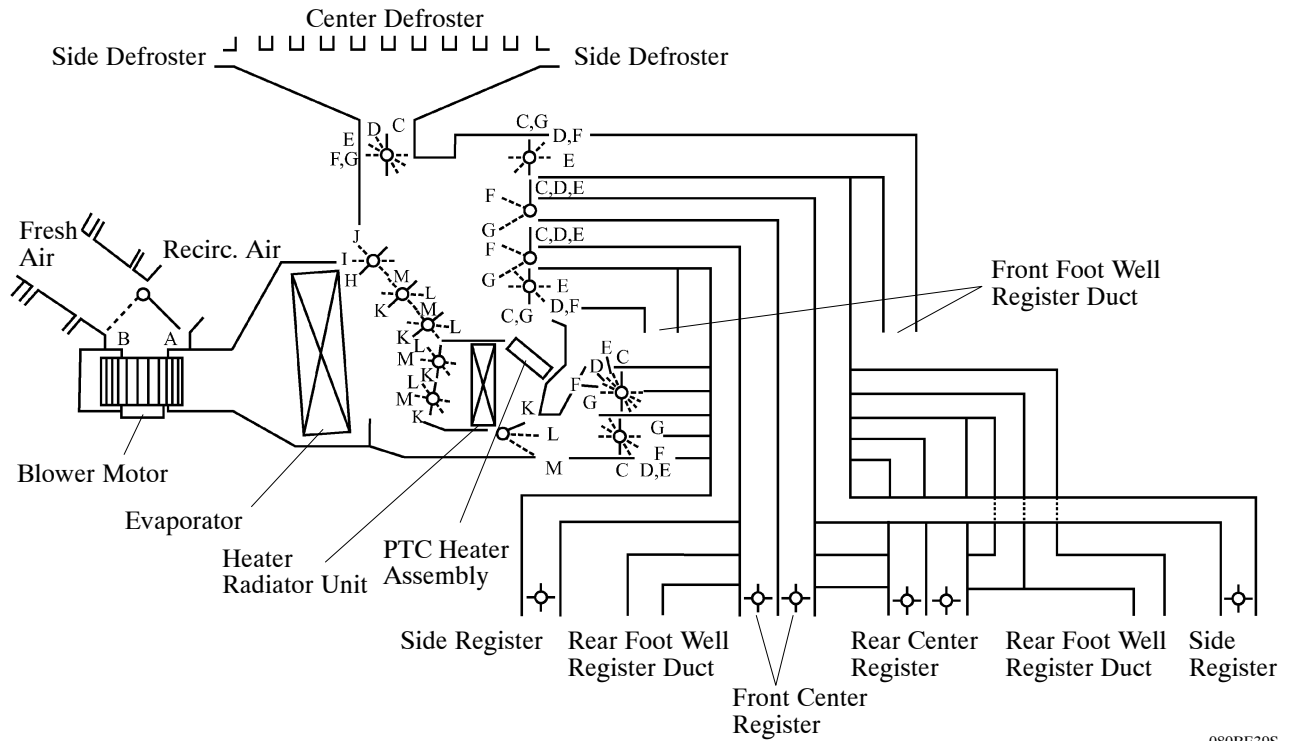


080BE39S

► Function of Main Damper ◀

Control Damper	Operation Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Brings in fresh air.
	RECIRC	B	Recirculates internal air.
Air Mix Control Damper	MAX COLD to MAX HOT Temp. Setting	K-L-M	Varies the mixture ratio of the cold air and the hot air in order to regulate the temperature continuously from HOT to COLD.
Cool Air Bypass Damper	MAX COLD to MAX HOT Temp. Setting	H-I-J	Cool air blows out from the front center register and side registers, in order to adjust the temperature around the heads of the occupants during cooling or warming.
Mode Control Damper	DEF 187BE28	C	Defrosts the windshield through the center defroster, and side defroster.
	FOOT / DEF 187BE27	D	Defrosts the windshield through the center defroster, side defroster, while air is also blown out from the front and rear footwell register ducts. In addition, air blows out slightly from front and rear center registers and side register.
	FOOT 187BE26	E	Air blows out of the front and rear foot well register duct, front and rear center register, and side register. In addition, air blows out slightly from the center defroster, side defroster and side register.
	BI-LEVEL 187BE25	F	Air blows out of the front and rear center registers, side register, and front and rear footwell register ducts.
	FACE 187BE24	G	Air blows out of the front and rear center registers, and side register.

► Front Air Conditioning Unit (Models with left / right independent temperature control) ◀

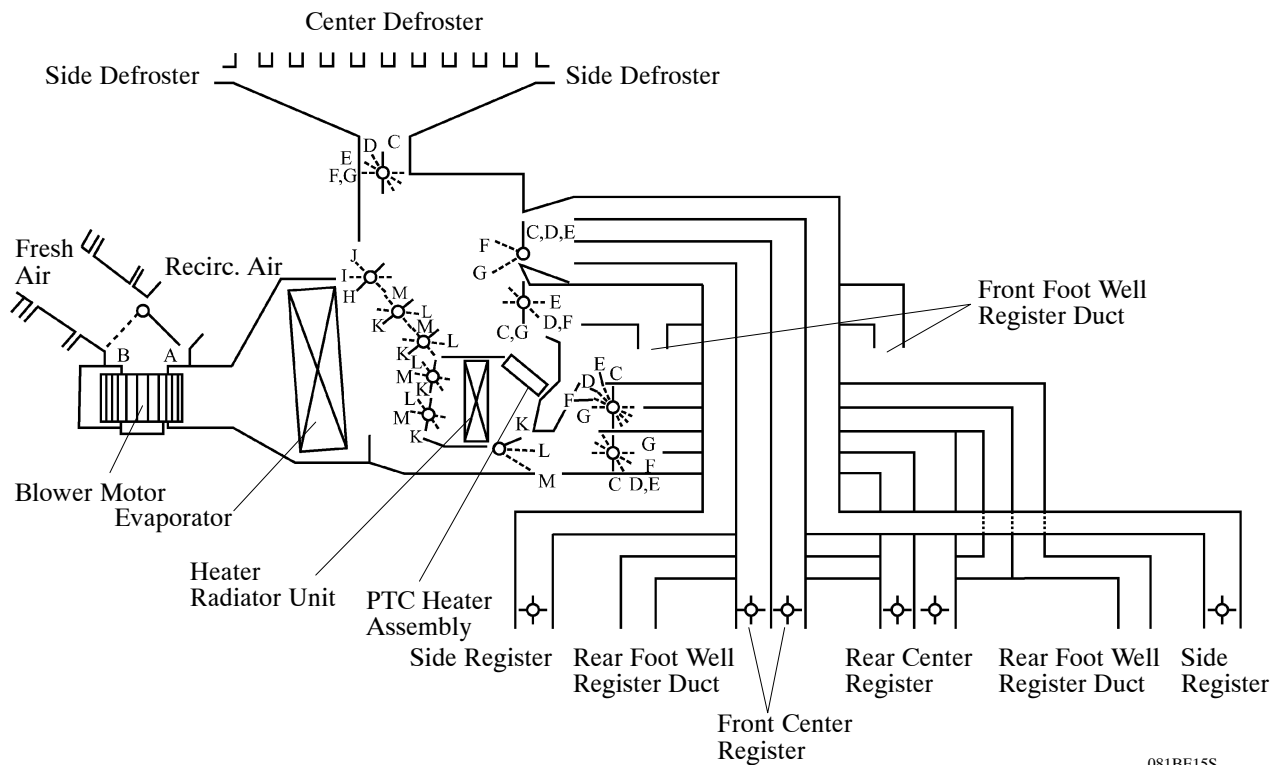


081BE15S

► Function of Main Damper ◀

Control Damper	Operation Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Brings in fresh air.
	RECIRC	B	Recirculates internal air.
Air Mix Control Damper	MAX COLD to MAX HOT Temp. Setting	K-L-M	Varies the mixture ratio of the cold air and the hot air in order to regulate the temperature continuously from HOT to COLD.
Cool Air Bypass Damper	MAX COLD to MAX HOT Temp. Setting	H-I-J	Cool air blows out from the front center register and side registers, in order to adjust the temperature around the heads of the occupants during cooling or warming.
Mode Control Damper	DEF 187BE28	C	Defrosts the windshield through the center defroster, and side defroster.
	FOOT / DEF 187BE27	D	Defrosts the windshield through the center defroster, side defroster, while air is also blown out from the front and rear footwell register ducts. In addition, air blows out slightly from front and rear center registers and side register.
	FOOT 187BE26	E	Air blows out of the front and rear foot well register duct, front and rear center register, and side register. In addition, air blows out slightly from the center defroster, side defroster and side register.
	BI-LEVEL 187BE25	F	Air blows out of the front and rear center registers, side register, and front and rear footwell register ducts.
	FACE 187BE24	G	Air blows out of the front and rear center registers, and side register.

► Rear Air Conditioning ◀

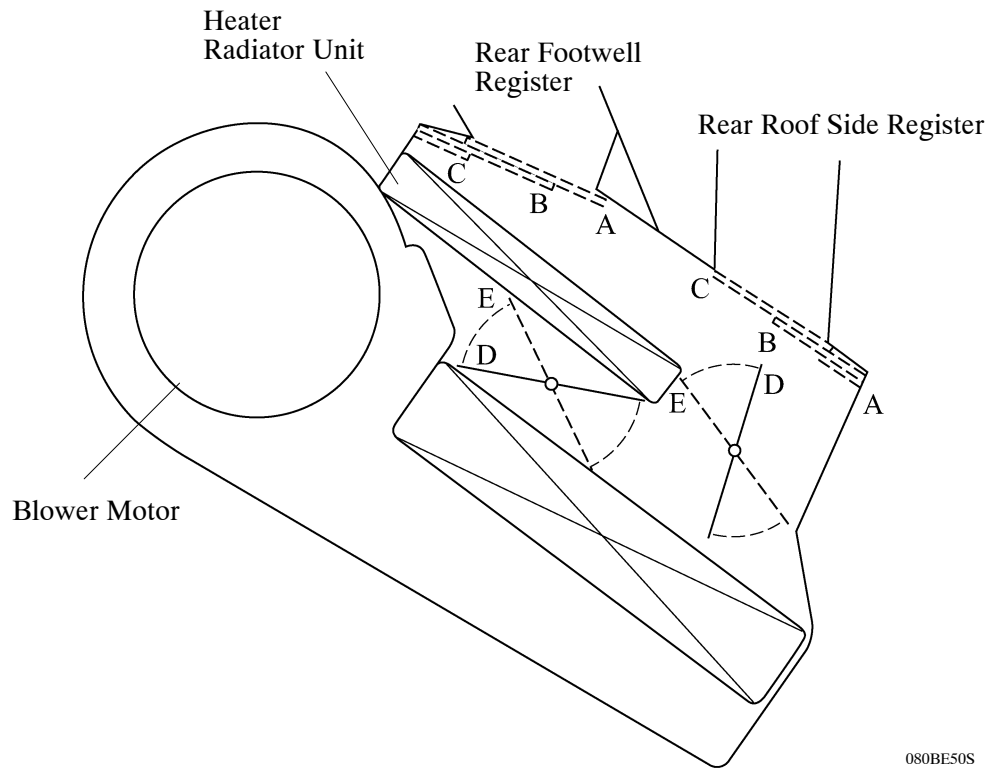

► Function of Main Damper ◀

BE

Control Damper	Operation Position	Damper Position	Operation
Mode Control Door	 187BE24	FACE	A
	 187BE25	BI-LEVEL	B
	 187BE26	FOOT	C
Air Mix Control Damper	MAX COLD to MAX HOT Temp. Setting	D-E	Varies the mixture ratio of the cold air and the hot air in order to regulate the temperature continuously from HOT to COLD.