


■ AIR OUTLETS AND AIRFLOW VOLUME

1. Front Registers

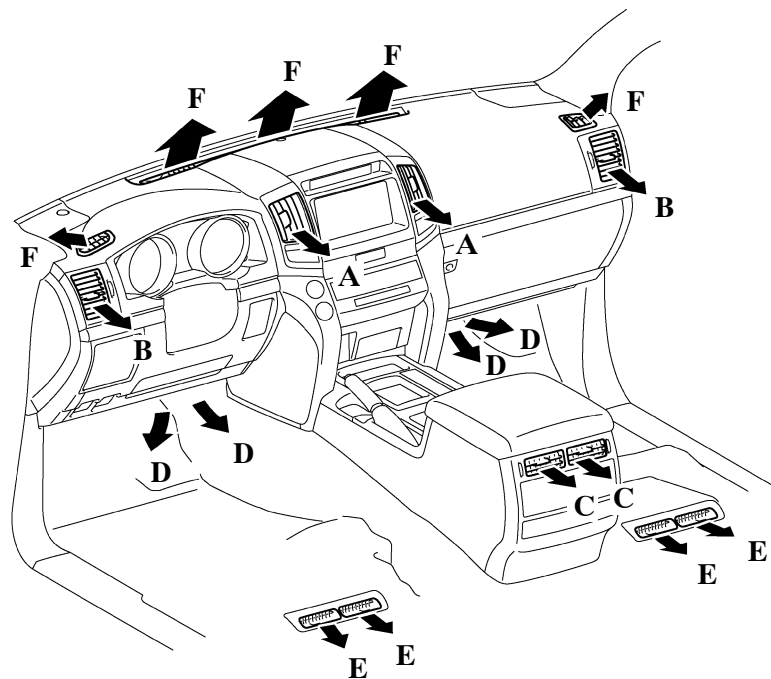


INDICATION	MODE	SELECTION		FACE			FOOT		DEF
				CTR	SIDE	RR (CTR)	FR	RR	CTR
		AUTO	MANUAL	A	B	C	D	E	F
	FACE-U	○	○	◯	◯	○	—	—	—
	FACE-L*1	○	—	◯	◯	○	○	—	—
	B/L-U*2	○	○	○	○	○	◯	○	—
	B/L-L*3	○	—	○	○	○	◯	◯	—
	FOOT-F*4	○	—	○	○	○	◯	◯	◯
	FOOT-R*5	○	—	○	○	○	◯	◯	◯
	FOOT-D*6	○	—	○	○	○	◯	◯	◯
	F/D	○	○	○	○	○	◯	◯	◯
	DEF	○	○	—	—	—	—	—	◯

080BE41H

The size of the circle ○ indicates the proportion of airflow volume.

*1: The airflow volume is set to be greater than that in FACE-U mode.
*2: Greater airflow volume at the upper area. *3: Greater airflow volume at the lower area.
*4: Greater airflow volume at the front. *5: The airflow volume is set to be greater than that in FACE-F mode.
*6: The airflow volume is set to be greater than that in FOOT-R mode.

2. Rear Registers

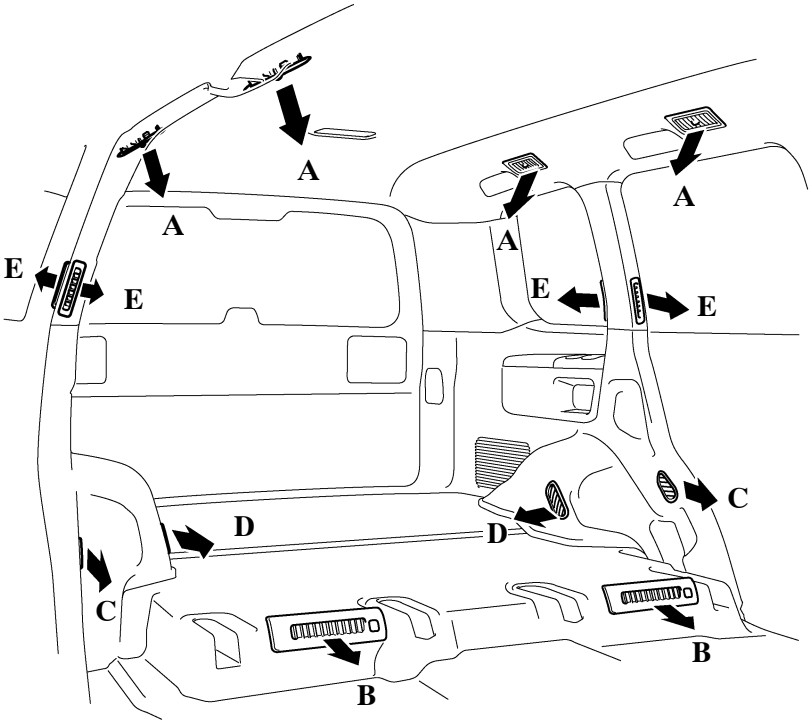

INDICATION	MODE	A	B	C	D	E
	FACE	○	—	—	—	—
	BI-LEVEL	○	○	○	○	○
	FOOT	—	○	○	○	○

BE

080BE42H

*: The rear cooler unit is only equipped with air vent holes A.